 
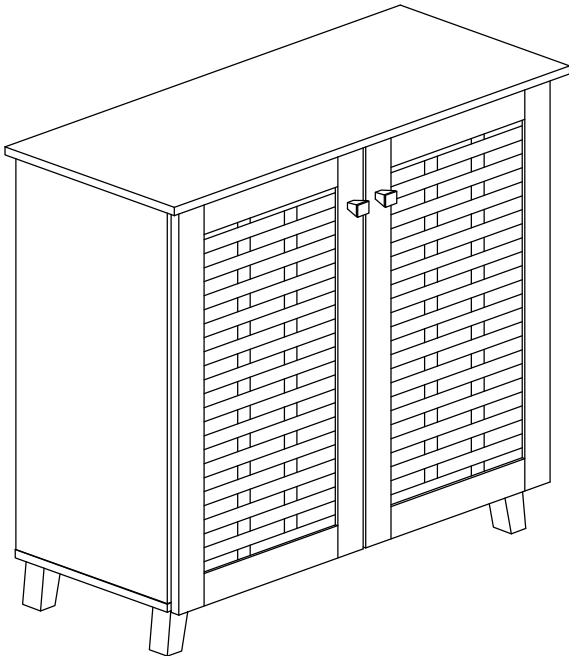 
 



Assembly Instruction

049-000121



Hardware List			
No.	Shape	Description	Qty.
A		Dowel M8x25mm	8pcs
B		15mm Minifix Myfix	4sets
C		M3.5x16mm Screw	41pcs
D		M4x45mm Screw	4pcs
E		6/8 Power Nail	30pcs
F		2 Pin Stopper	1pc
G		Hinges 5/8	4pcs
H		Tapper Leg (H100mm)	4pcs
I		Shelf Support	12pcs
J		Handle Square Knob	2pcs
K		M4x28mm Screw	2pcs

 
Part List

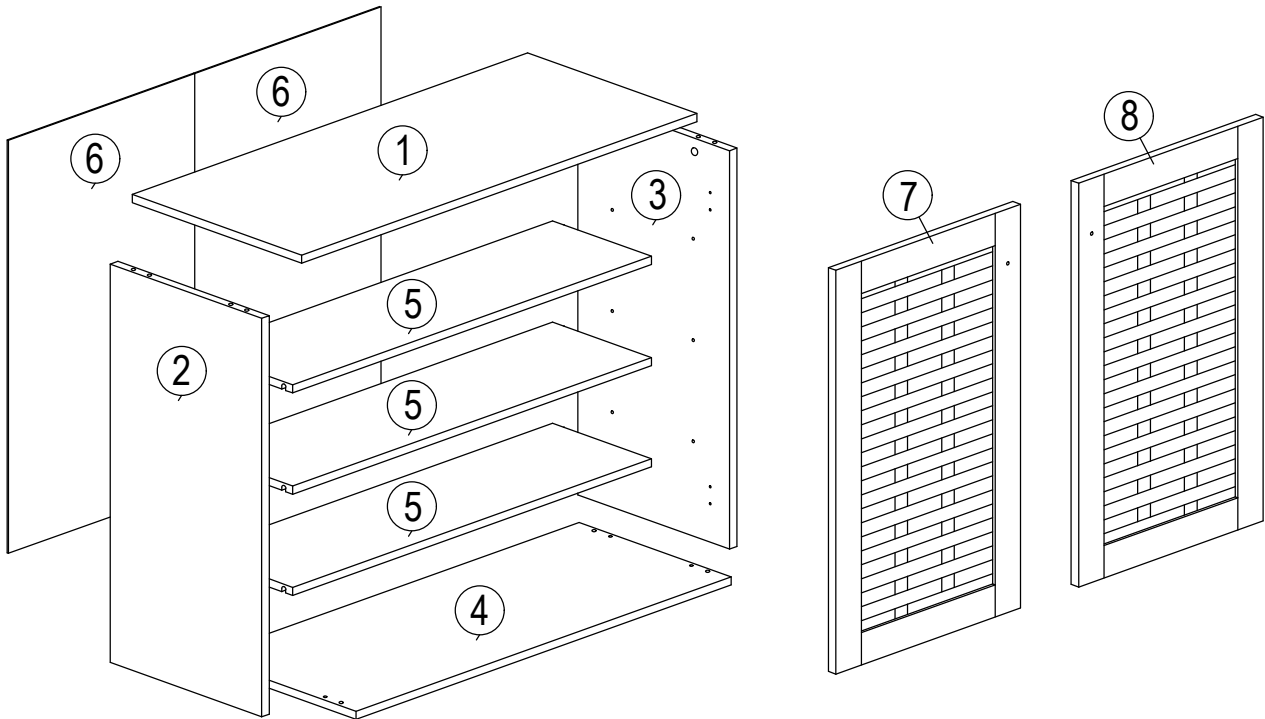

Using Cam Lock And Quickfit


QUICKFIT

 Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

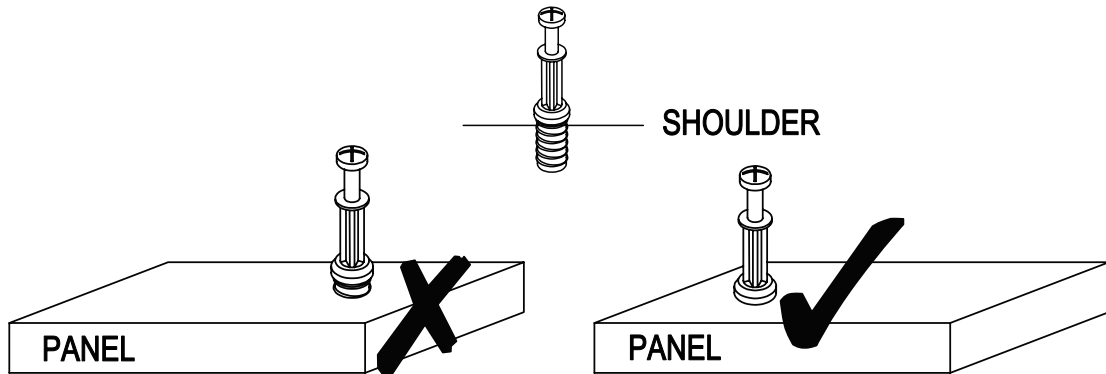

CAM LOCK

 When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

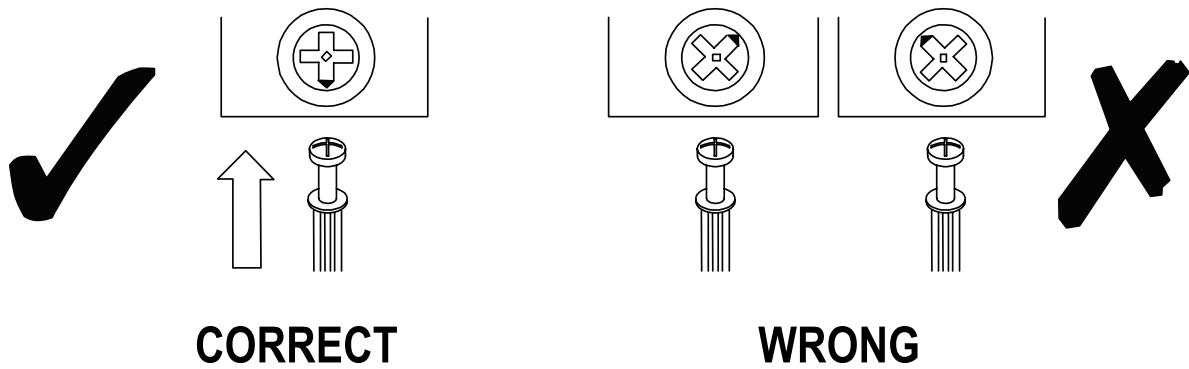

Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


Turn cam lock clockwise to tighten.



Assembly Instruction


Step 1

B		Myfix	4pcs
---	---	-------	------

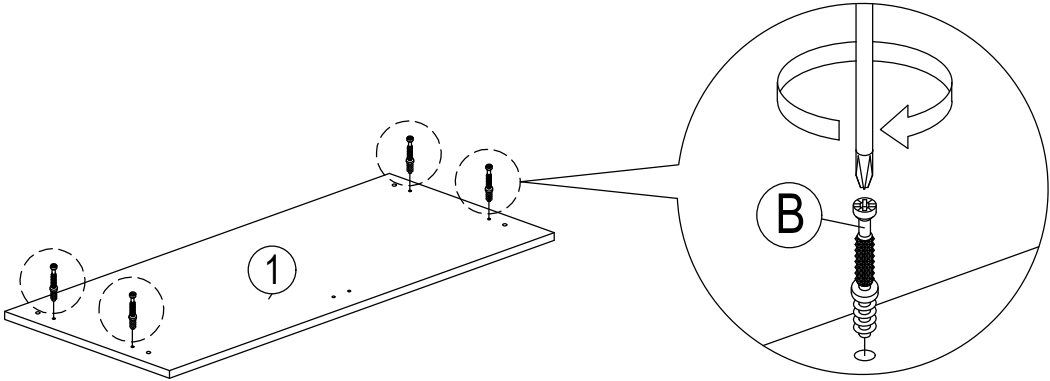 


Step 2

C		M3.5x16mm Screw	1pc
F		2 Pin Stopper	1pc

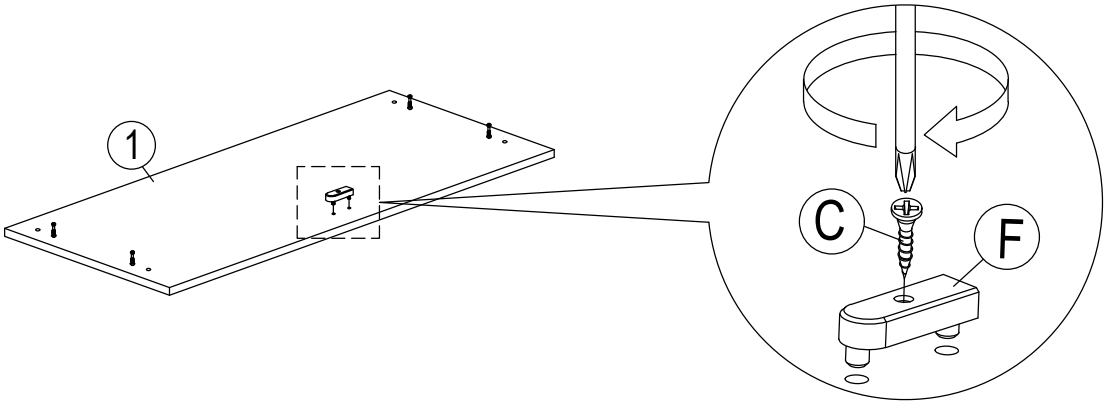 

Step 3


A		Dowel M8x25mm	8pcs
---	---	---------------	------

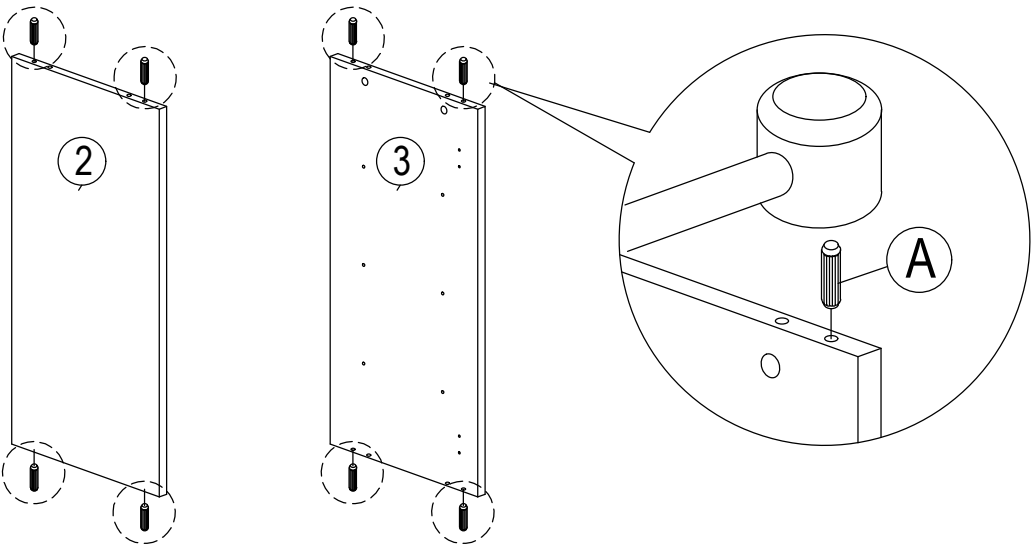 

Assembly Instruction


Step 4

D		M4x45mm Screw	4pcs
---	---	---------------	------

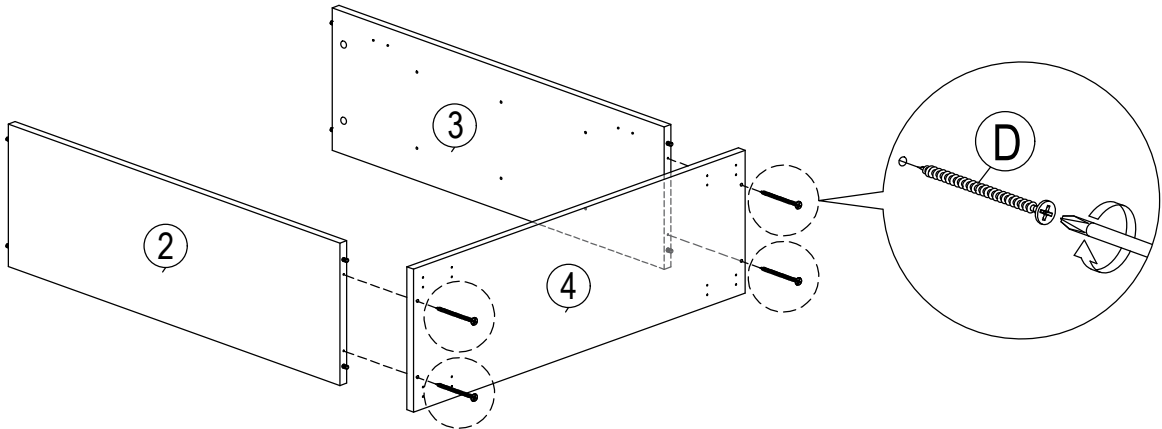 


Step 5

C		M3.5x16mm Screw	16pcs
H		Tapper Leg (H100mm)	4pcs

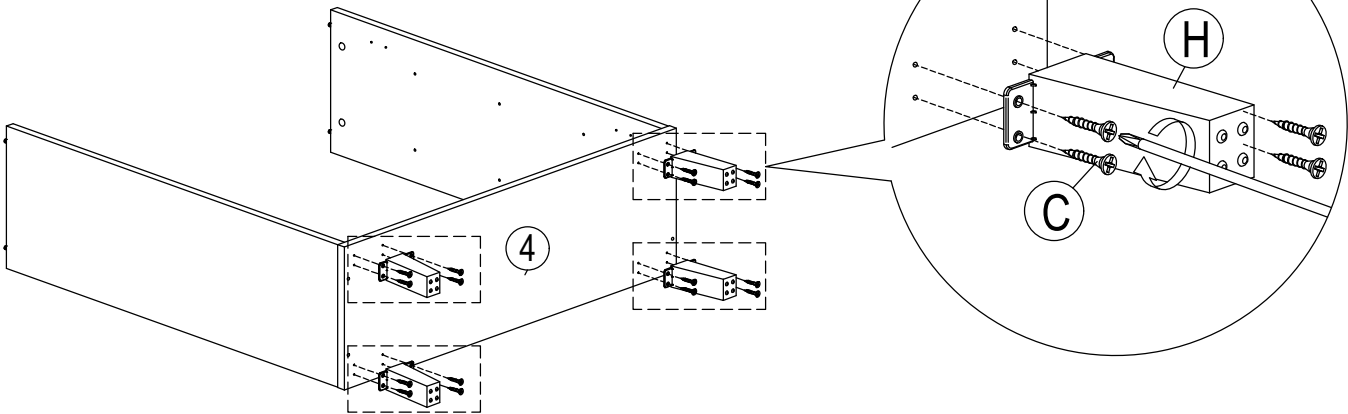 

Step 6


B		Minifix	4pcs
---	---	---------	------

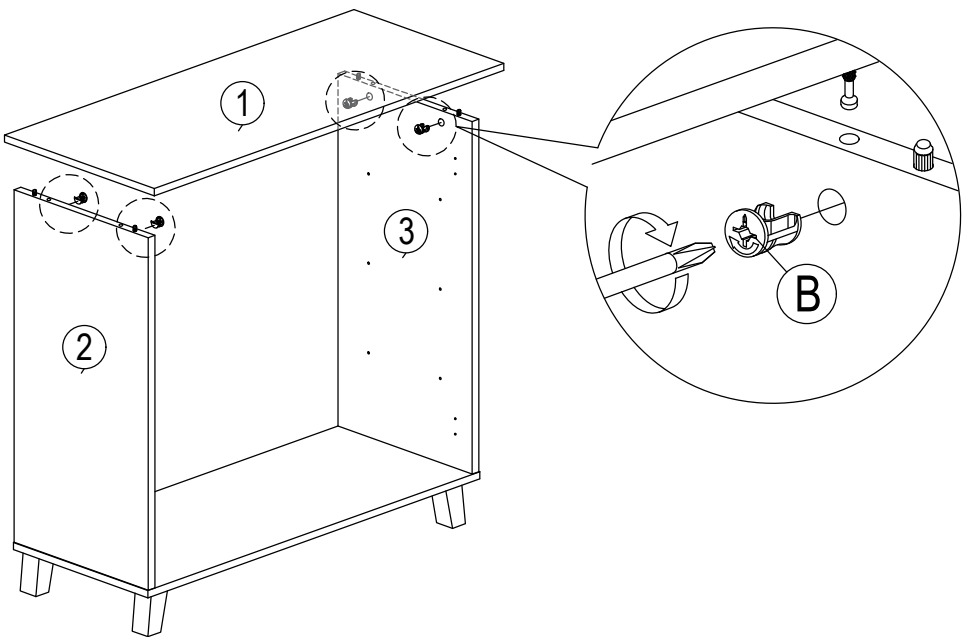 

Assembly Instruction


Step 7

E		6/8 Power Nail	30pcs
---	---	----------------	-------

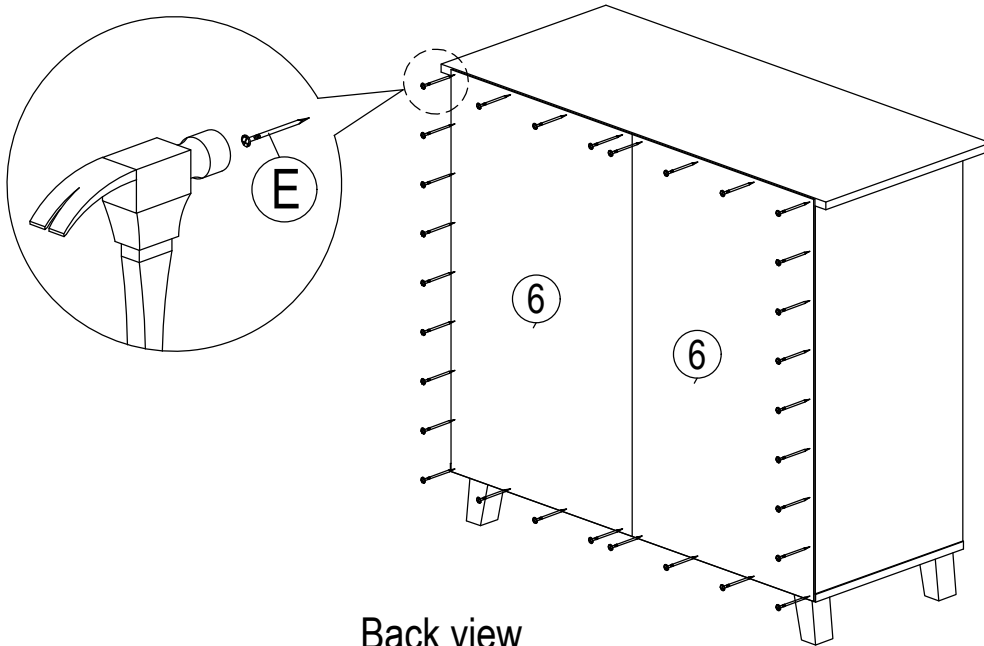 


Step 8

I		Shelf Support	12pcs
---	---	---------------	-------

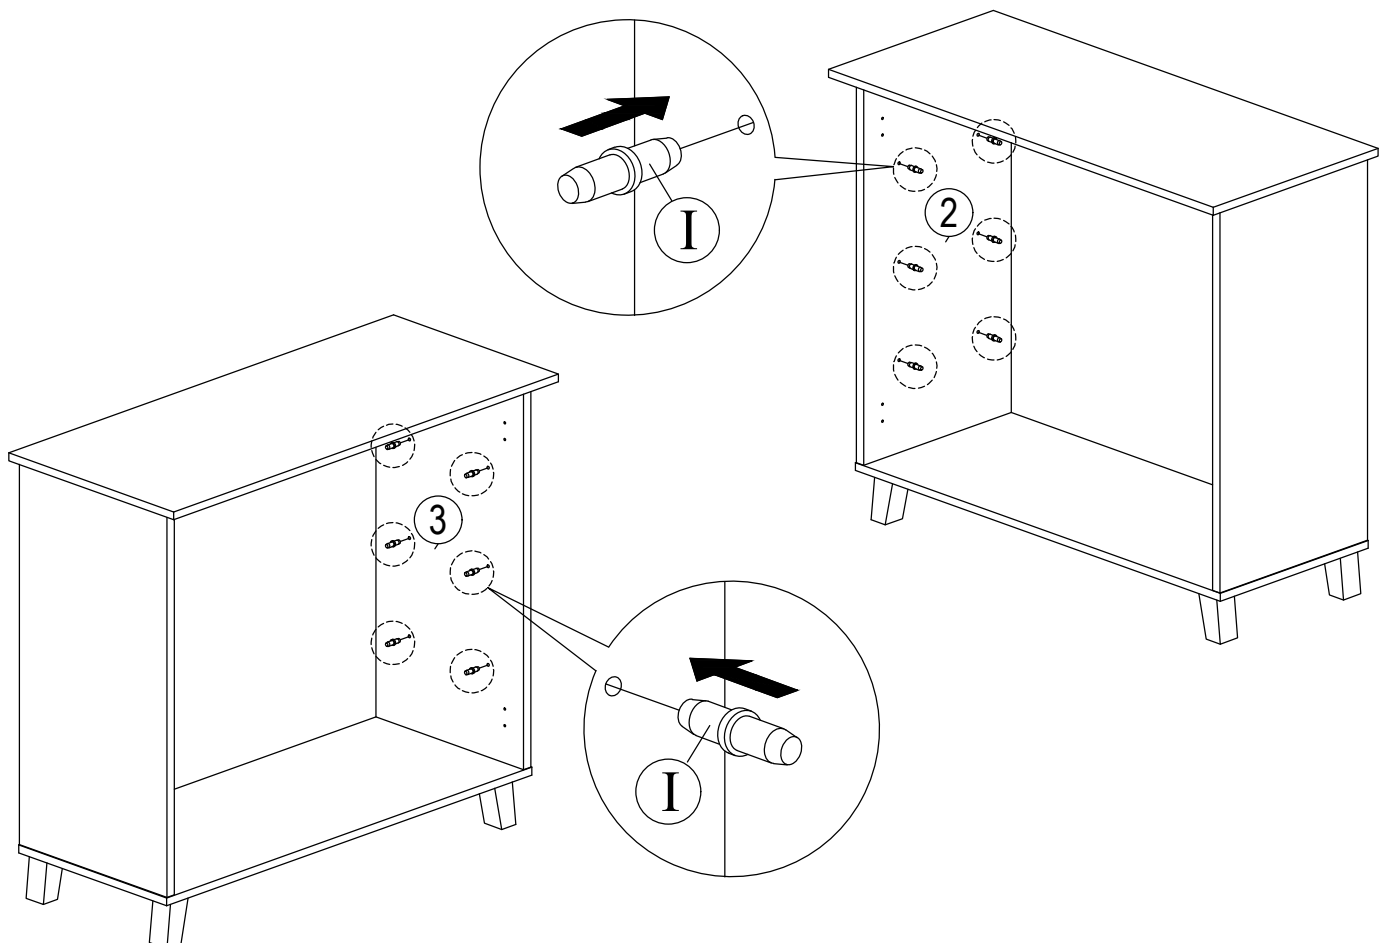 



Assembly Instruction

 Step 9

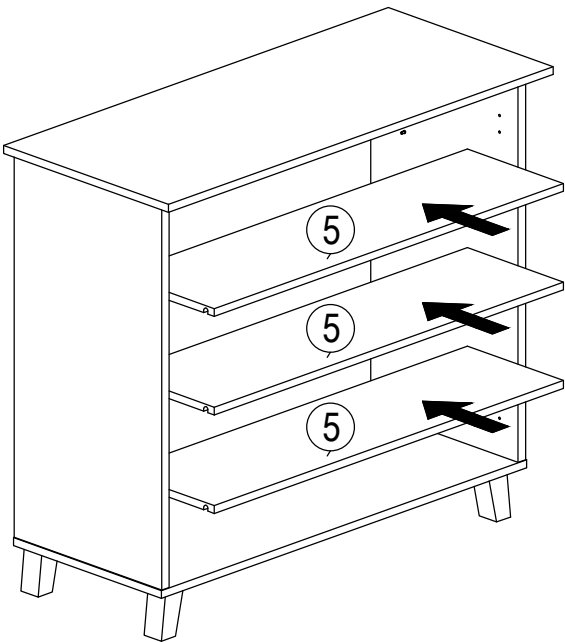

 Step 10


C		M3.5x16mm Screw	8pcs
G		Hinges 5/8	4pcs

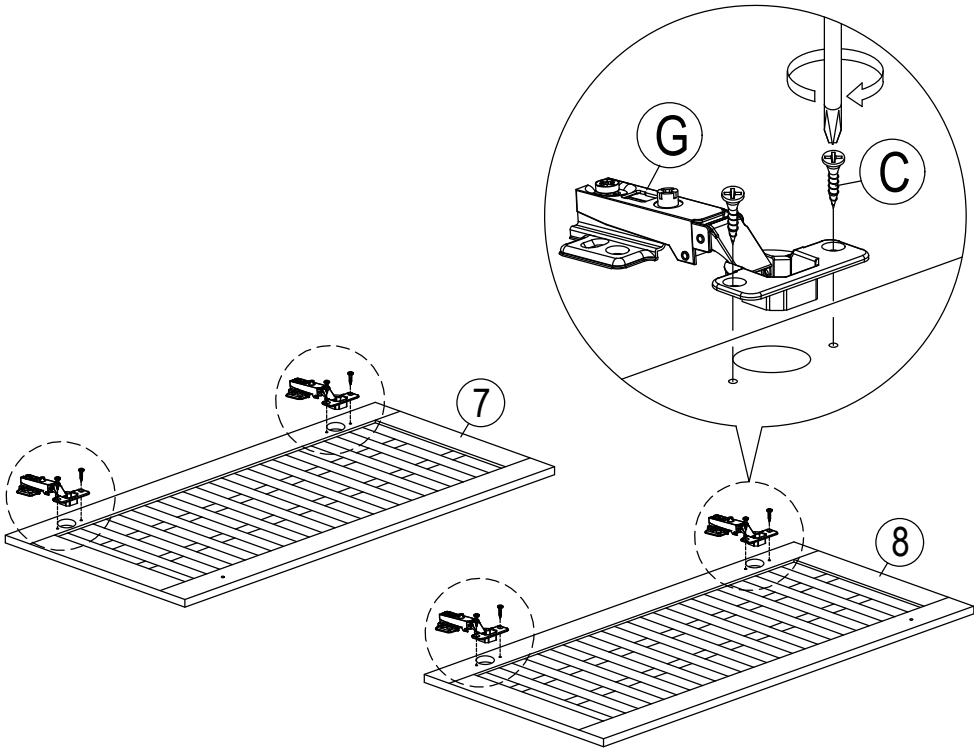 

Assembly Instruction


Step 11

C		M3.5x16mm Screw	8pcs
J		Handle Square Knob	1pc
K		M4x28mm Screw	1pc

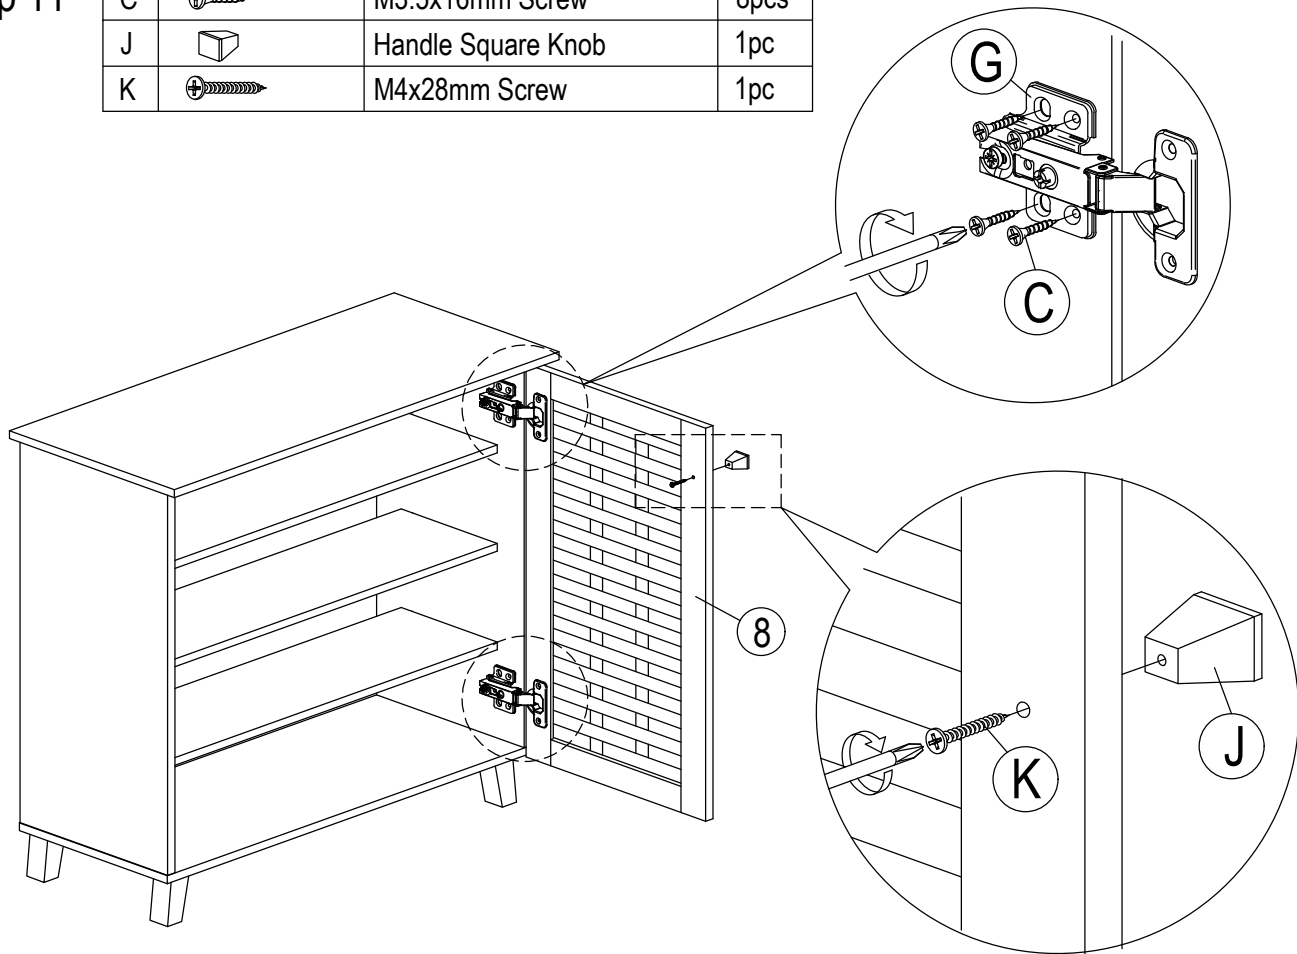 


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

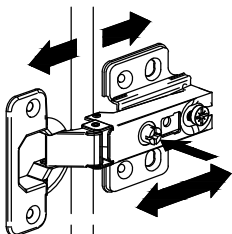

 To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

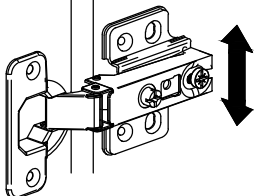

 To adjust the door vertically loosen the screw as shown and move up and down as needed.

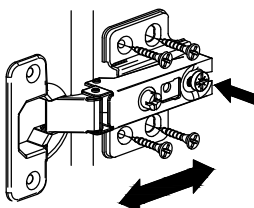


To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

Assembly Instruction

Step 12


C		M3.5x16mm Screw	8pcs
---	---	-----------------	------

J		Handle Square Knob	1pc
K		M4x28mm Screw	1pc

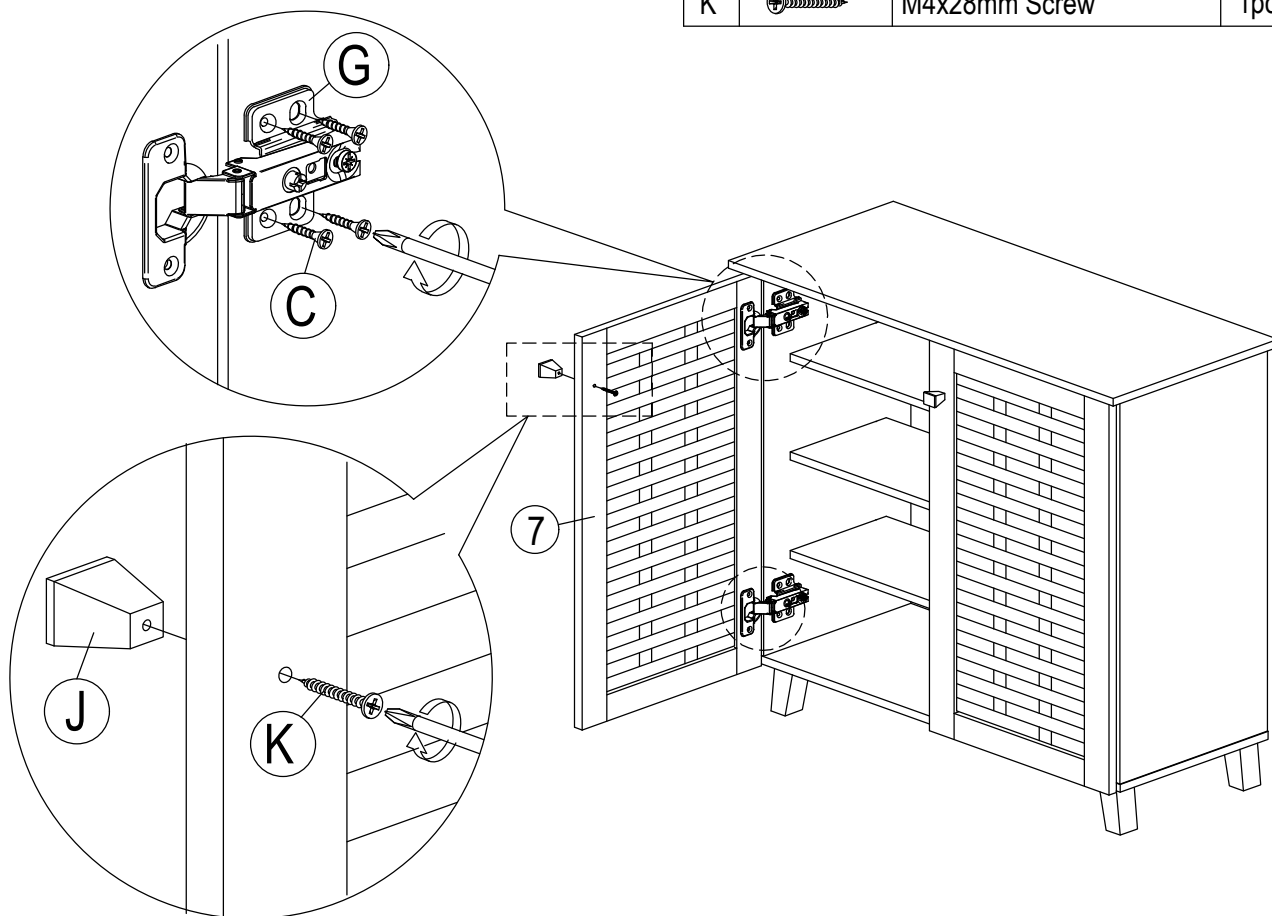 


HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

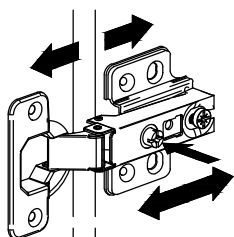

 To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

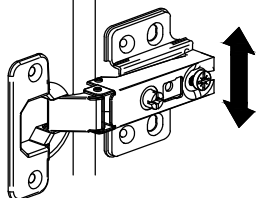

 To adjust the door vertically loosen the screw as shown and move up and down as needed.

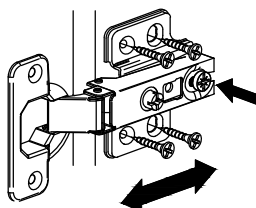

To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.