


Please unscrew all hardware from cushion before assembly.

| (1)X1 | (2)X1 | (3)X1 (L)X1 (R) |
|-----------|-------------------------|---|
| | | |
| BACK | SEAT | LARM LEFT ARM RARM RIGHT ARM |
| (4)X1 | (5)X1 | (6)X1 |
| MECHANISM | GAS LIFT | BASE |
| (7)X5 | | |
| CASTERS | (B)×2 (B)×2 (B)×2 (B)×3 | Mechanism Screw ARM SCREW L-Bar Screw |

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

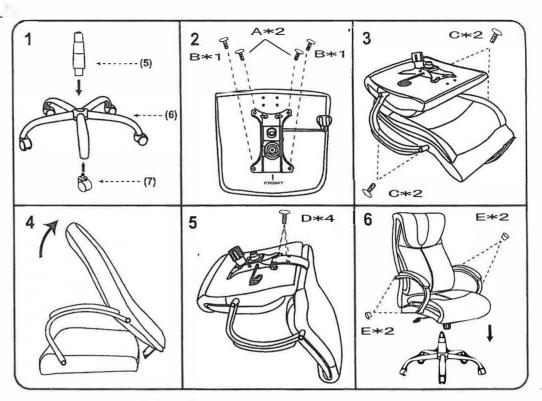

Note: Please tighten all arm screws using allen key before step 6





