 


**ASSEMBLY RATING**

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



 
DIFFICULT

**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**


# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

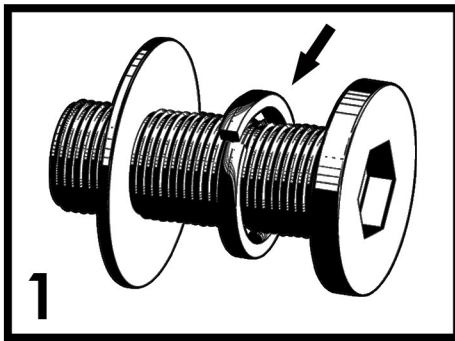

 
1 Before attaching each of the screws, make sure that the **smaller lock washer is between** the larger washer and the head of the screw.

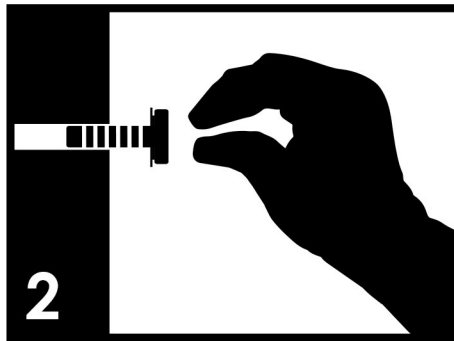

 
2 Position each part correctly and insert all screws into their respective holes. Then, **hand-tight and leave room for later adjustment. Do not use tool.**

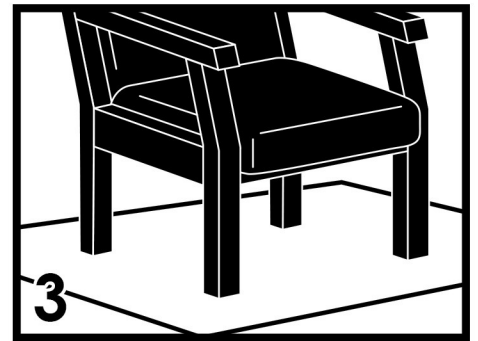

 
3 Make sure the furniture rests on a **flat and level surface** with each leg evenly touching the ground.

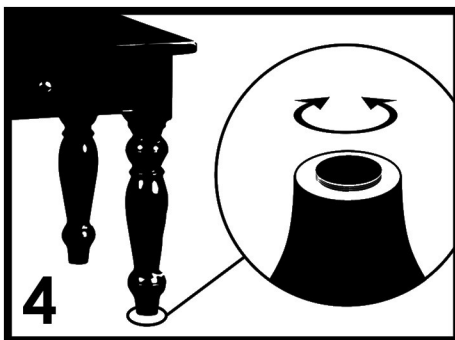

 4 Some furniture come with **height adjustment knobs** underneath each leg. Turn counter-clockwise or clockwise to raise and lower each leg.

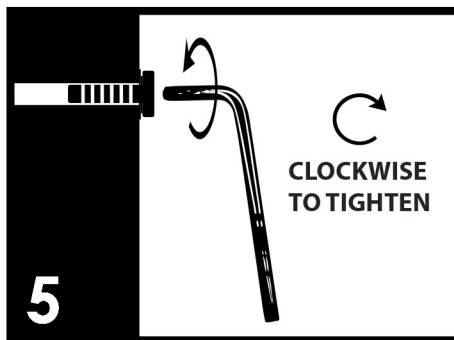

 5 Finally, make sure all parts are properly aligned then use the included **hex key** to completely tighten the screws. Your furniture is now ready for use.

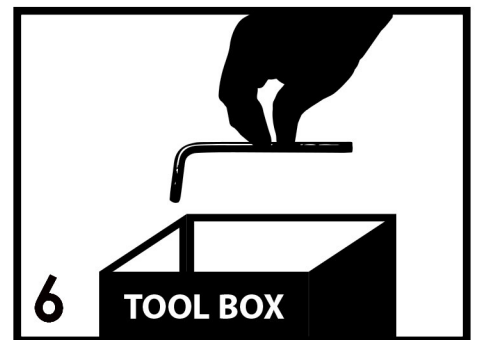








 
6 Store the hex key for later maintenance. Tighten the screws again **after two (2) weeks**, and then at least **once every six (6) months** after that.

**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE SCREWS MAY LOOSEN OVER TIME AND CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS CAN LEAD TO COLLAPSE AND CAN CAUSE SERIOUS INJURY.**




**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT TO INJURY AND/OR PROPERTY DAMAGE.**

 
PARTS IDENTIFICATION			
#	DRAWING	DESCRIPTION	QTY
#1		Seat	1pc
#2		Back Cushion	1pc
#3		Leg	4pcs

HARDWARE LIST			
#	DRAWING	DESCRIPTION	QTY
#A		Bolt 5/16"X 1-1/2"L	8pcs
#B		Lock Washer	8pcs
#C		Flat Washer	8pcs
#D		Allen wrench	1pc
#E		Screw 1"L	16pcs

### STEP 1

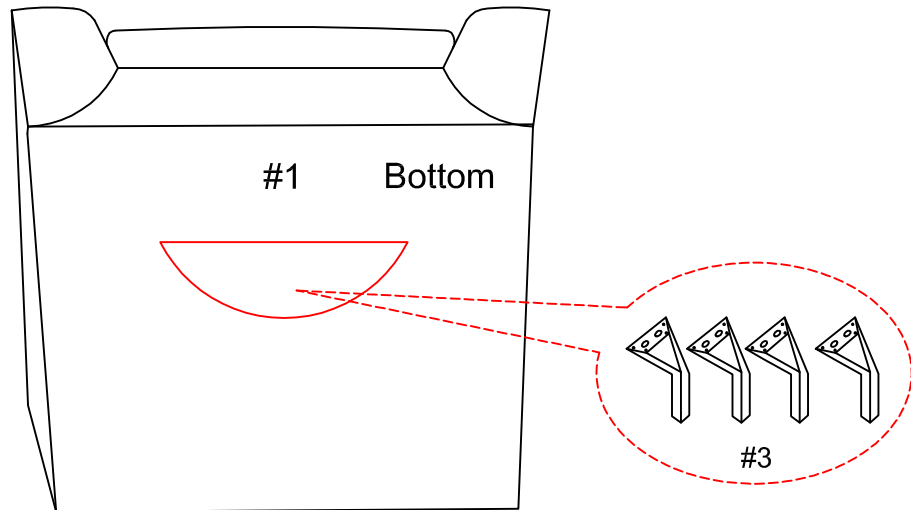 


### STEP 2

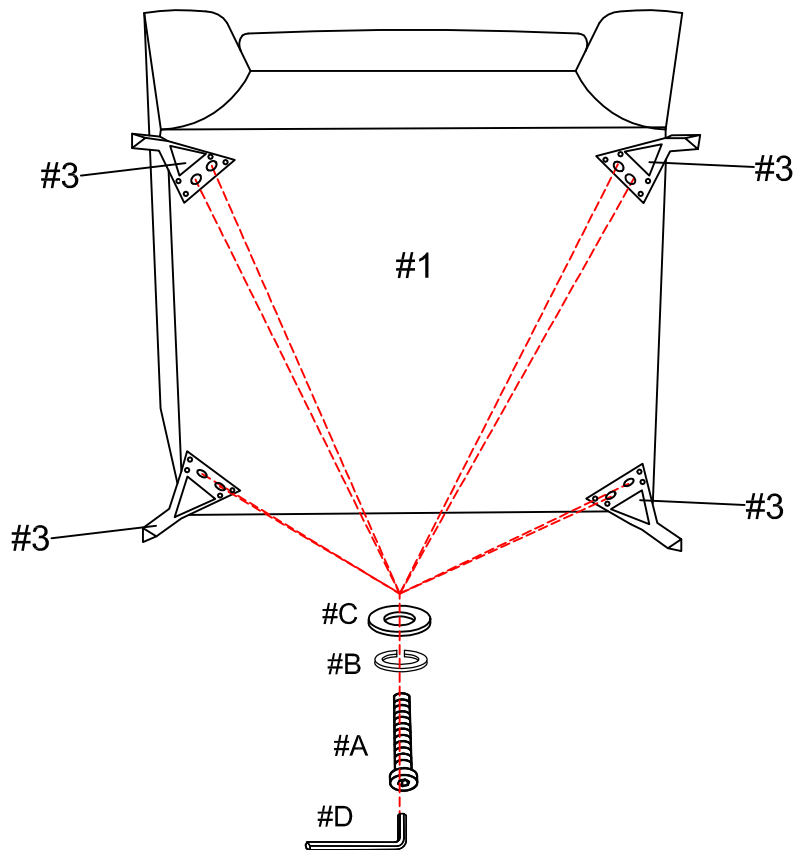 


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

 
STEP 3

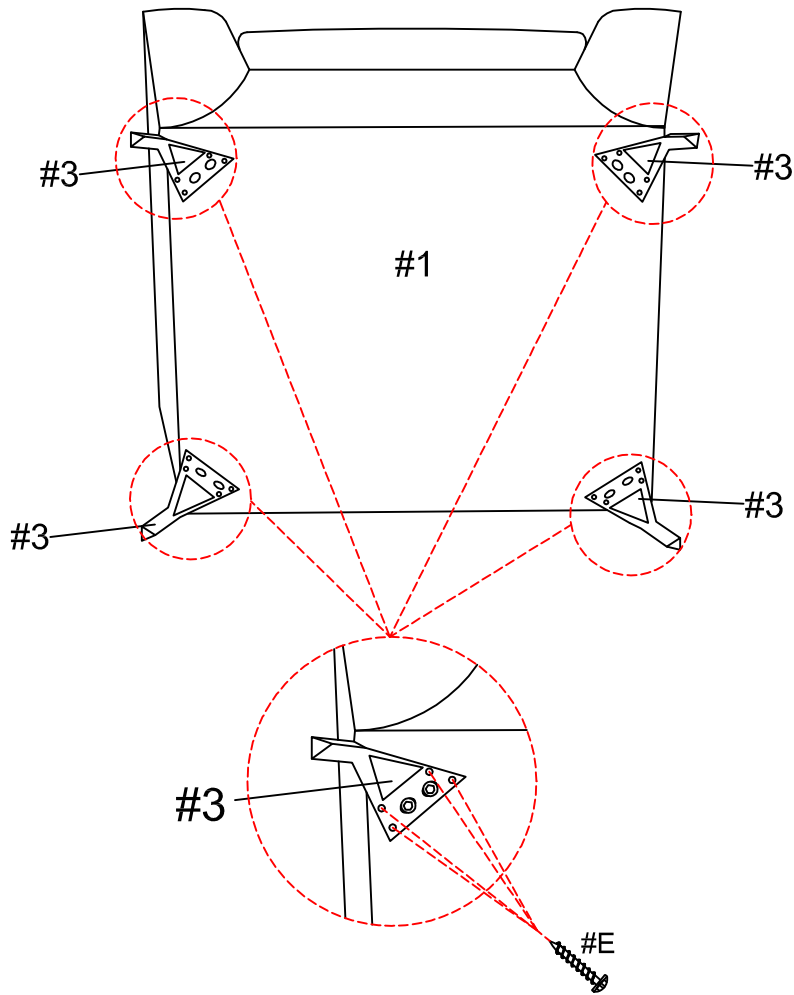

 STEP 4

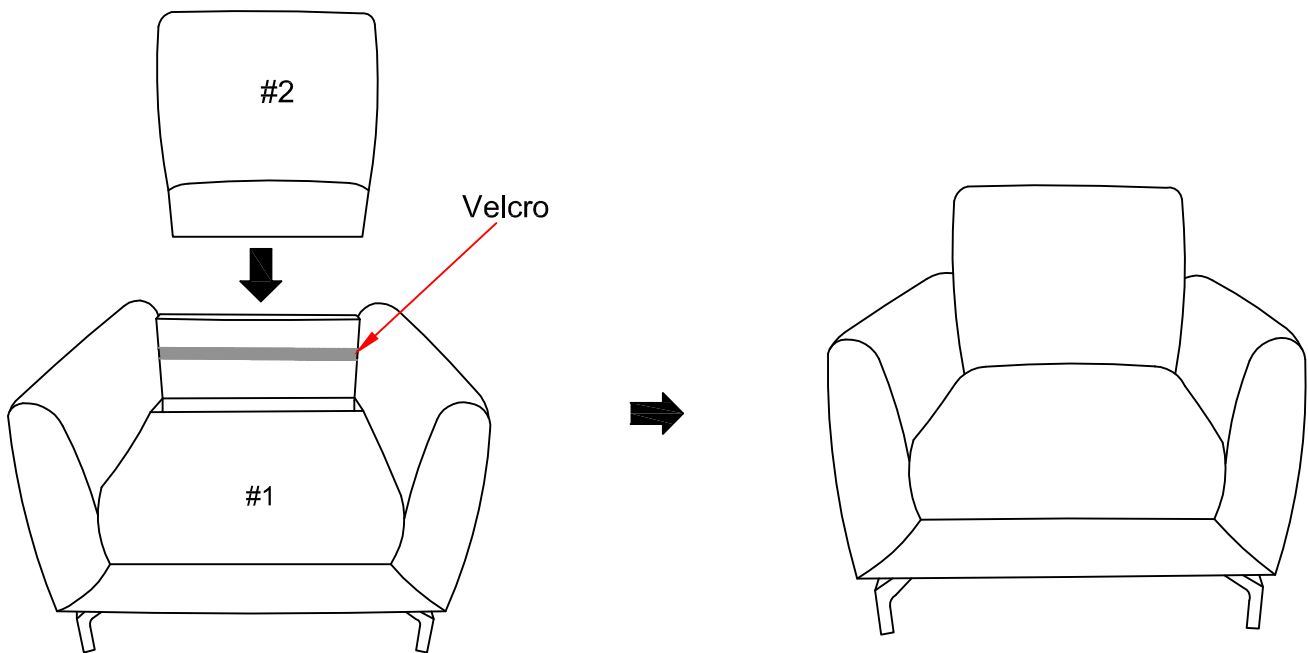


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

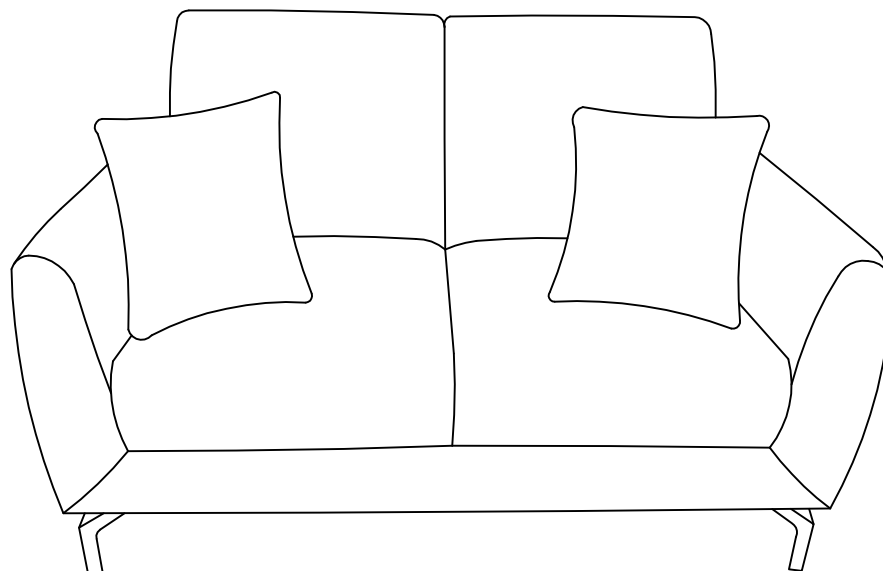 

**ASSEMBLY RATING**

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 EASY




DIFFICULT

**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

 
# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

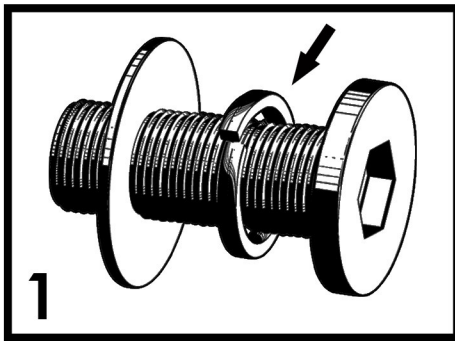

 
1 Before attaching each of the screws, make sure that the **smaller lock washer is between** the larger washer and the head of the screw.

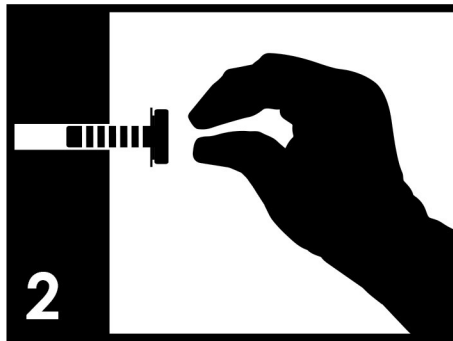

 
2 Position each part correctly and insert all screws into their respective holes. Then, **hand-tight and leave room for later adjustment. Do not use tool.**

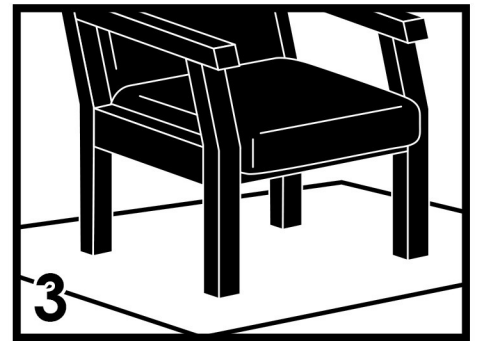

 
3 Make sure the furniture rests on a **flat and level surface** with each leg evenly touching the ground.

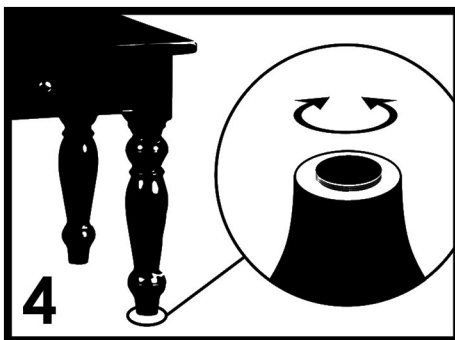

 4 Some furniture come with **height adjustment knobs** underneath each leg. Turn counter-clockwise or clockwise to raise and lower each leg.

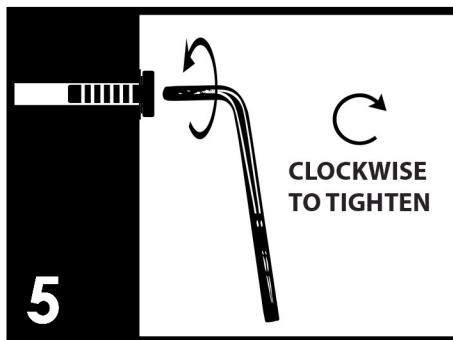

 5 Finally, make sure all parts are properly aligned then use the included **hex key** to completely tighten the screws. Your furniture is now ready for use.

 
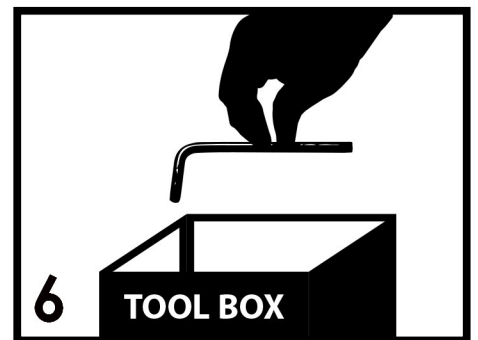 







 
 
6 Store the hex key for later maintenance. Tighten the screws again **after two (2) weeks**, and then at least **once every six (6) months** after that.

**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE SCREWS MAY LOOSEN OVER TIME AND CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS CAN LEAD TO COLLAPSE AND CAN CAUSE SERIOUS INJURY.**

 


**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT TO INJURY AND/OR PROPERTY DAMAGE.**


PARTS IDENTIFICATION			
#	DRAWING	DESCRIPTION	QTY
#1		Seat	1pc
#2		Back Cushion	1pc
#3		Leg	4pcs
#4		Pillow	2pcs

HARDWARE LIST			
#	DRAWING	DESCRIPTION	QTY
#A		Bolt 5/16"X 1-1/2"L	8pcs
#B		Lock Washer	8pcs
#C		Flat Washer	8pcs
#D		Allen wrench	1pc
#E		Screw 1"L	16pcs

## STEP 1

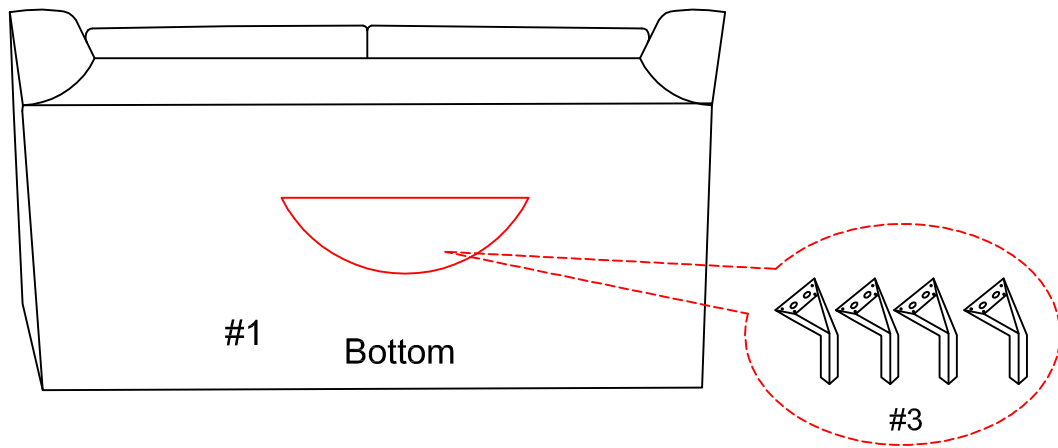


## STEP 2

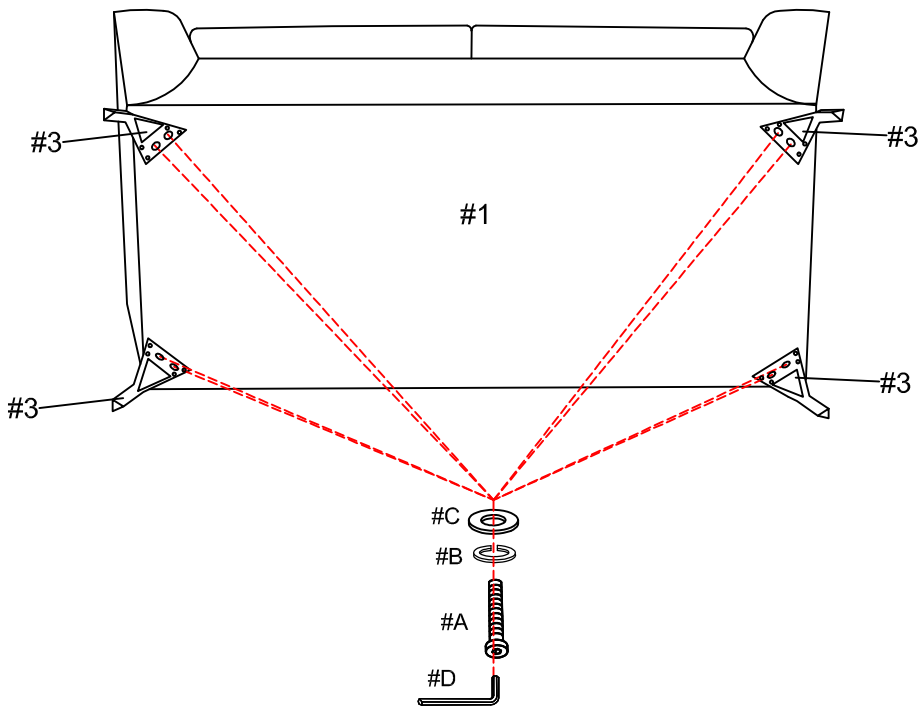 


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

 STEP 3

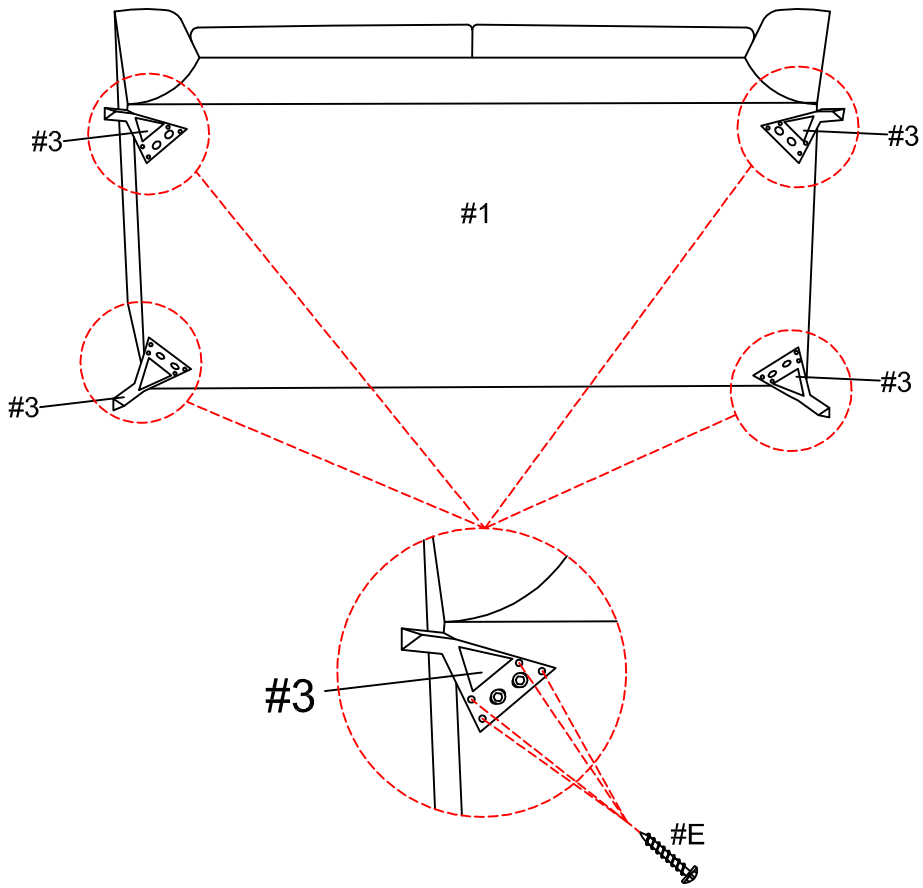

 
STEP 4

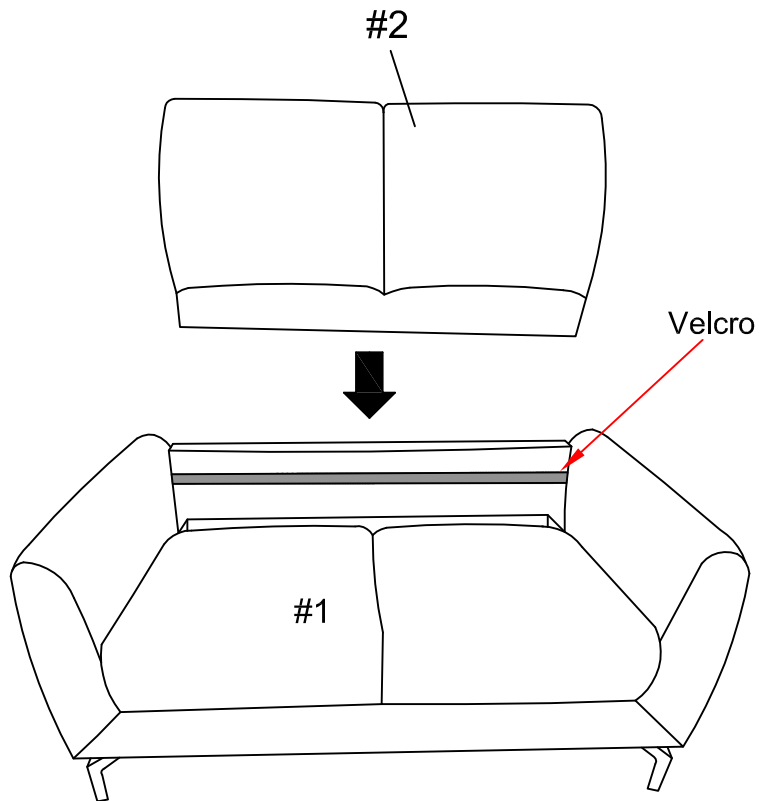


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**



 
**STEP 5**

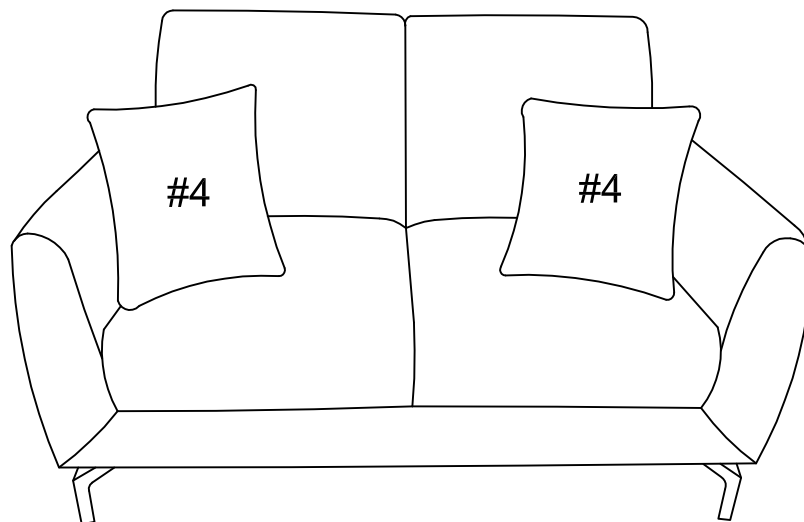

**STEP 6**

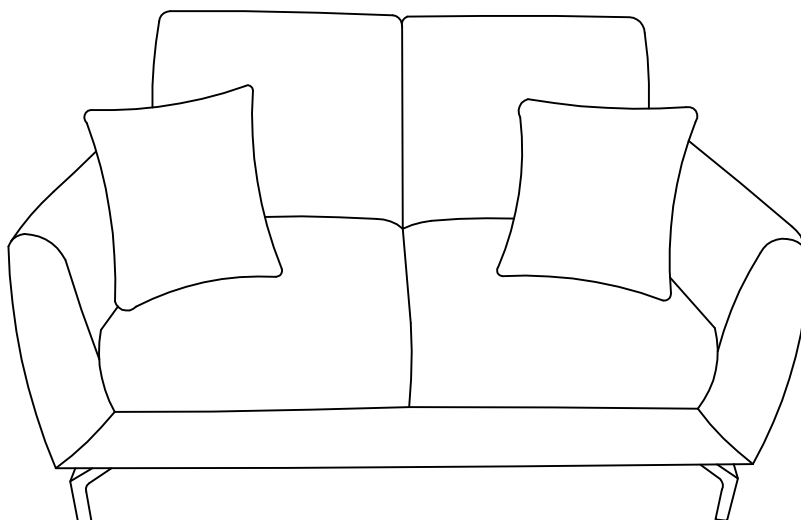 


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

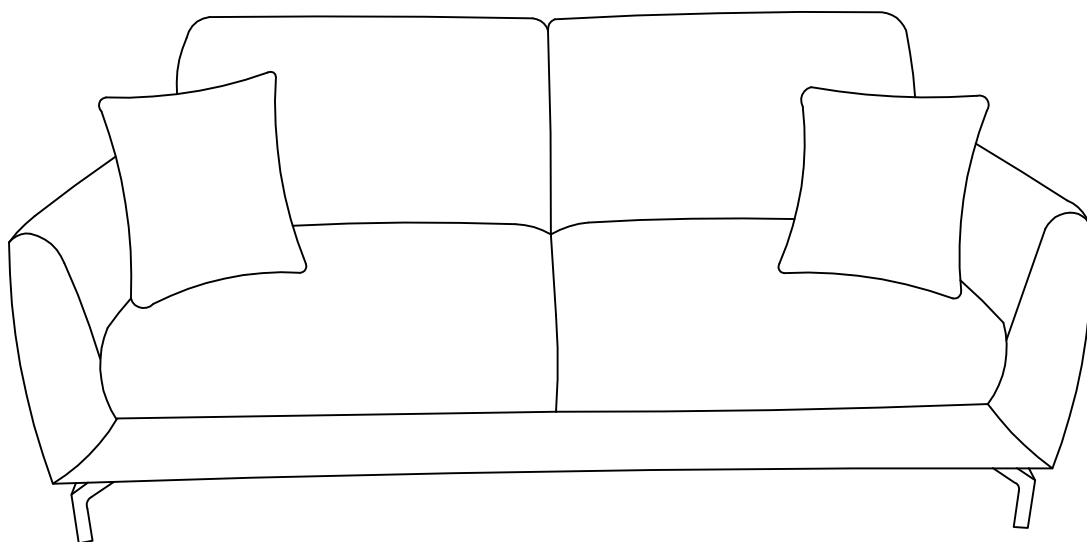 

**ASSEMBLY RATING**

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 EASY




DIFFICULT

**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

 
# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

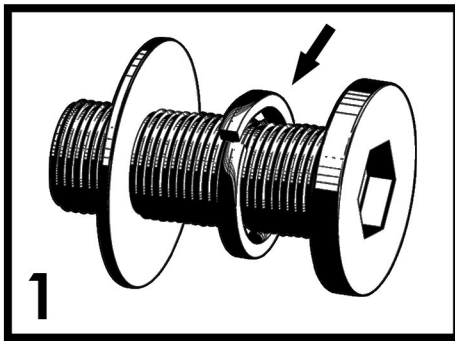

 
1 Before attaching each of the screws, make sure that the **smaller lock washer is between** the larger washer and the head of the screw.

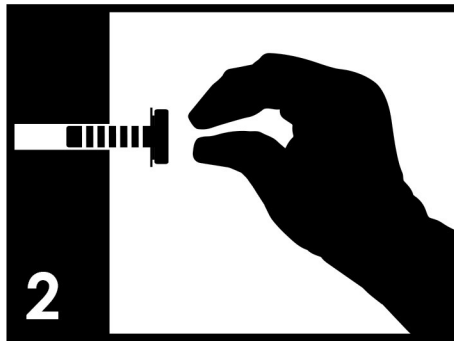

 
2 Position each part correctly and insert all screws into their respective holes. Then, **hand-tight and leave room for later adjustment. Do not use tool.**

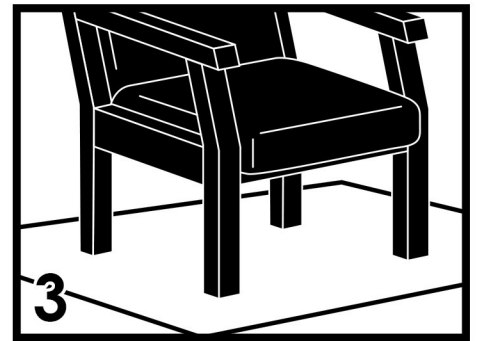

 
3 Make sure the furniture rests on a **flat and level surface** with each leg evenly touching the ground.

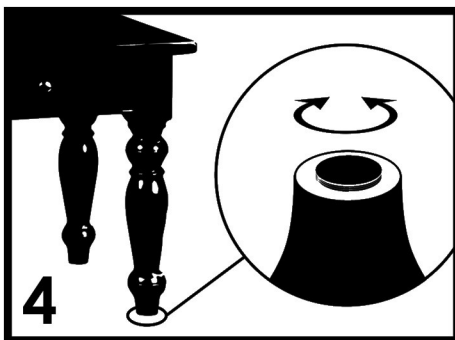

 4 Some furniture come with **height adjustment knobs** underneath each leg. Turn counter-clockwise or clockwise to raise and lower each leg.

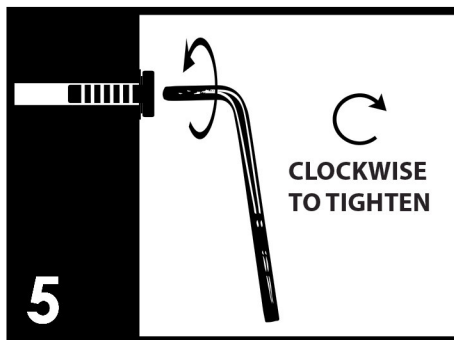

 5 Finally, make sure all parts are properly aligned then use the included **hex key** to completely tighten the screws. Your furniture is now ready for use.

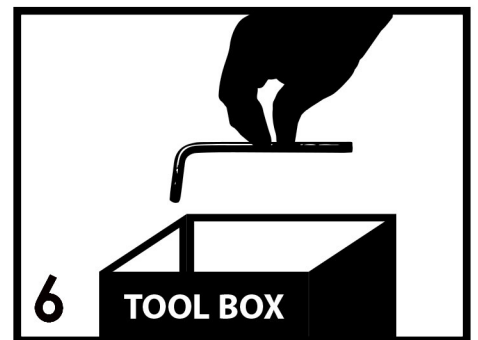










 
6 Store the hex key for later maintenance. Tighten the screws again **after two (2) weeks**, and then at least **once every six (6) months** after that.

**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE SCREWS MAY LOOSEN OVER TIME AND CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS CAN LEAD TO COLLAPSE AND CAN CAUSE SERIOUS INJURY.**




**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT TO INJURY AND/OR PROPERTY DAMAGE.**

 
PARTS IDENTIFICATION			
#	DRAWING	DESCRIPTION	QTY
#1		Seat	1pc
#2		Back Cushion	1pc
#3		Leg	4pcs
#4		Pillow	2pcs
#5		Support Leg	1pc

  HARDWARE LIST			
#	DRAWING	DESCRIPTION	QTY
#A		Bolt 5/16"X 1-1/2"L	8pcs
#B		Lock Washer	8pcs
#C		Flat Washer	8pcs
#D		Allen wrench	1pc
#E		Screw 1"L	16pcs

### STEP 1

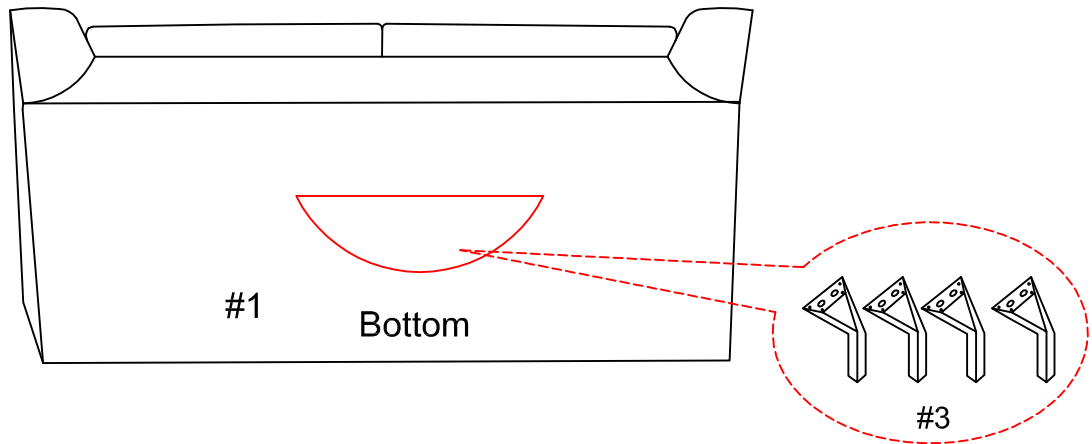 


### STEP 2

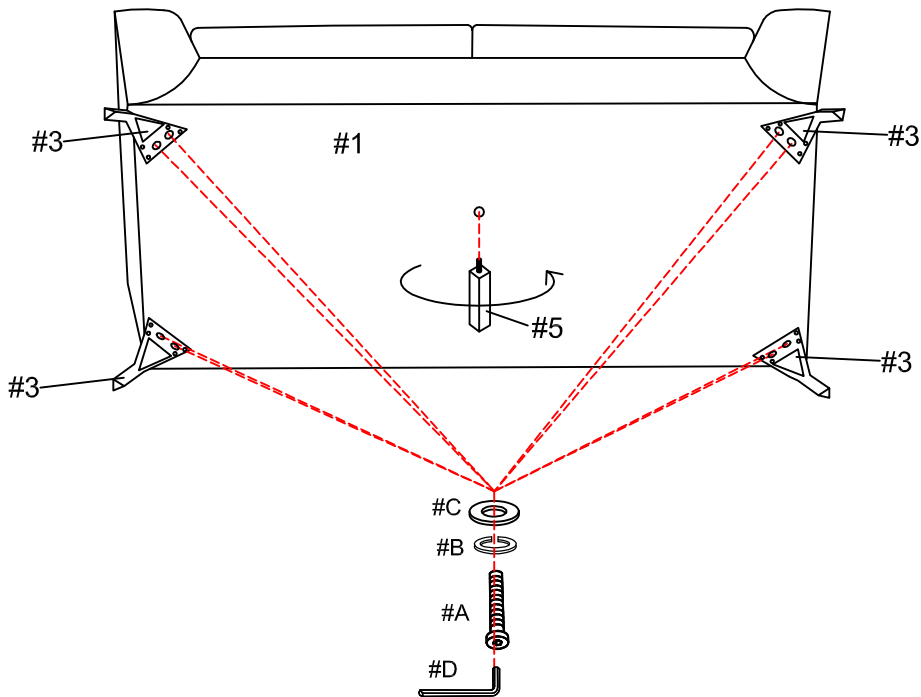 


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

 STEP 3

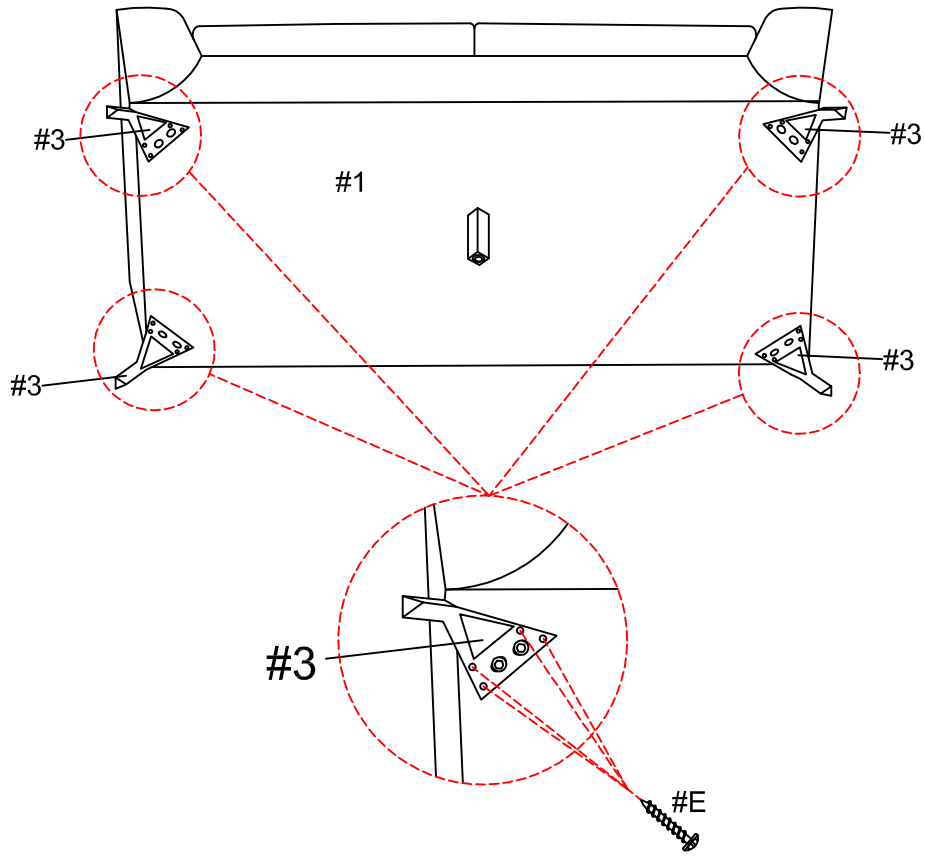


 STEP 4

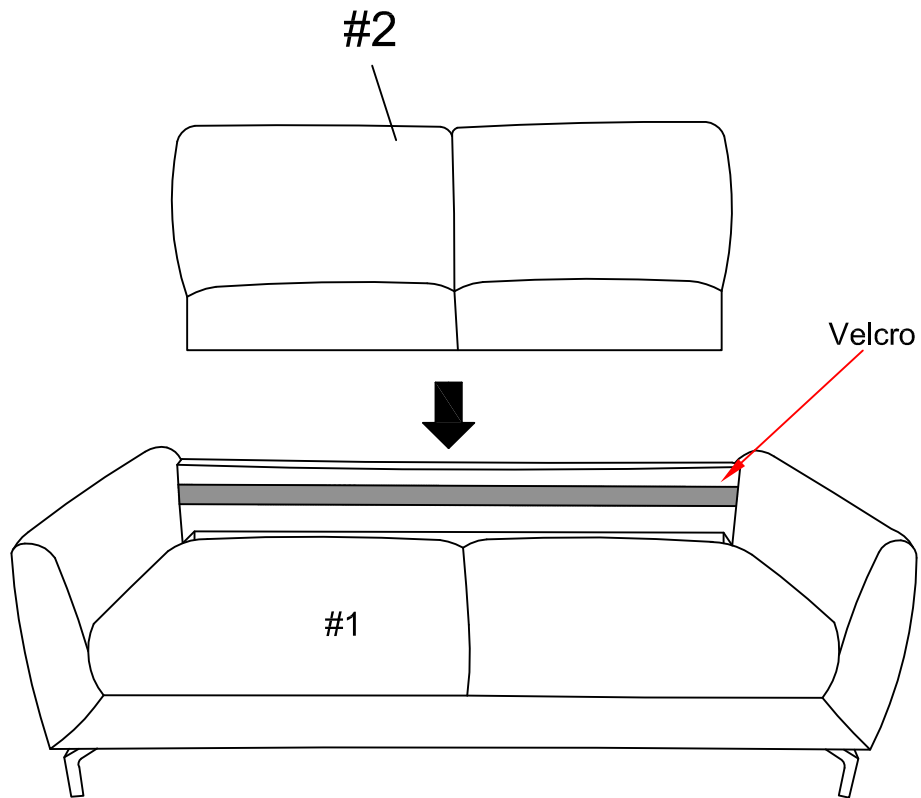


**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**

 **STEP 5**

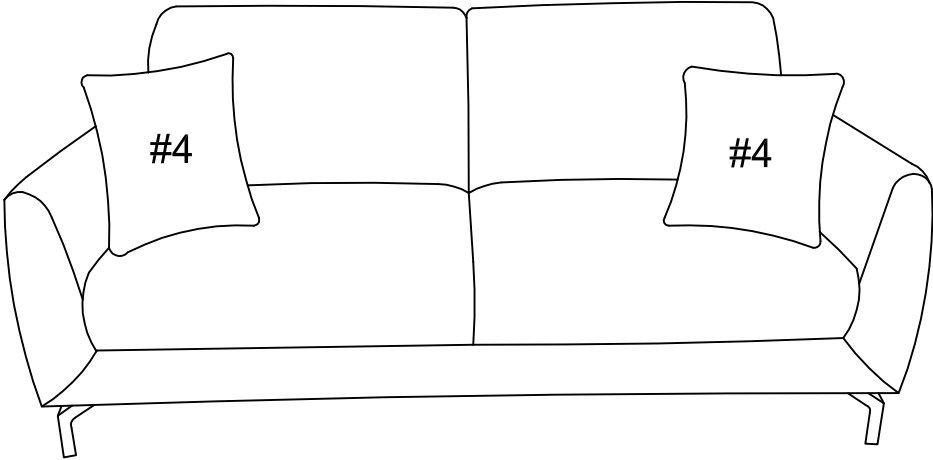

**STEP 6**

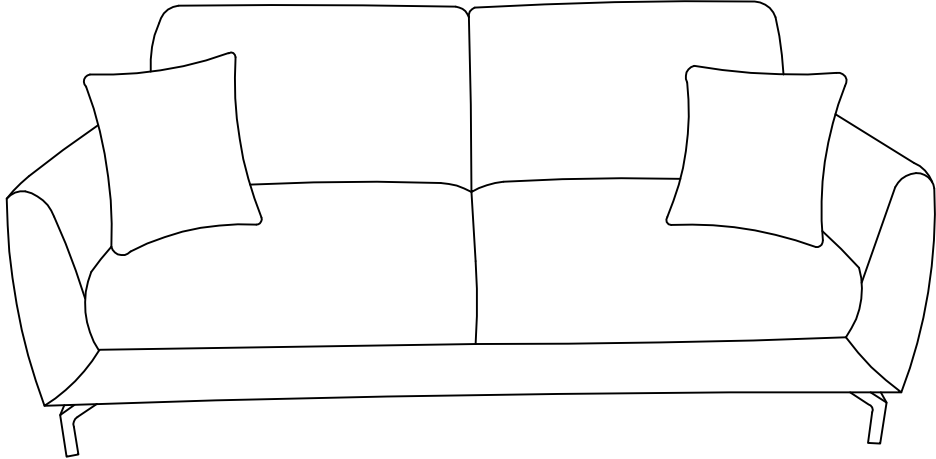 

**DO NOT TIGHTEN SCREWS UNTIL EACH STEP IS COMPLETED**