 
 
 
 
 
 
 

 

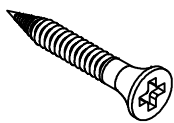 
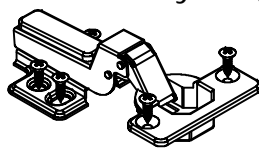 
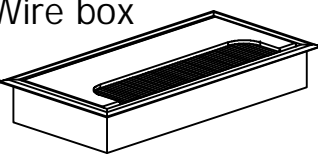 
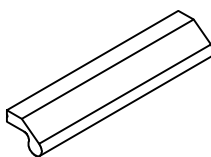 



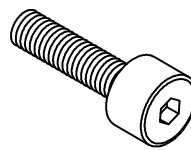 
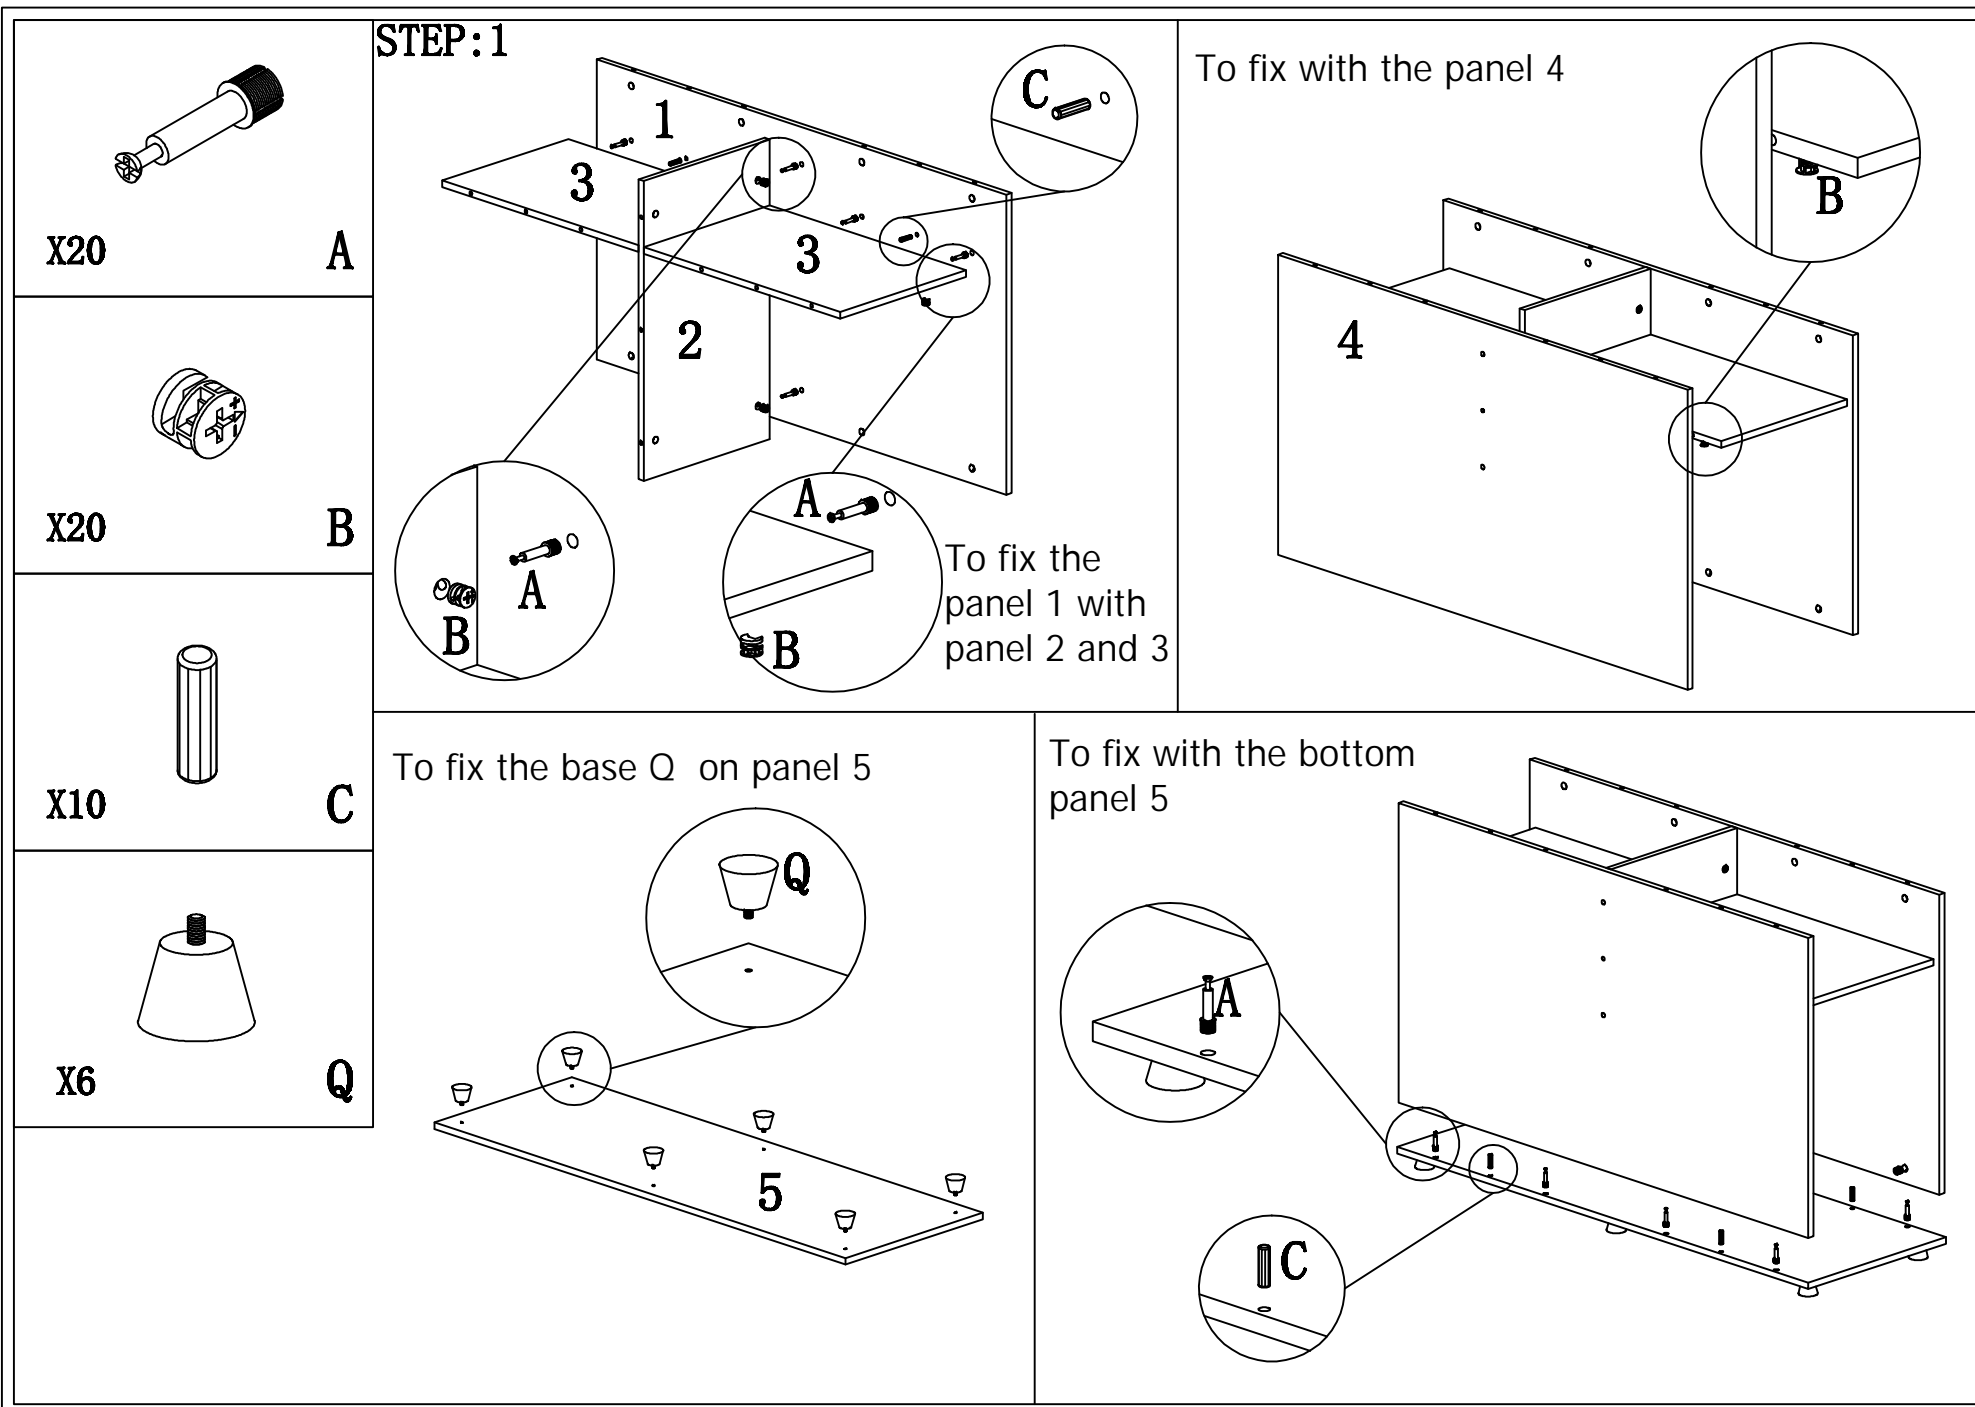 
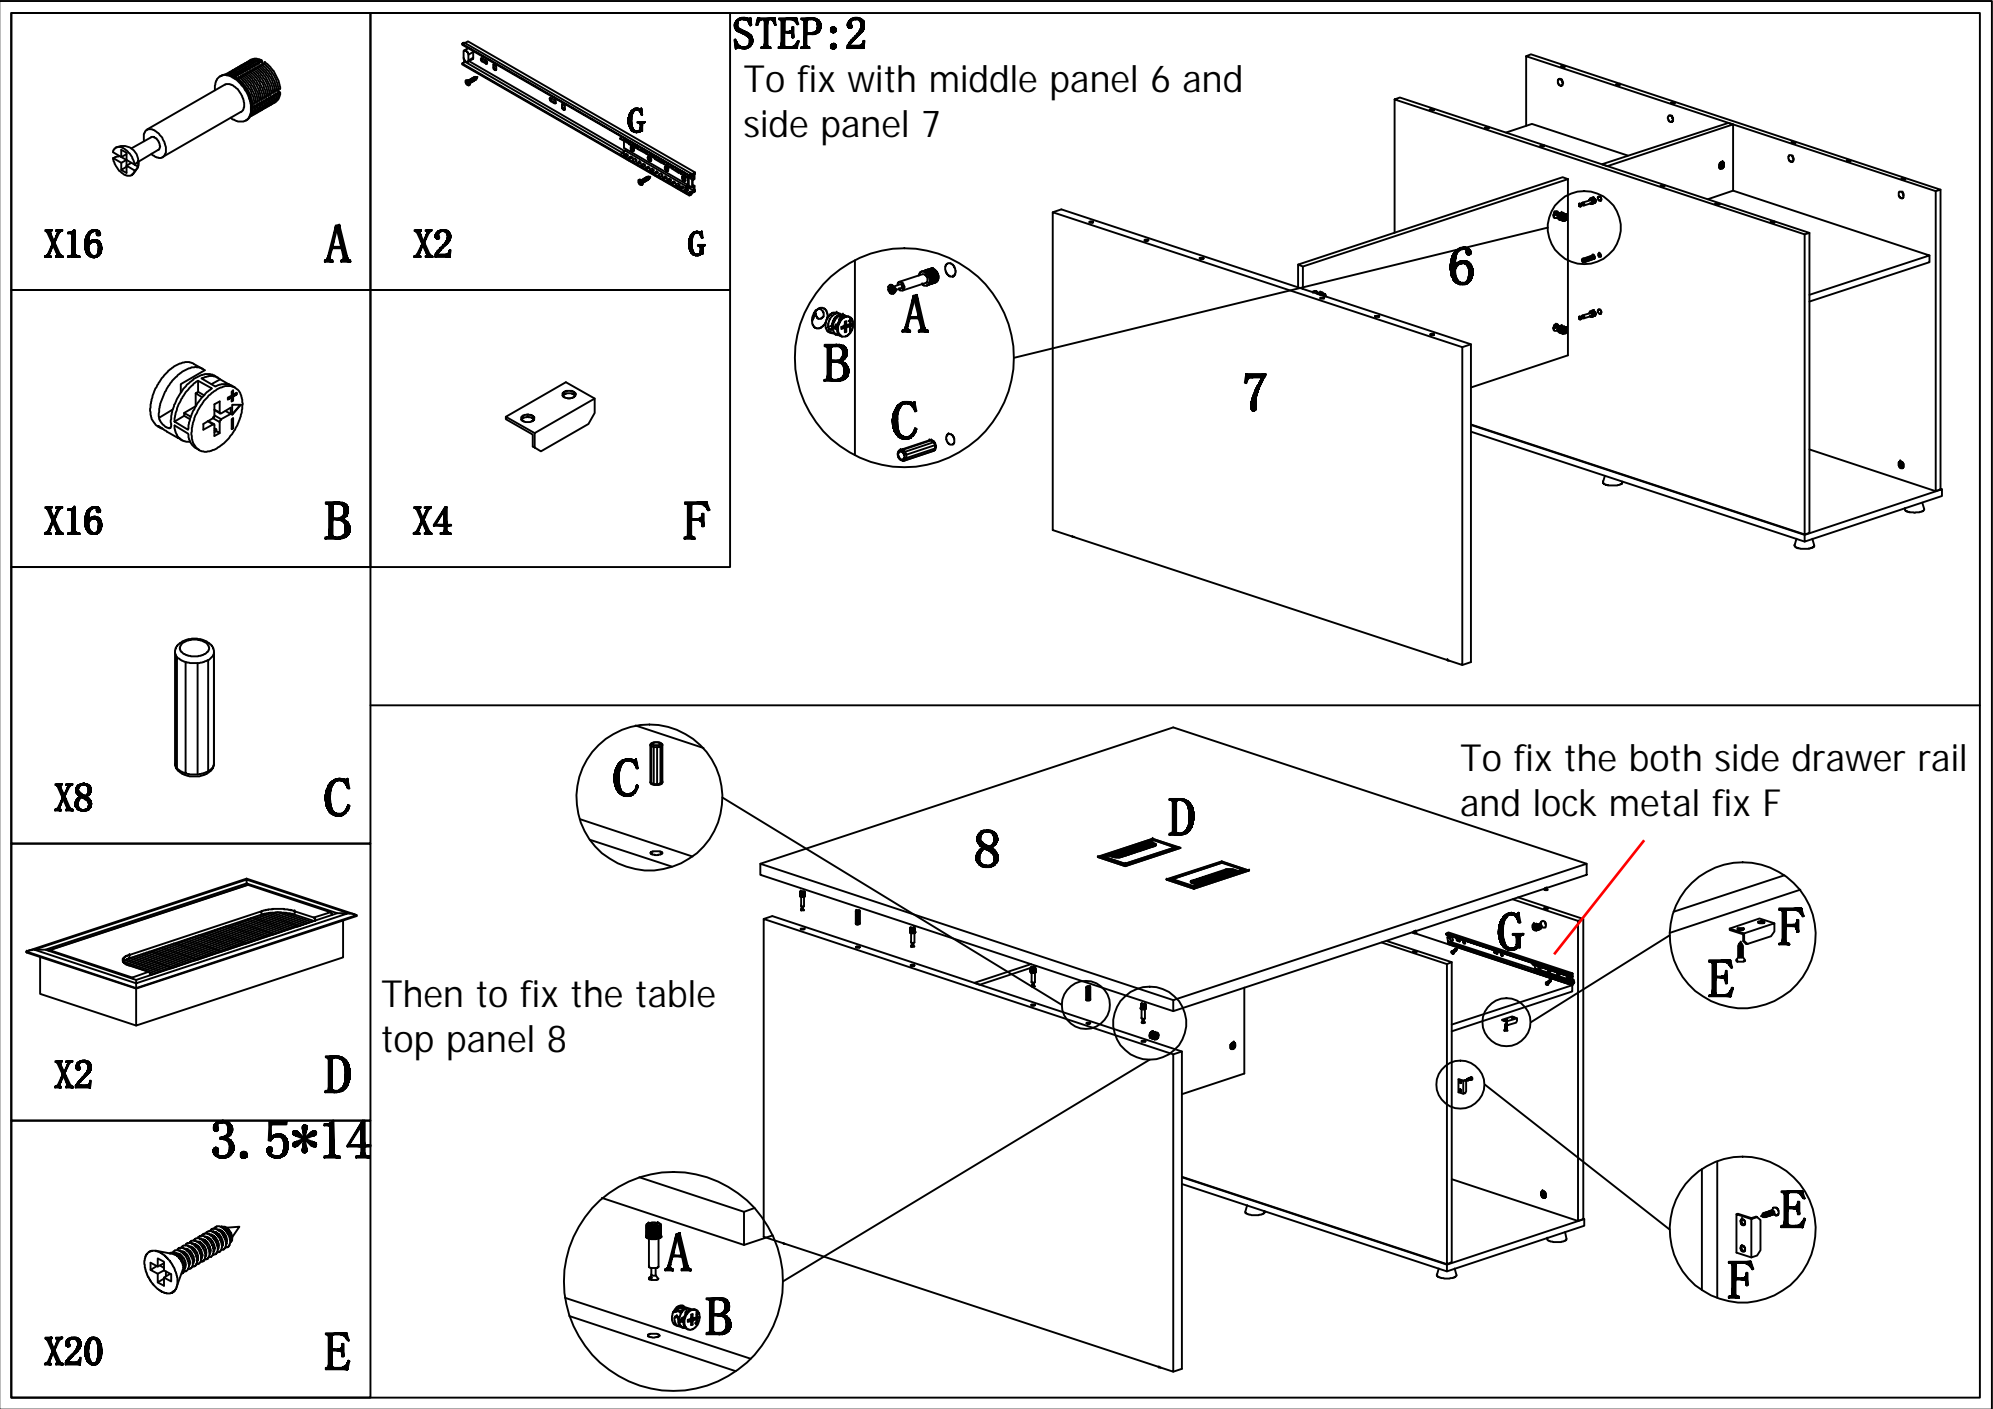 
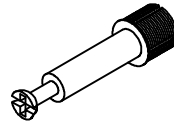 
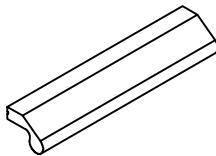 
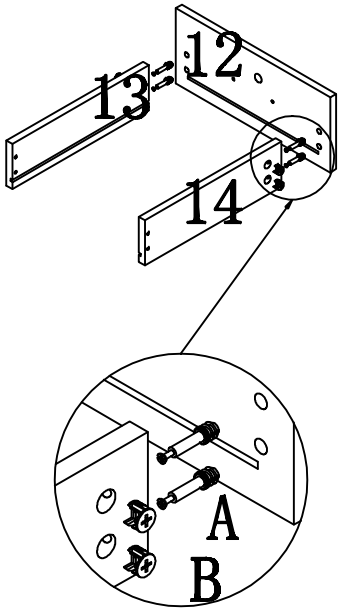 
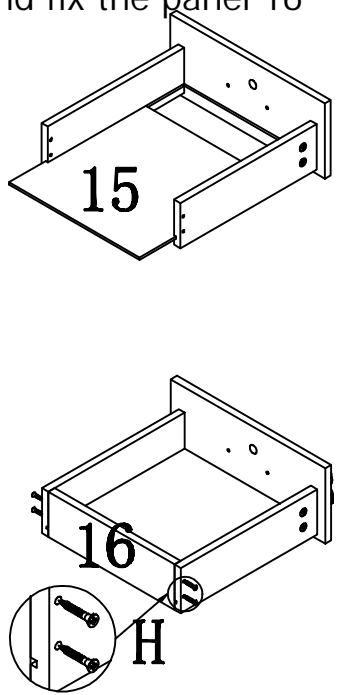 
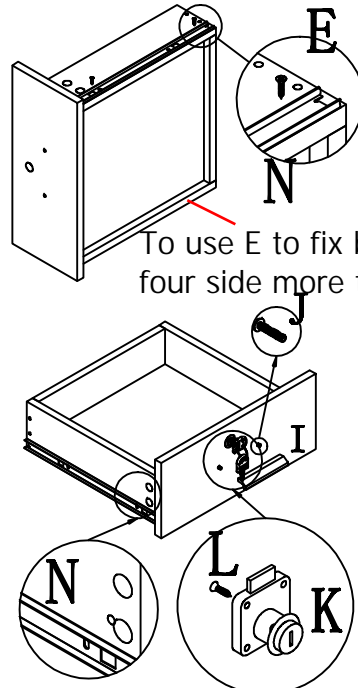 
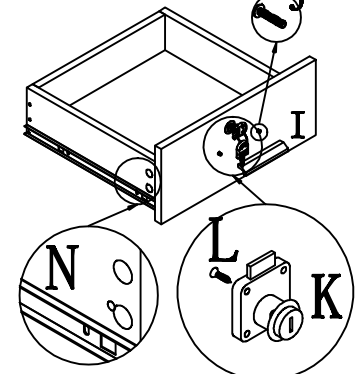 
 


 
 

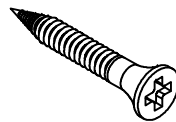 
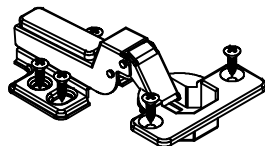 
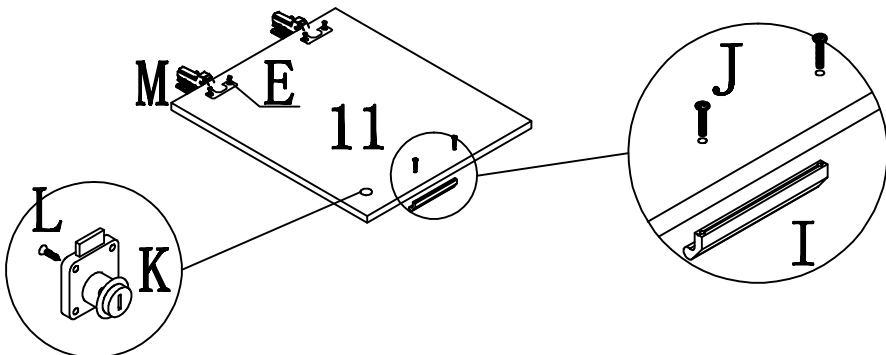 


246-000033

Minifix Screw  X44 A	Lock metal fix  X4 F	Lock  X4 K	Base  X6 Q	 (1200X1200X760)
Minifix  X44 B	Drawer rail  X2 G/N	Screw 4*20  X20 L	Corner bracket metal fix  X4 R	
Wood Minifix  X18 C	Screw 4*30  X8 H	Whole overlay hinge  X4 M		
Wire box  X2 D	Handle  X4 I	Screen base  X2 O		
Screw 3.5*14  X68 E	Handle screw M*18  X8 J	Screen screw  X2 P		

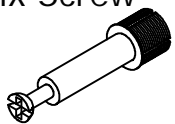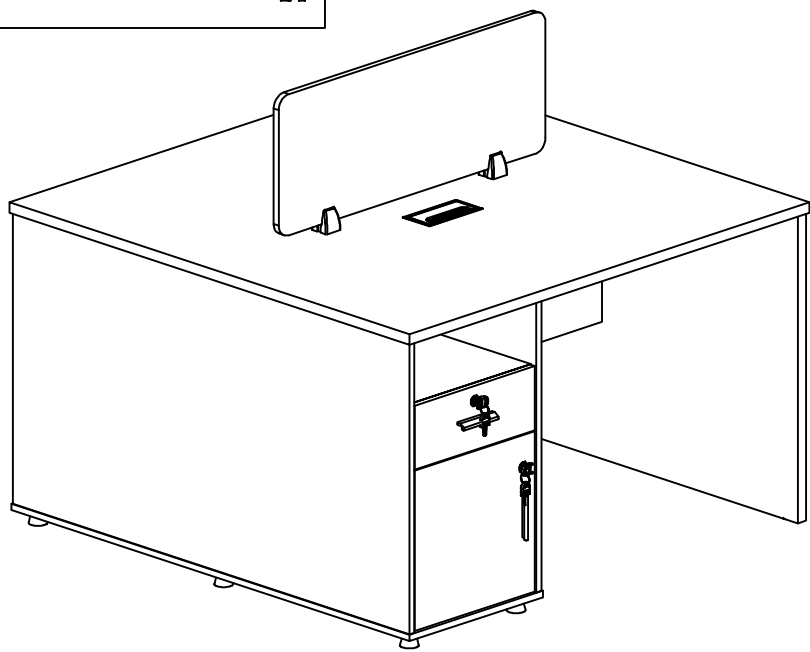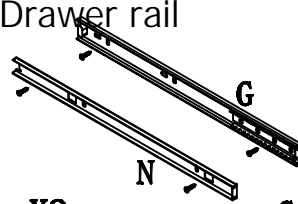

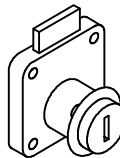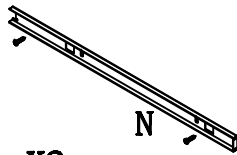

 X8 A	 X4 I	STEP:3 To fix the panel 12,13,14 	To put panel 15 inside and fix the panel 16 	To fix the both side rail  To use E to fix both four side more to  To fix the lock K and handle I
 X8 B	 X8 J			
 X68 E	 X4 K			
 X2 N	 X16 L			
 X8 H	 X4 M			
		 To fix the hinge M and handle I on door panel 11 Then to fix in cabinet		

3. 5*14STEP:4

FINISH

To fix the table top screen



X16

E

4*20



 
X4

L




X2

O

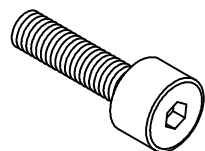


X2

 P



X4

 R

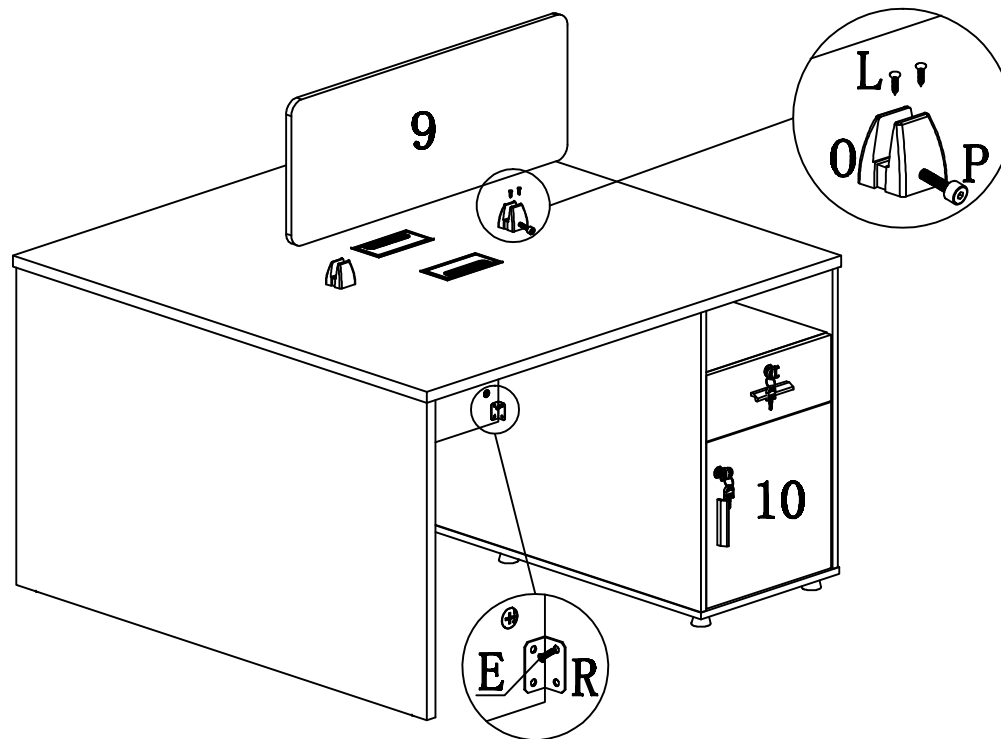

To use corner bracket metal fix R to fix middle panel both side more stable