



ASSEMBLY INSTRUCTION

A		M6x25mm	1pc
B		M6x48mm	4pcs
F		5mm	1pc


C

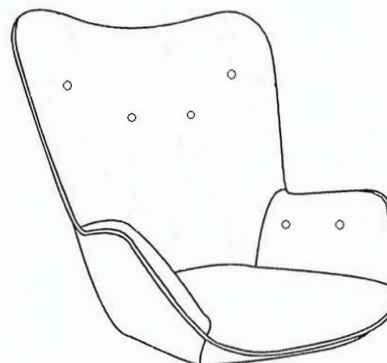


D

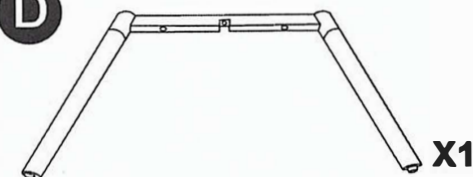


E

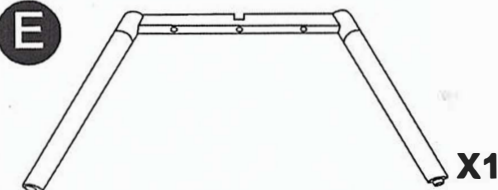


1

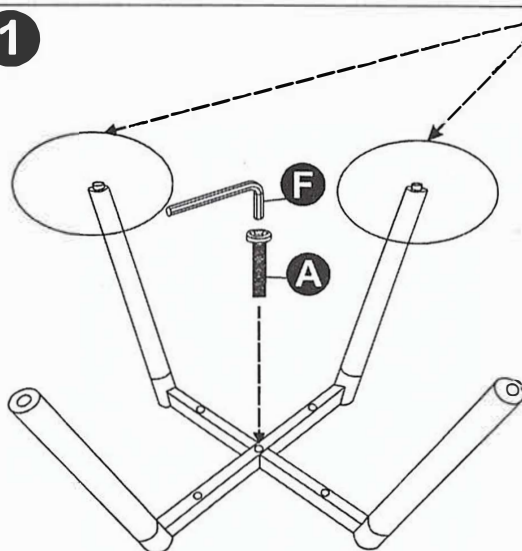

2

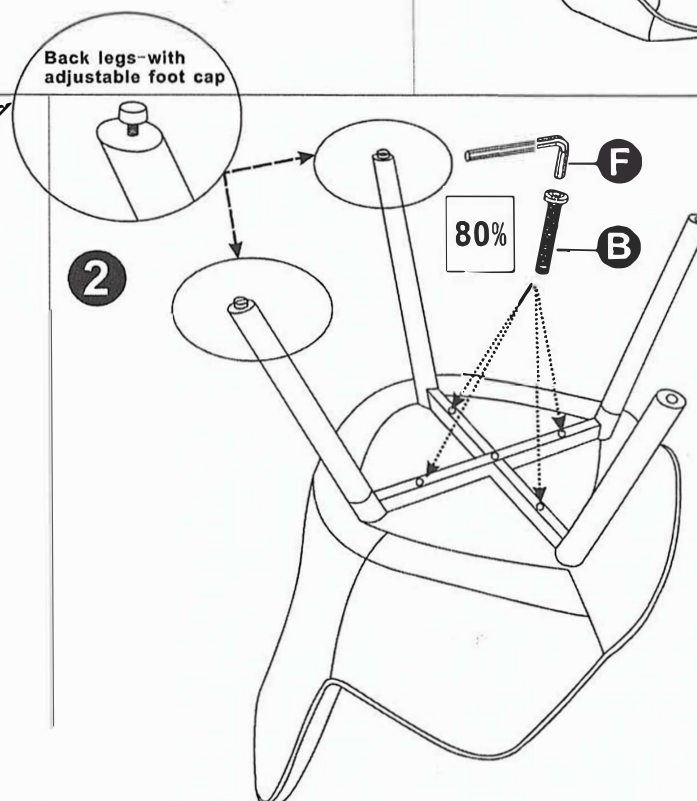


3




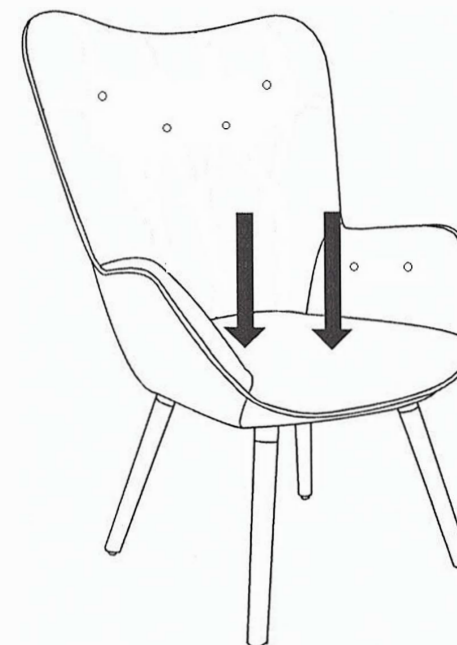


Pls do NOT over-tighten all screws before adjusting balance of the whole chair

Tight all screws to 100%

ASSEMBLY INSTRUCTION

A	 M8x65MM	X8
B	 M8	X8
C	 M8	X8
D		X1

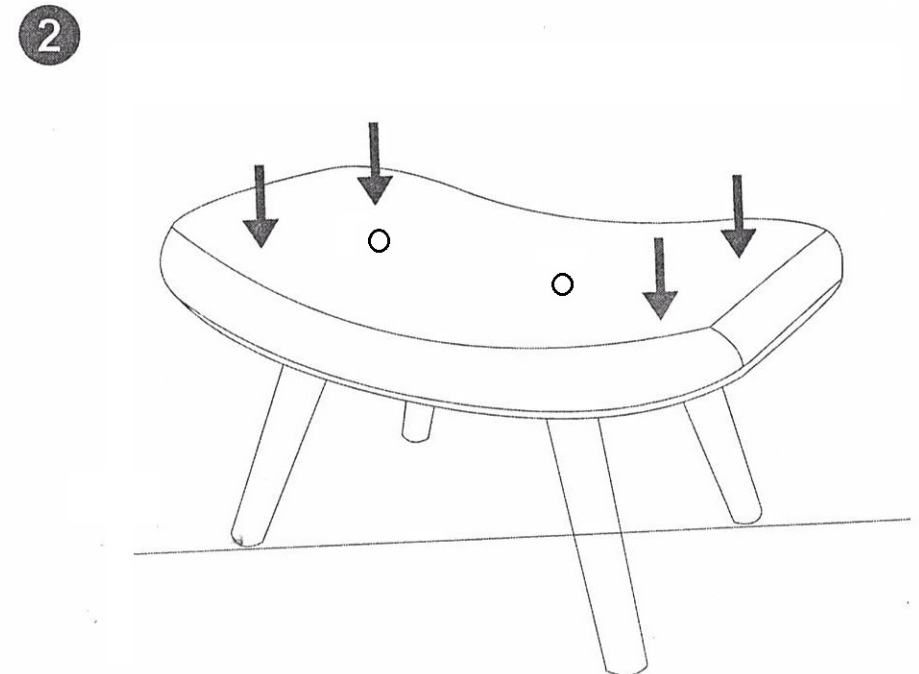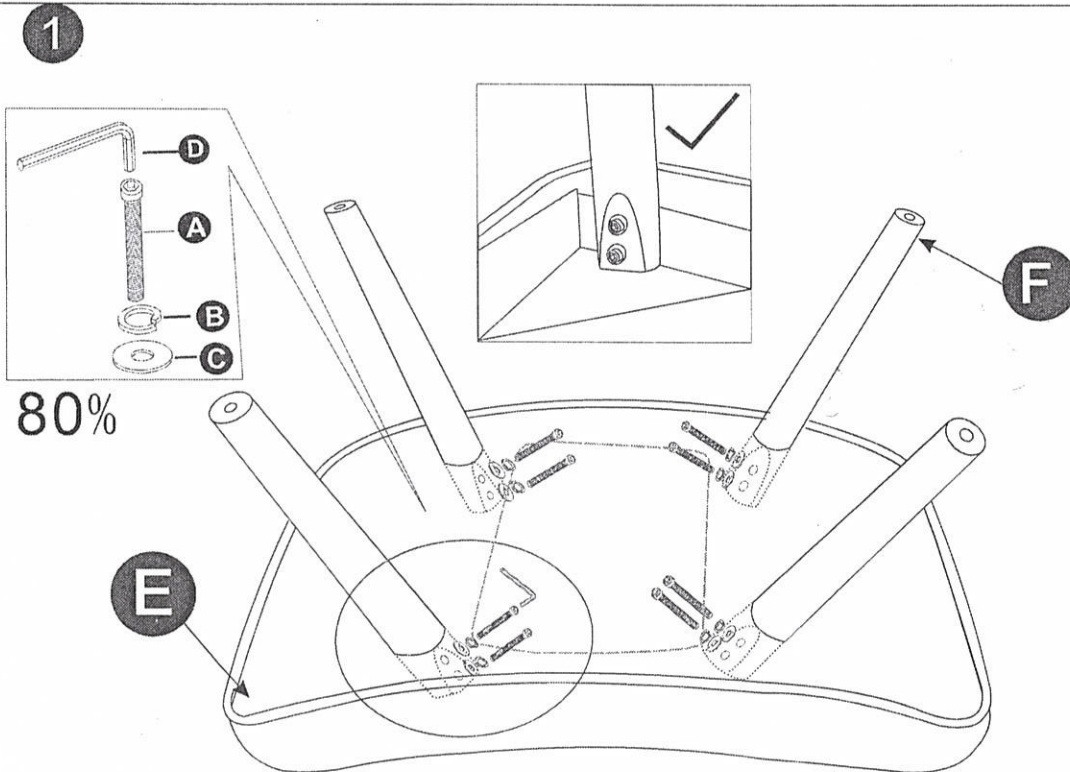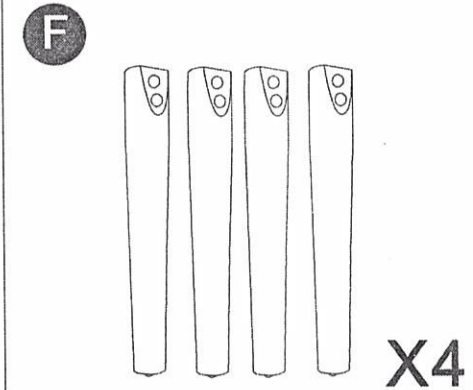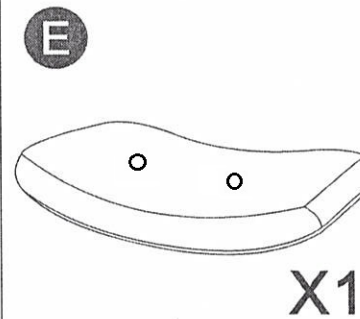

Pls do **NOT** fully-tighten all screws before adjusting the balance of the whole footrest