


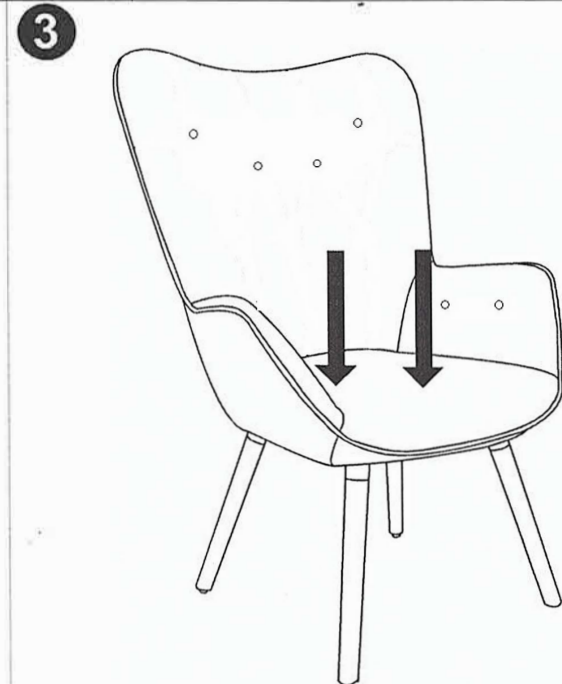
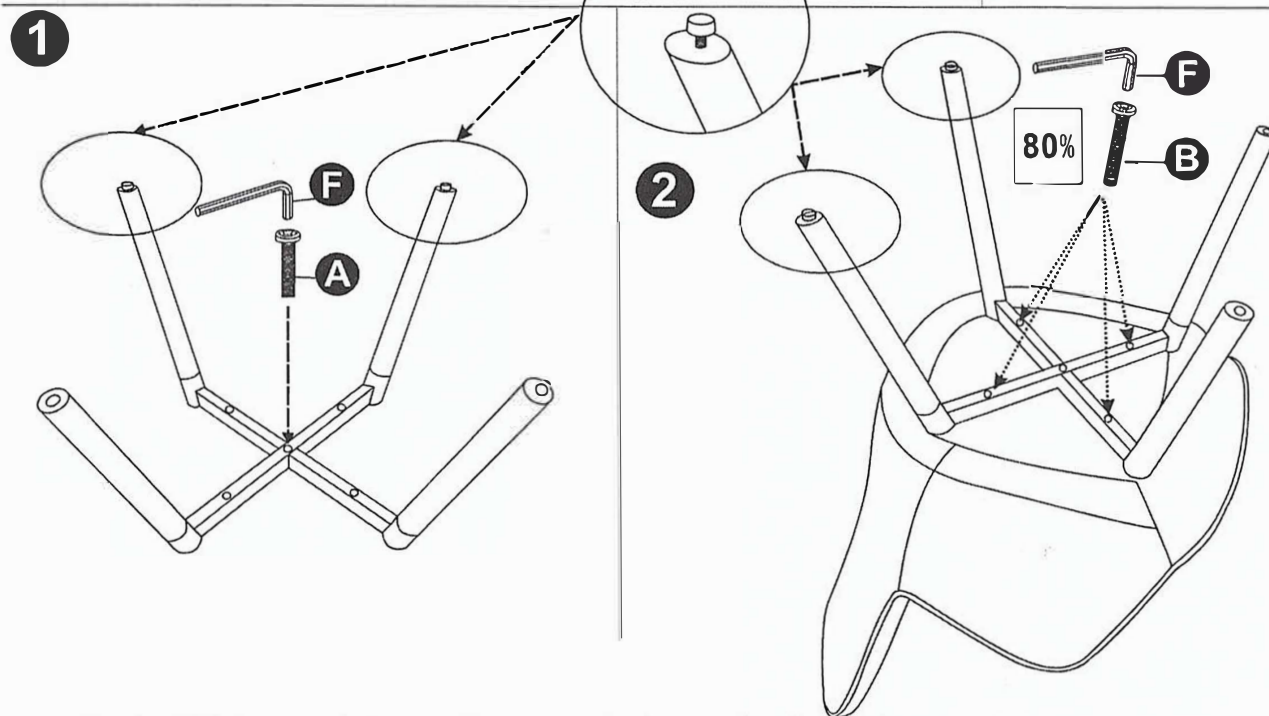
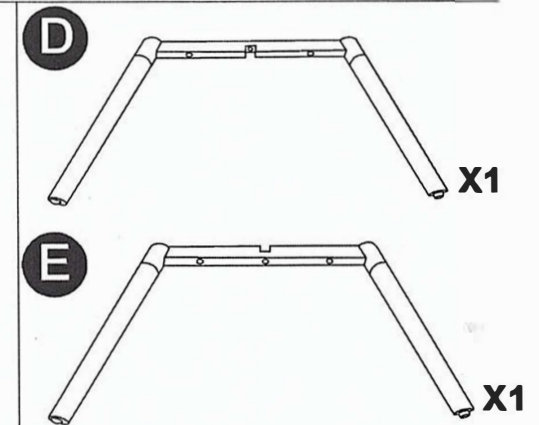
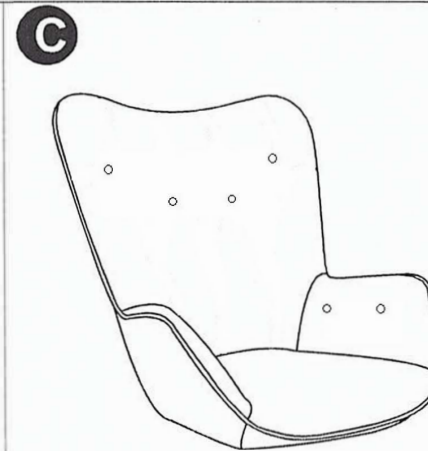


# ASSEMBLY INSTRUCTION





<b>A</b>		M6x25mm	1pc
<b>B</b>		M6x48mm	4pcs
<b>F</b>		5mm	1pc

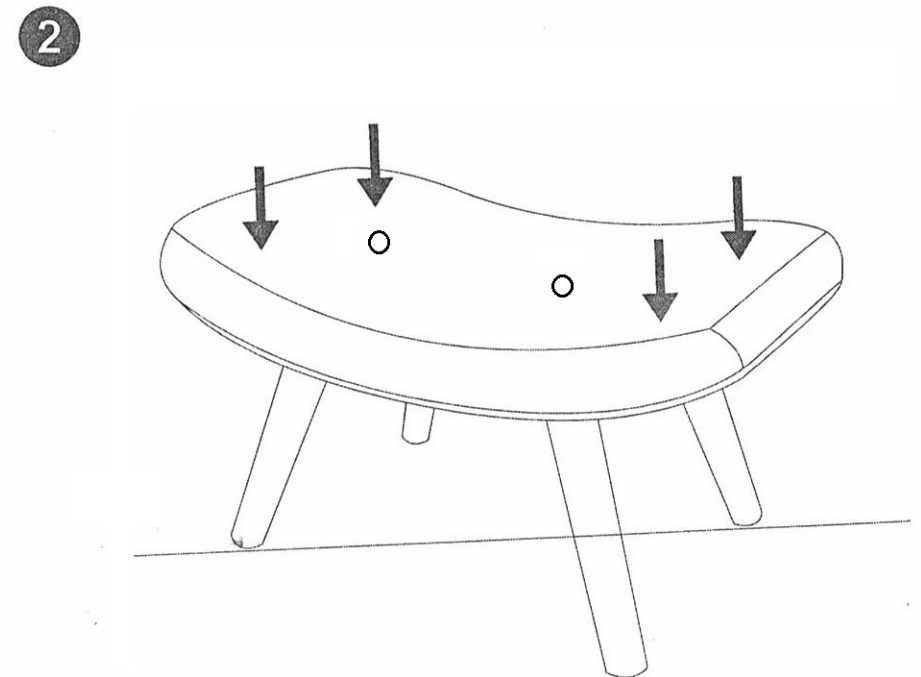
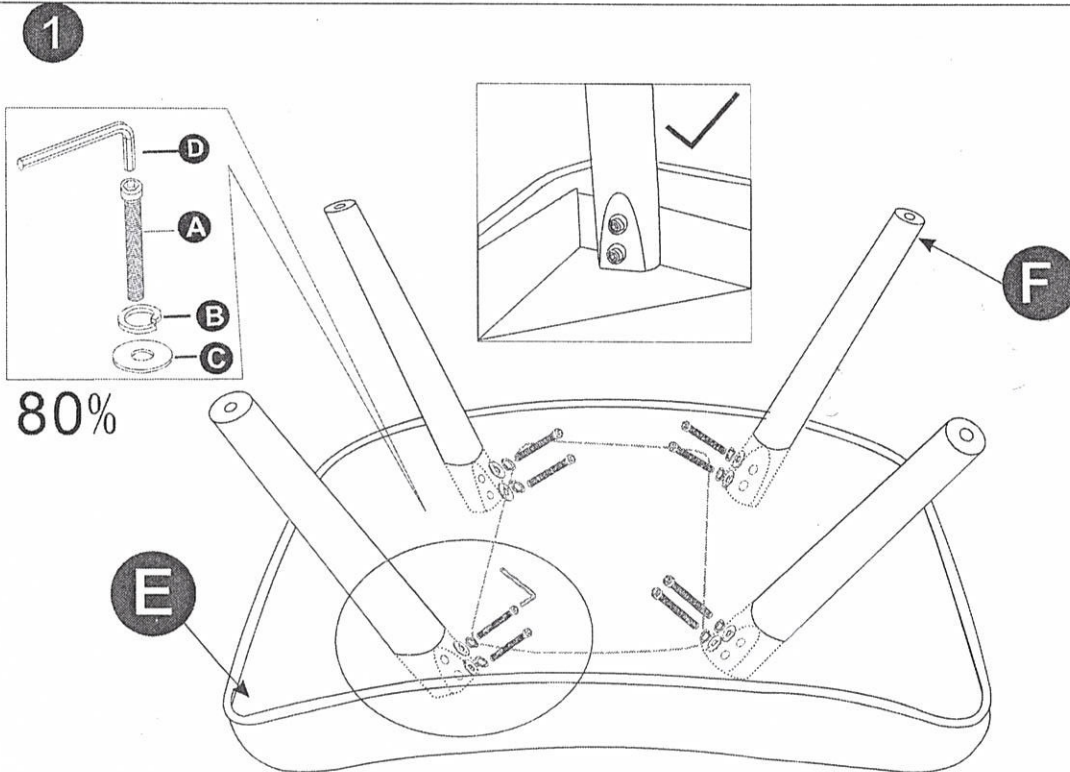
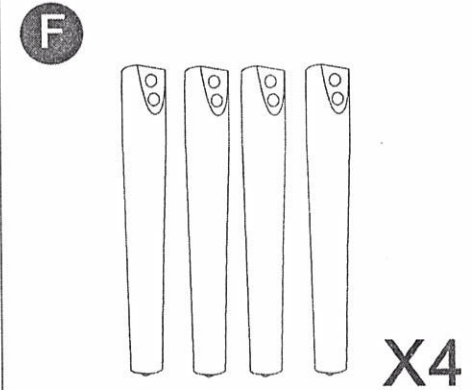
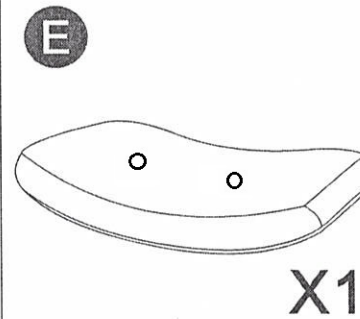


Pls do NOT over-tighten all screws before adjusting balance of the whole chair

Tight all screws to 100%

# ASSEMBLY INSTRUCTION

<b>A</b>	 M8x65MM	X8
<b>B</b>	 M8	X8
<b>C</b>	 M8	X8
<b>D</b>		X1



Pls do **NOT** fully-tighten all screws before adjusting the balance of the whole footrest