
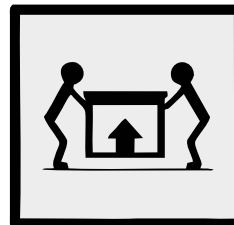


# Wardrobe 2100x1350x520 mm

## ASSEMBLY INSTRUCTION

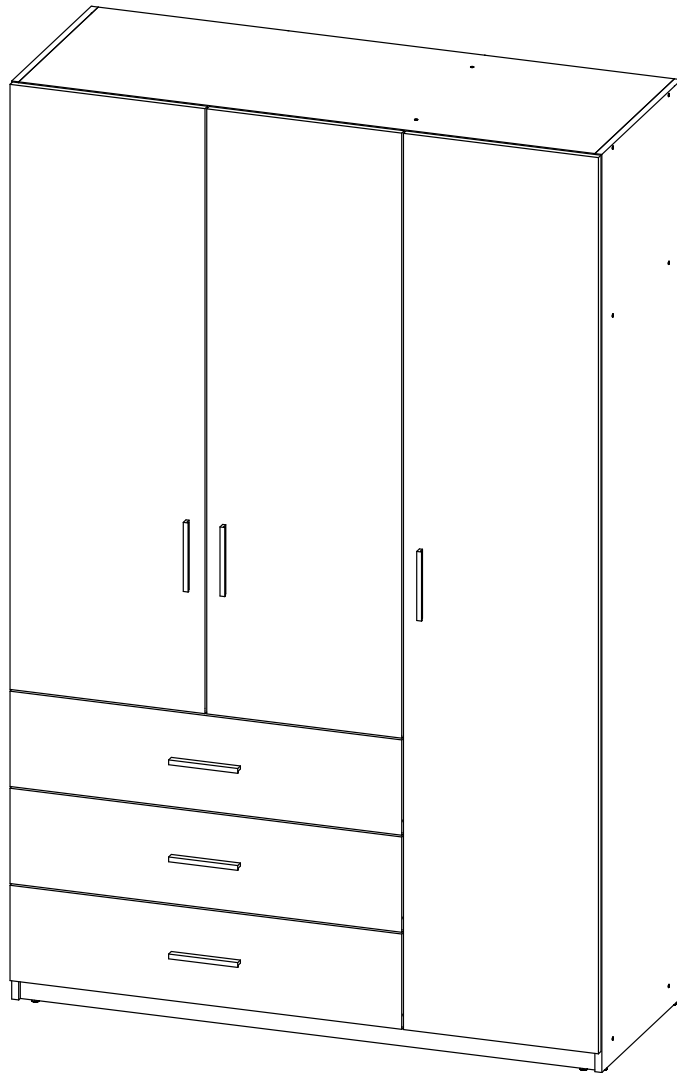

### **NOTE!**

For all questions and complaints about this product, please contact the place of purchase of this product.






### **RULES FOR USE AND CARE OF FURNITURE**

1. Use furniture only in dry rooms protected from the effects of weather conditions.
2. Install with suitable tools according to these assembly instructions.
3. Try to assemble as close to the location as possible.
4. The body is assembling in a horizontal position.
5. Before moving furniture, make sure that it is not loaded with items.




**Caution:** moving furniture may damage it.


When moving, hold on to vertical elements only; moving furniture by horizontal parts can break the product.

6. Overloading the furniture can damage it.
7. From time to time check the fittings and their correct position.
8. Wipe the furniture surface only with a slightly damp cloth or paper towels. Do not use chemical cleaning agents other than those specifically made for this.

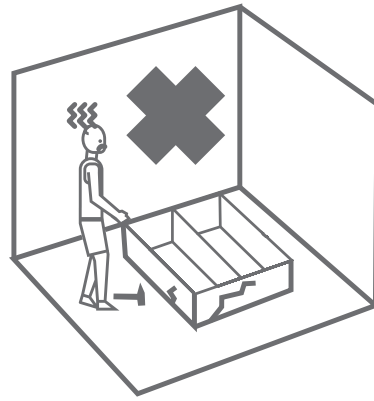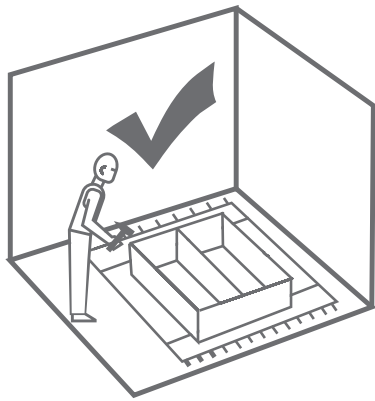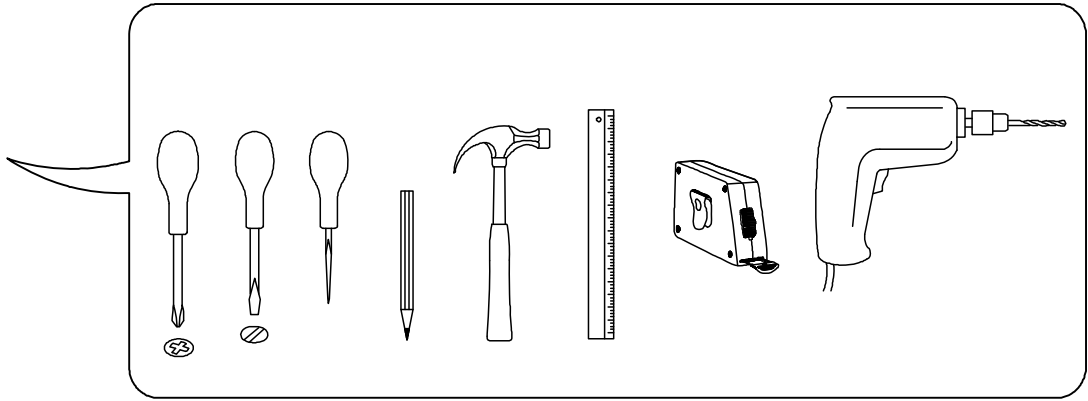

60-120 min

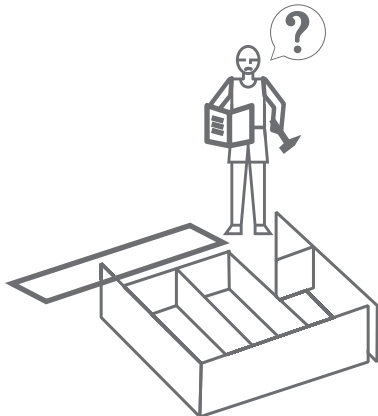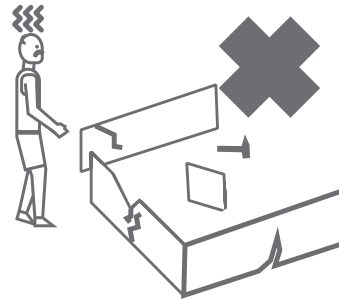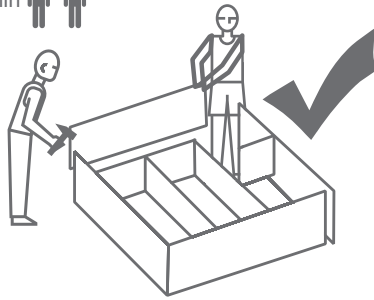


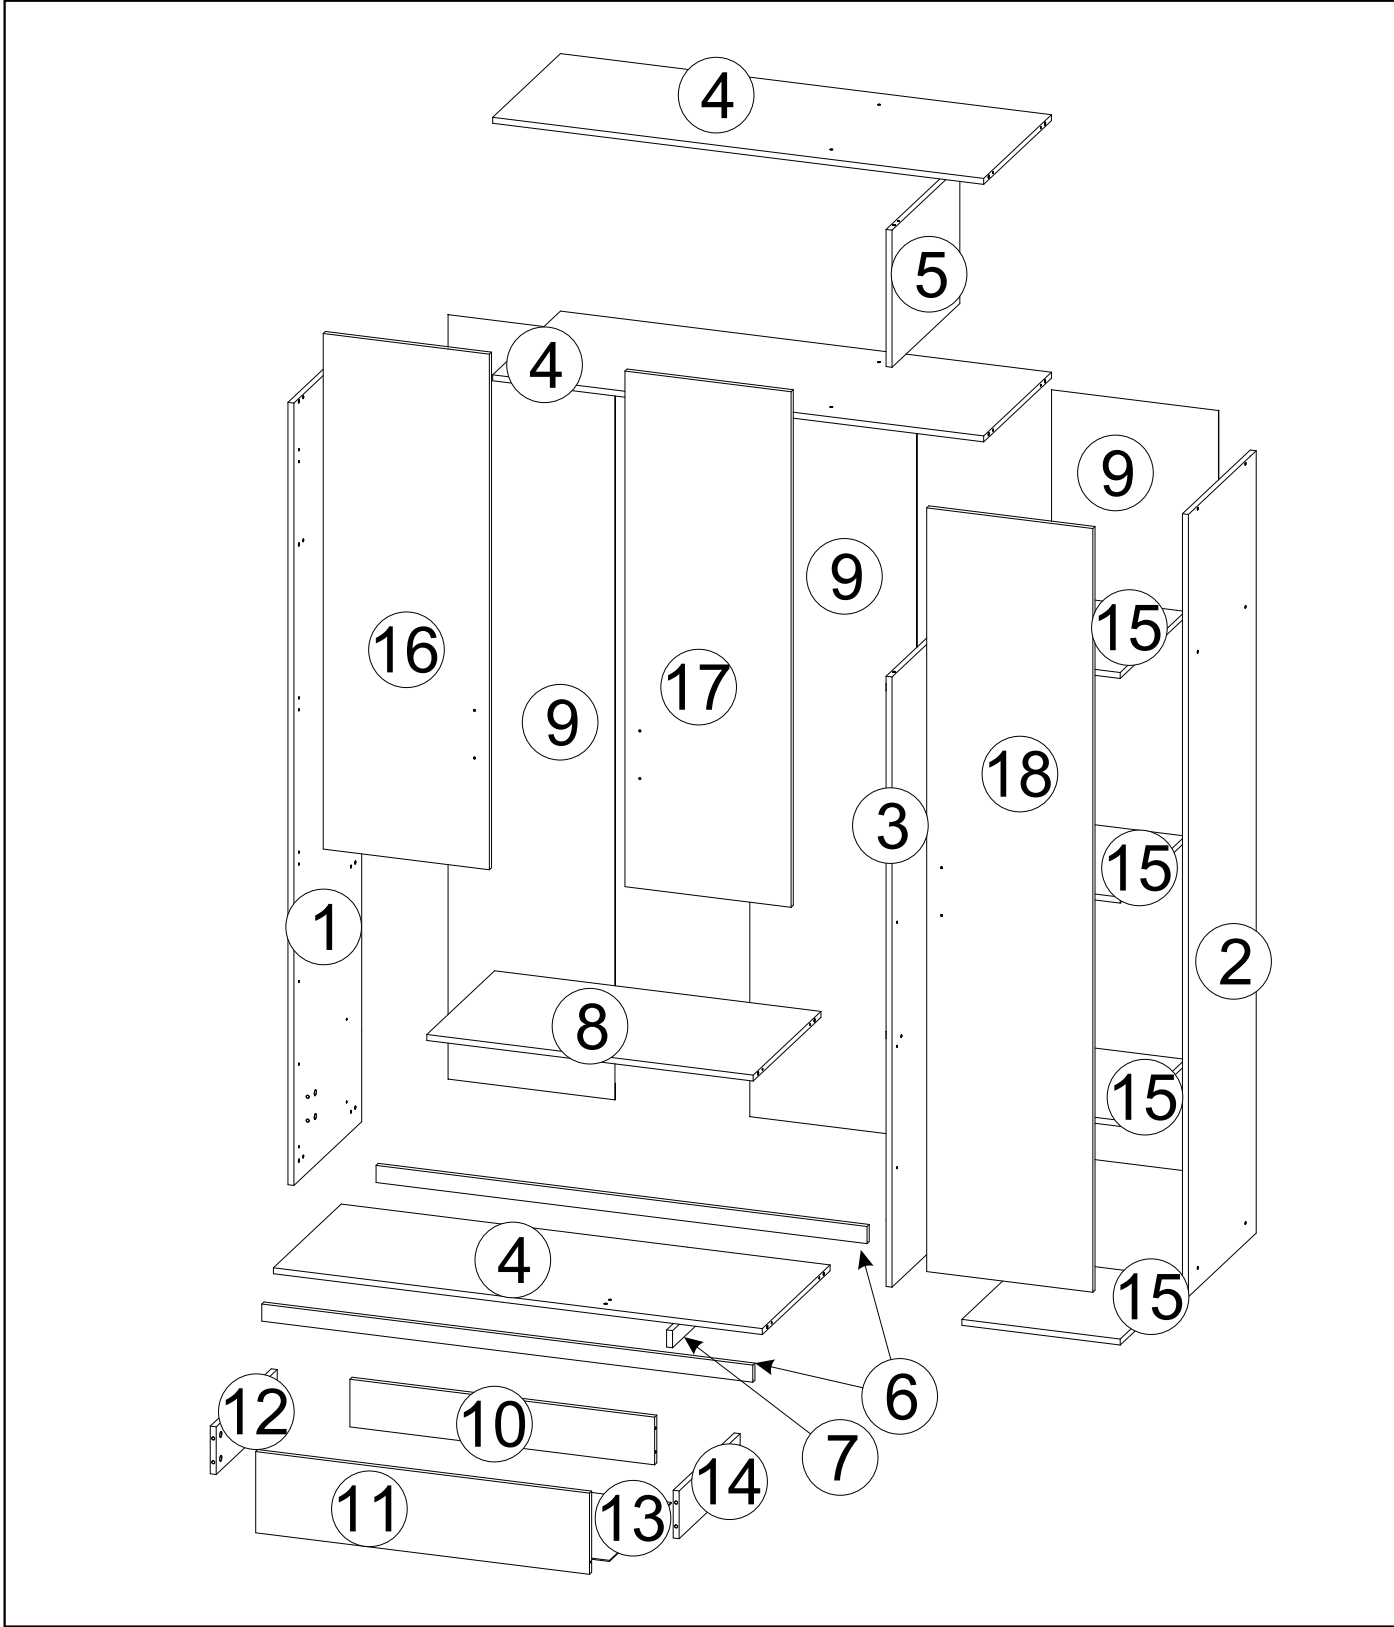

22x φ8x30 mm f1	9x c3	65x φ3,5x16 mm p38	34x φ7x50 mm e32	1x	l1
9x	12x D	16x k1	2x n906	16x φ5x17 mm	12x φ15x12mm #16 r1
12x 20/9 r16	6x 15x10x14mm c14	6x	12x c1	32x φ6x13 mm e3	



**1**

22x  
 $\phi 8 \times 30$  mm f1

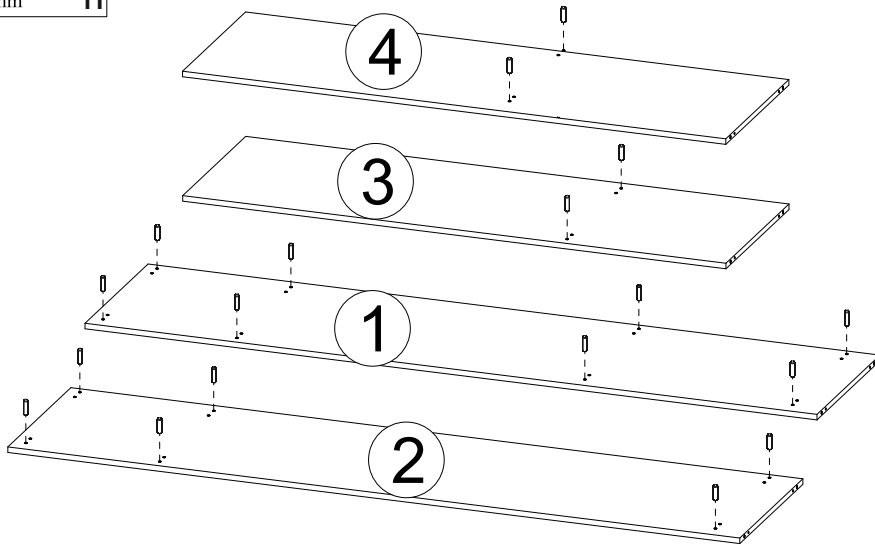
**2**

9x  
 c3

18x  
 $\phi 3,5 \times 16$  mm p38

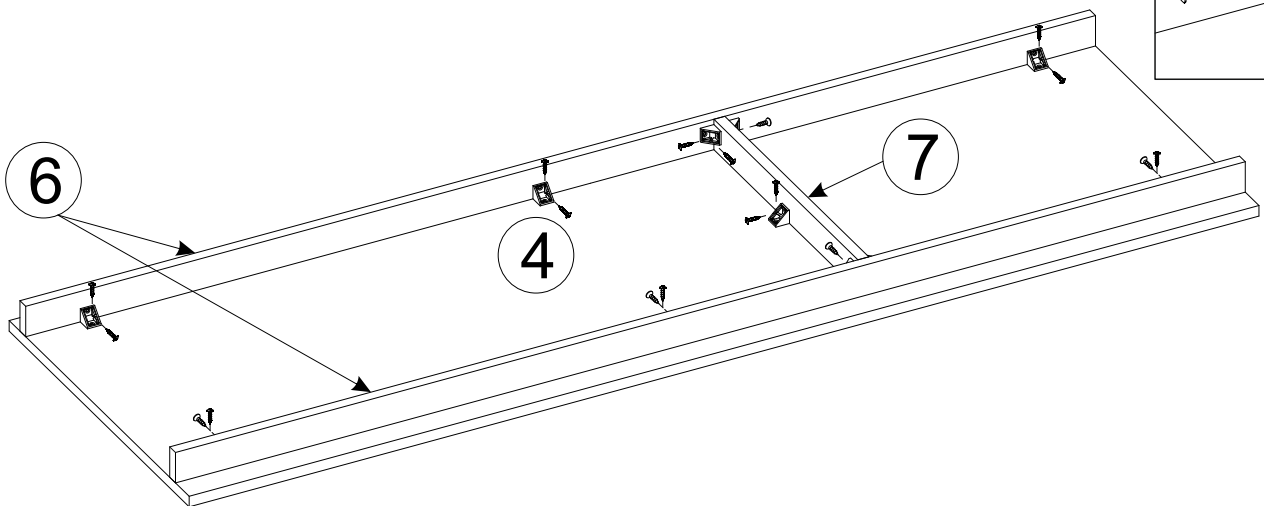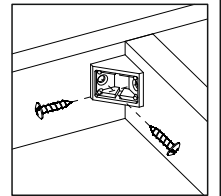
**3**

2x  
 $\phi 7 \times 50$  mm e32

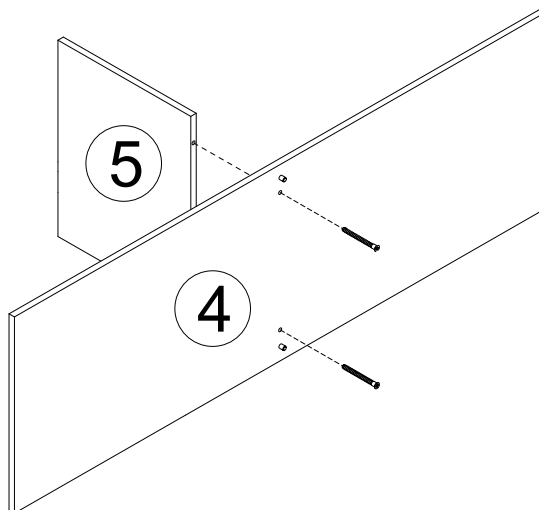

# 4


6x  
φ7x50 mm e32


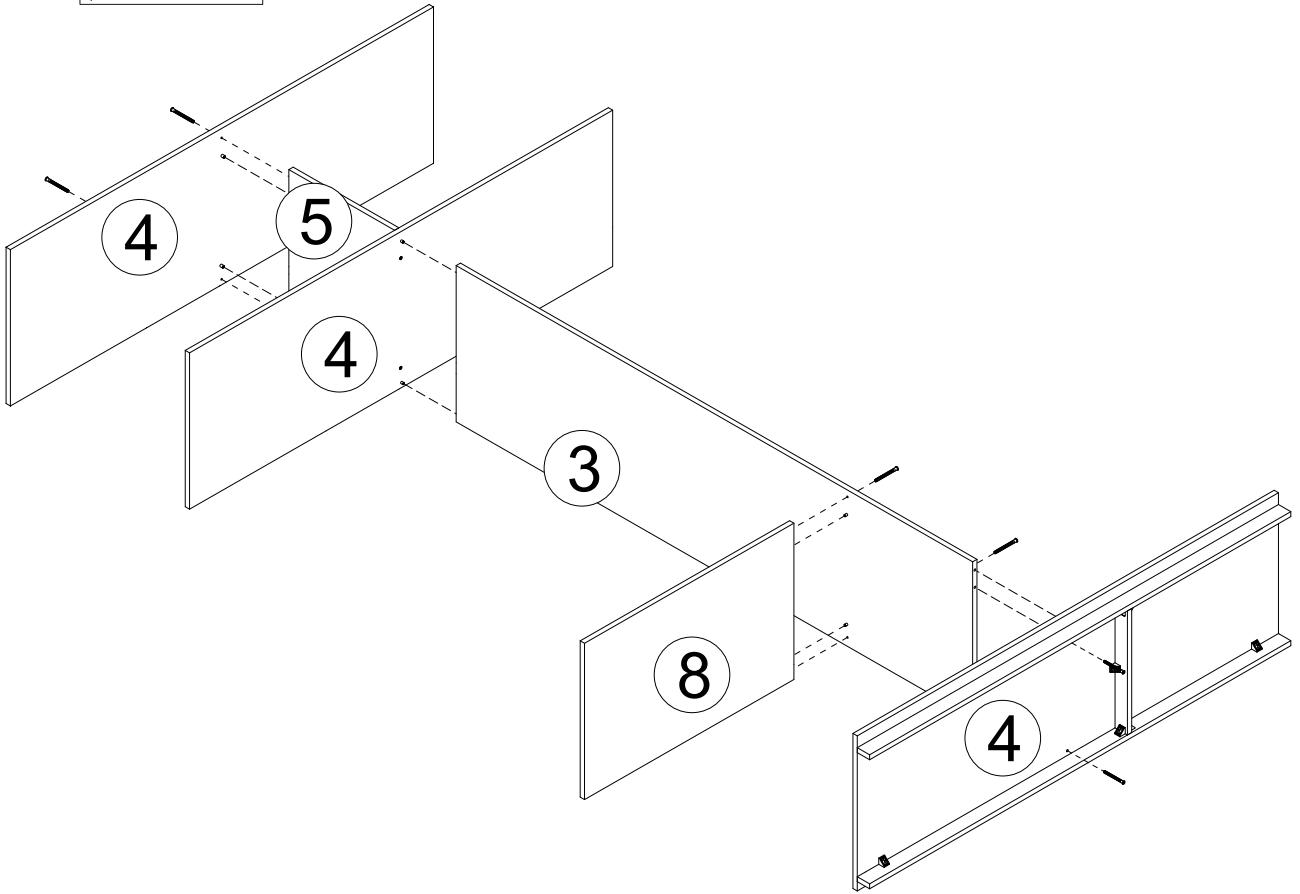


# 5

14x  
φ7x50 mm e32


10x  
k1

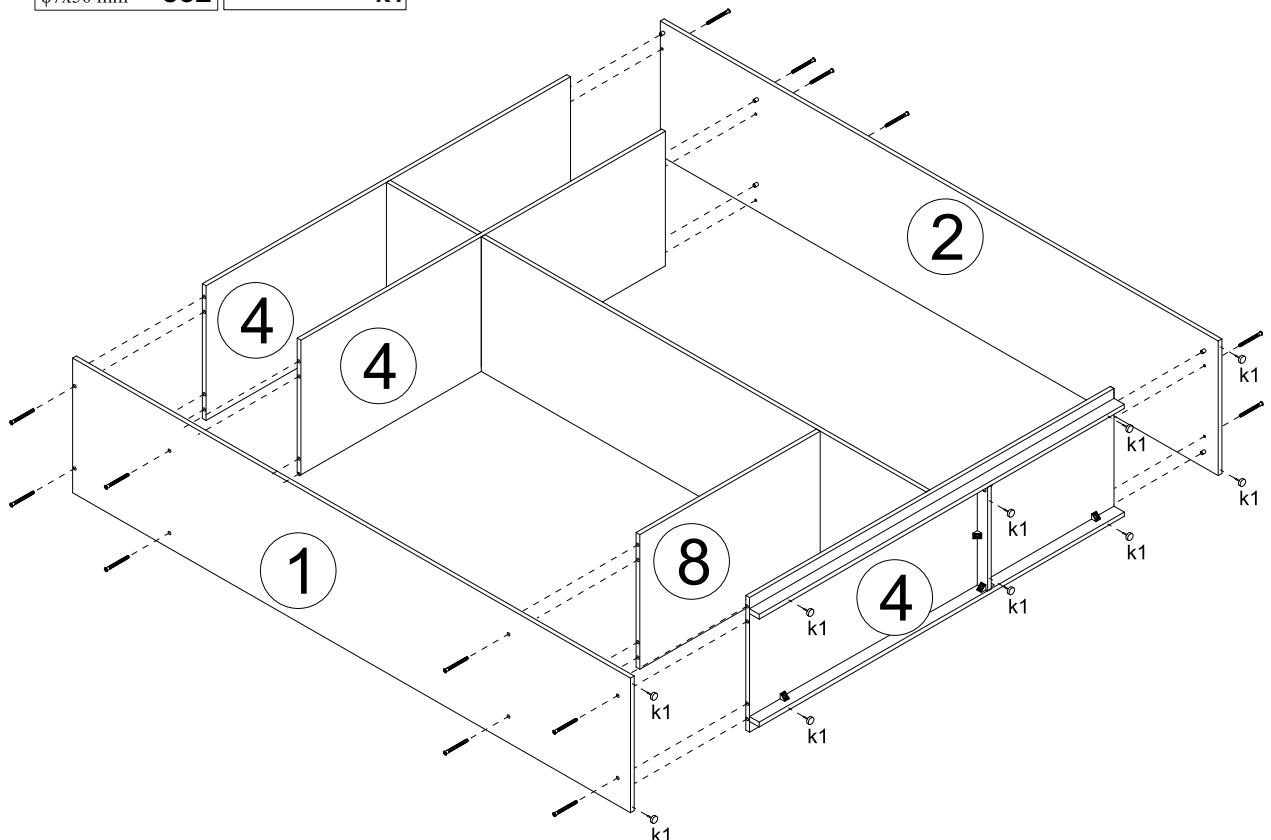

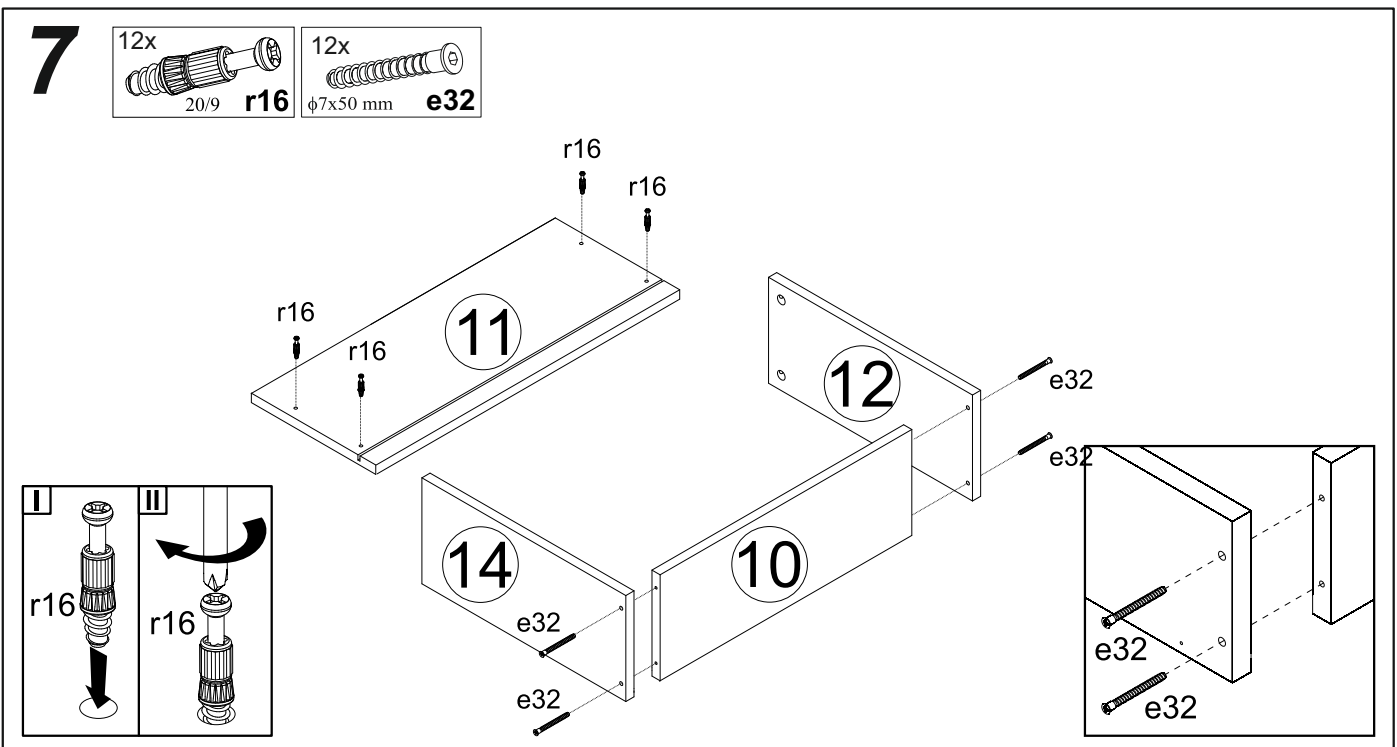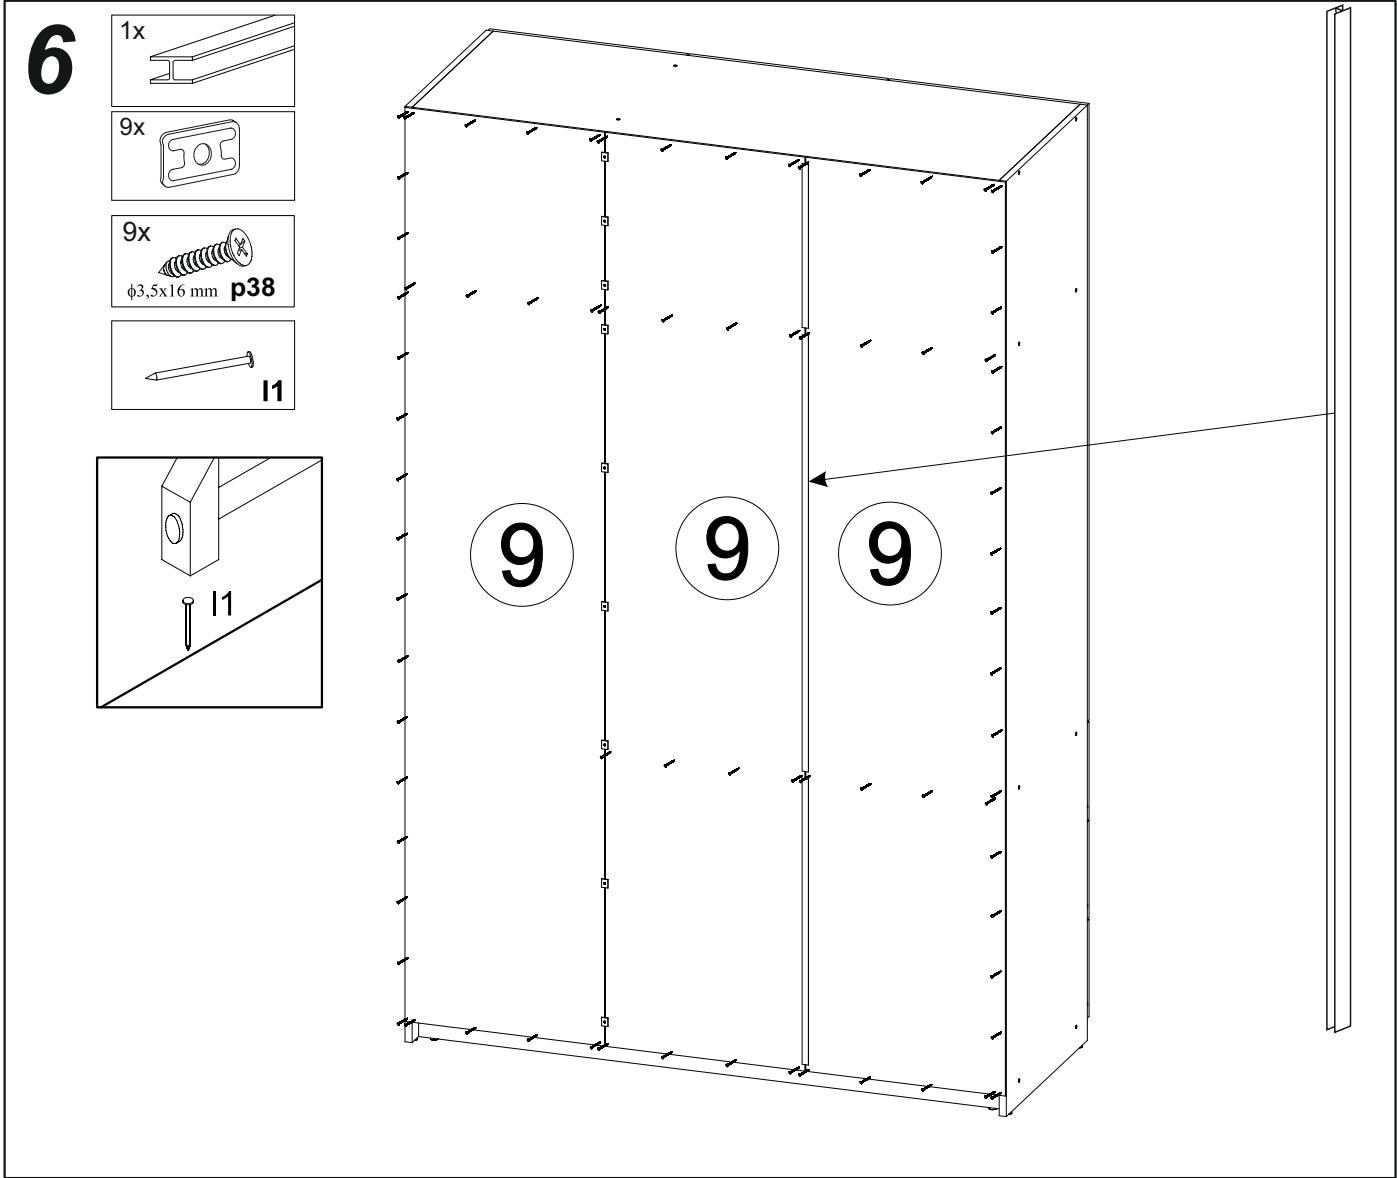





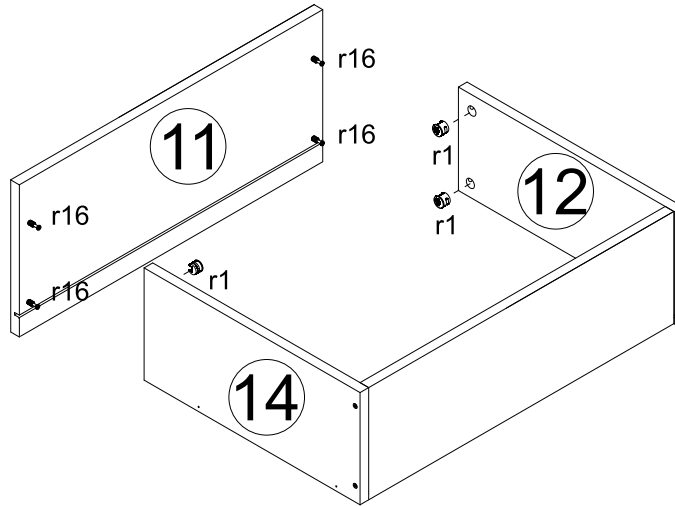



# 8

12x  
  
 φ15x12mm #16 **r1**














# 9

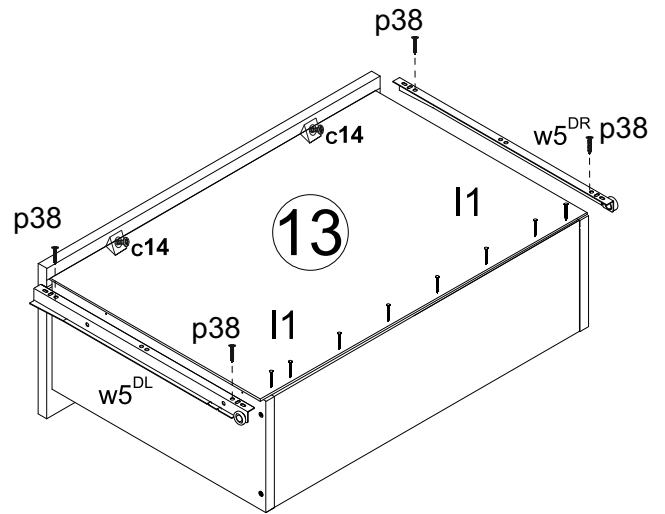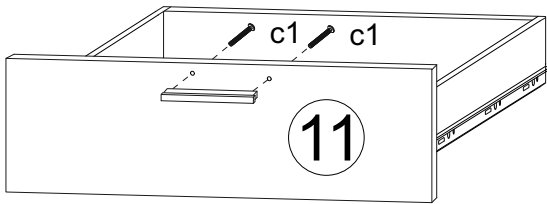12x  φ3,5x16 mm <b>p38</b>	3x  <b>w5<sup>DL</sup></b>	3x  <b>w5<sup>DR</sup></b>
6x  15x10x14mm <b>c14</b>	3x 	6x  <b>c1</b>




# 10




12x  φ 7x13 mm <b>e3</b>
3x  <b>w5<sup>CR</sup></b>
3x  <b>w5<sup>CL</sup></b>
6x  φ3,5x16 mm <b>p38</b>
2x  <b>n906</b>
1x 
16x  φ5x17 mm

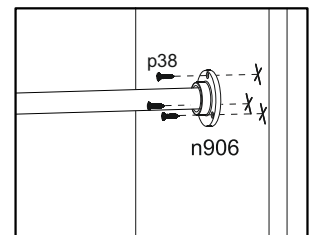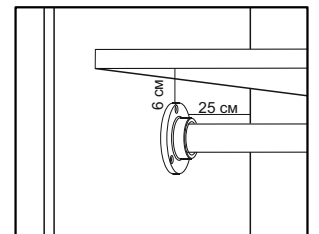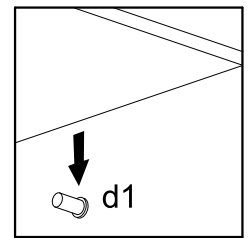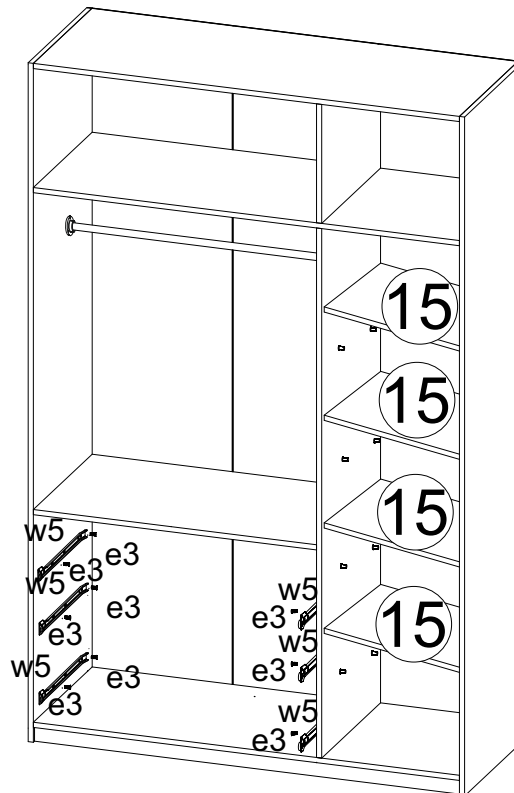

# 11

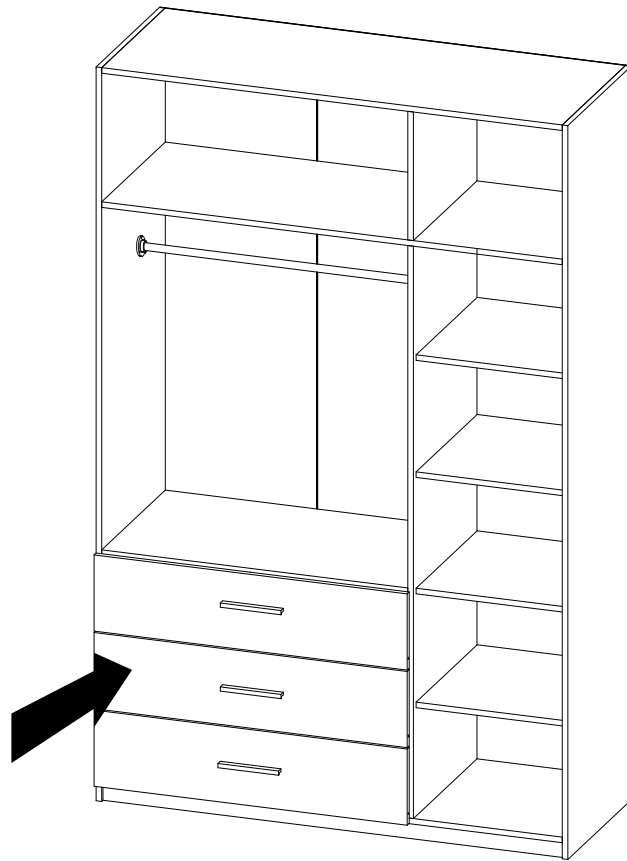

# 12

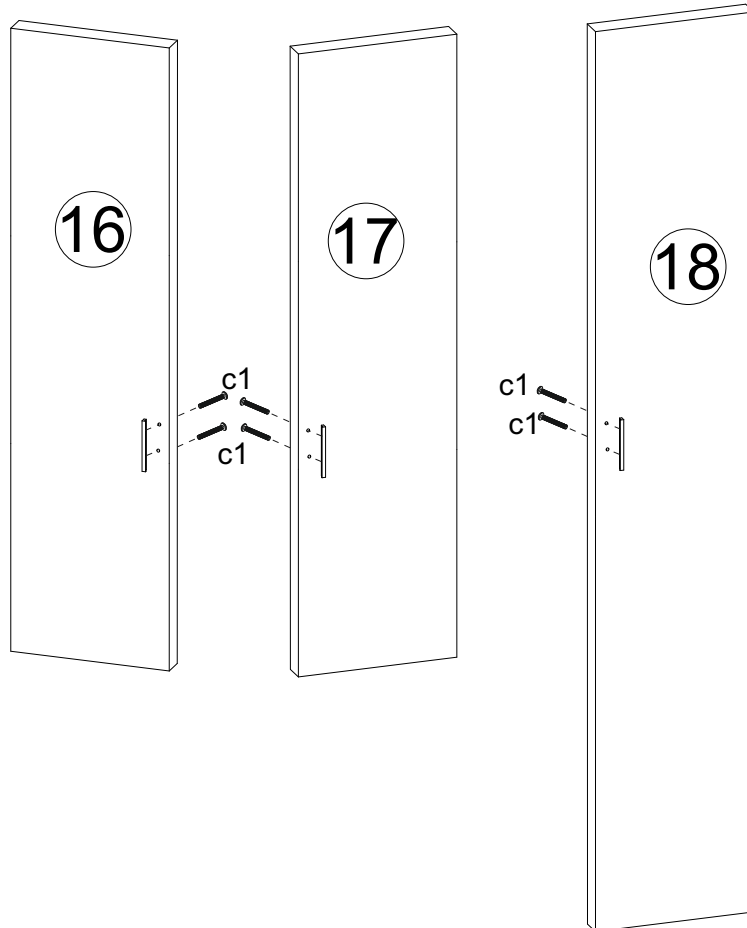






# 13

20x  
φ3,5x16 mm p38

20x  
φ6x13 mm e3

10x  
D

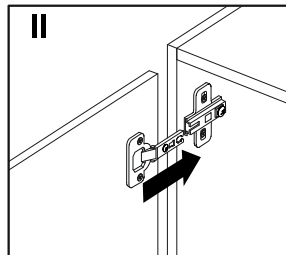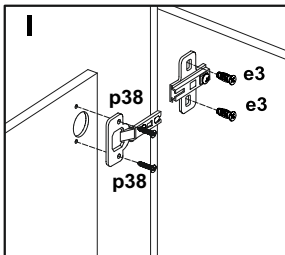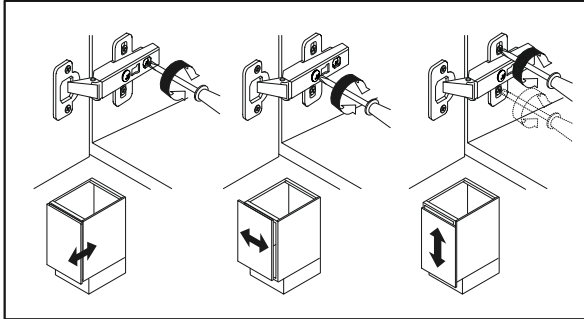

16

17

18

