
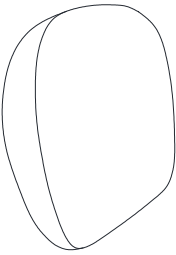
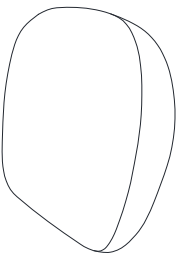
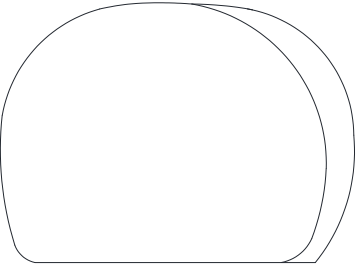
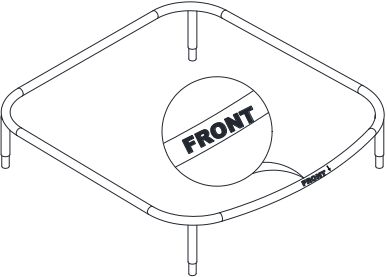
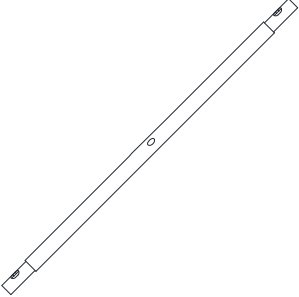
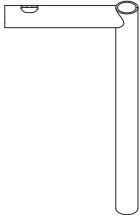
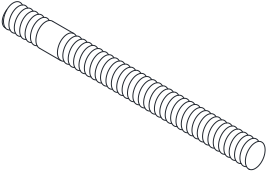











## ASSEMBLY INSTRUCTIONS

## PARTS LIST

<p>A x1</p>  <p>Seat Frame</p>	<p>B x1</p>  <p>Left Armrest</p>	<p>C x1</p>  <p>Right Armrest</p>
<p>D x1</p>  <p>Back</p>	<p>E x1</p>  <p>Metal Frame</p>	<p>F x2</p>  <p>Bar</p>
<p>G x4</p>  <p>Leg</p>		



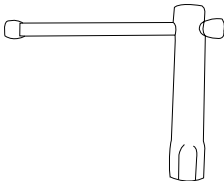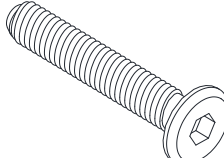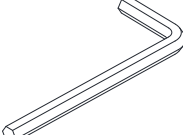
## HARDWARE LIST


<p>1 x7</p>  <p>Bolt M8*120mm</p>	<p>2 x7</p>  <p>Nut M8</p>	<p>3 x7</p>  <p>Spring Washer M8</p>	<p>4 x7</p>  <p>Flat Washer M8</p>
--	---	--	---

<p>5 x1</p>  <p>Wrench</p>	<p>6 x4</p>  <p>Bolt M6*50mm</p>	<p>7 x1</p>  <p>Bolt M6*30mm</p>	<p>8 x1</p>  <p>Bolt M6*25mm</p>
<p>9 x1</p>  <p>Nut M6</p>	<p>10 x4</p>  <p>Plastic Washer</p>		

# ASSEMBLY INSTRUCTION


## STEP 1

7		x 1
9		x 1
8		x 1

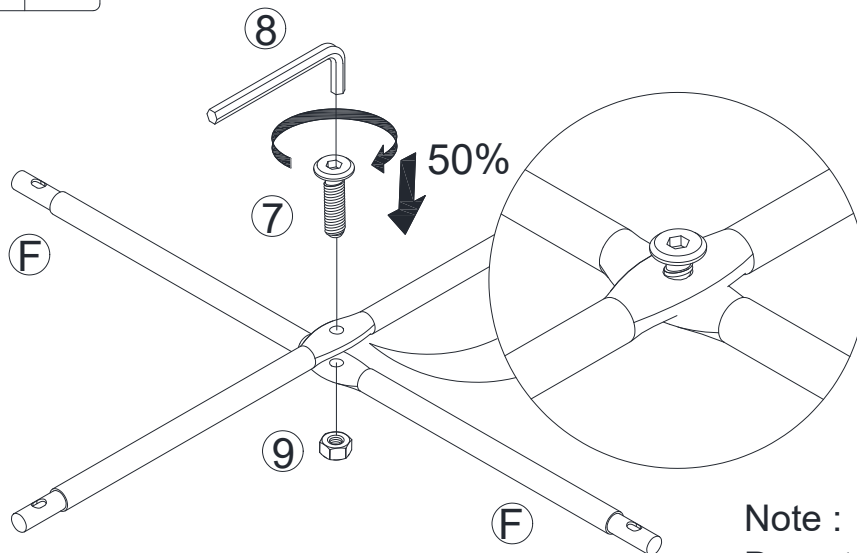


Note :  
Do not fully tighten.

## STEP 2

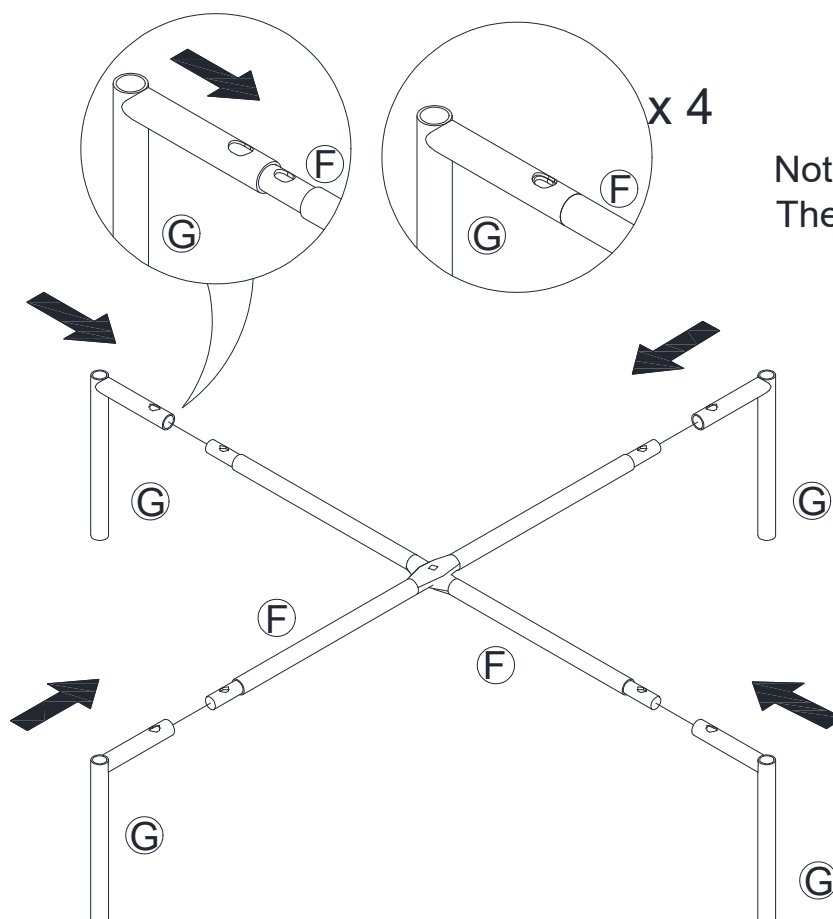


Note :  
The holes should be aligned.


## STEP 3

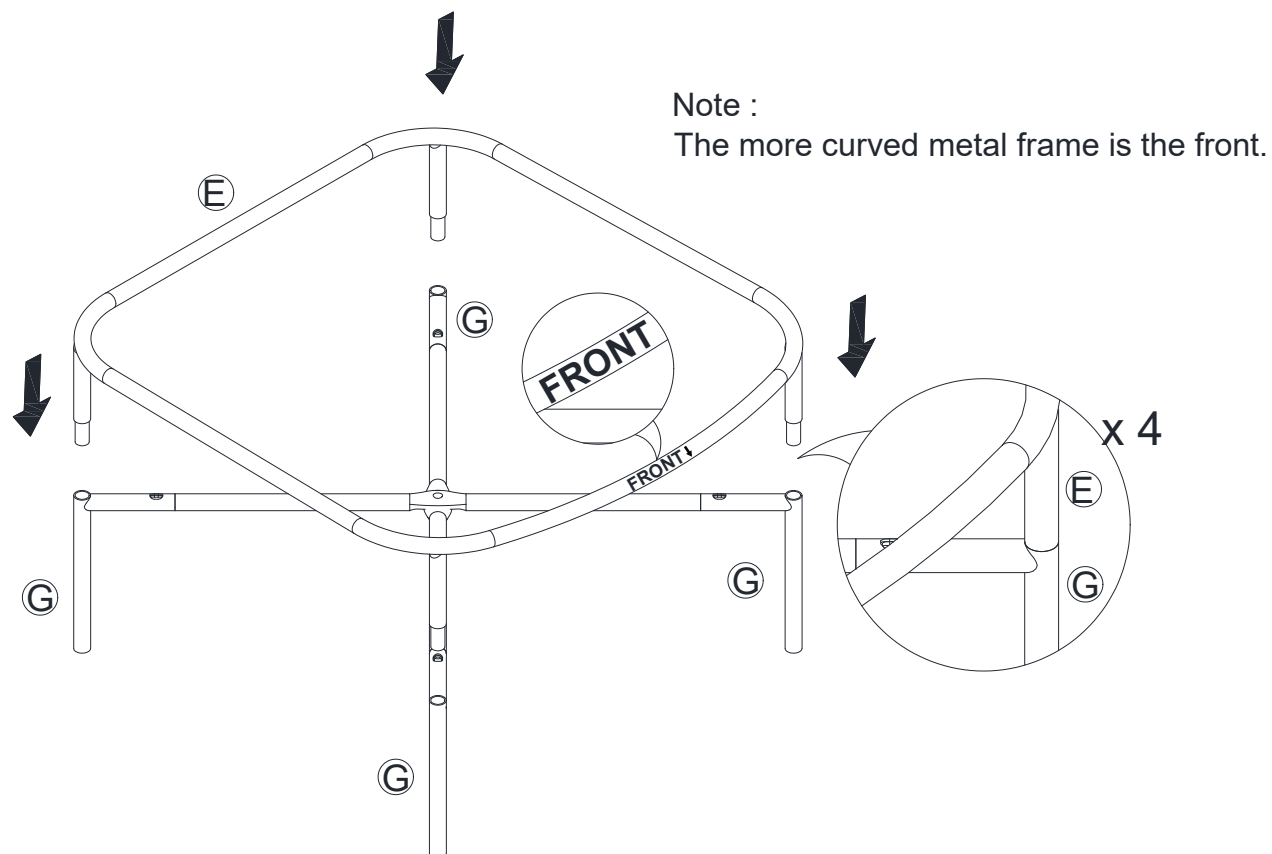



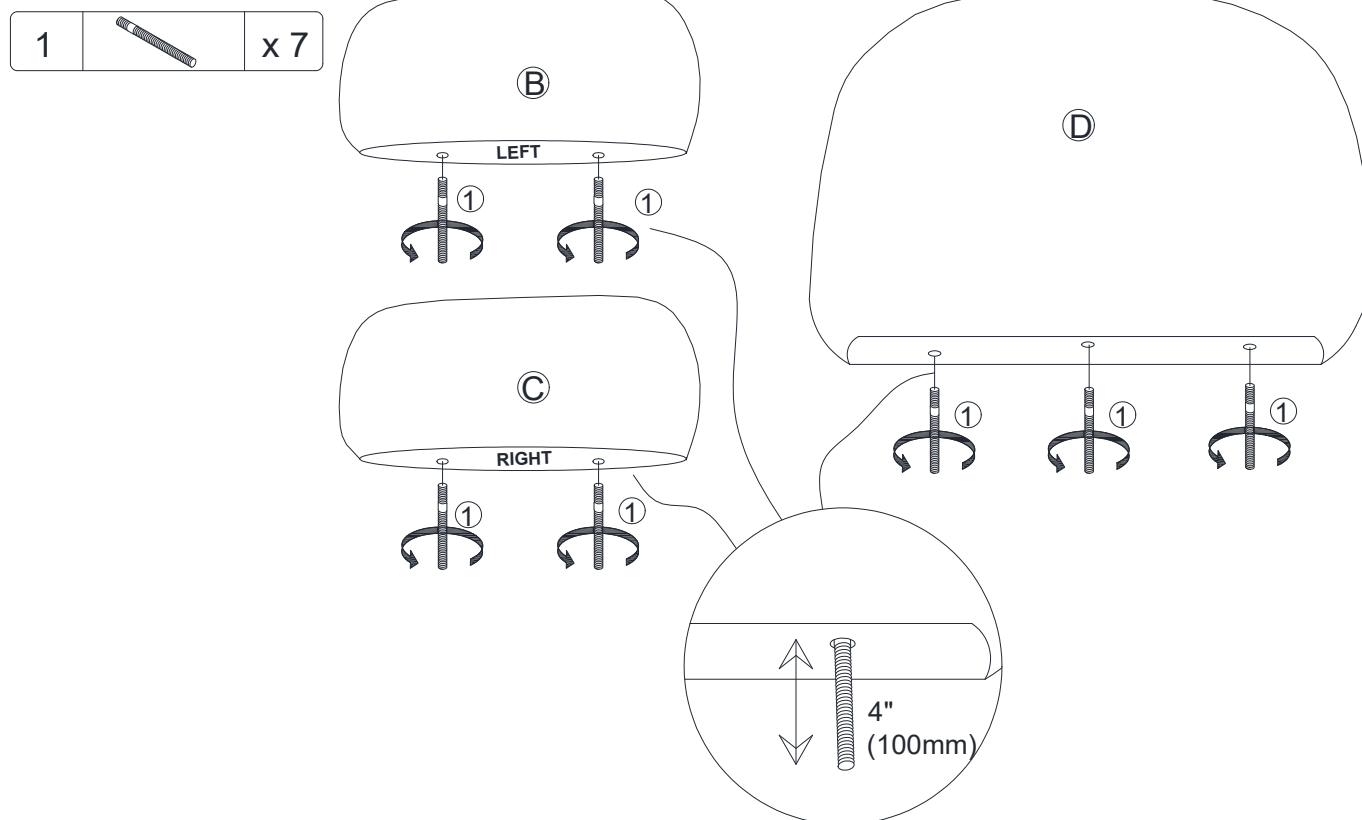

## STEP 4



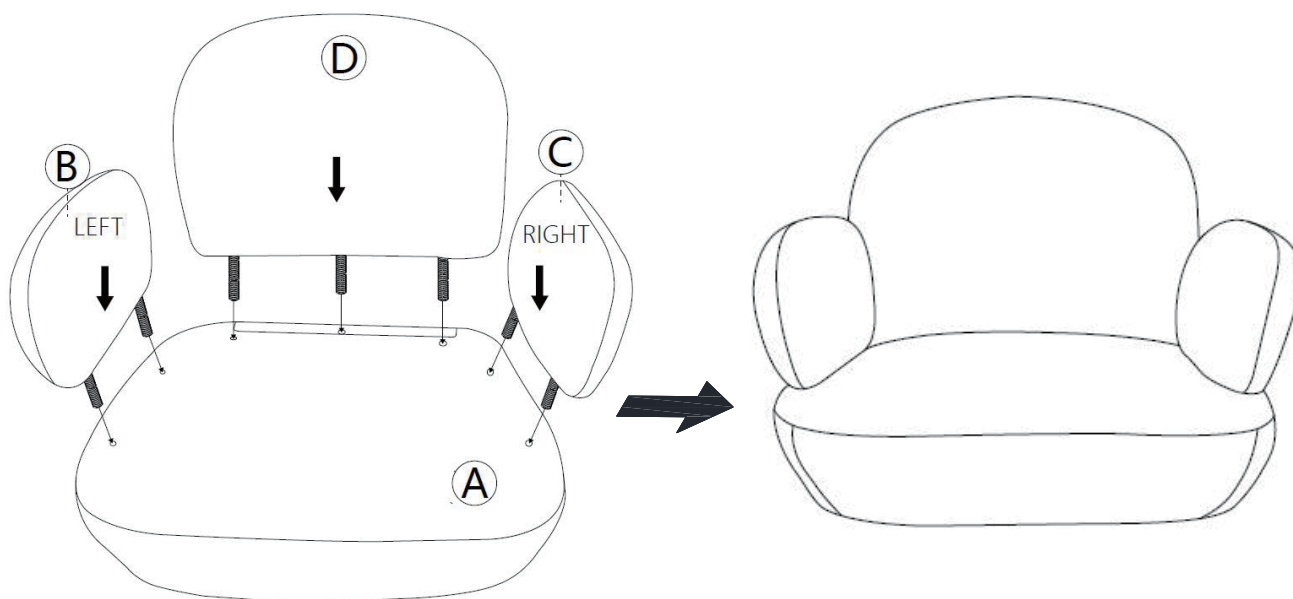


## STEP 5





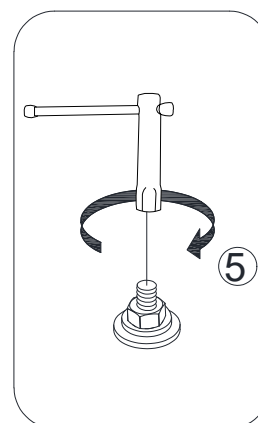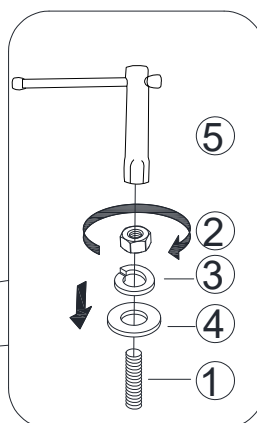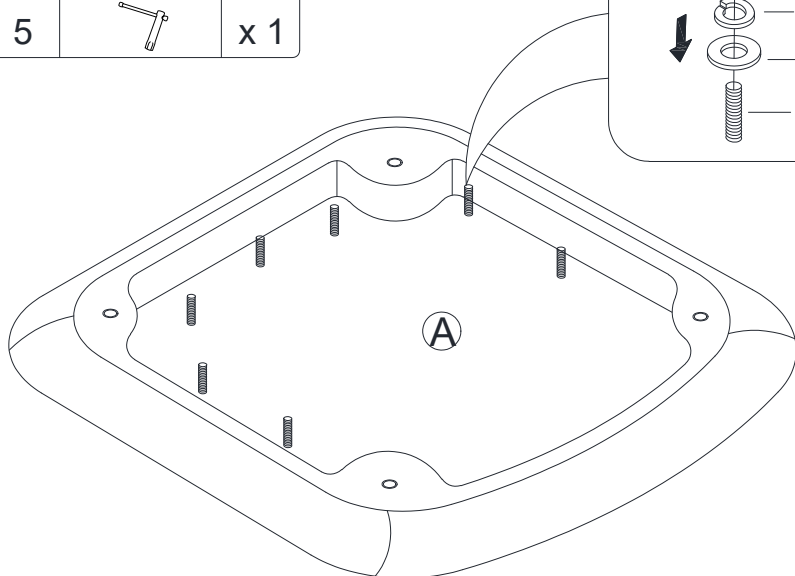
## STEP 6


2		x 7
3		x 7
4		x 7
5		x 1



Remark :  
Fully tighten the nut in sequence.  
After all nut connected.

## STEP 7

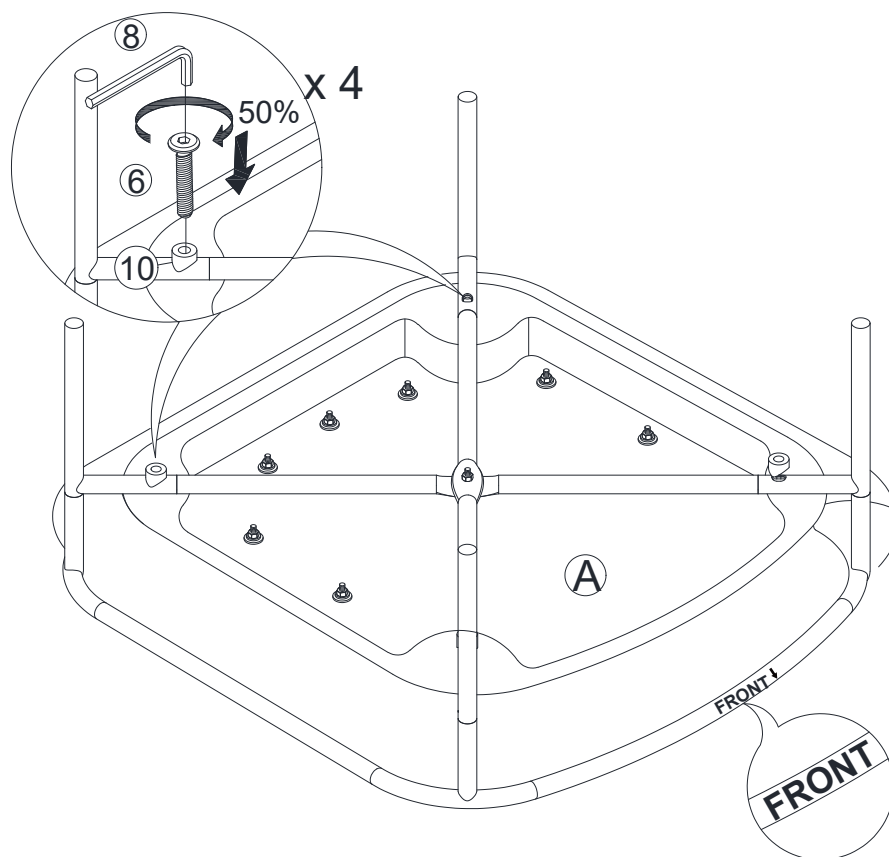6		x 4
8		x 1
10		x 4



Note :  
Do not fully tighten before all screw connected.

## STEP 8

Note :  
Fully tighten the screws in sequence  
after all screws proper connected.

