

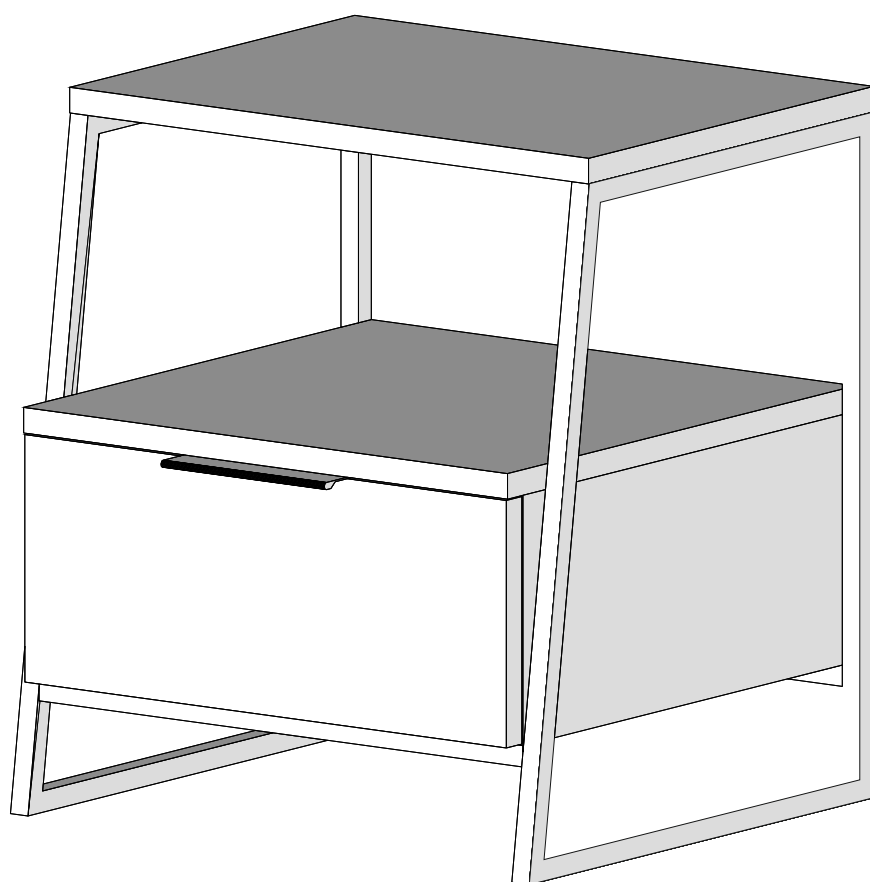
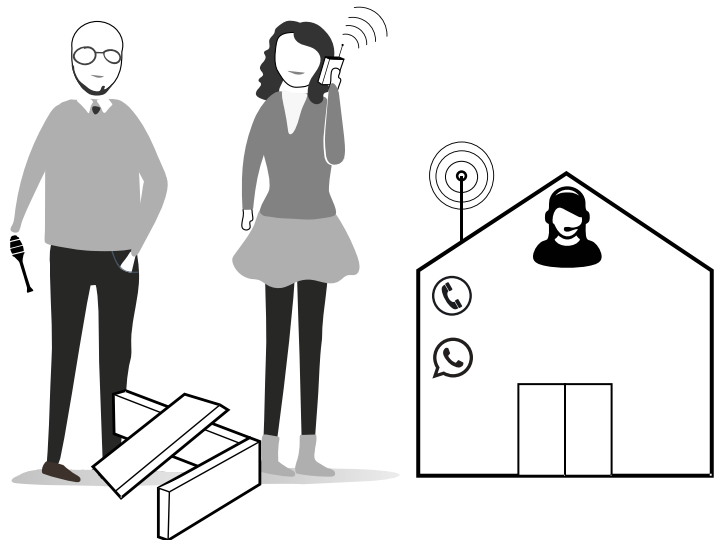
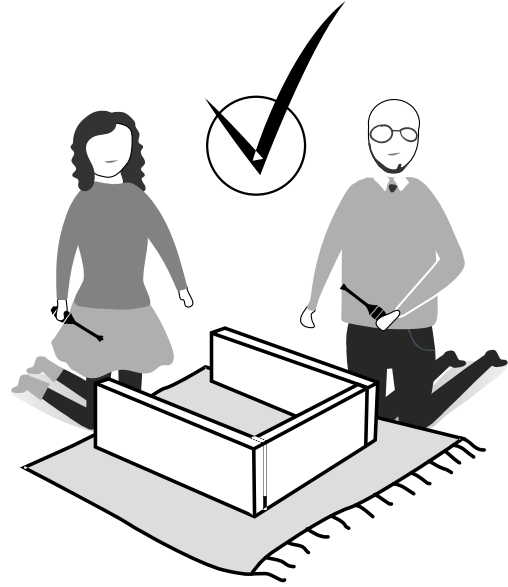
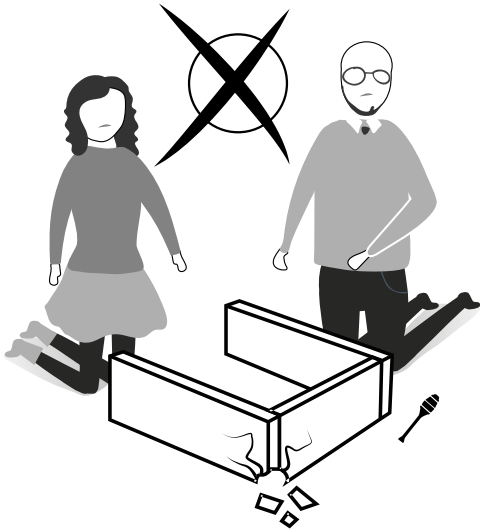


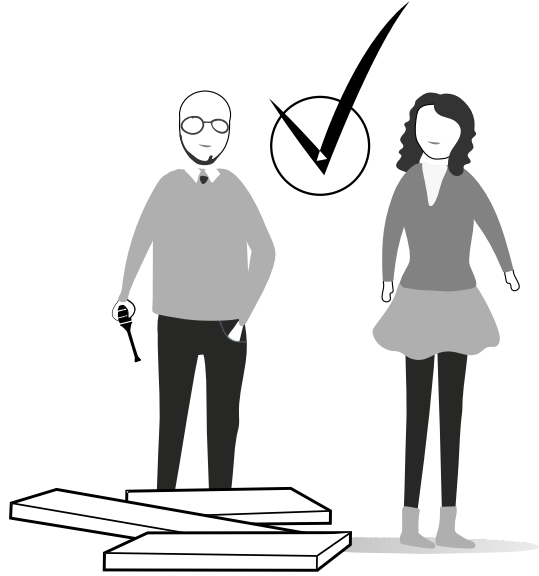


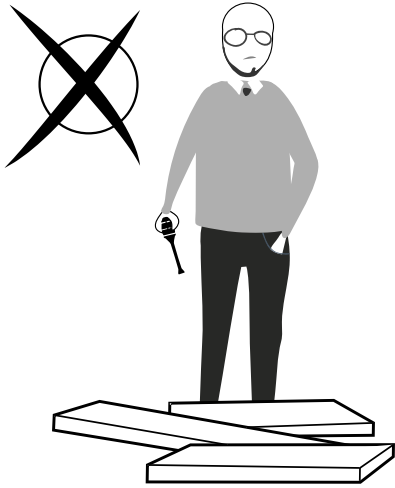


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.


A04

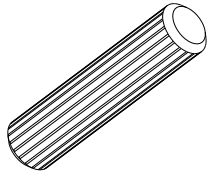


A23

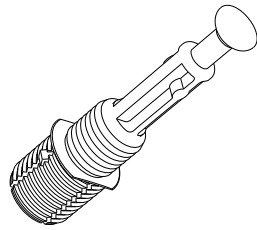


A22

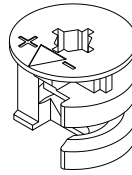


A12

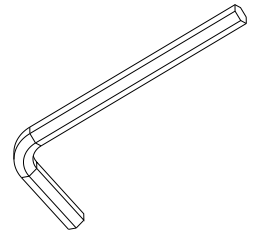


1

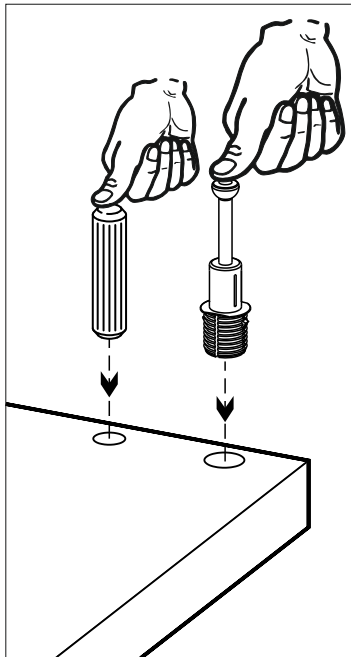


2

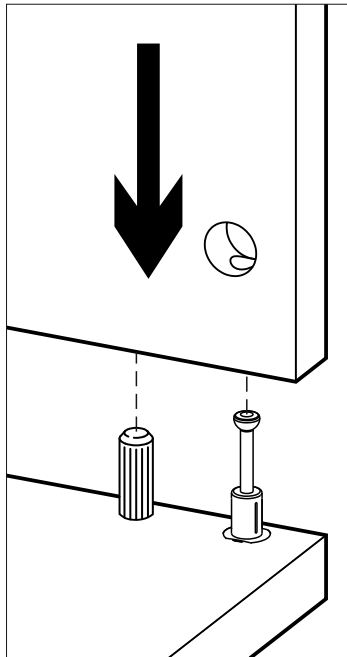

3

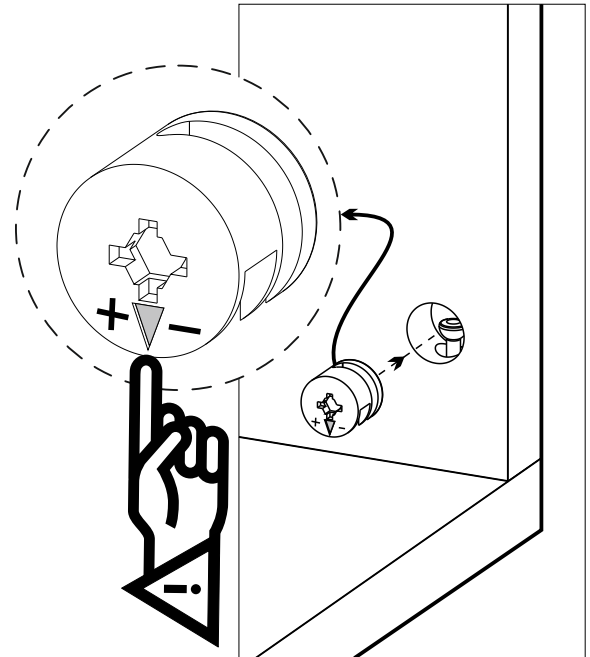






4

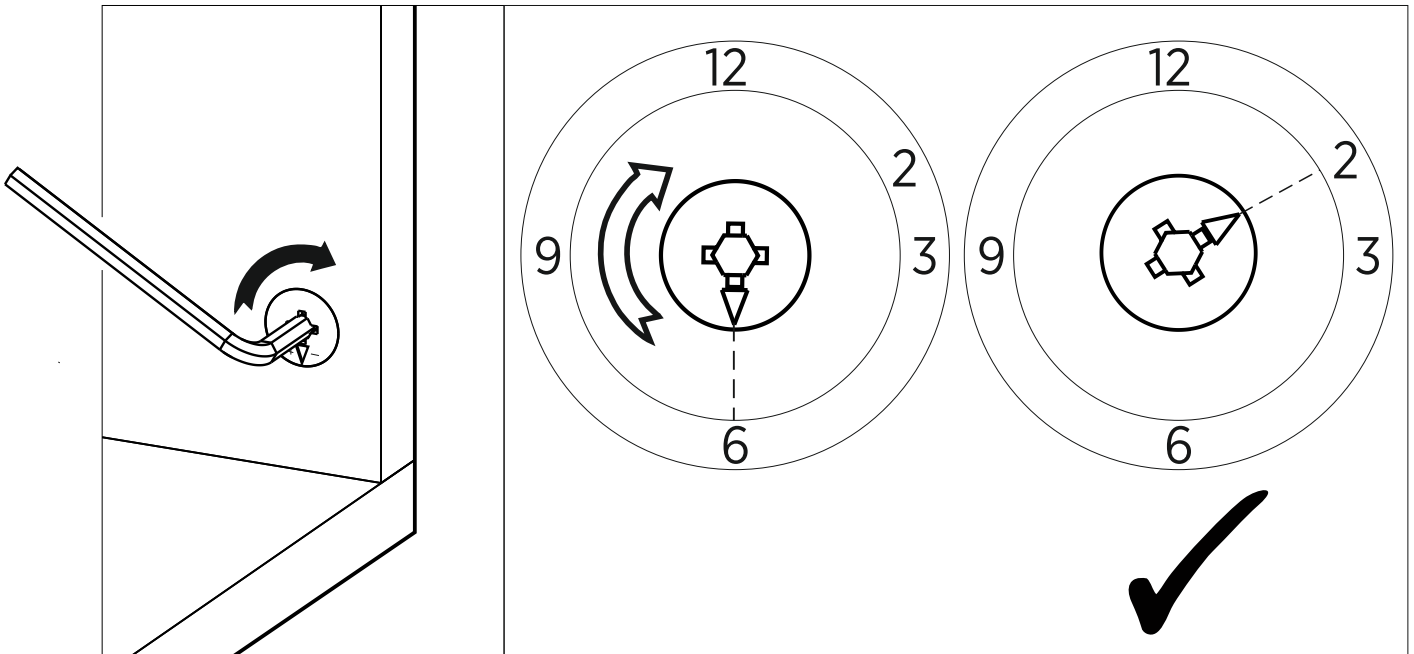


Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




ACCESSORY LIST


B11  10 (black)mm 4x	Z54  Pp1501 4x	A22  Minifix k18 20x	A23  Minifix M10 20x	A04  Ø8 12x
A69  P.D. 8x	B13  25 (black)mm 8x	A12  Allen 1x	Z31  Krt350 1x	A18  3,5x18 14x
A25  ARK.PL 2x	A06  18mm C1-12x	Z51  K128mm (black) 1x		

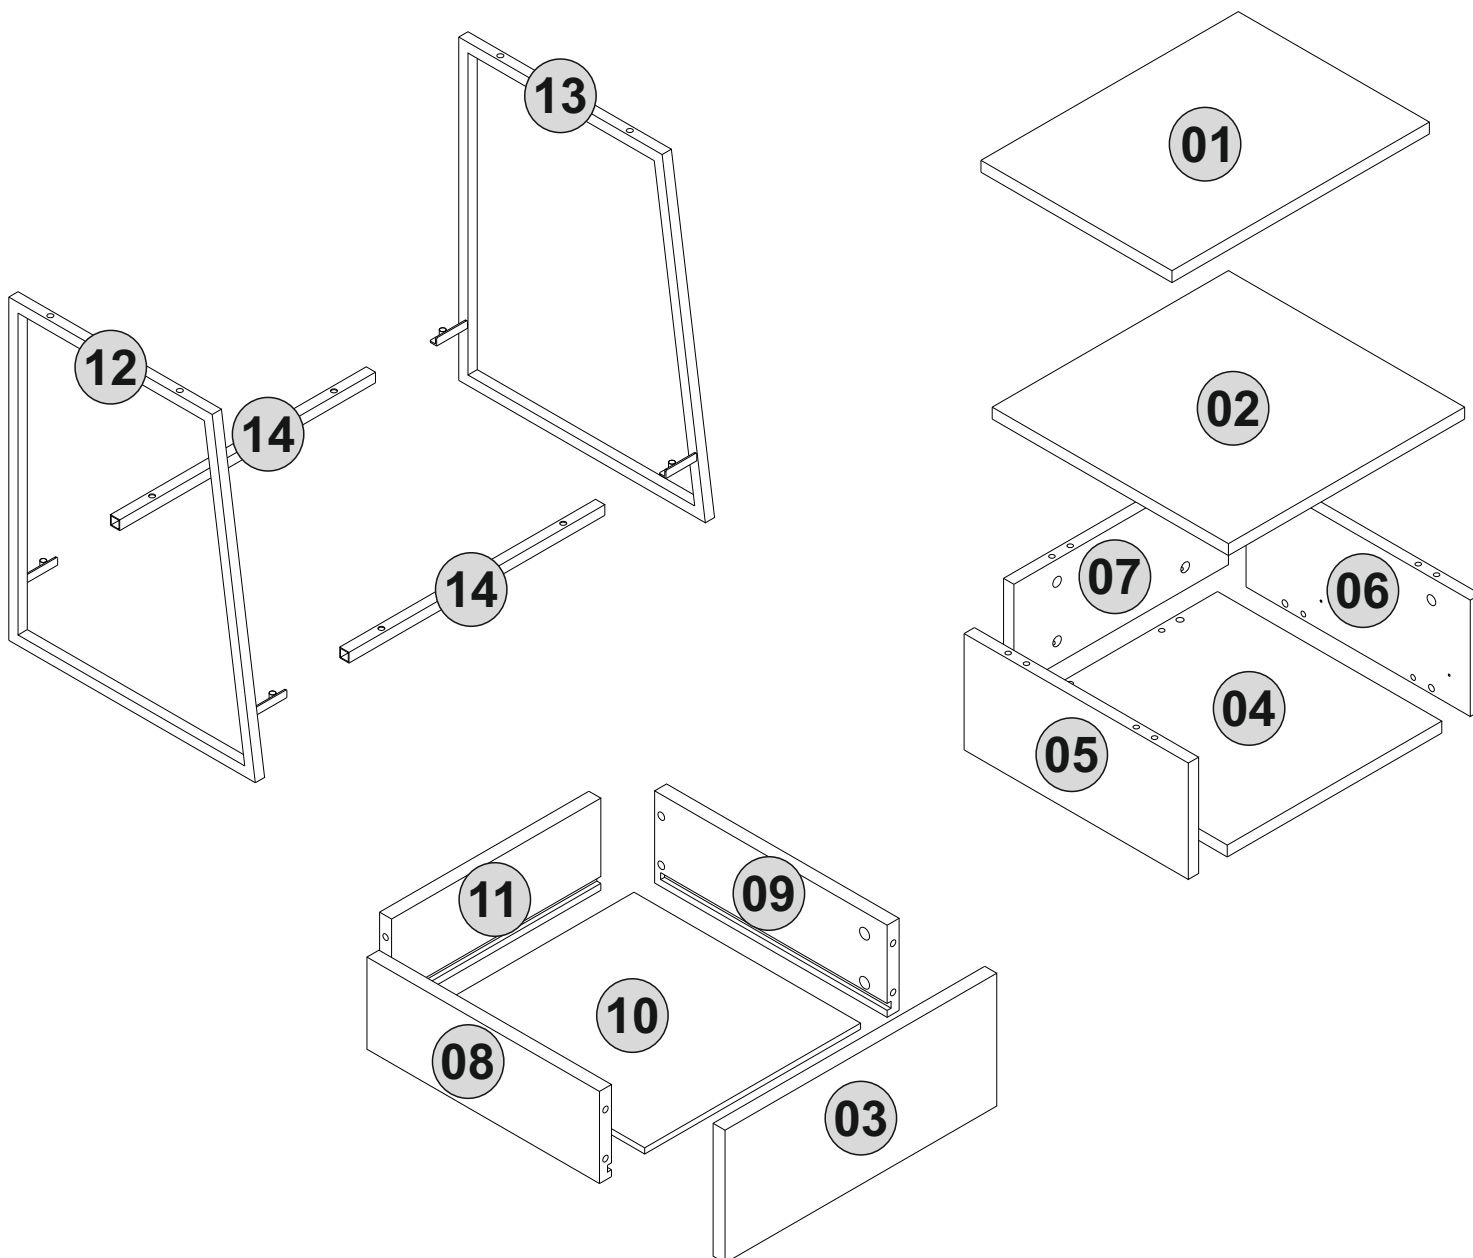




1. step

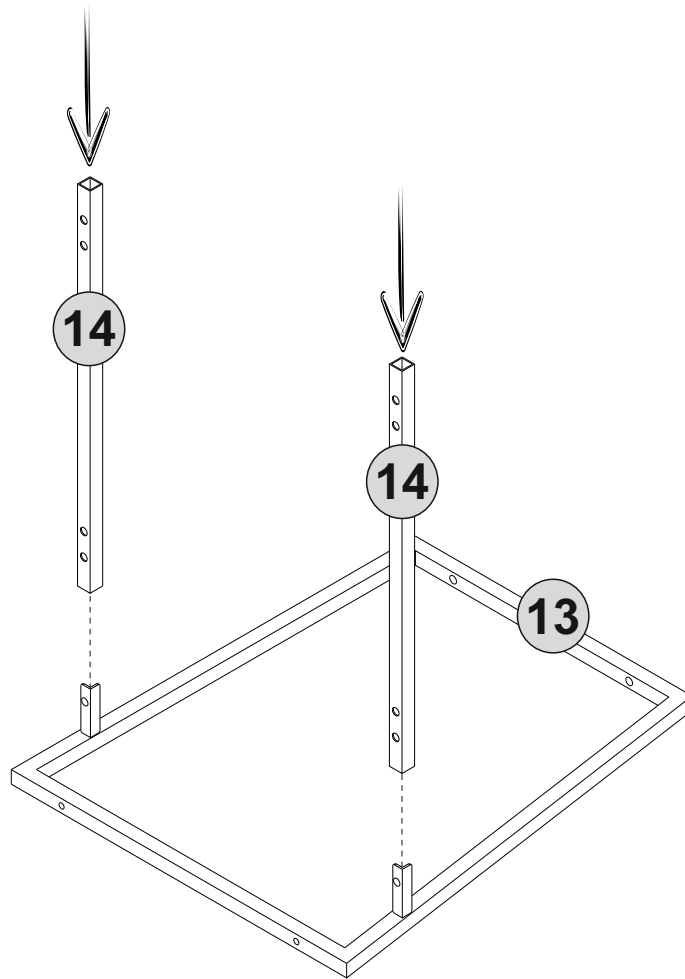



2. step

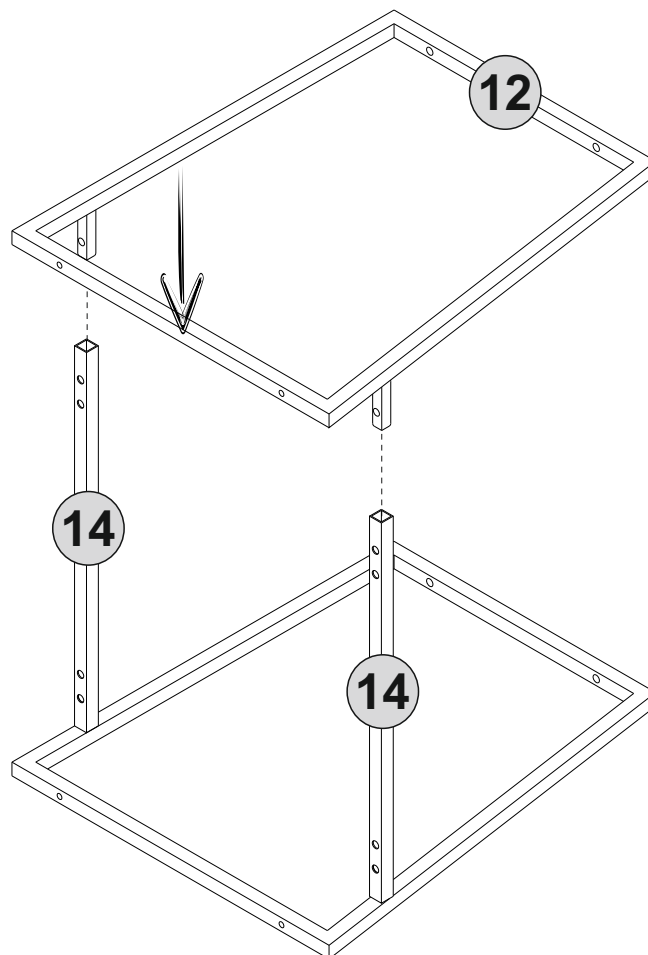


3^{step}

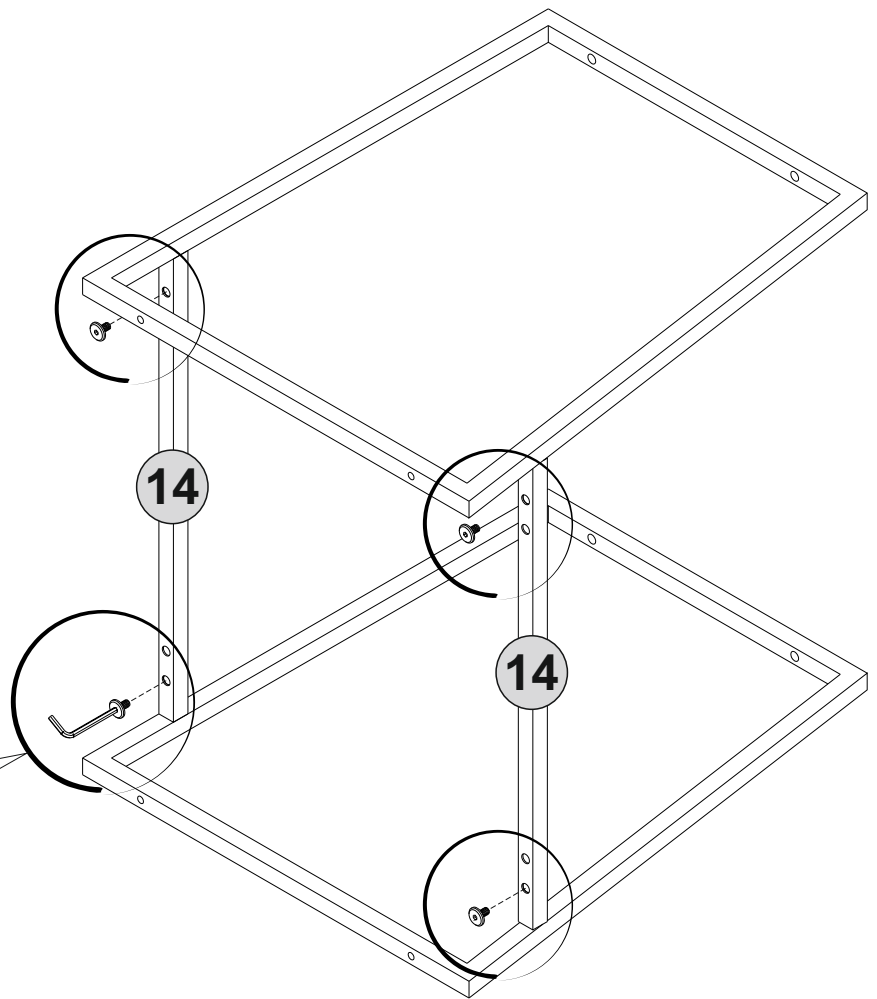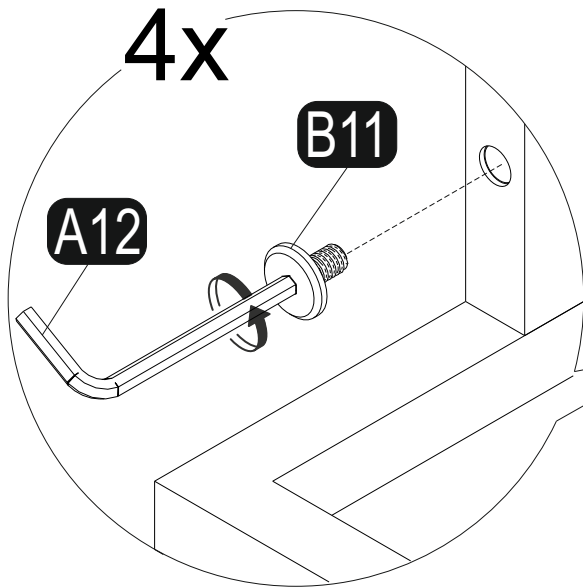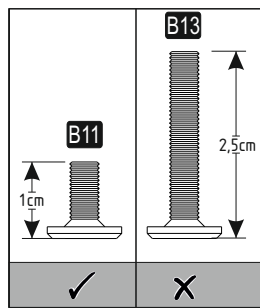


4^{step}

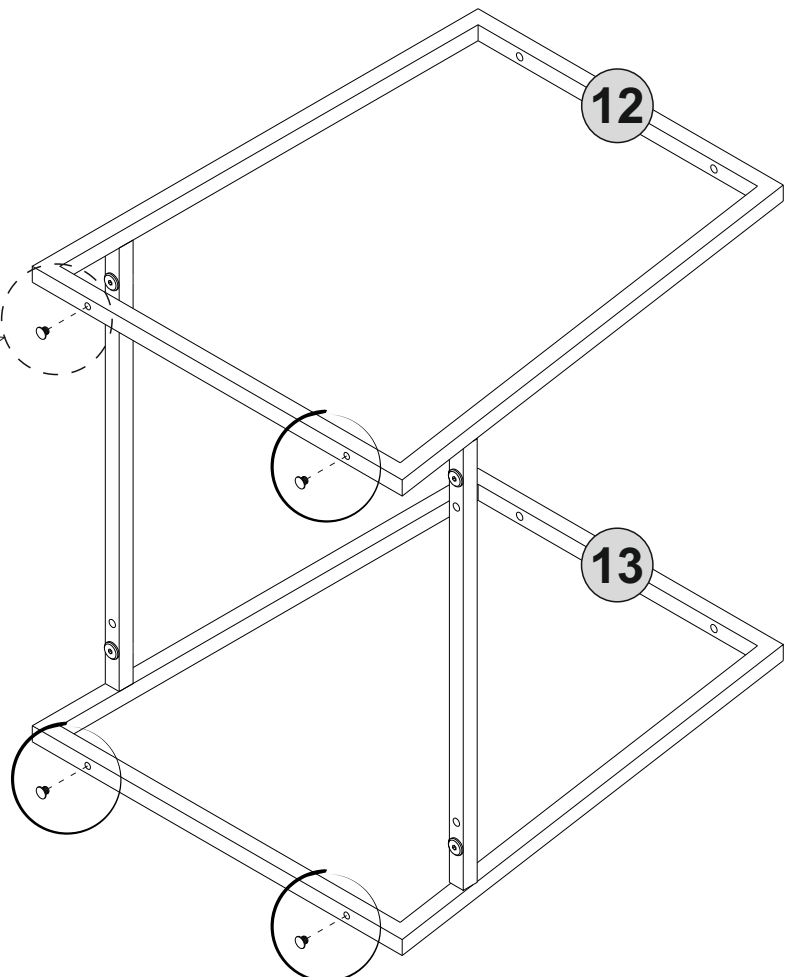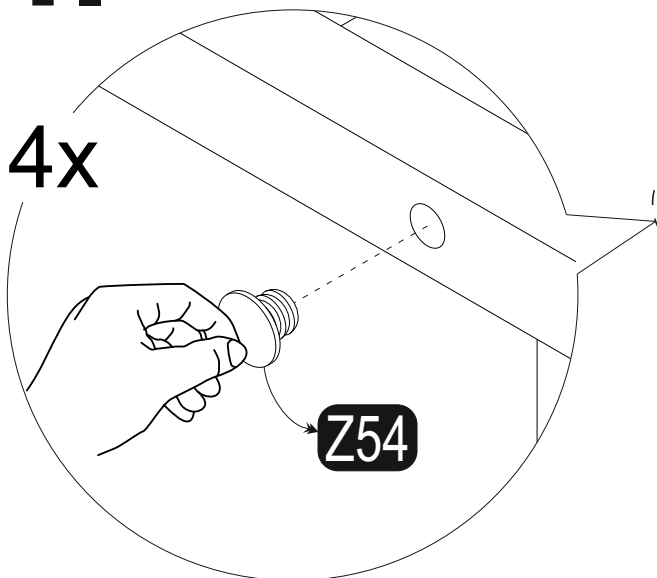



5^{step}

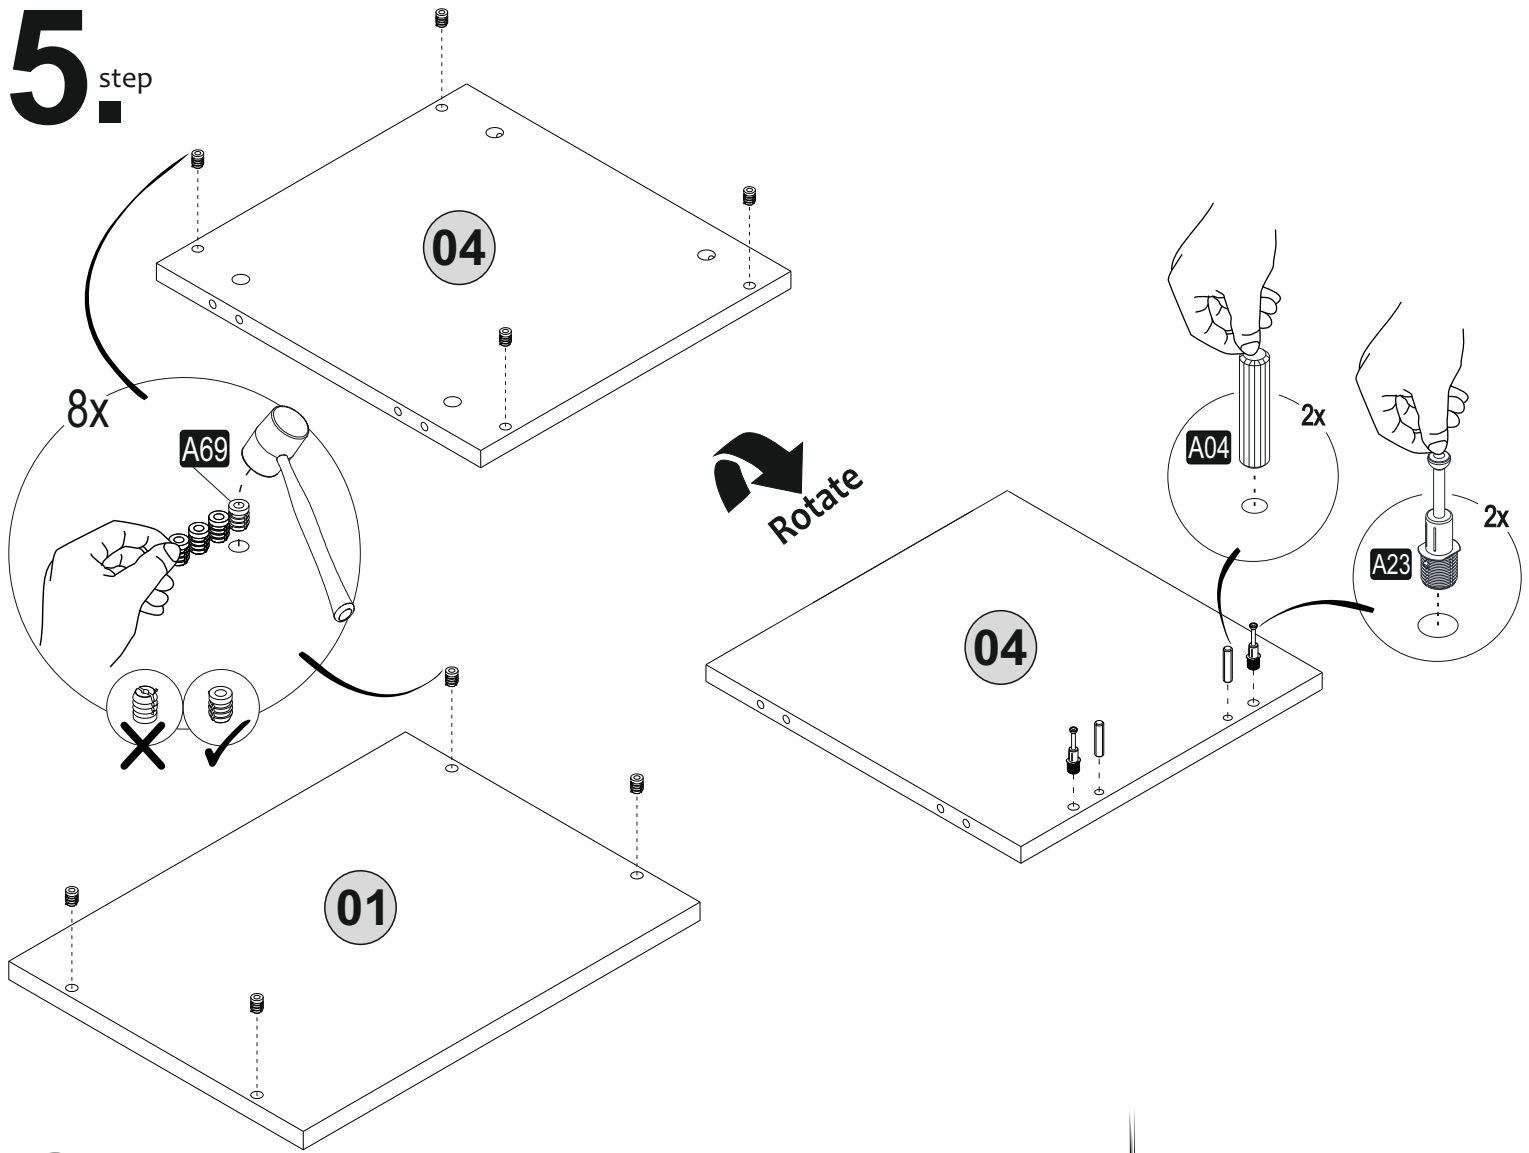


6^{step}

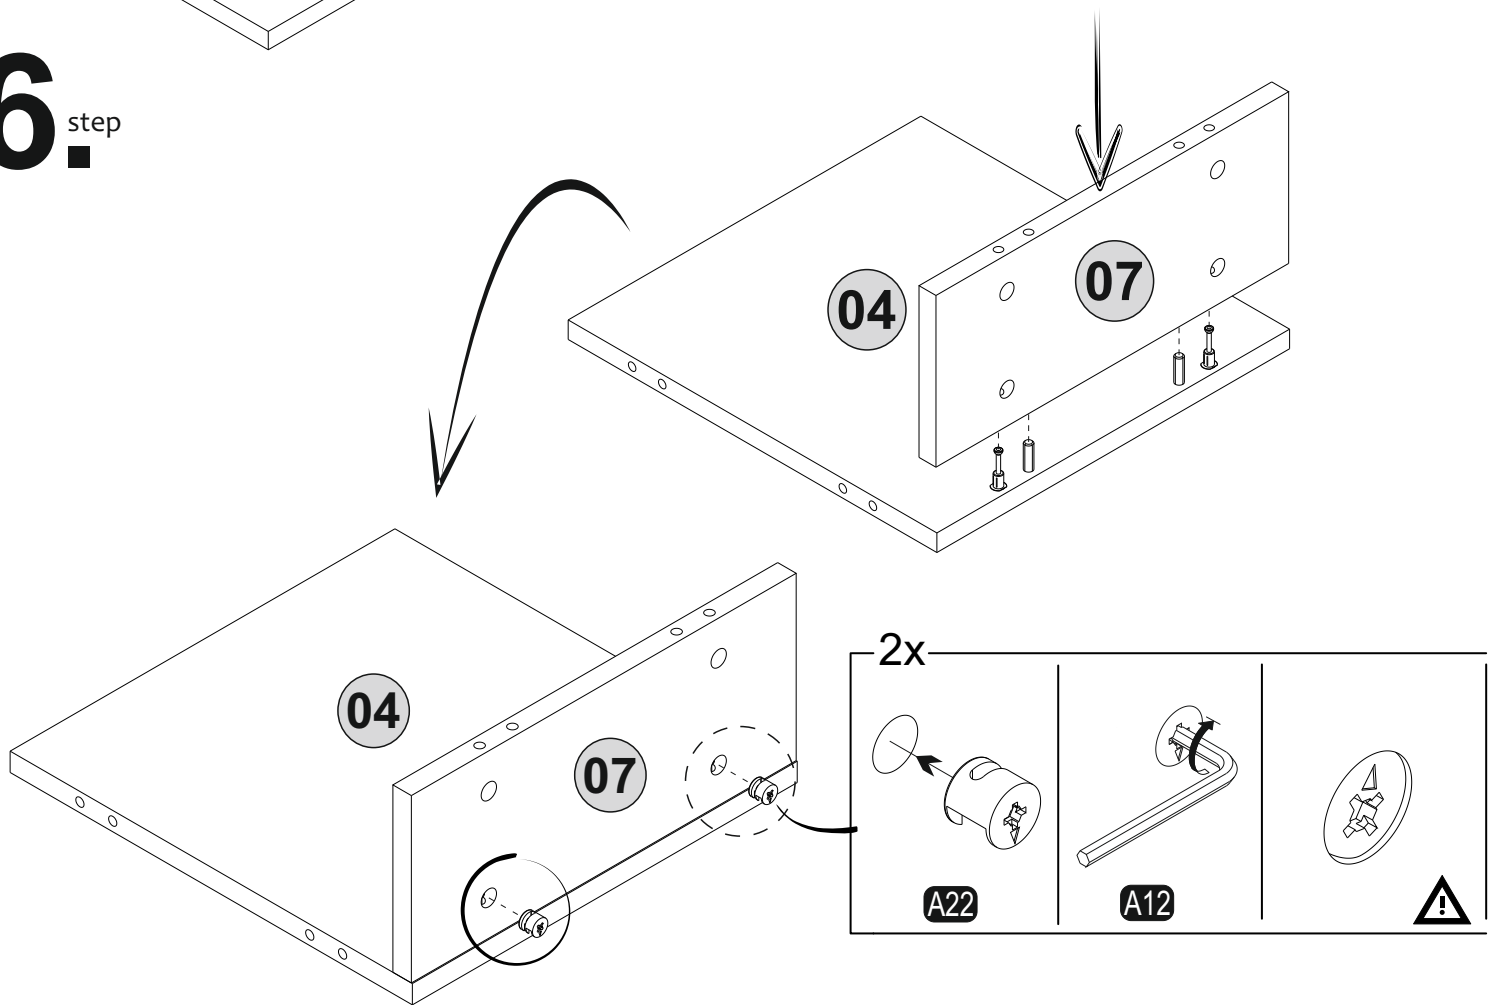


7 step

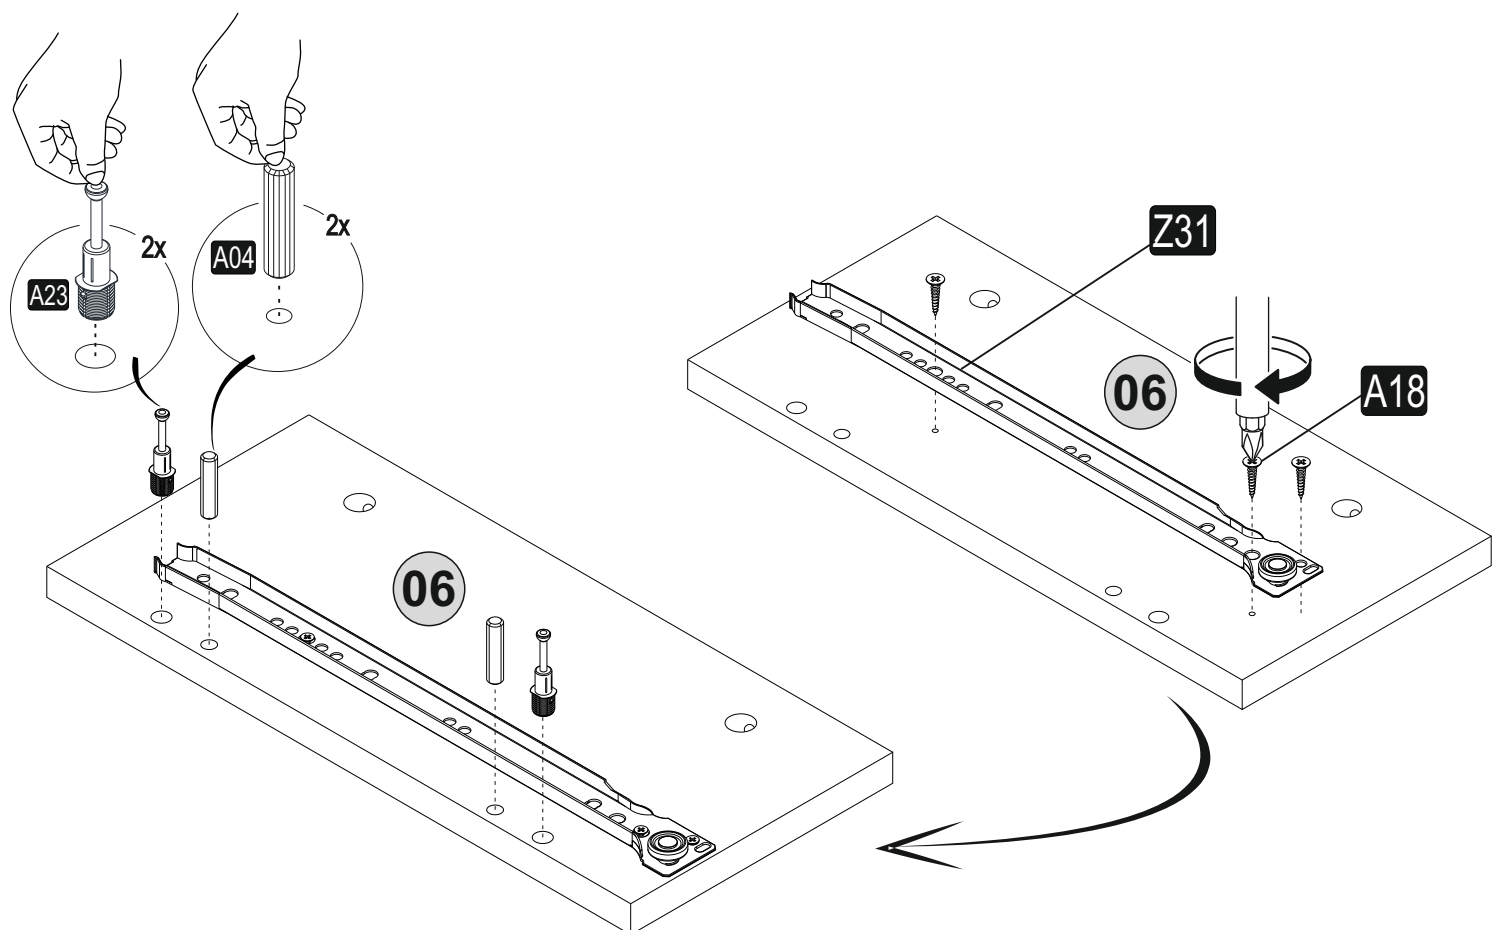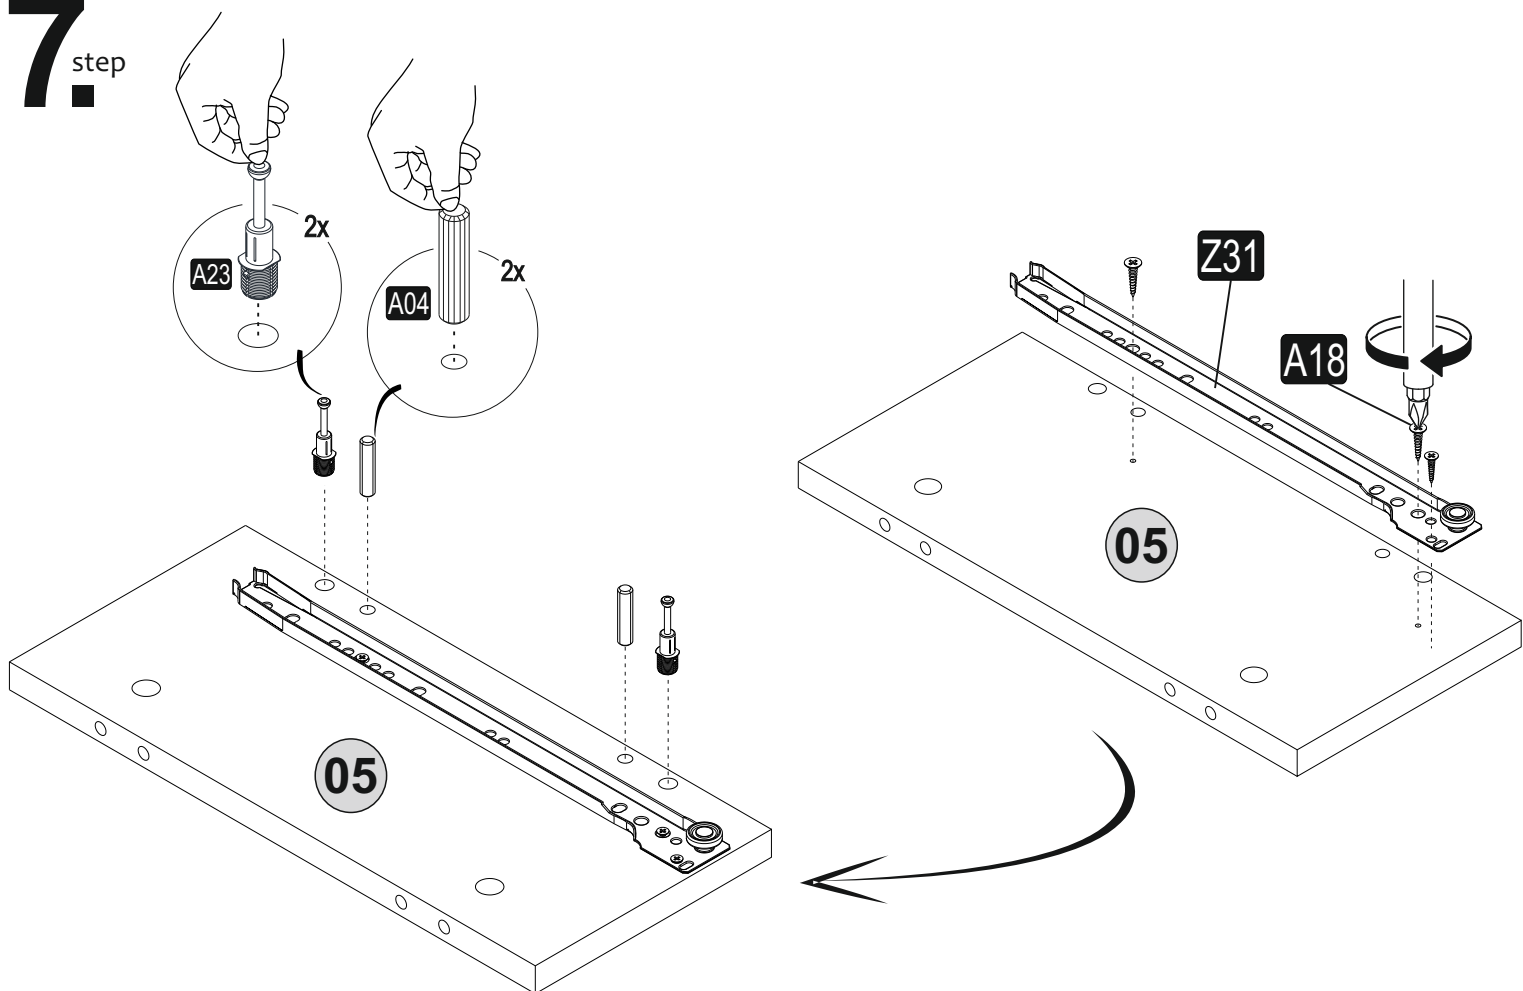


8 _{step}

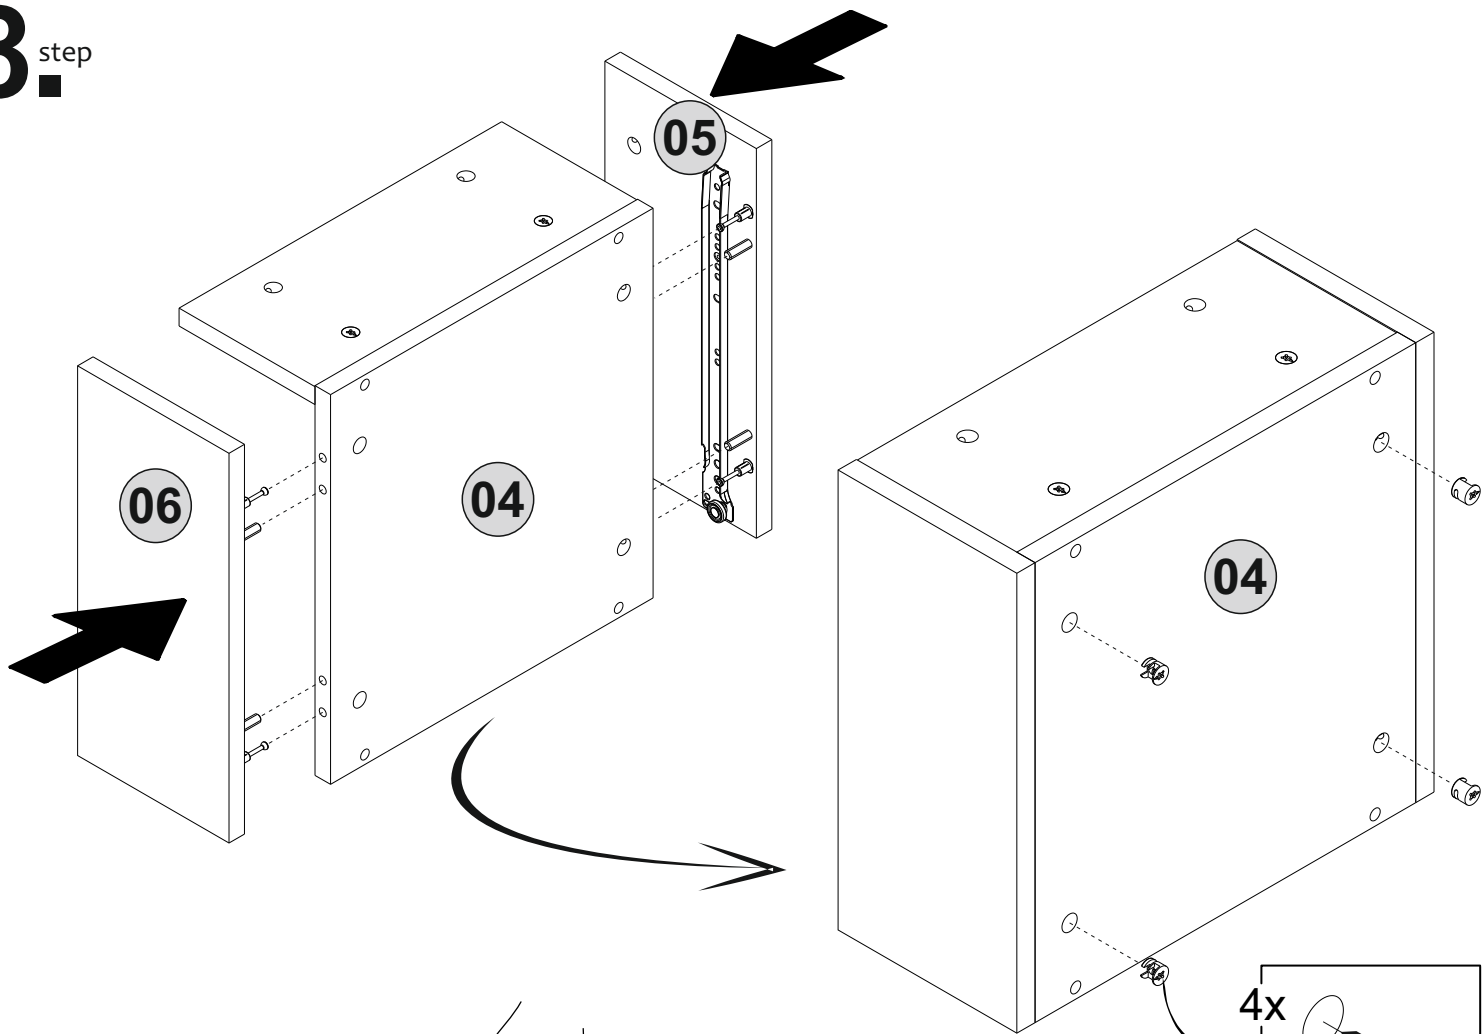

9 _{step}

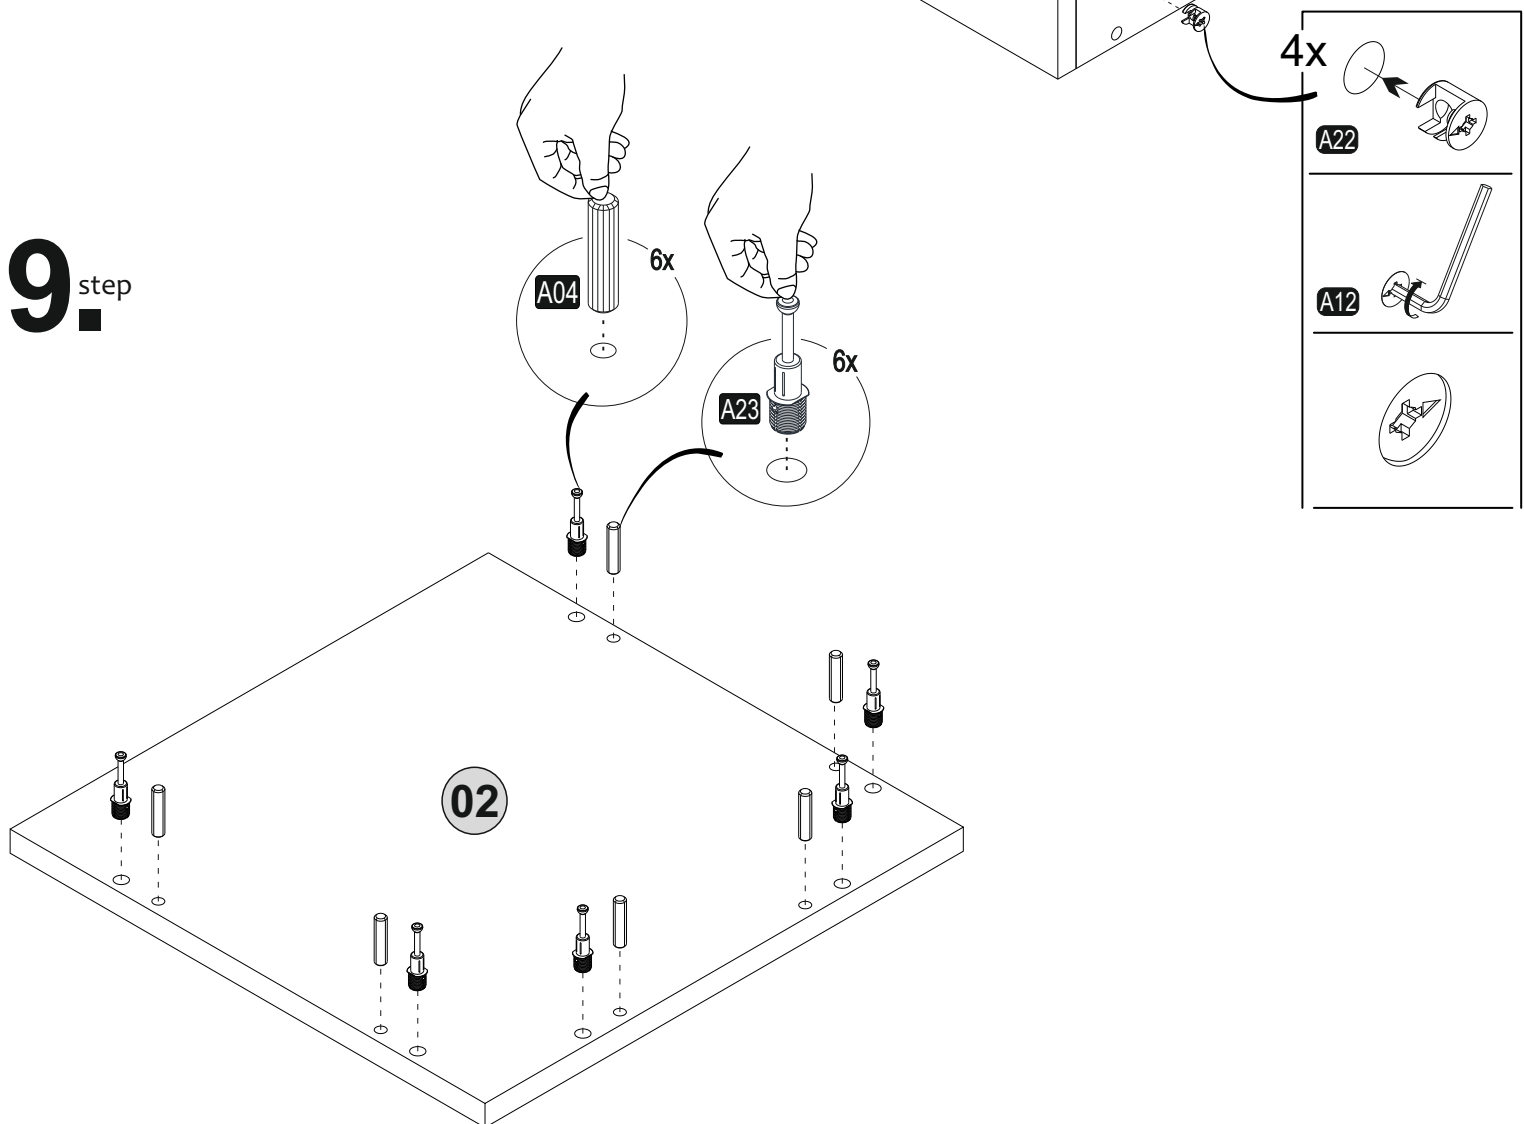



10._{step}

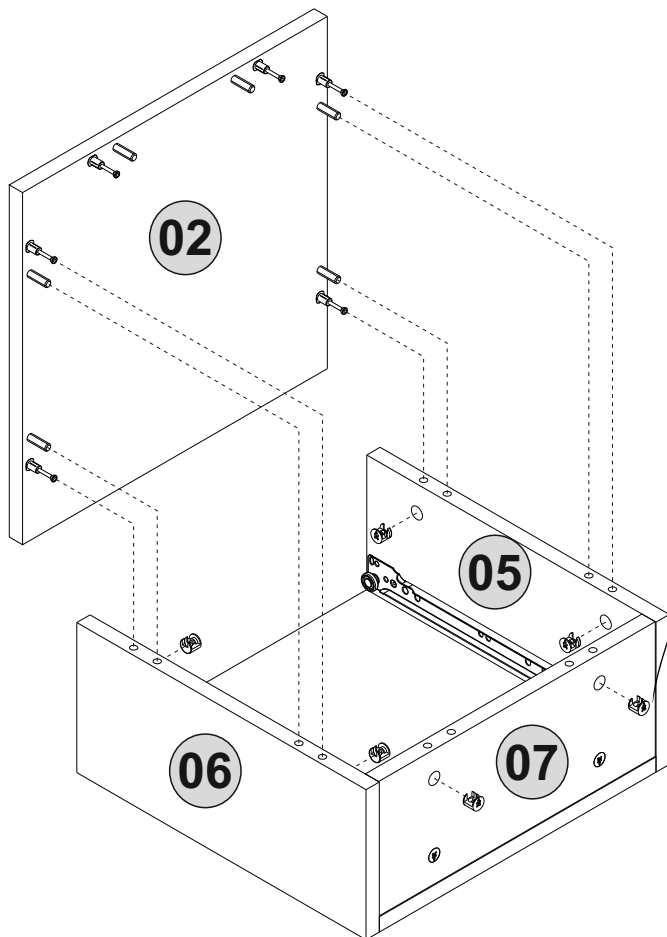


6x

A22

A12

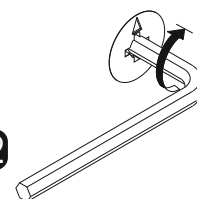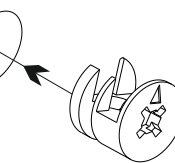


11._{step}

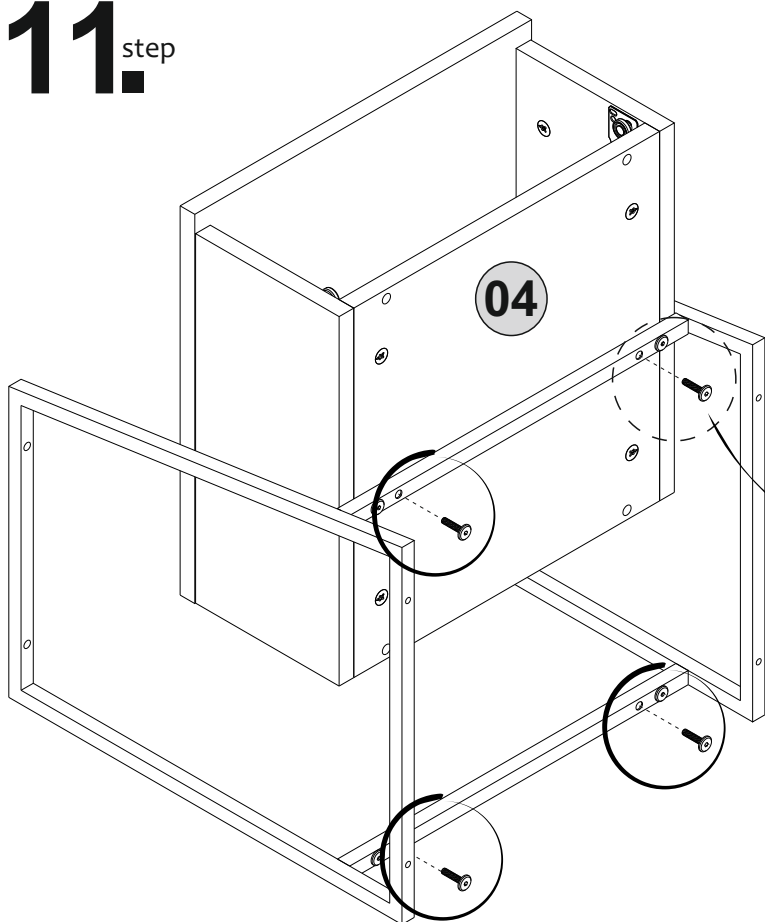


4x

A12


B13

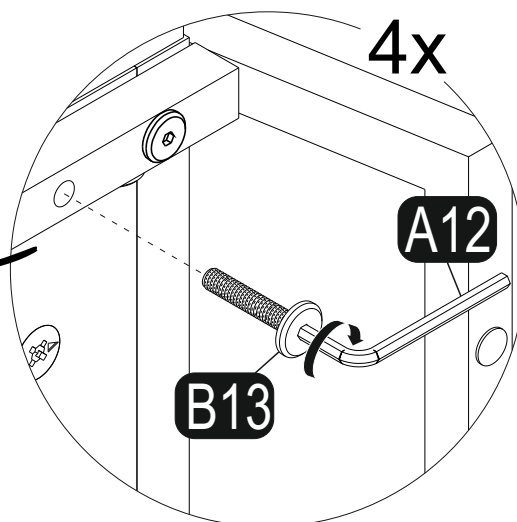


12.^{step}

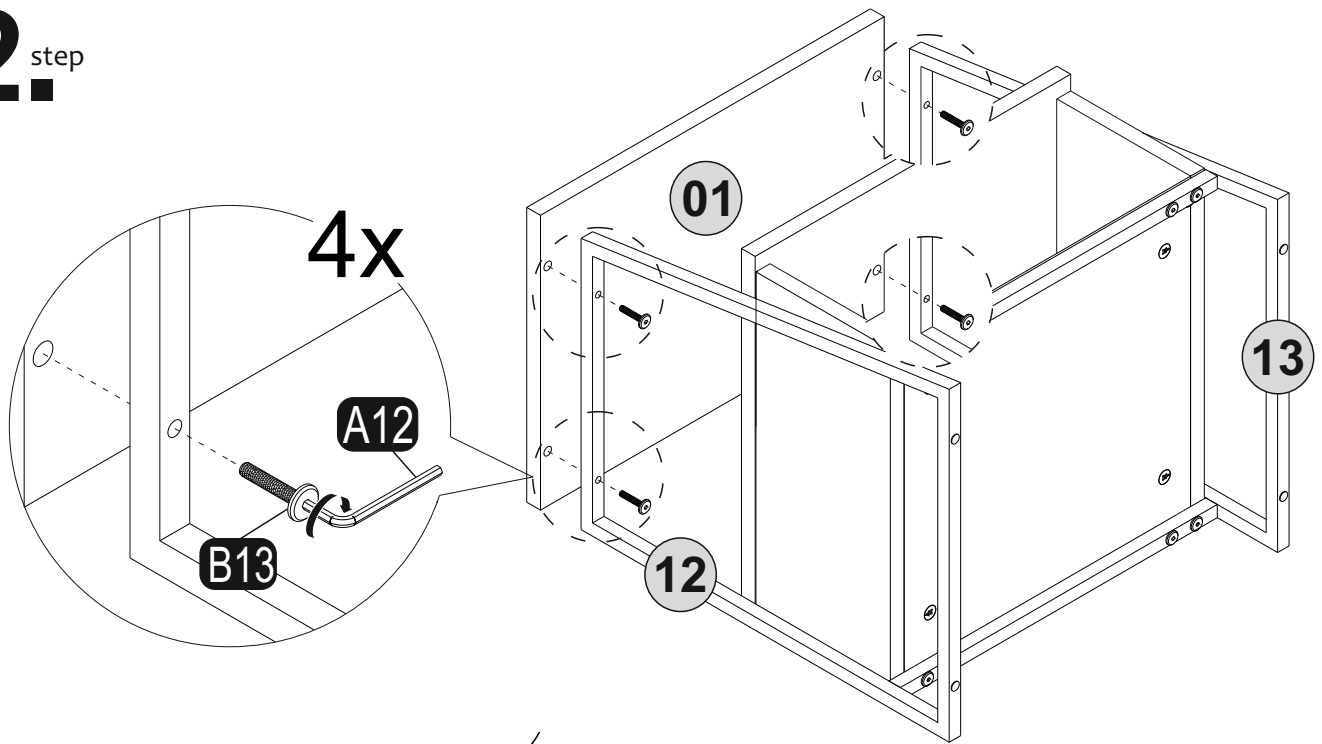


13.^{step}

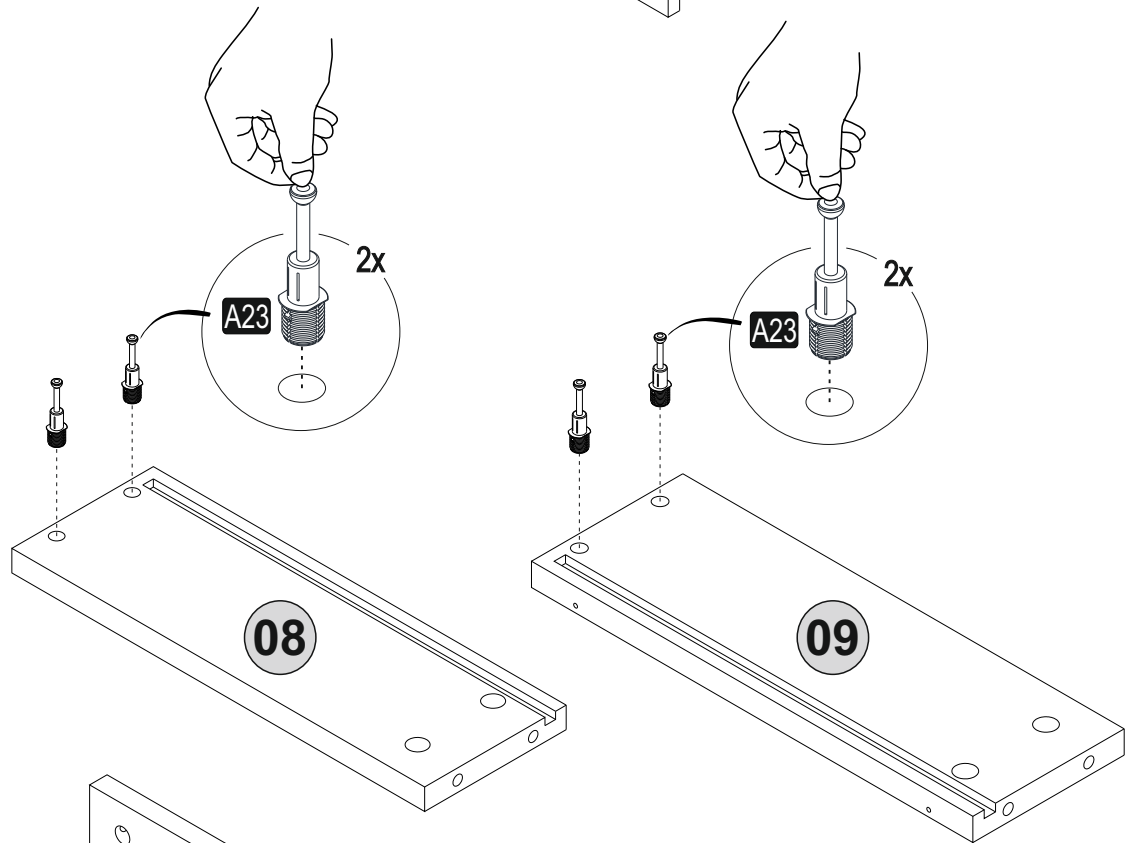


14.^{step}

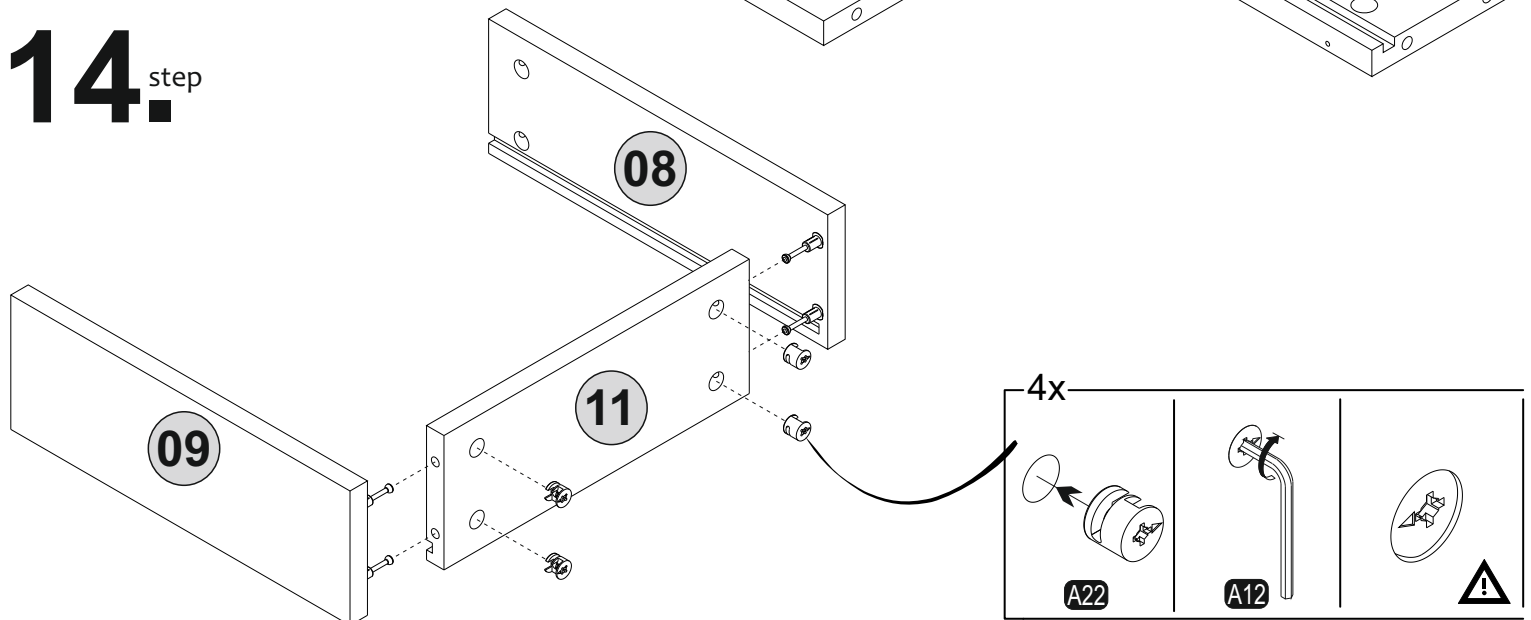


15.step

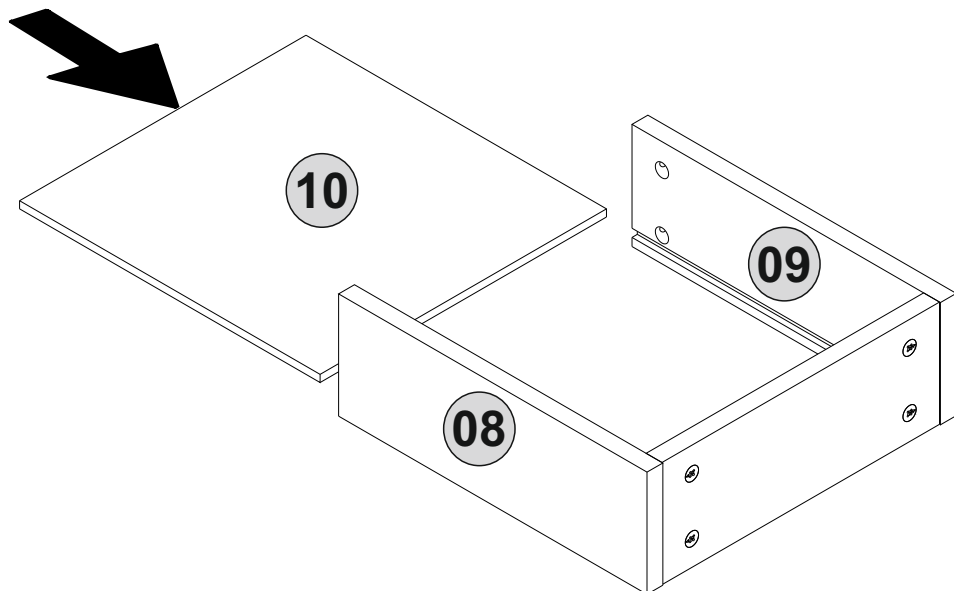


16.step

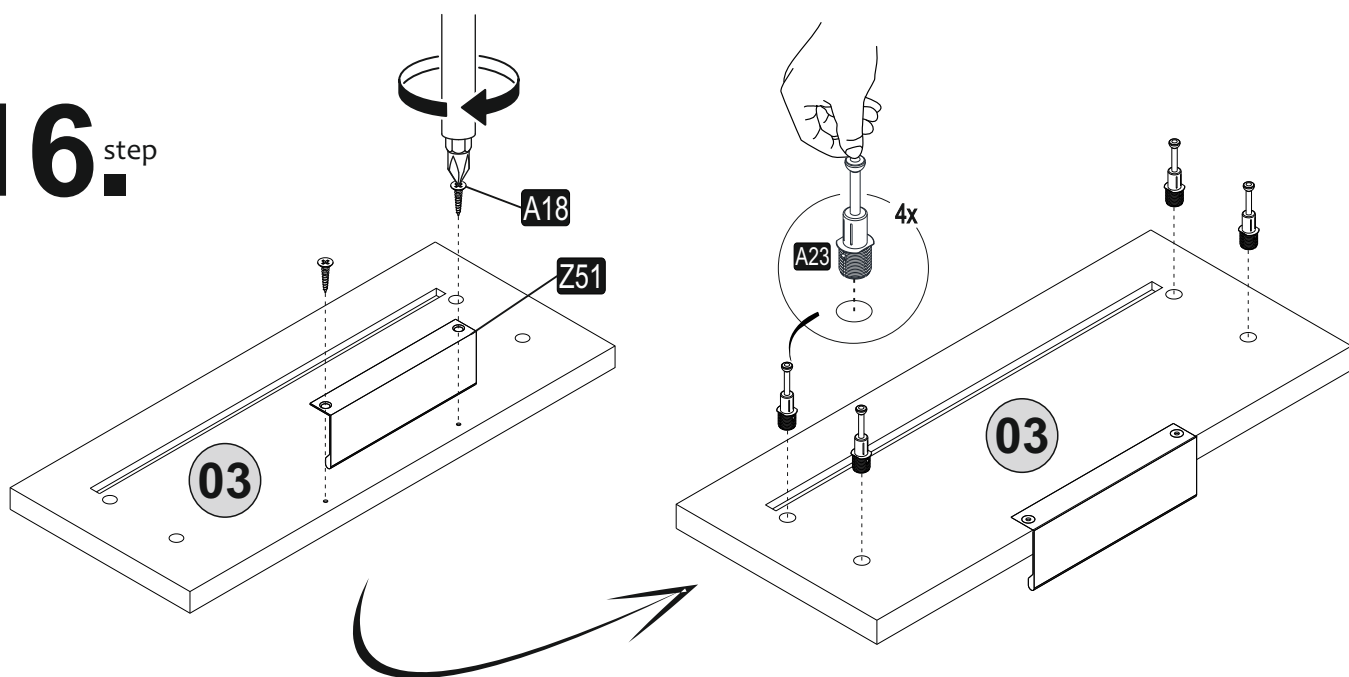

17.step

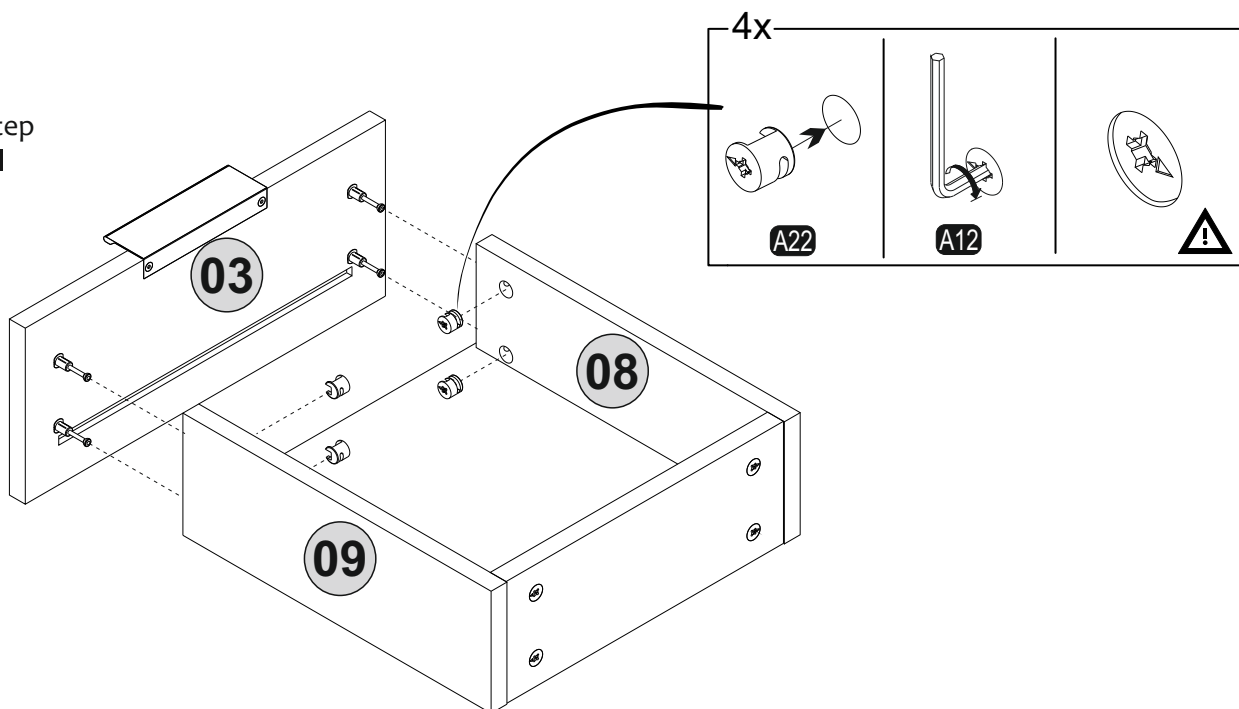

18.^{step}

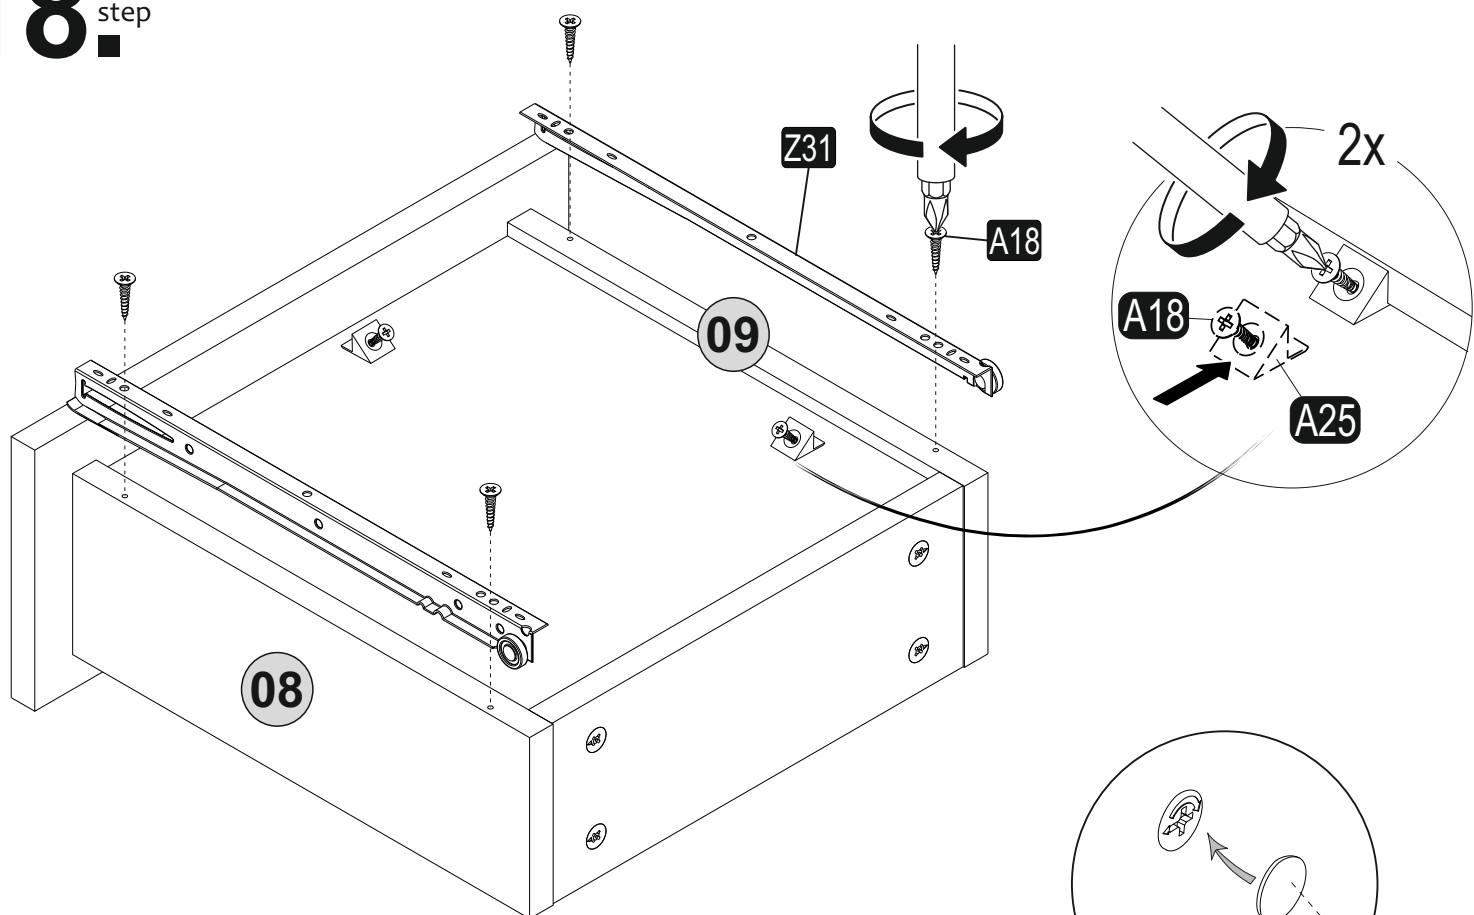

19.^{step}

