

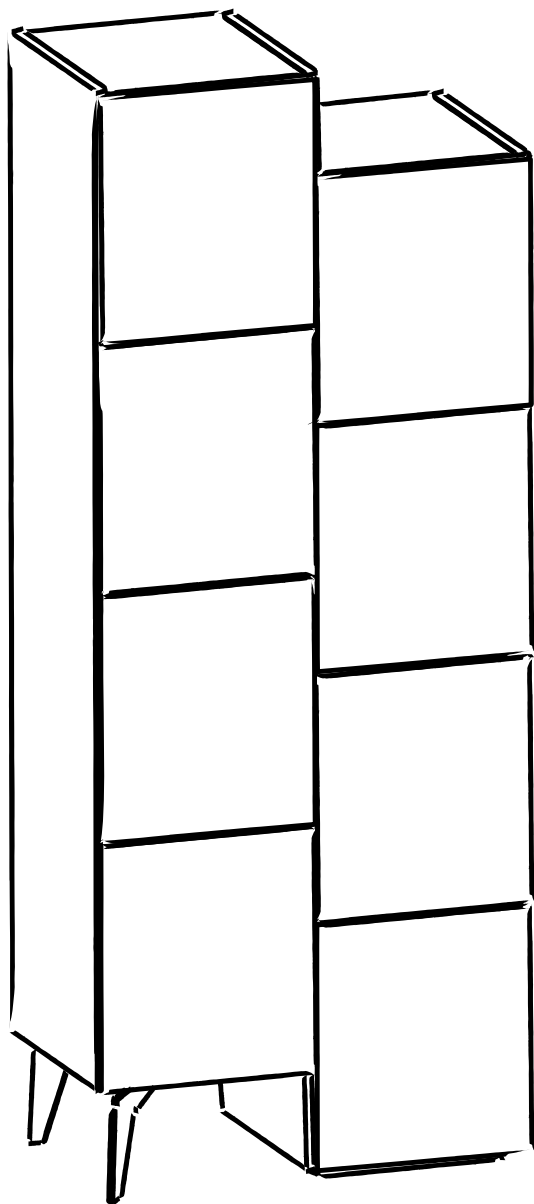
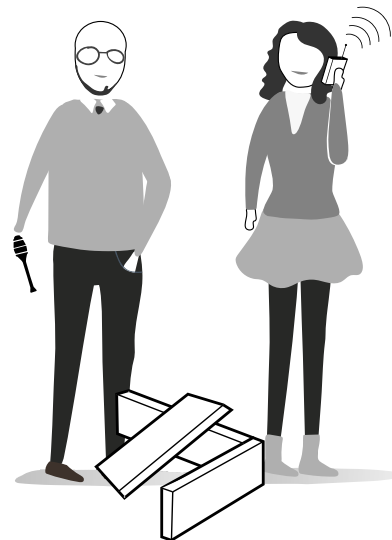
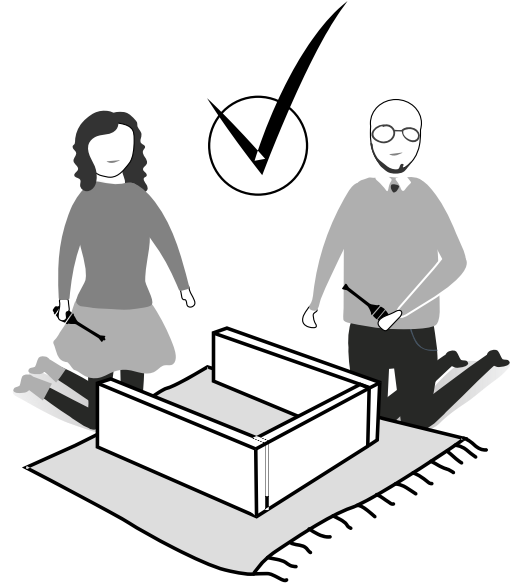
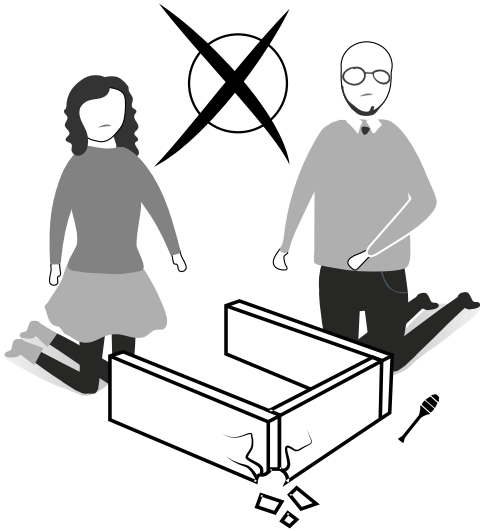


119-001121

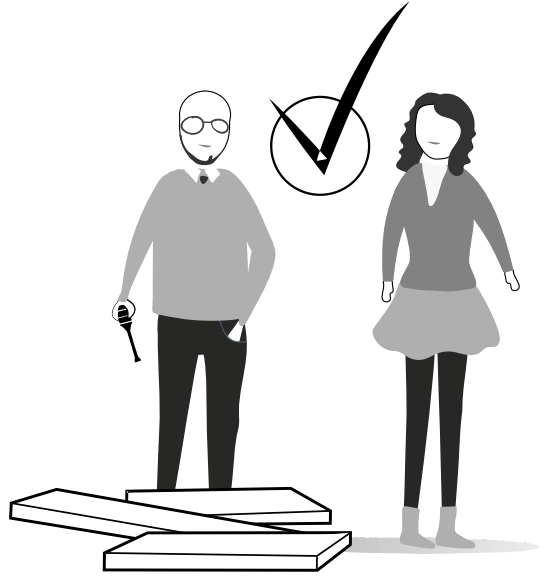


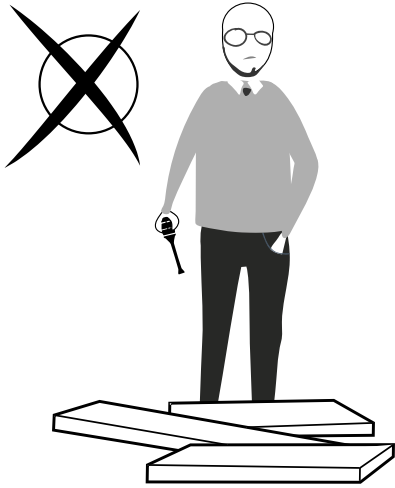


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.


A04

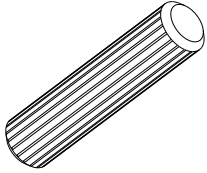


A23

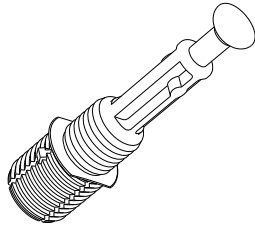


A22

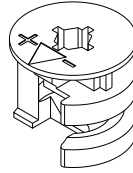


A12

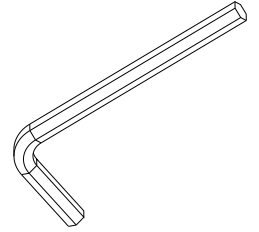


1

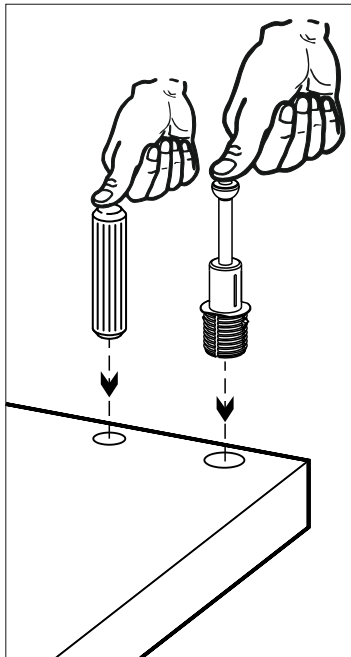


2

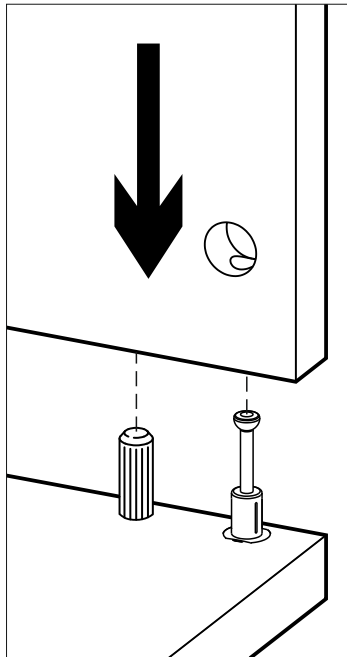

3

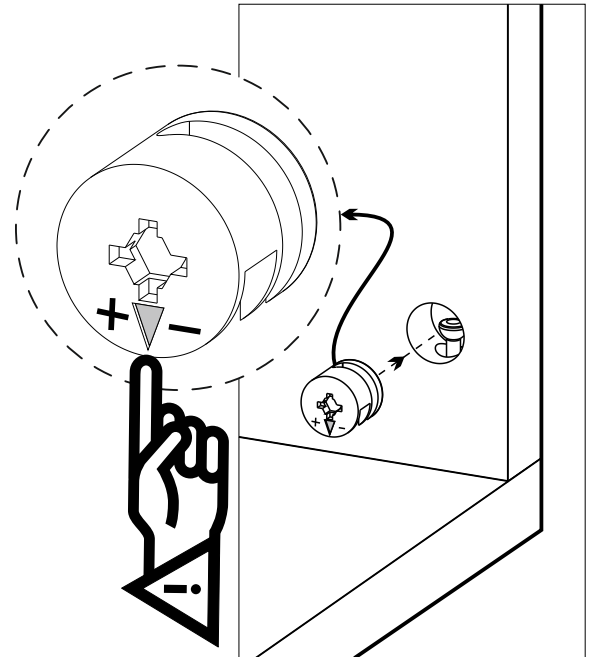

4

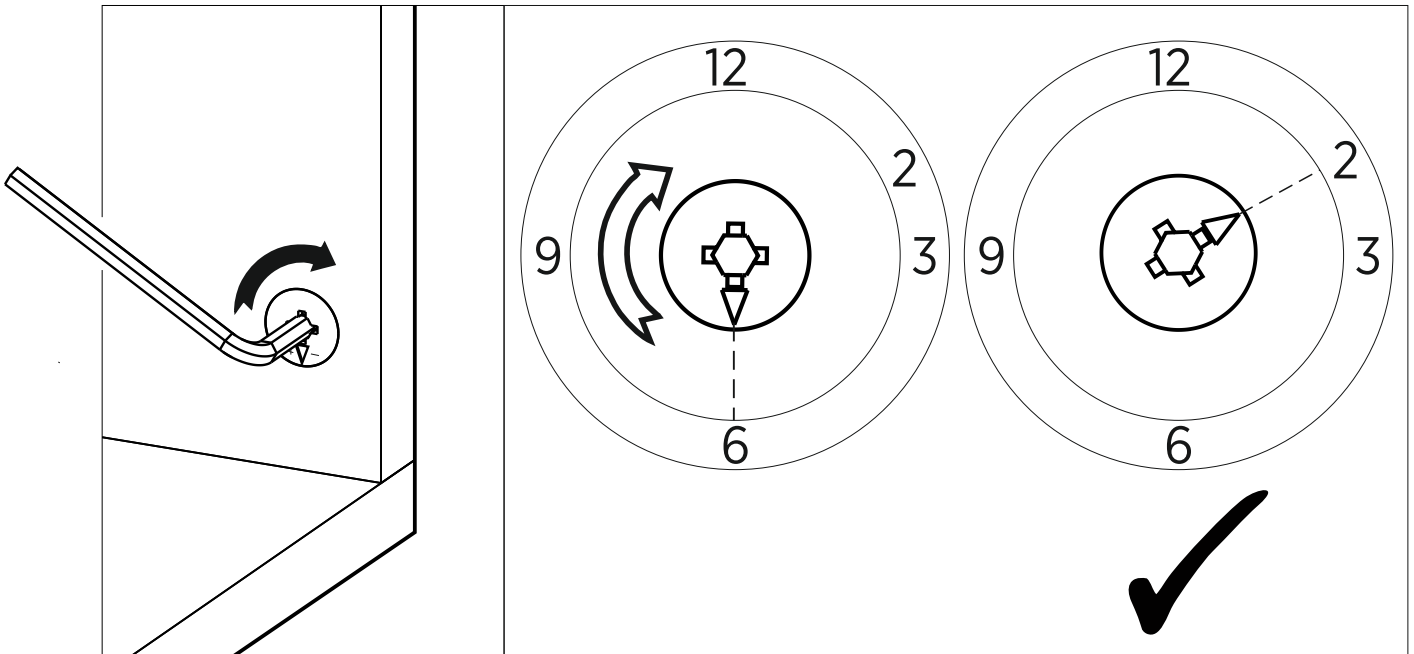


Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




ACCESSORY LIST


A04 Ø8 24x	A06 18mm C1-24x	A12 Allen 1x	A16 DbØ8 1x	A17 4X50 1x
A18 3,5x18 50x	A22 Minifix k18 24x	A23 Minifix M10 24x	A25 ARK.PL 12x	A48 Raf Pimi 16x
A69 P.D. 10x	A87 15x90x30 1x	B03 25 mm 2x	B15 15 (black)mm 8x	C14 Dm(S) 4x
C17 DmF(S) 2x	C20 Mtk(S) 6x	Z71 LEG 2x	PB01 Kece 4x	

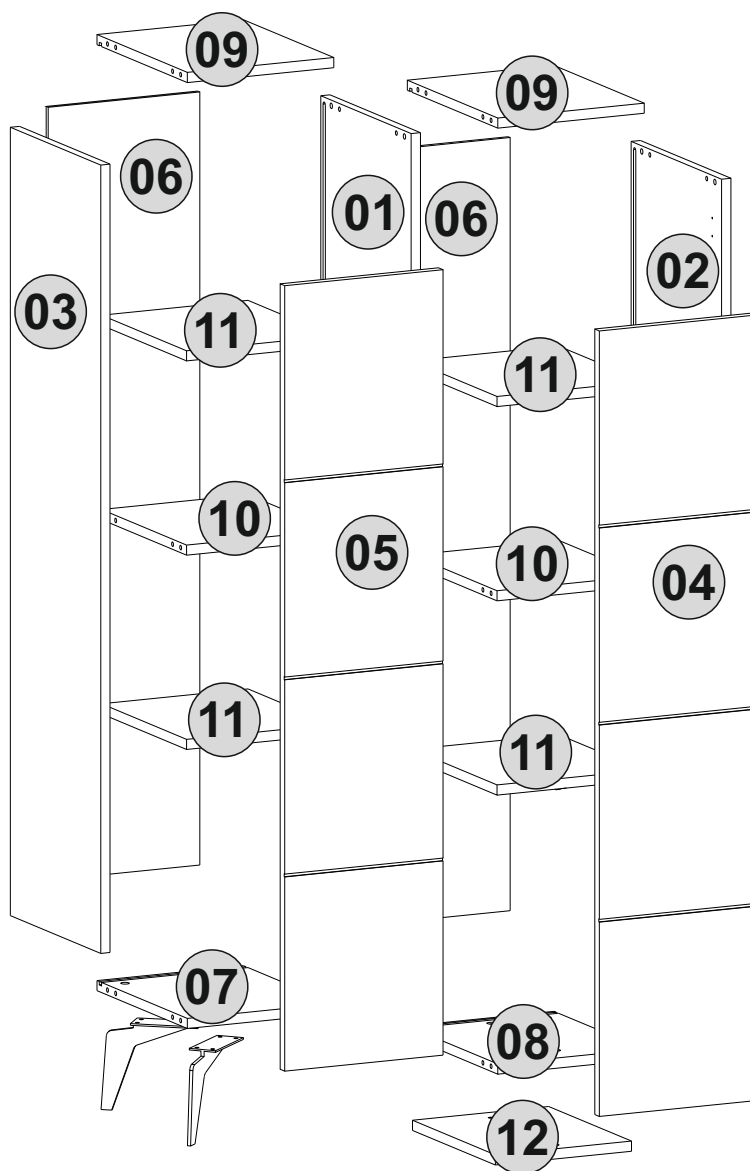


1

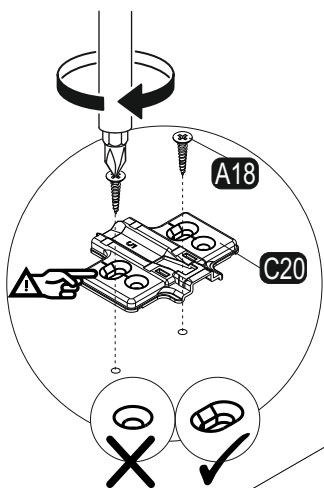

03



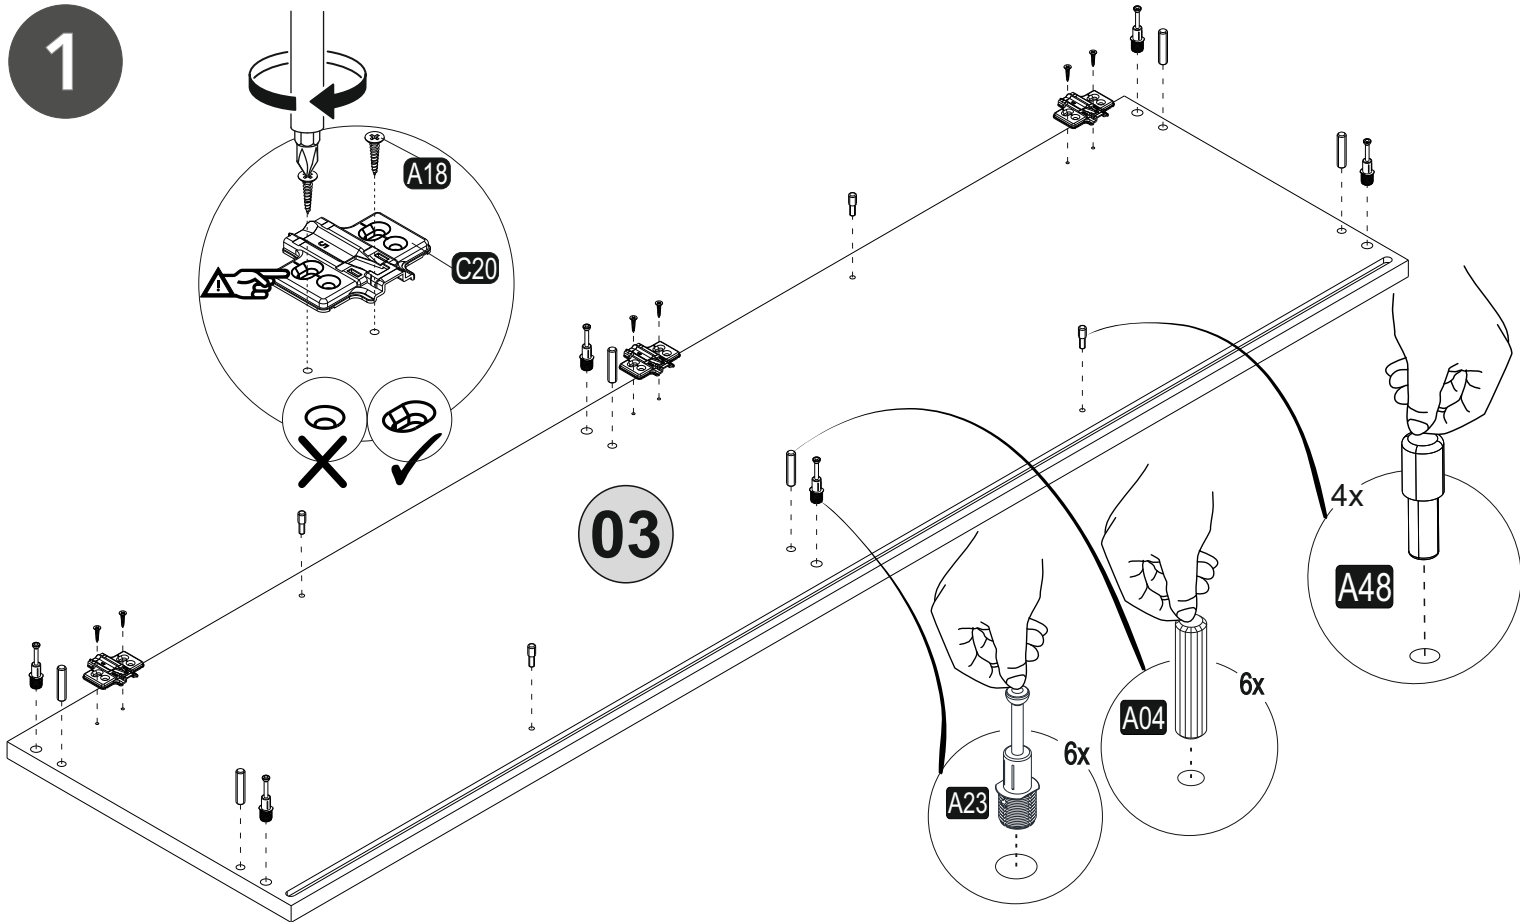


2

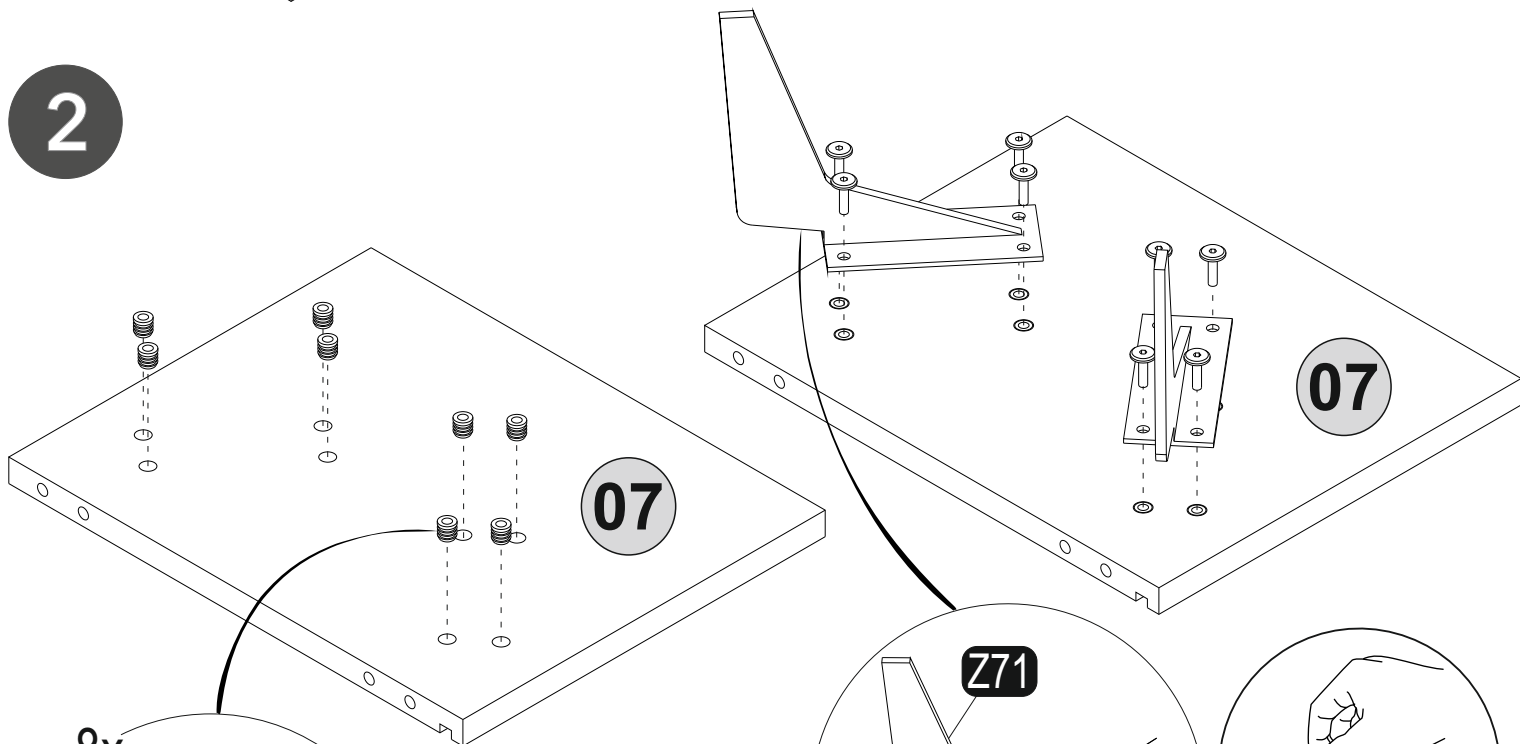


07

07

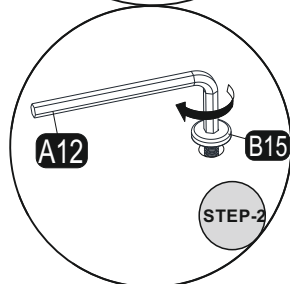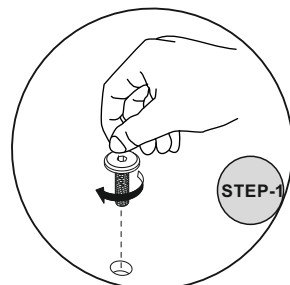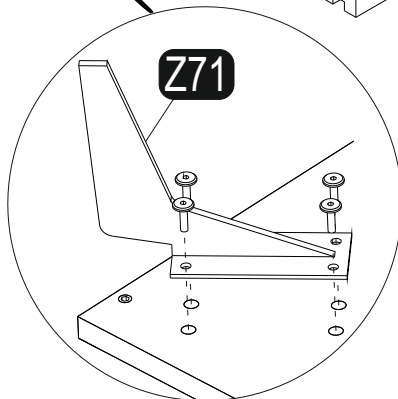

3

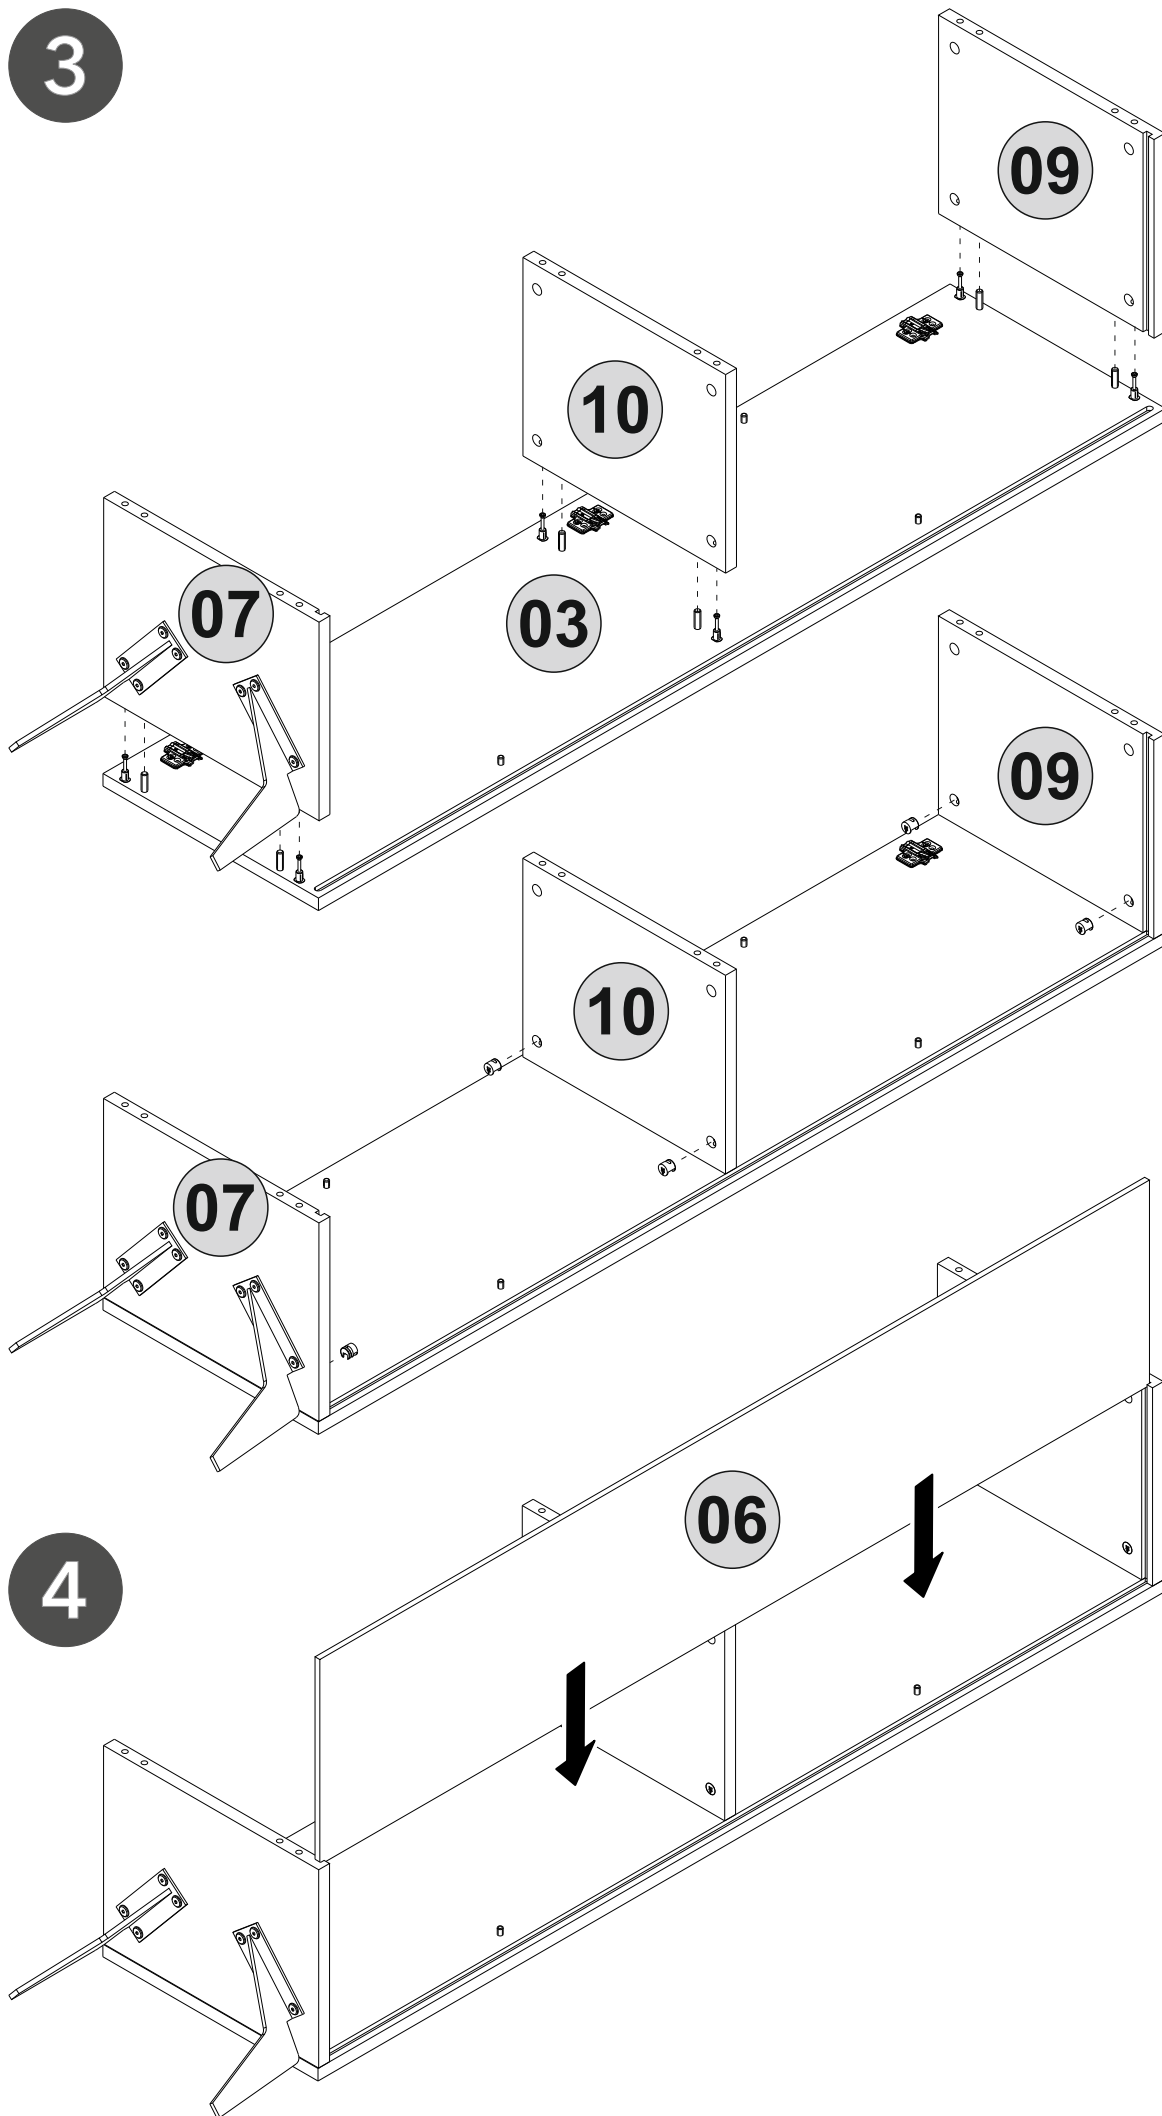


6x

A22


A12




5

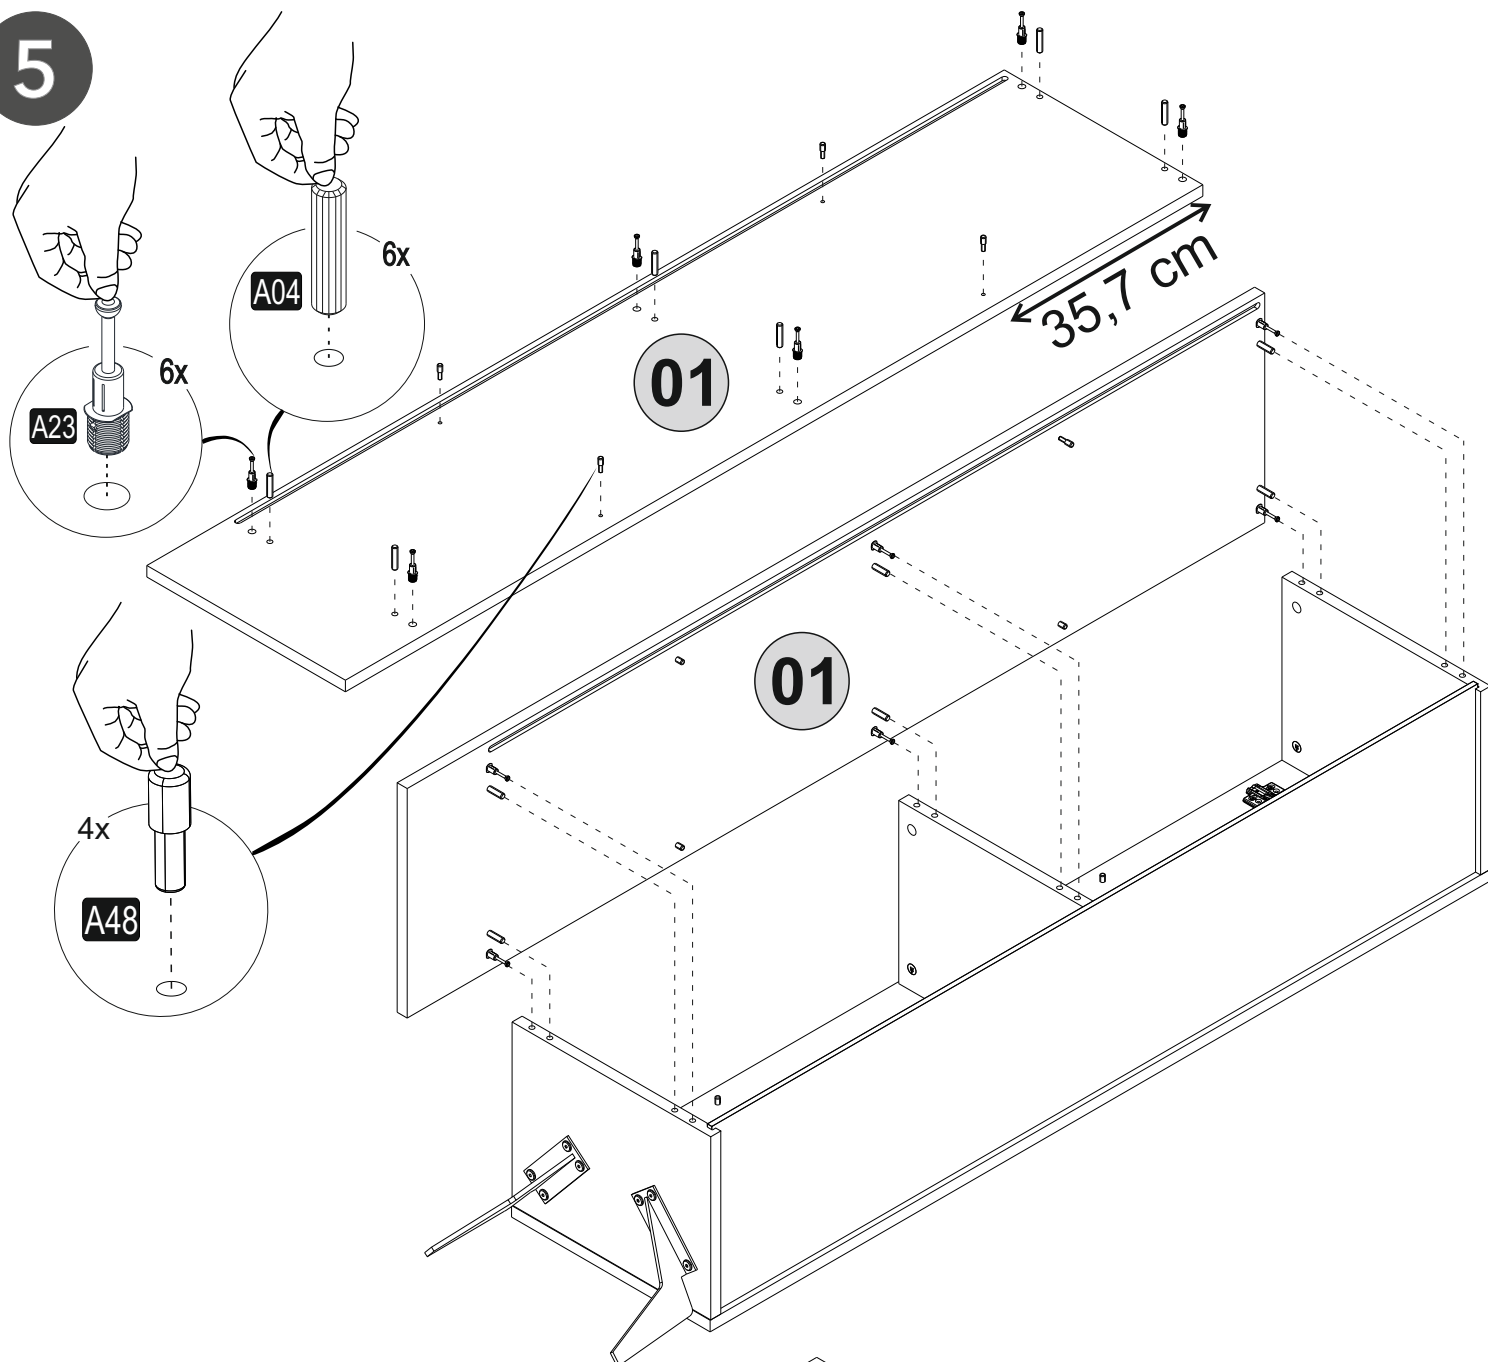


6

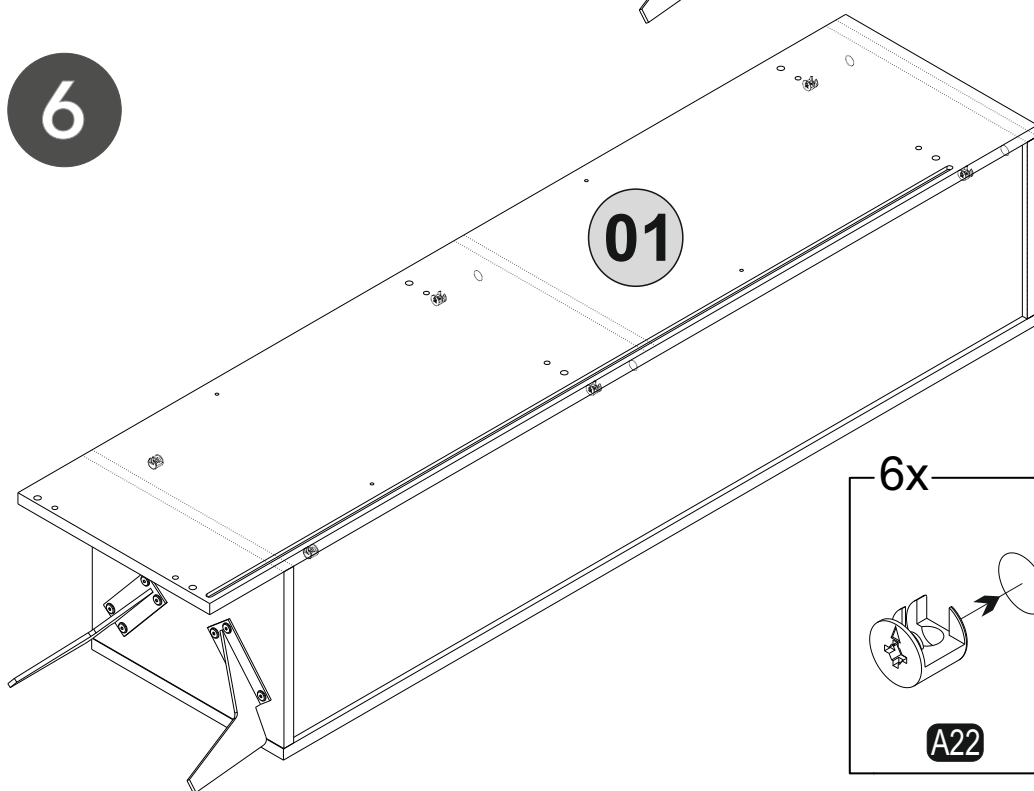

6x

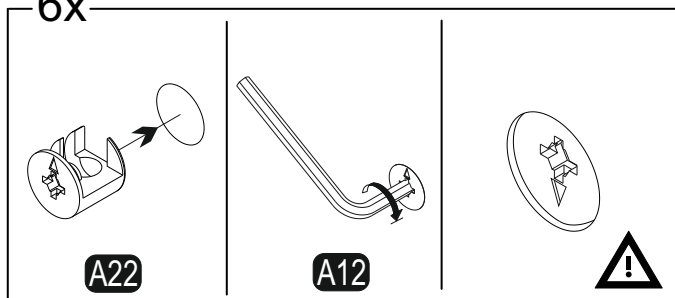

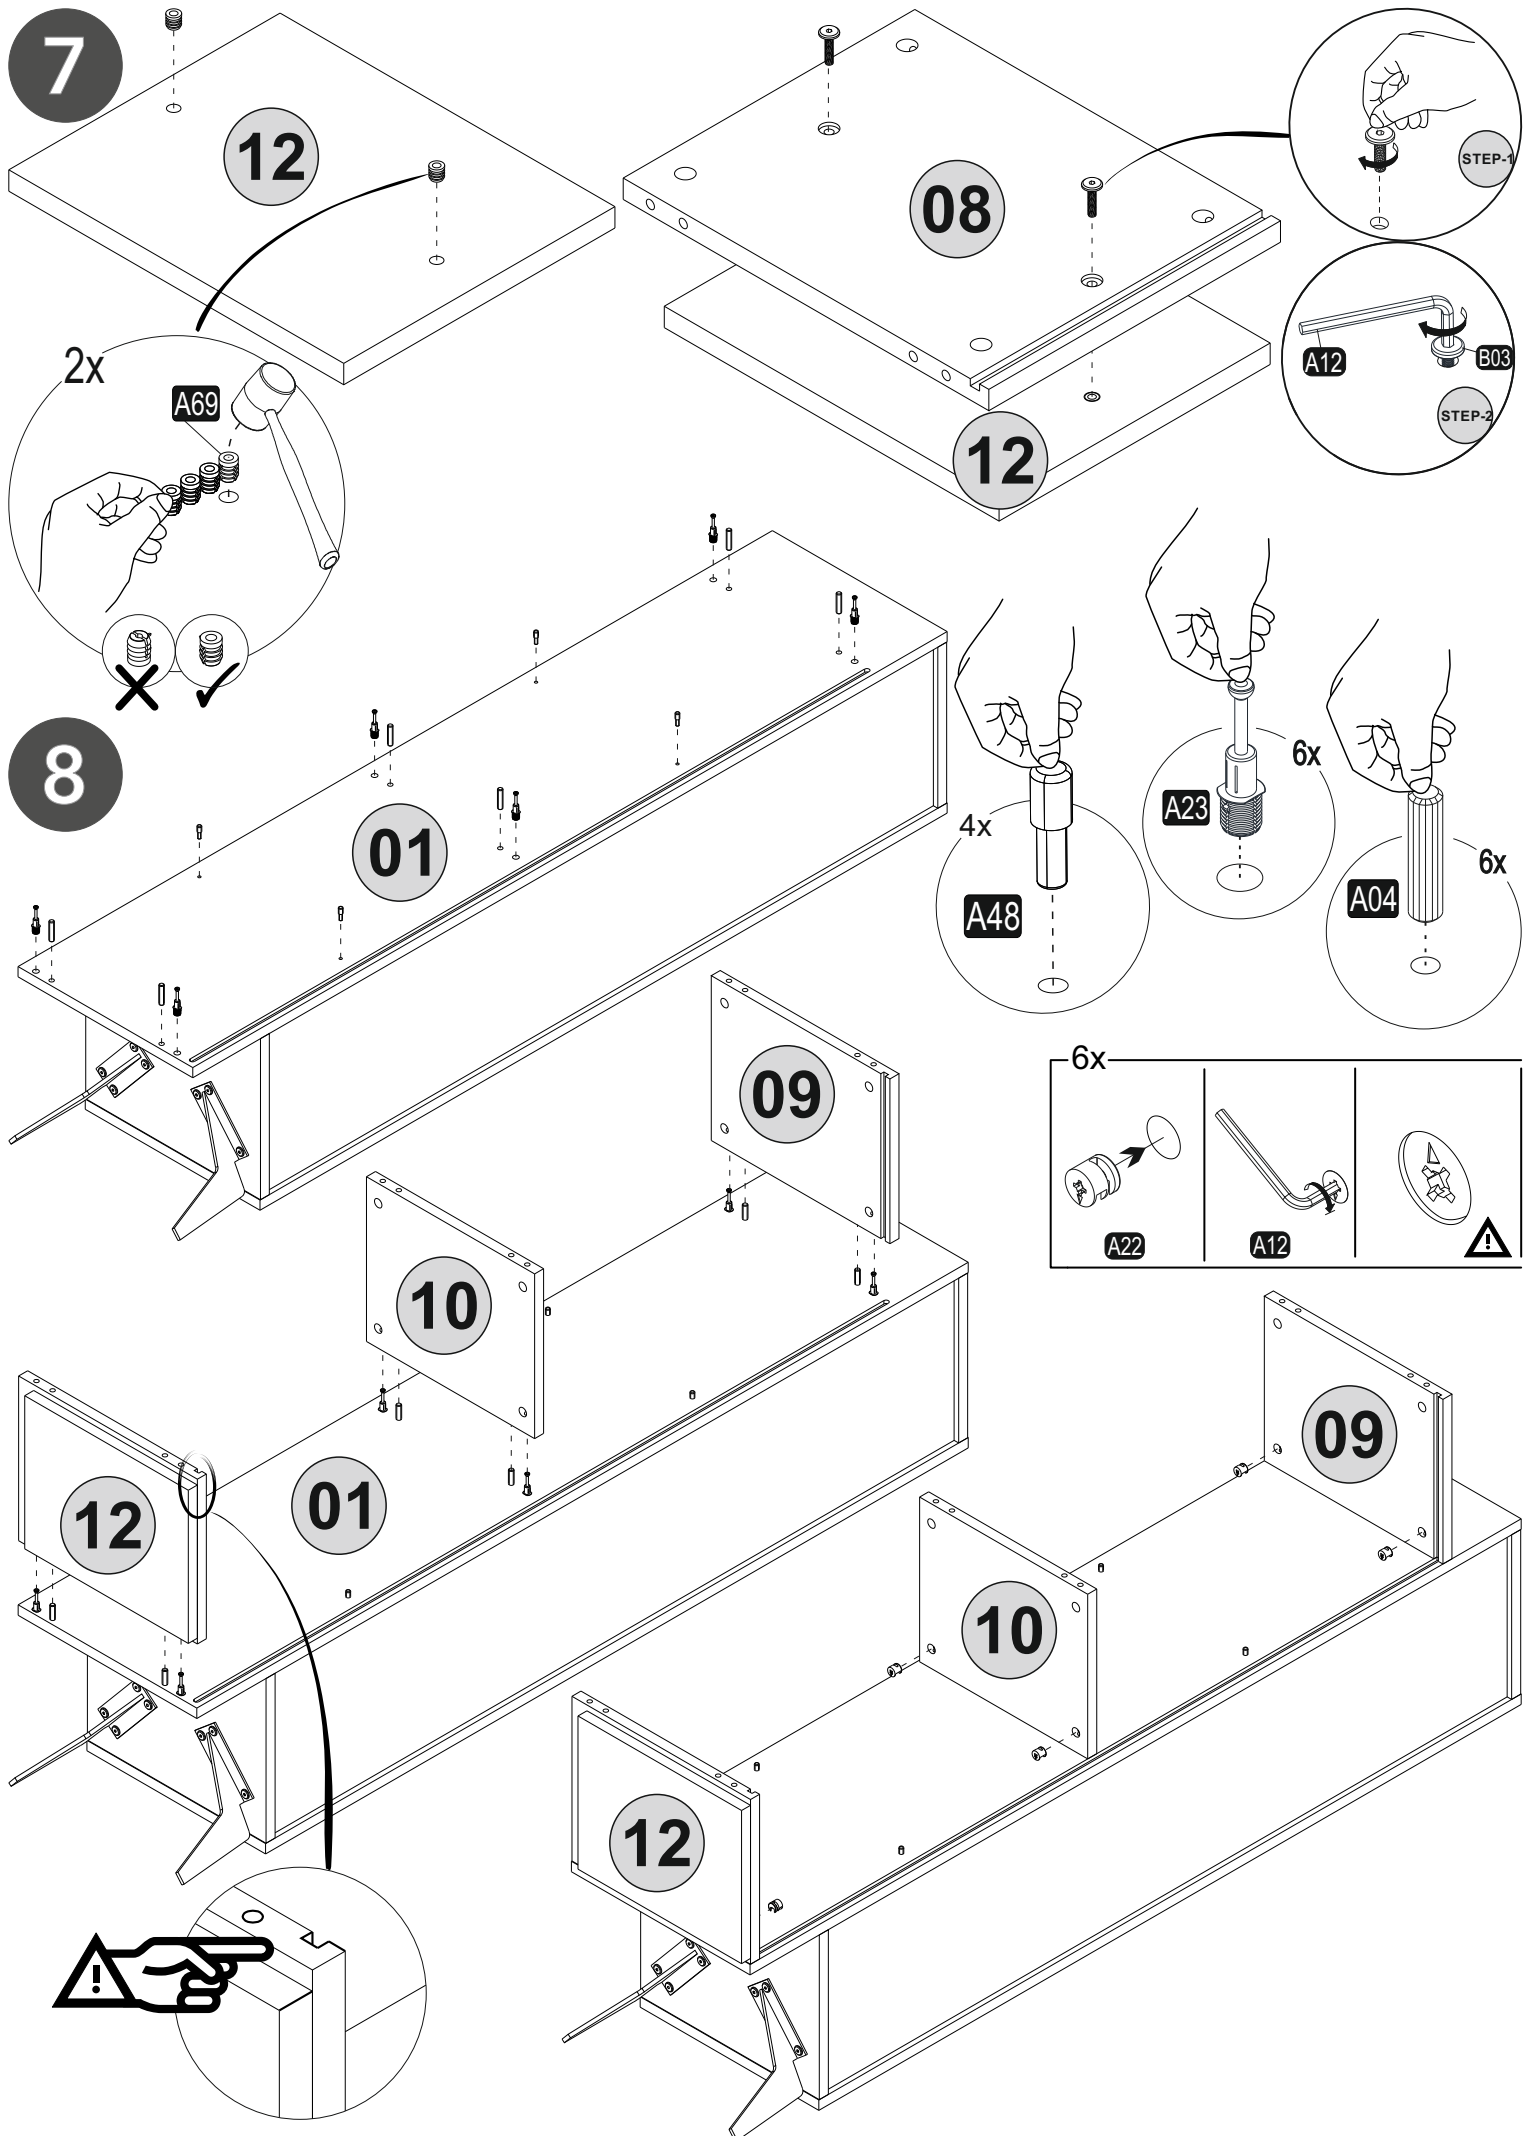

9

06

10

02

02

06

02

A23

6x

A04

6x

4x

A48

A18

C20


6x

A22


A12

!


11

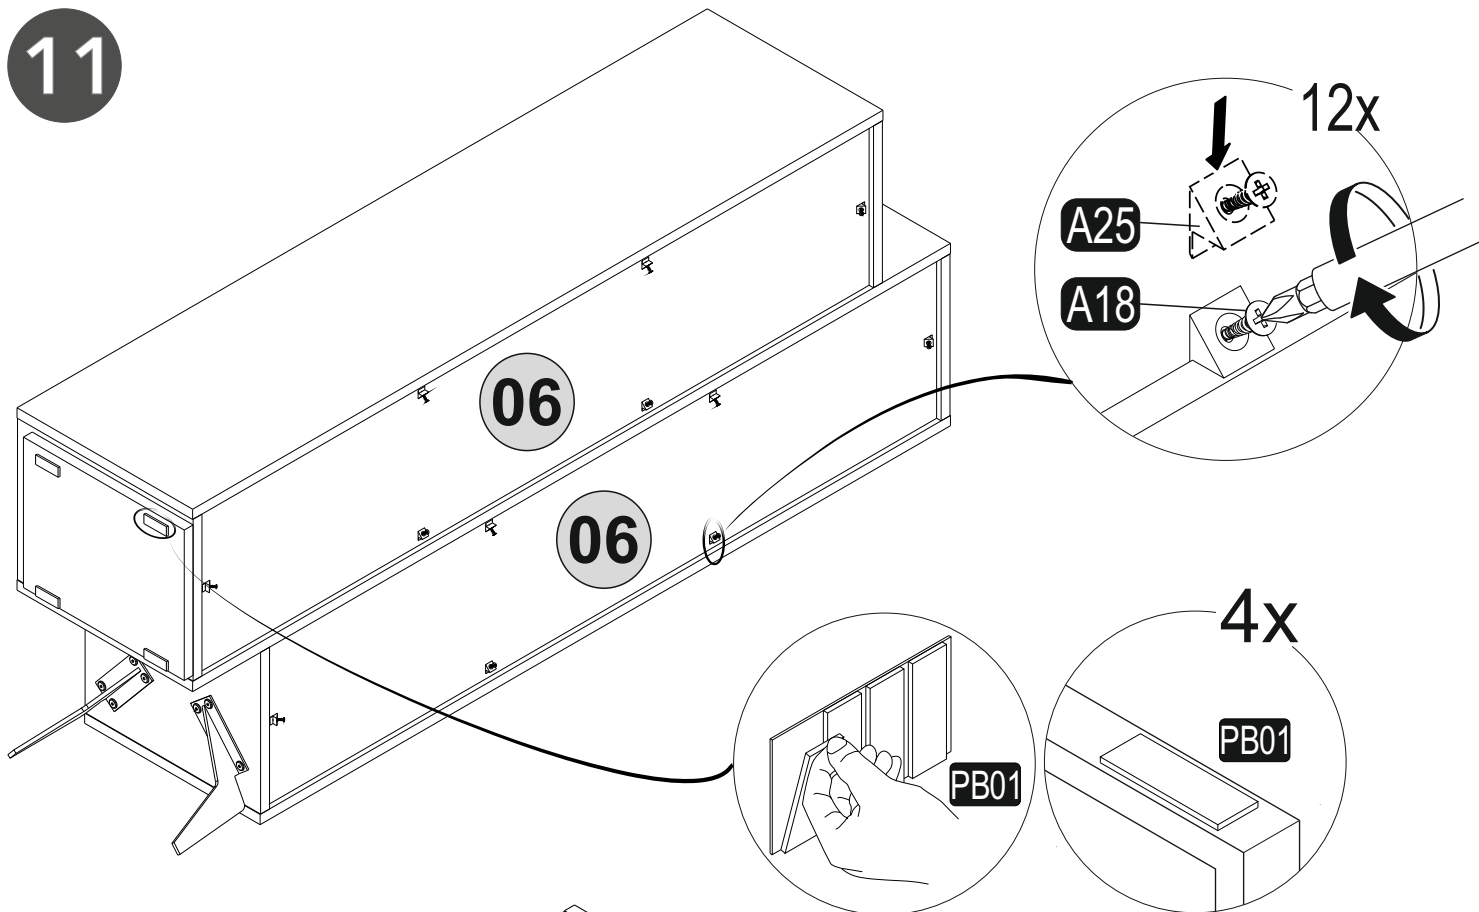

12

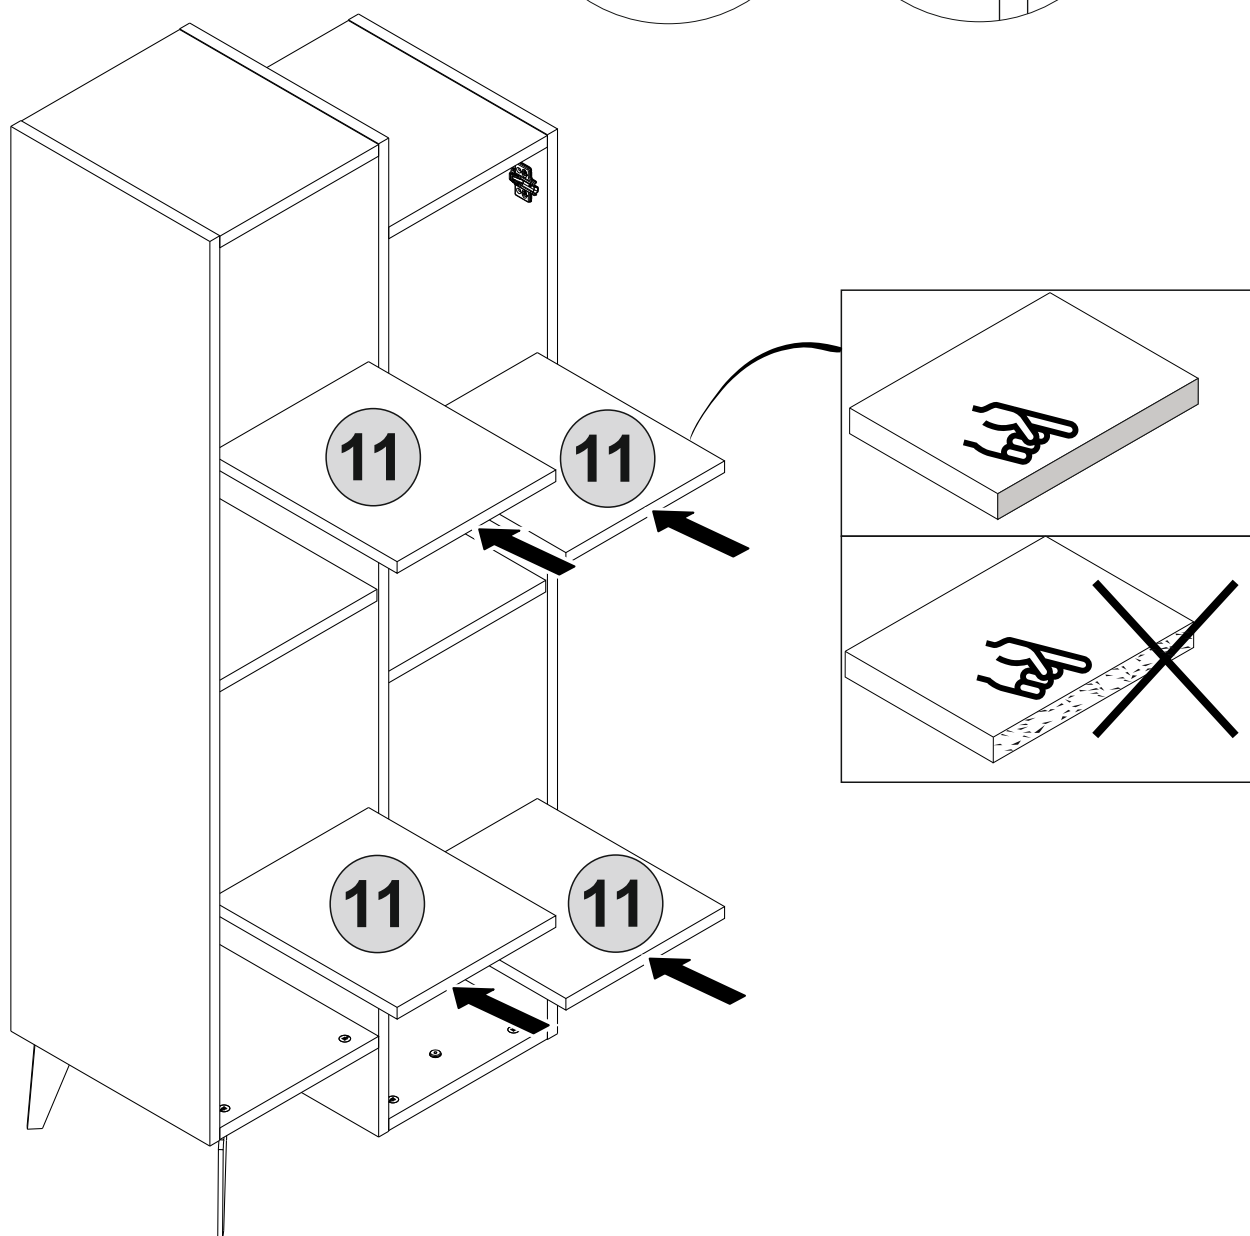

13

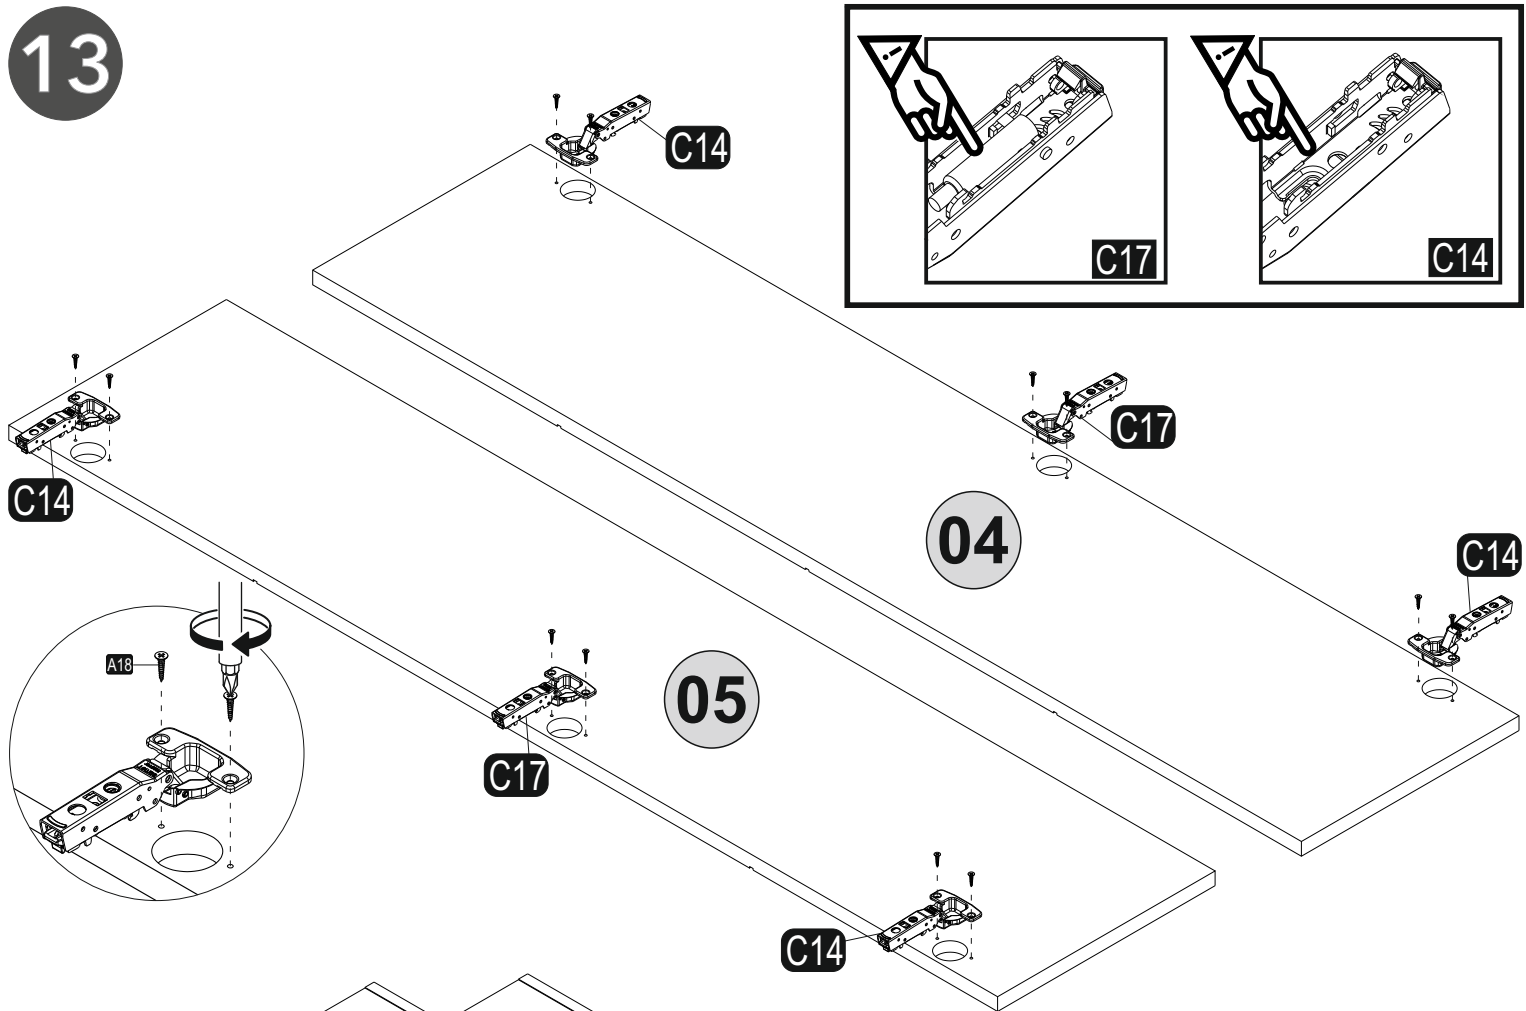

14

