


# LEFT

119-001172


---

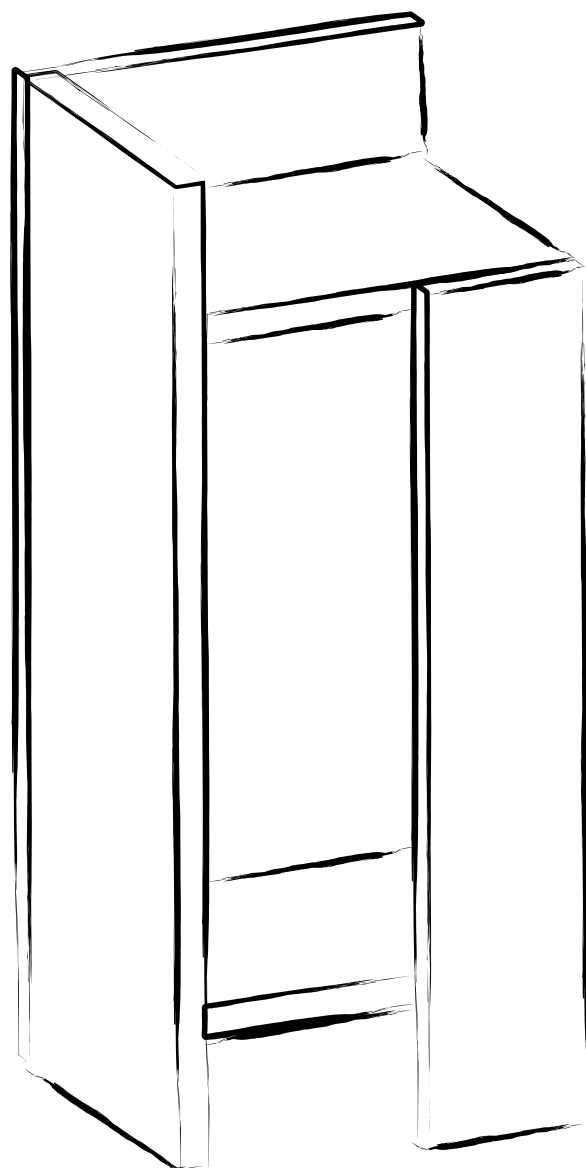


# ATTENTION !!

Minifix is the main connection material used in our products.  
Before starting assembly, please check the drawings below.


A04

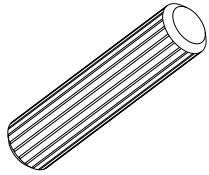


A23

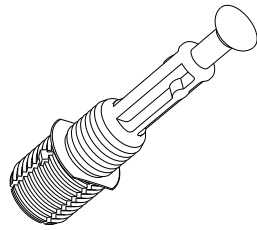


A22

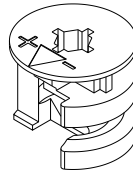


A12

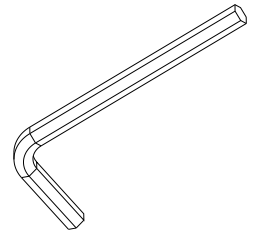


1

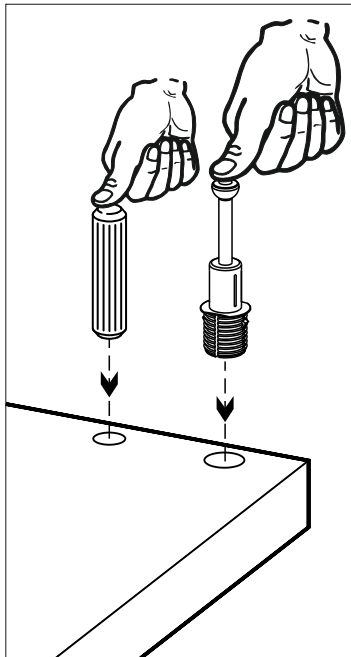


2

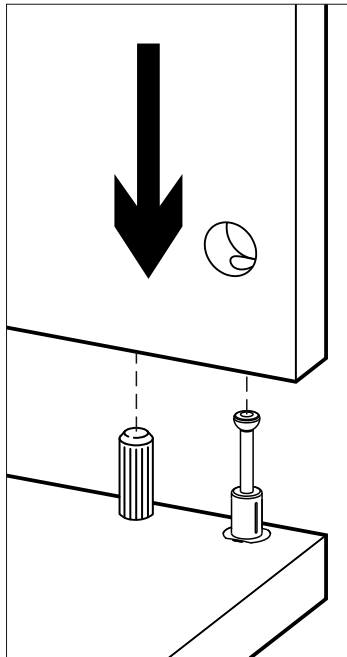

3

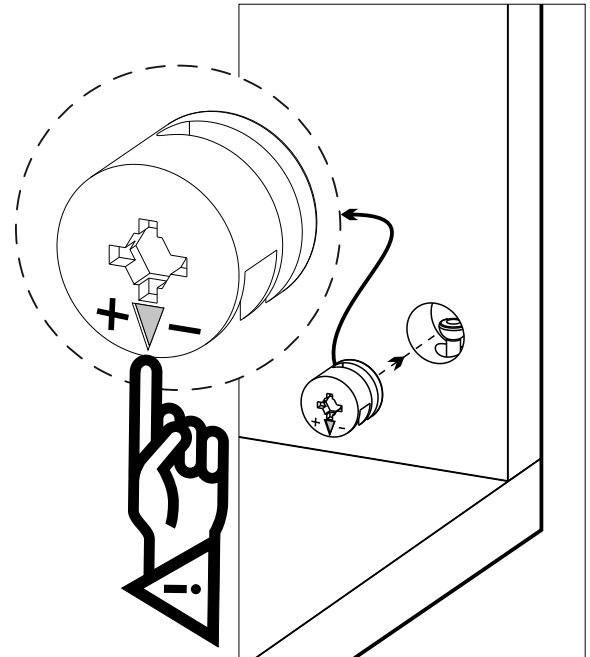






4

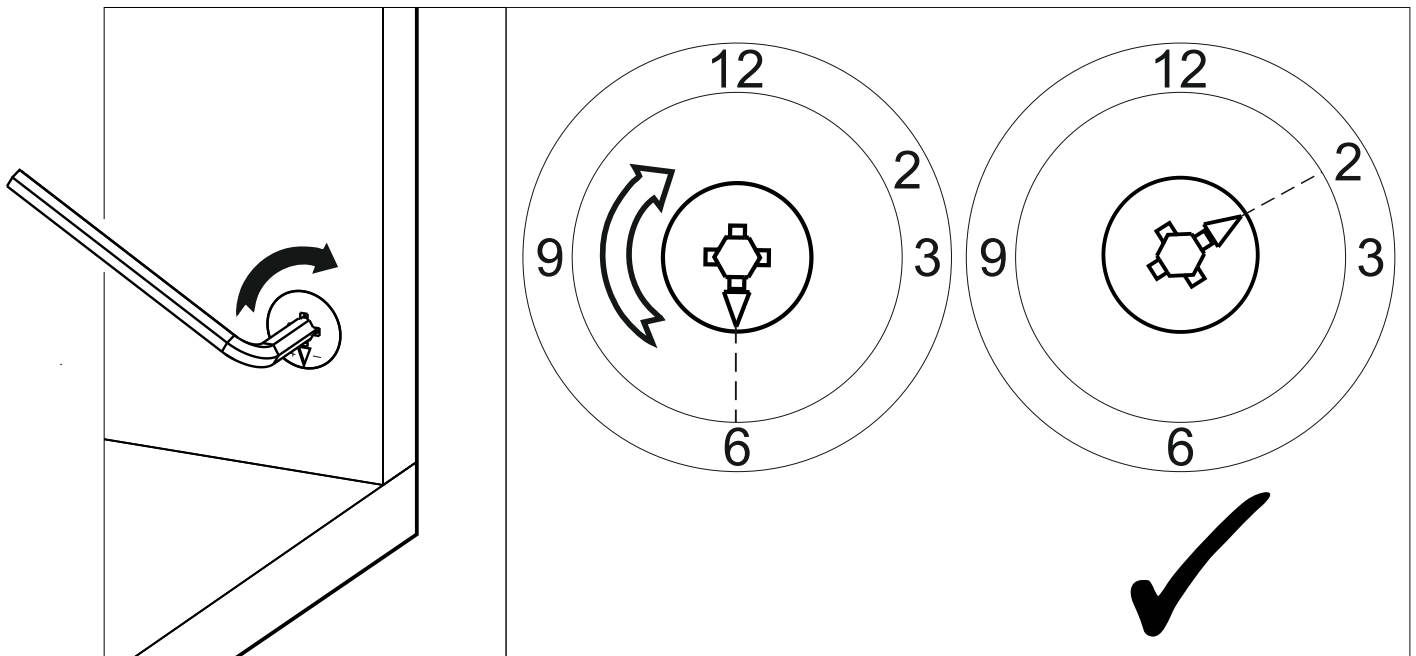


Follow the installation steps in the order as shown.  
Position the parts as shown in the installation guide steps.





## ACCESSORY LIST



|                                                                                                        |                                                                                                                                  |                                                                                                                      |                                                                                                                |                                                                                                          |
|--------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A04</b><br><br>10x | <b>A06</b><br>18mm<br><br><b>C1-15x</b><br>Kece | <b>A12</b><br>Minifix k18<br><br>1x | <b>A13</b><br>50mm<br><br>3x | <b>A22</b><br><br>12x |
| <b>A23</b><br><br>12x | <b>PB01</b><br><br>4x                           |                                                                                                                      |                                                                                                                |                                                                                                          |

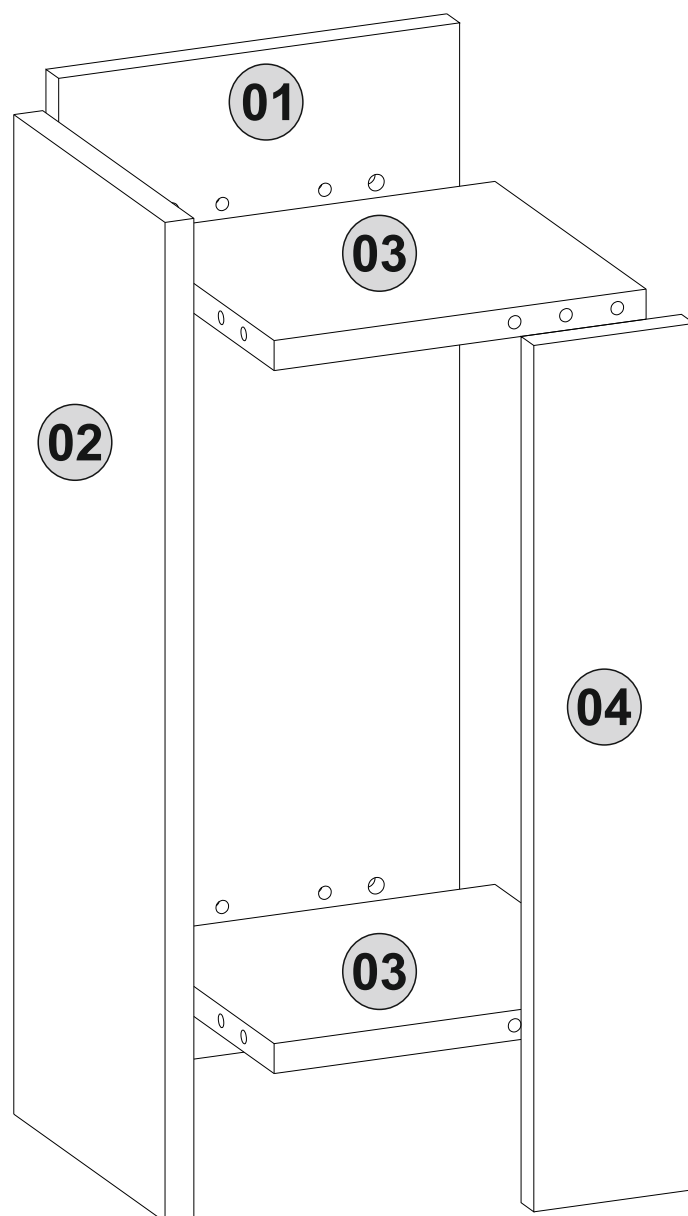




# 1<sup>step</sup>

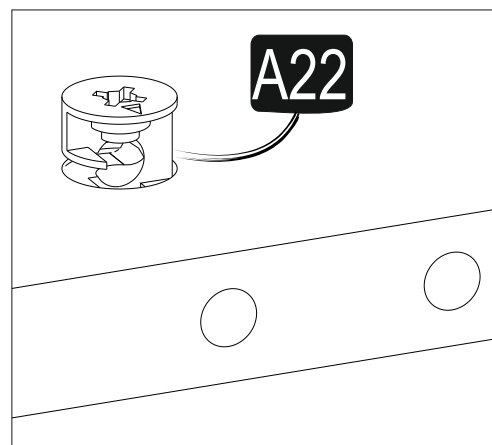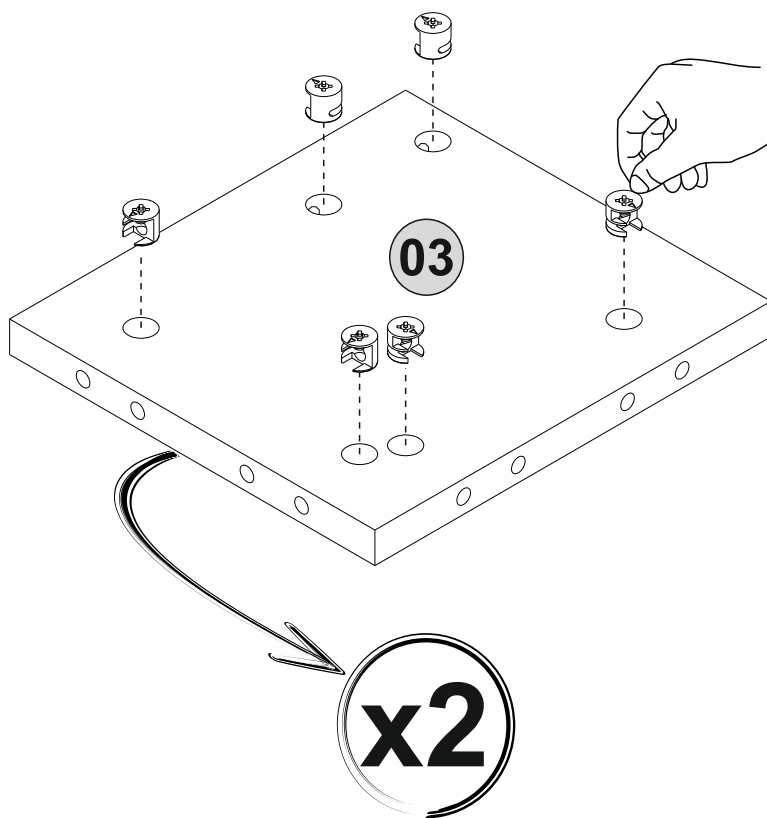



# 2<sup>step</sup>

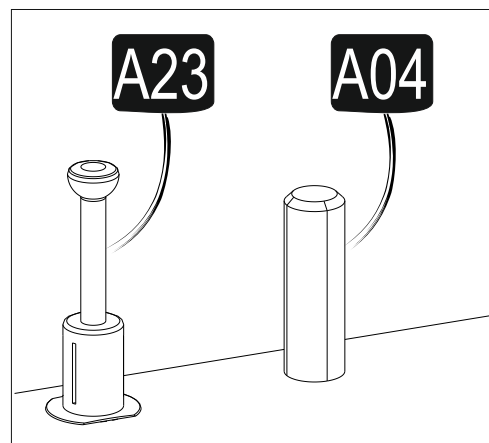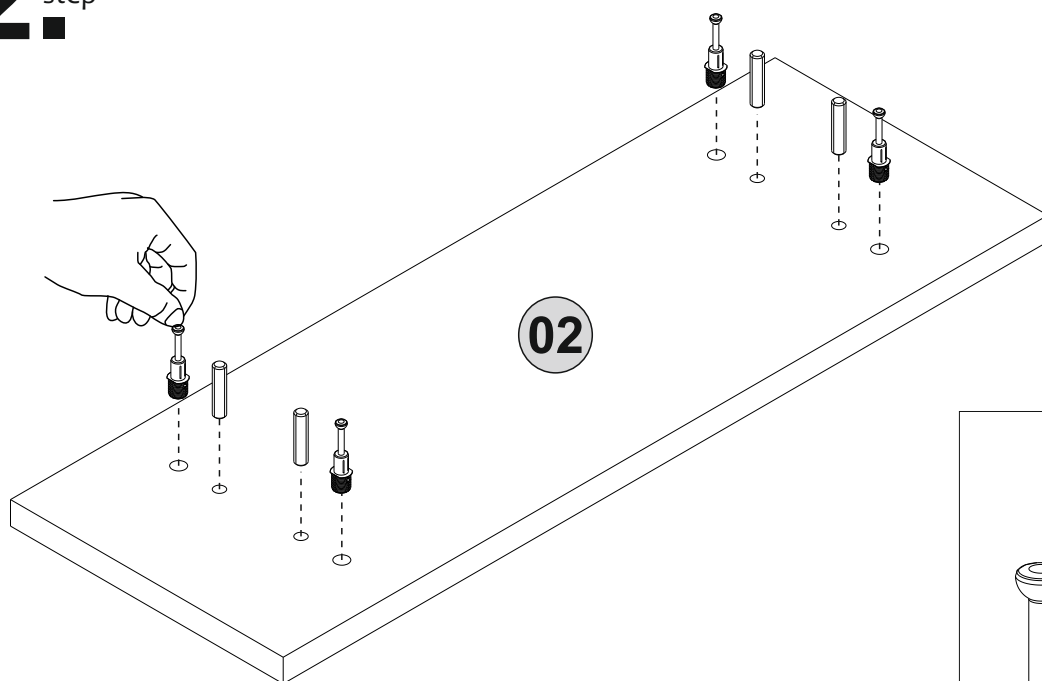




# 3<sup>step</sup>

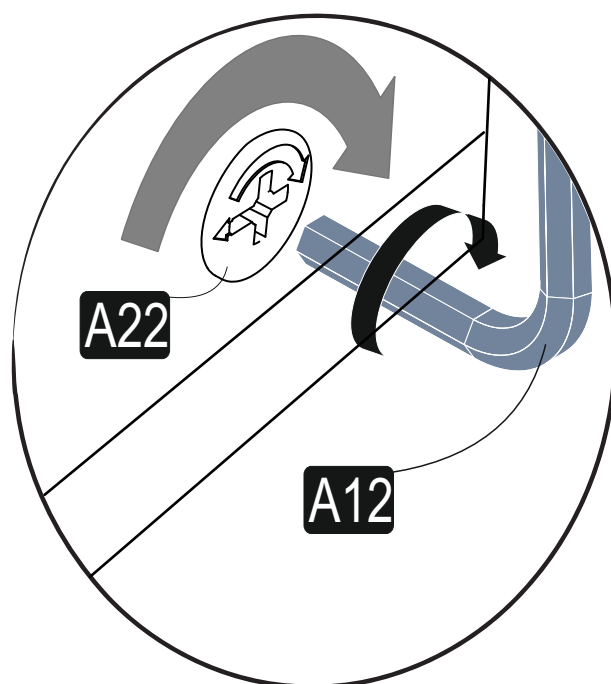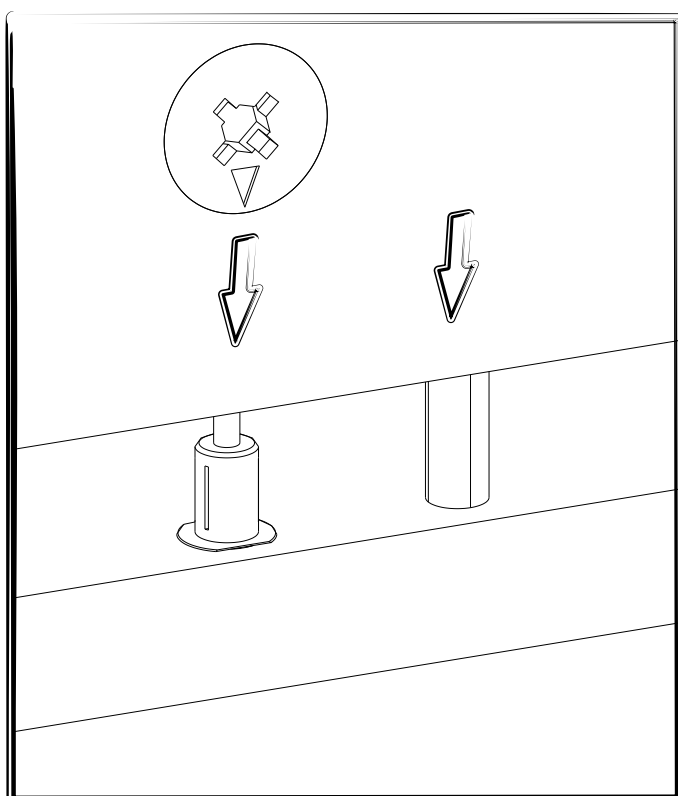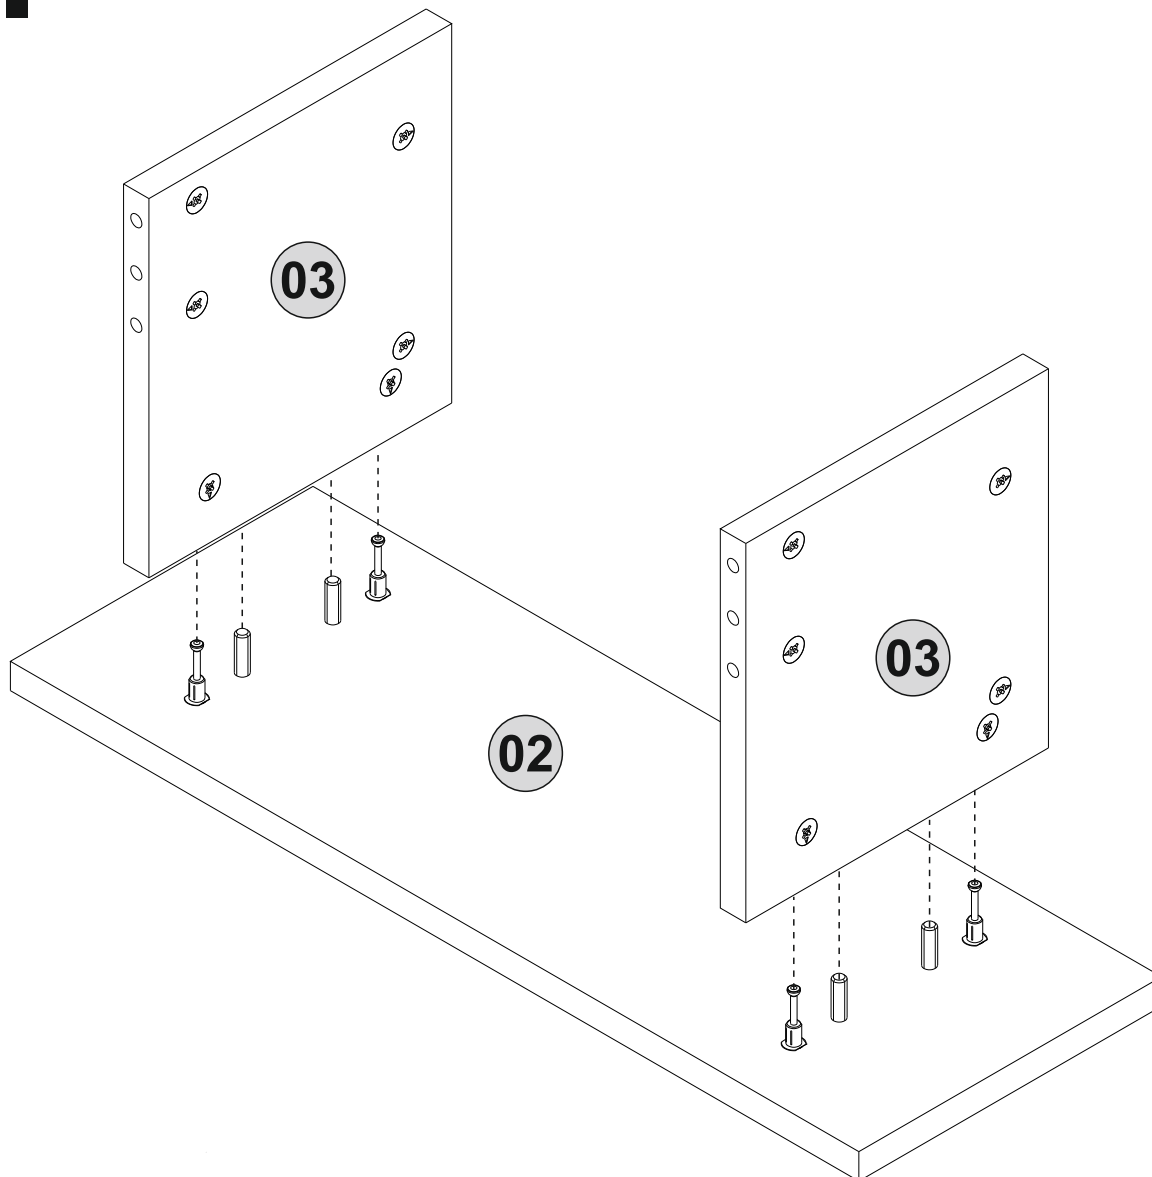


# 4<sup>step</sup>

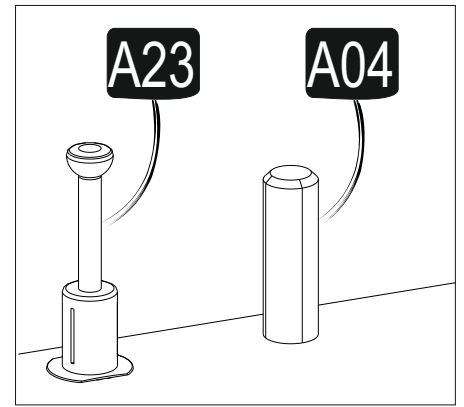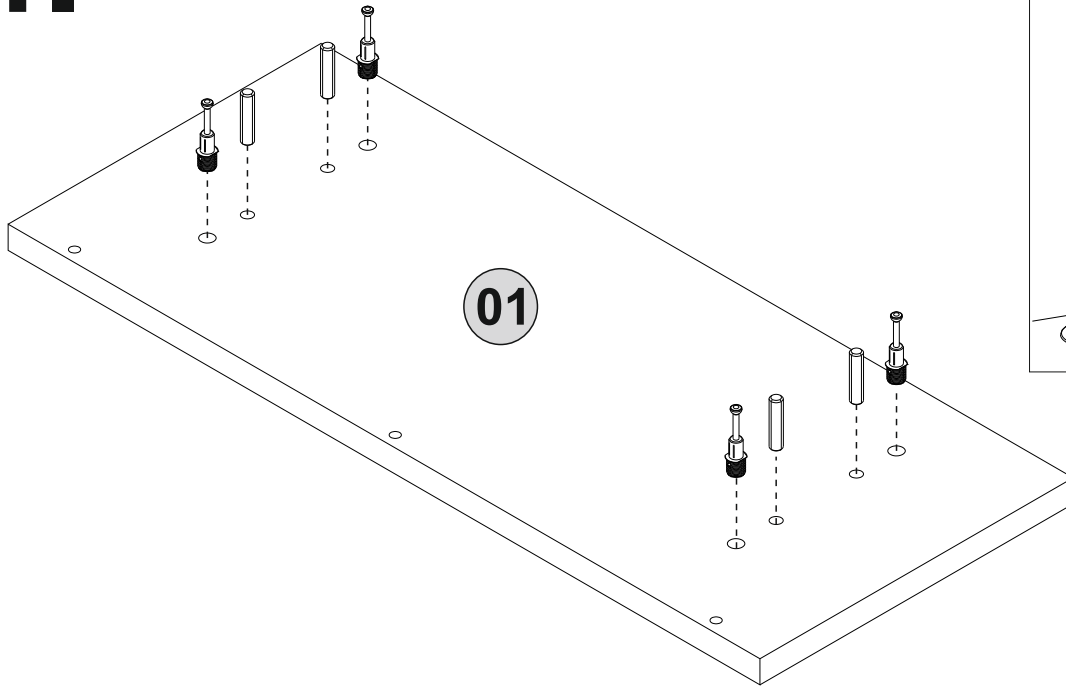



# 5<sup>step</sup>

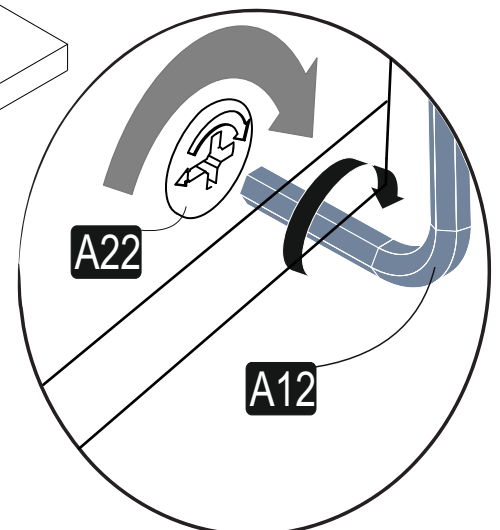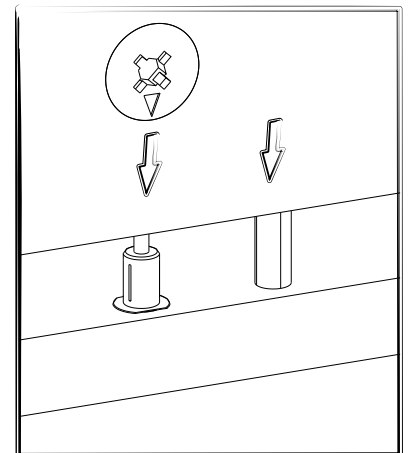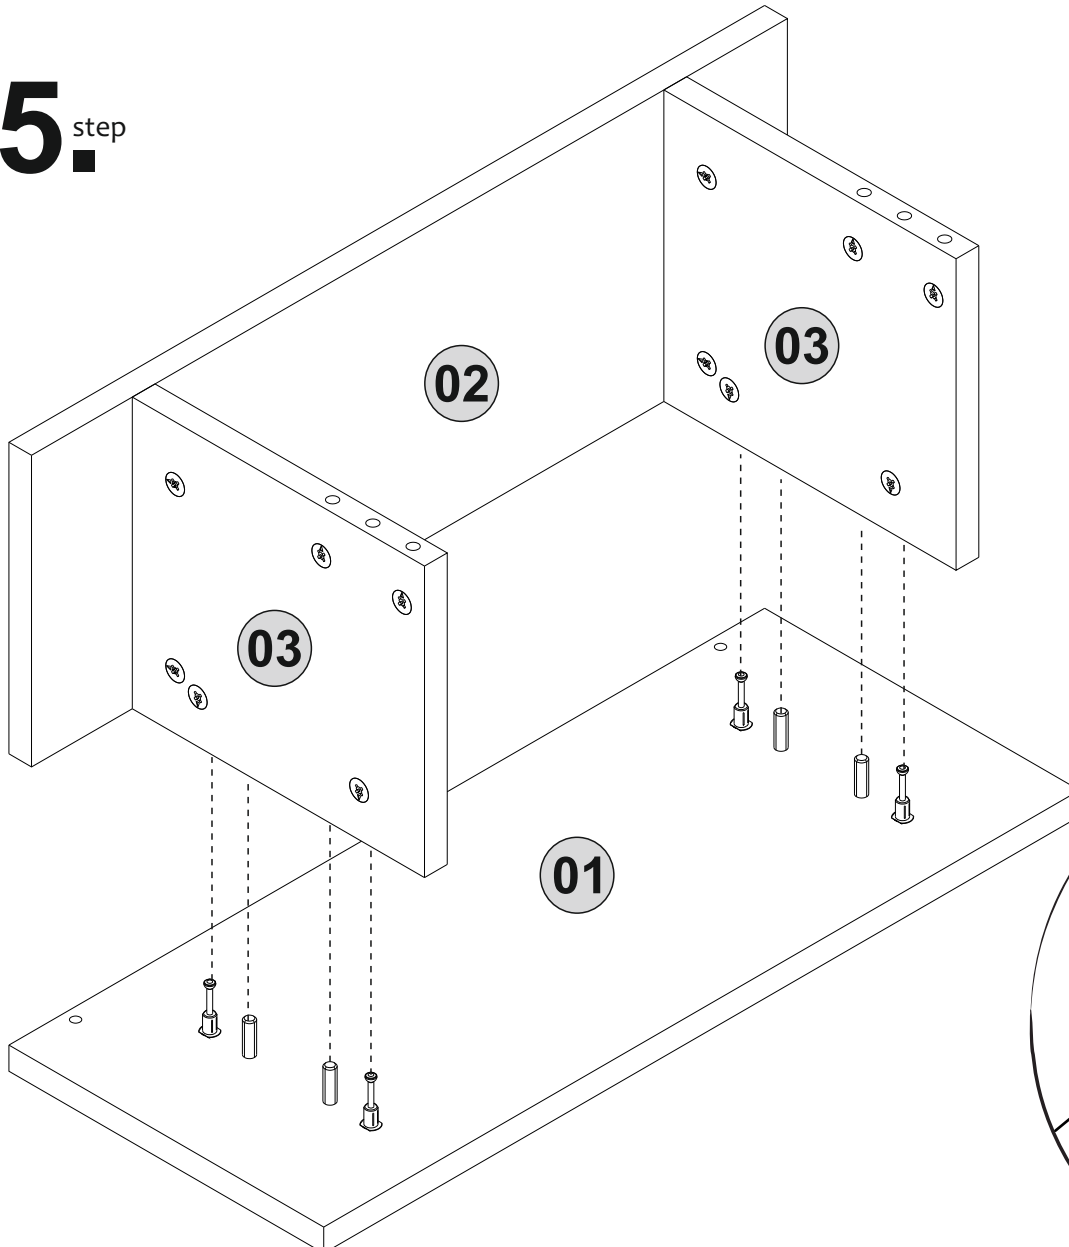




# 6<sup>step</sup>

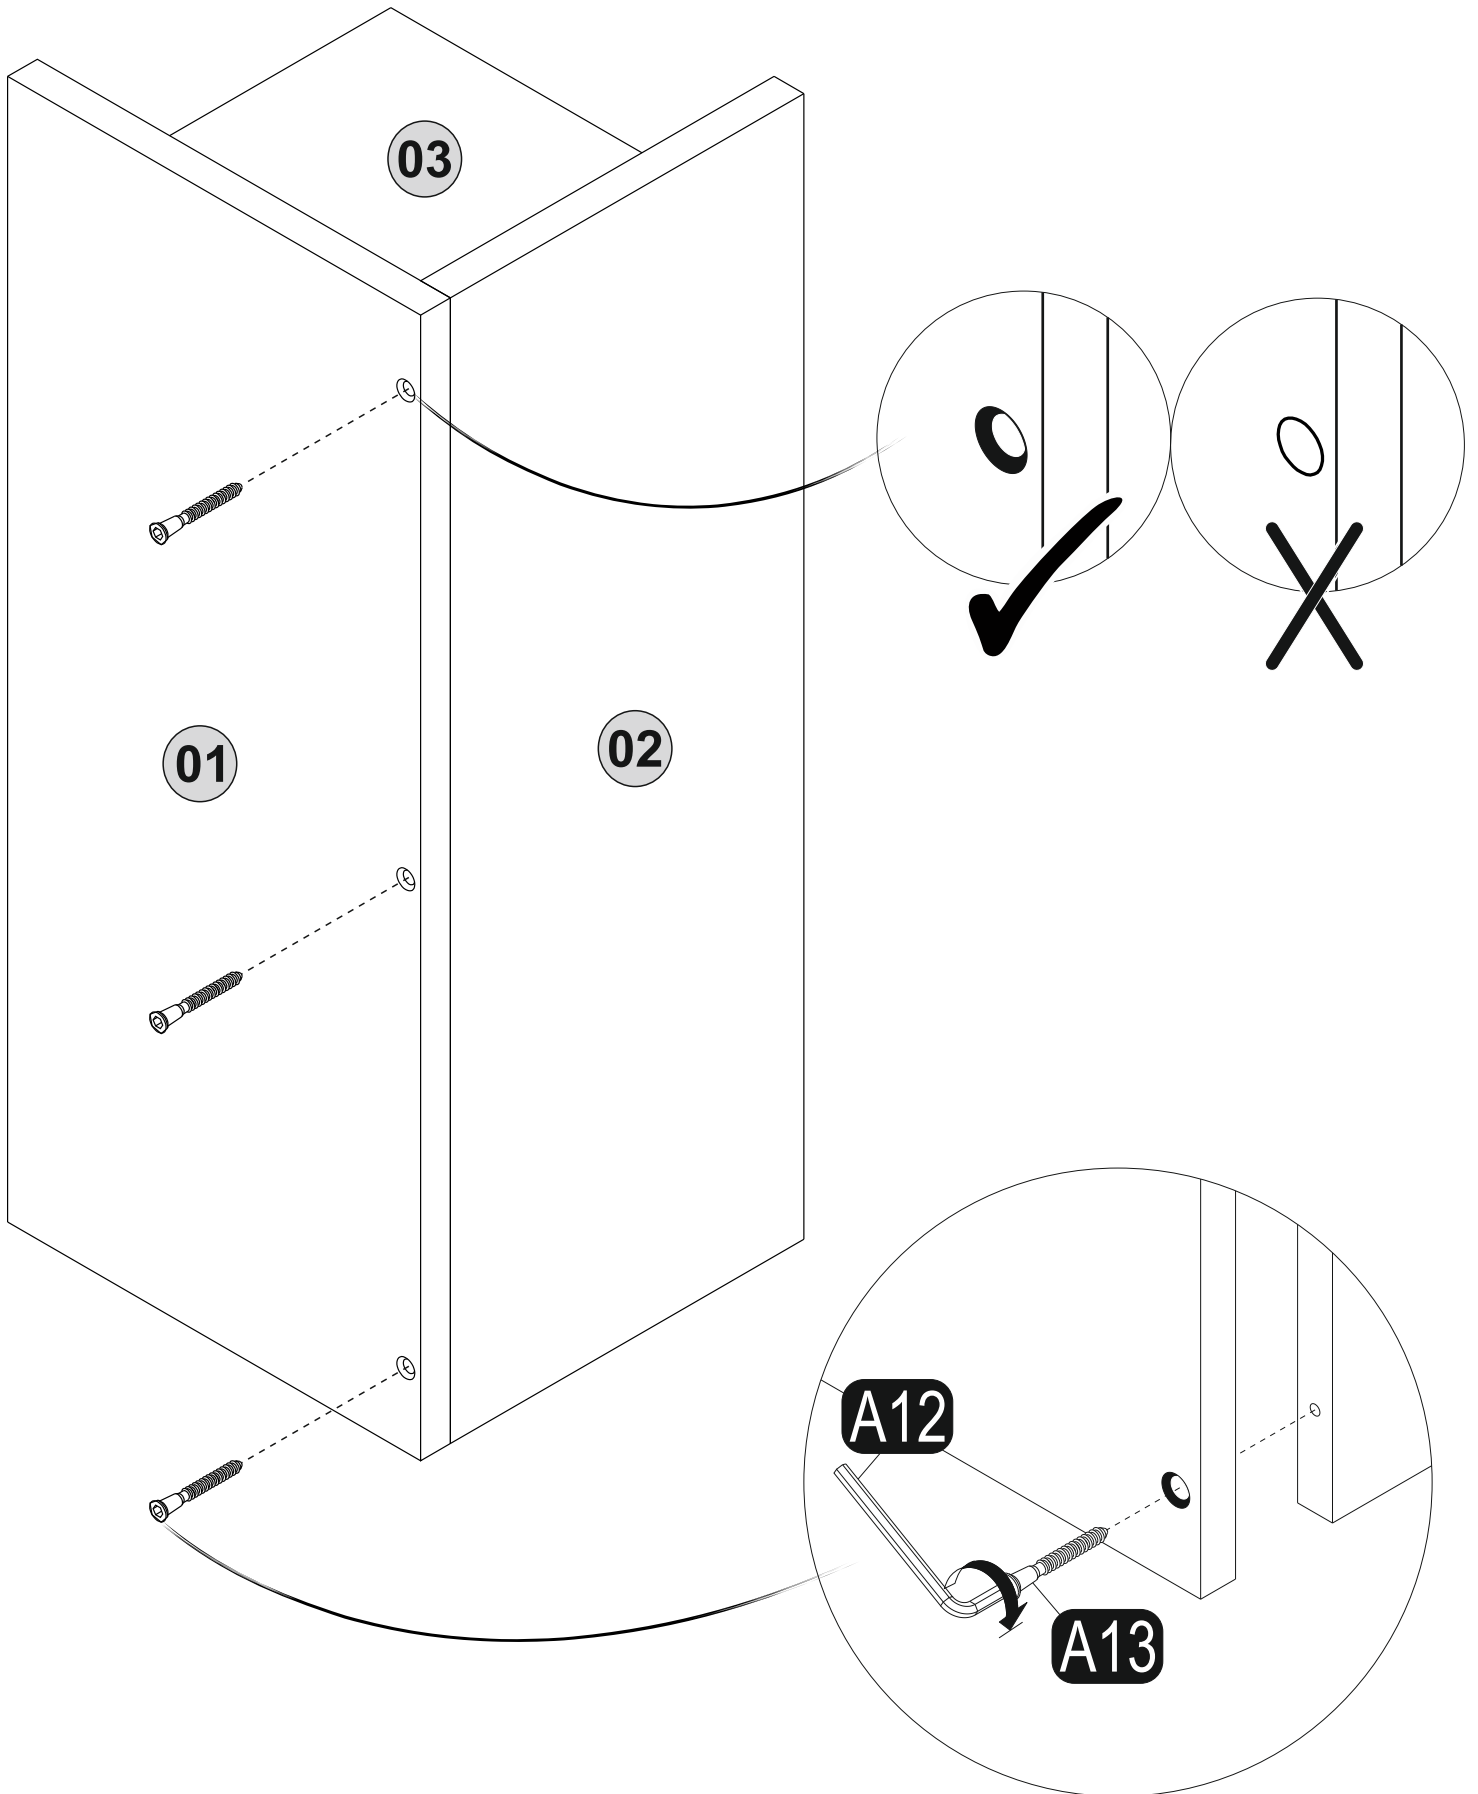




**7** step

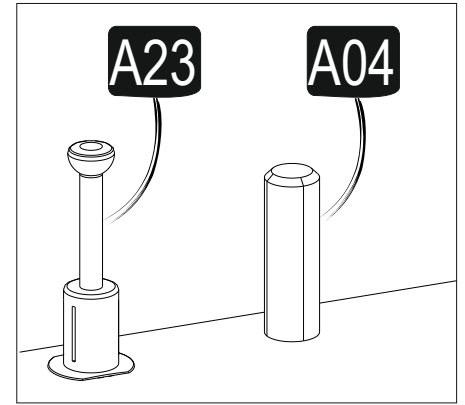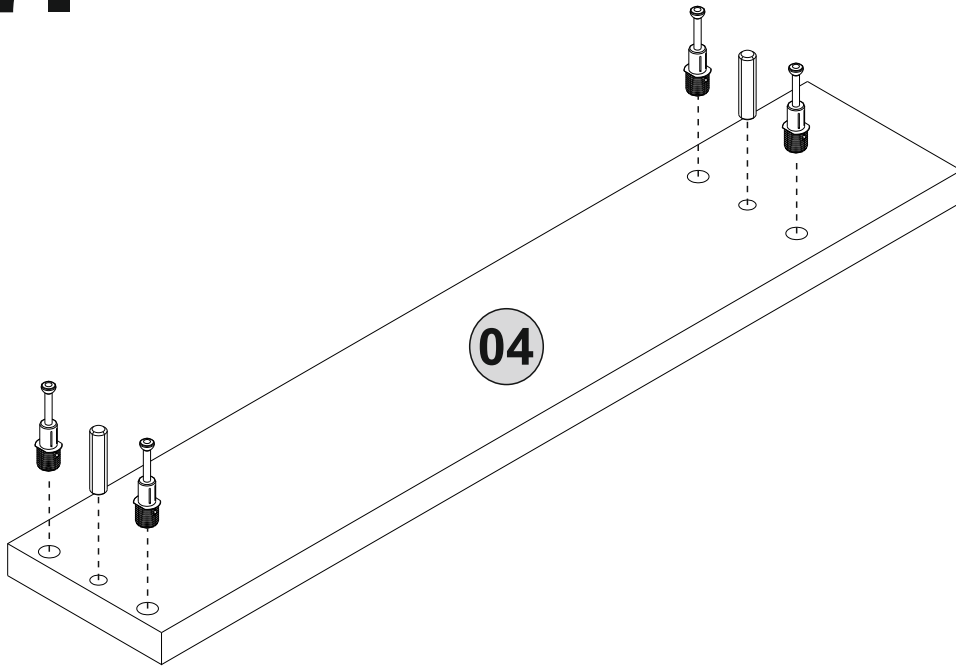



**8** step

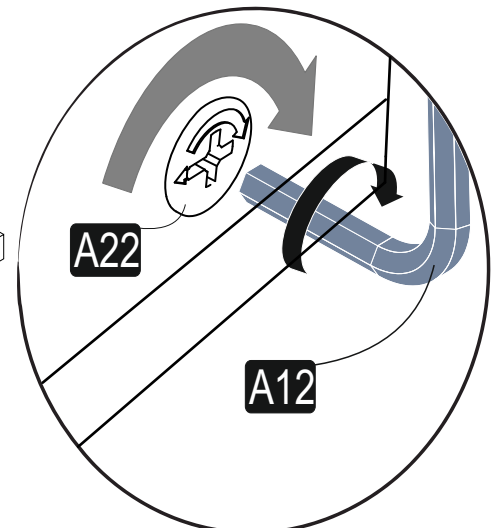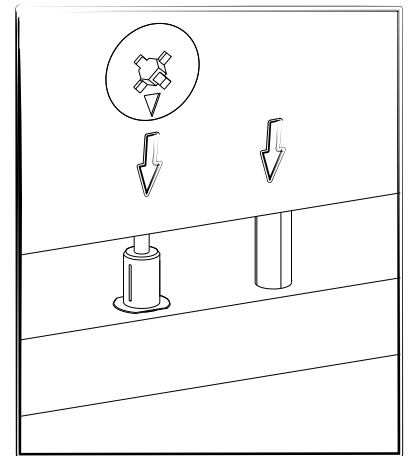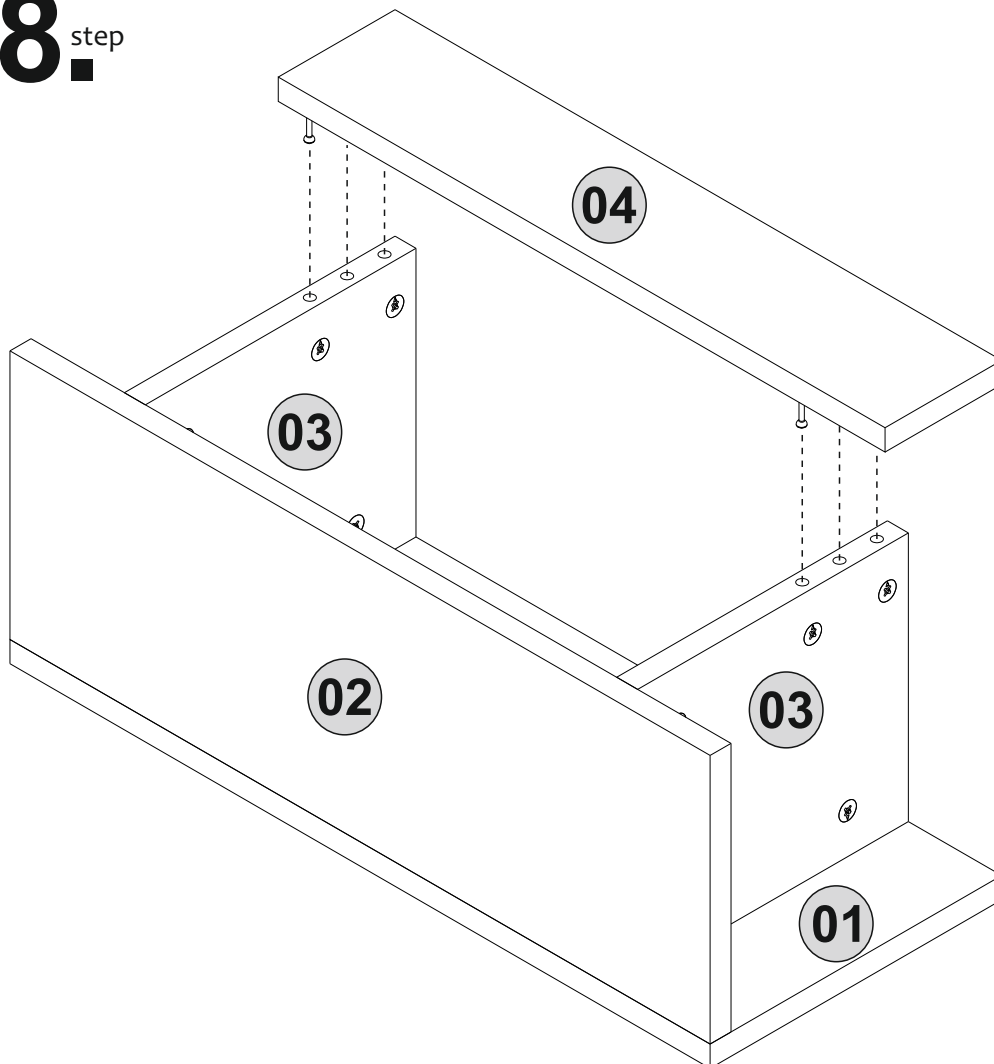


**9.**<sub>step</sub>

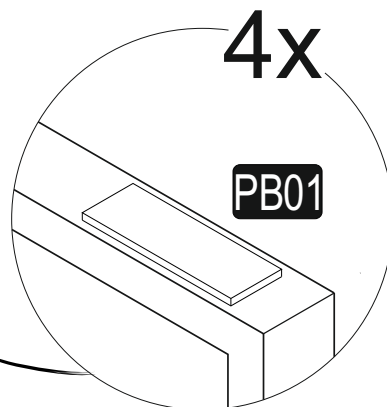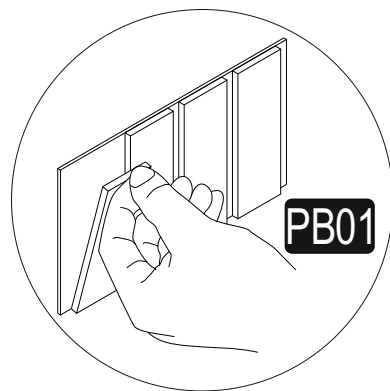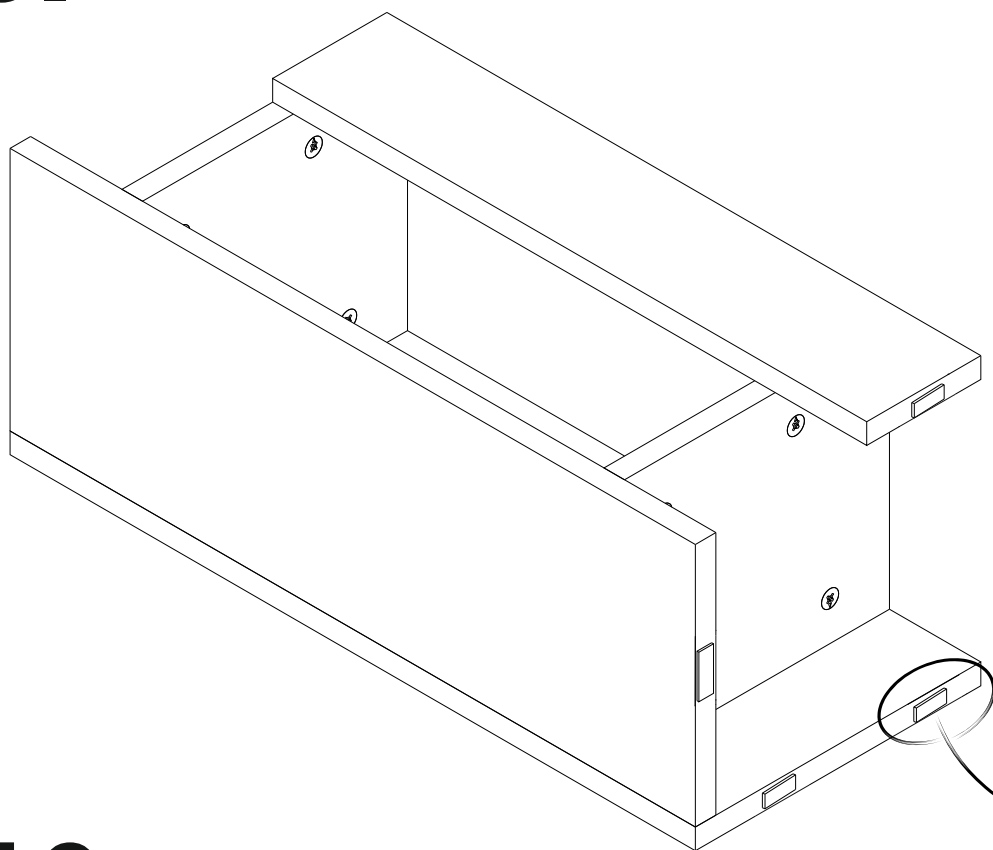


**10.**<sub>step</sub>

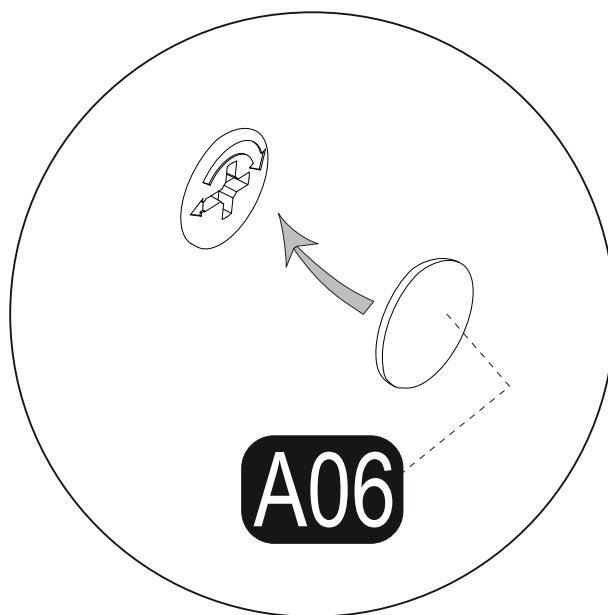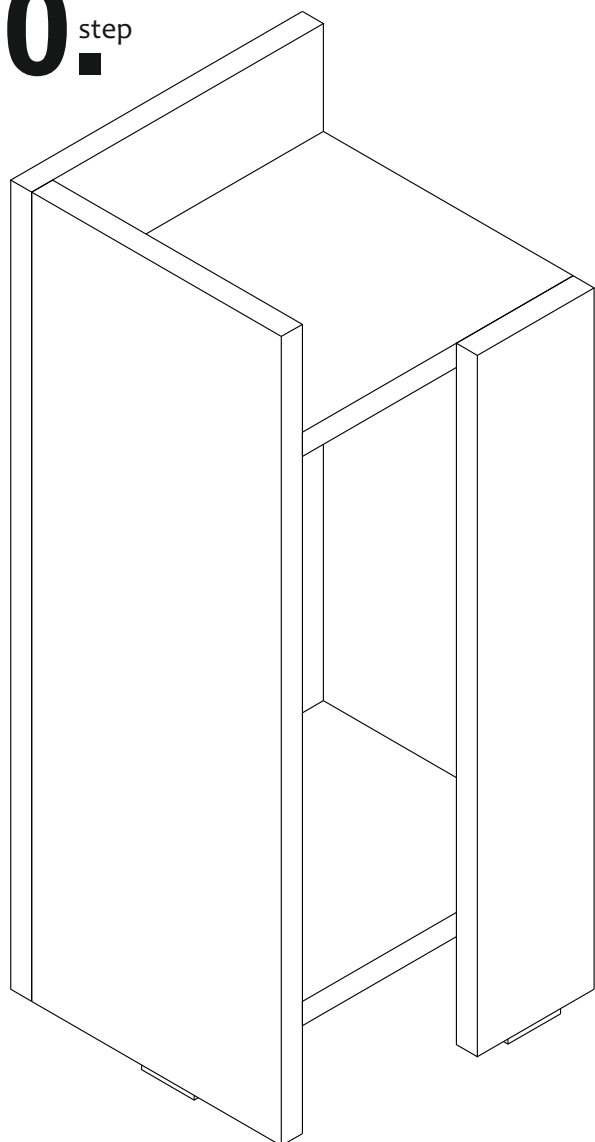

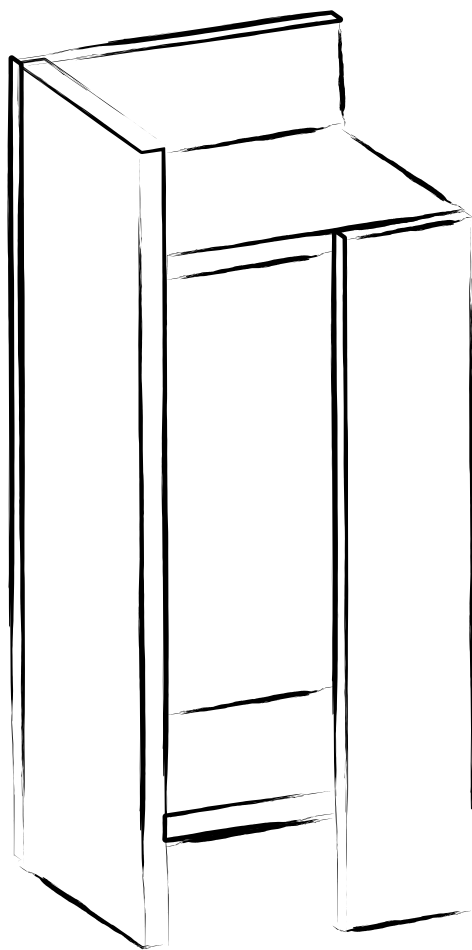

# RIGHT


---

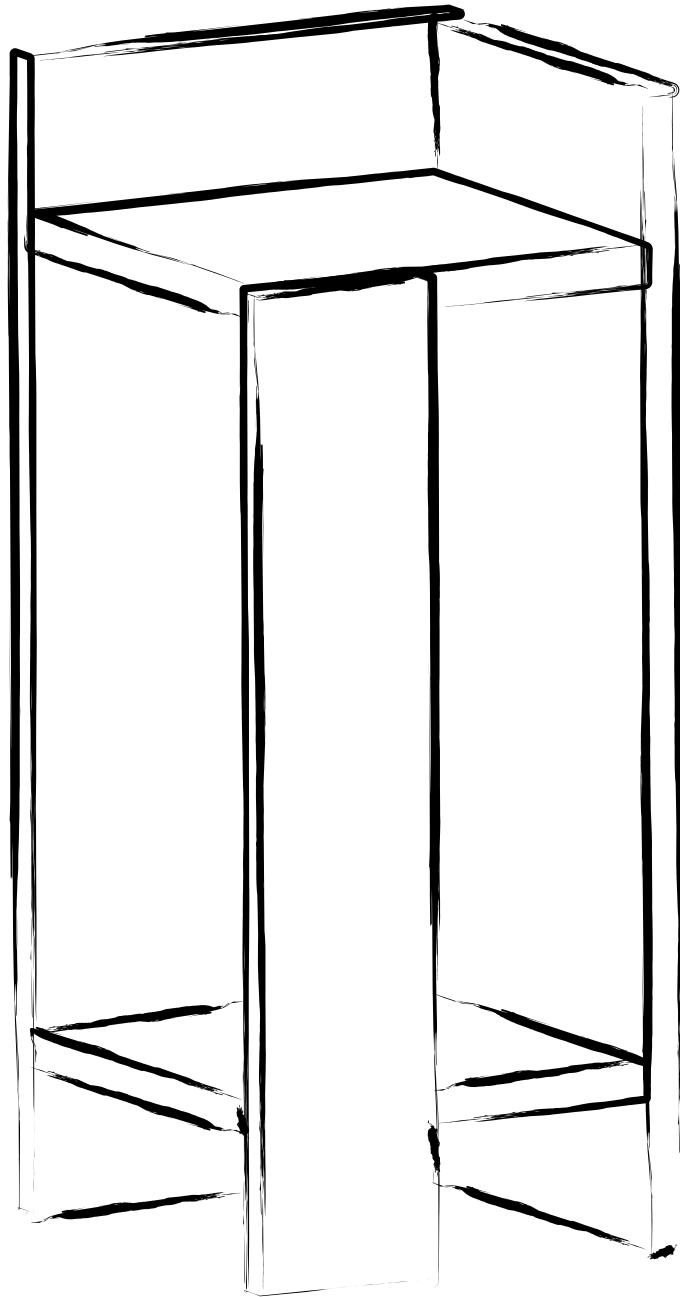


# ATTENTION !!

Minifix is the main connection material used in our products.  
Before starting assembly, please check the drawings below.


A04

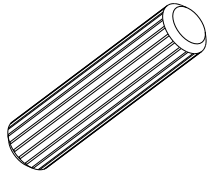


A23

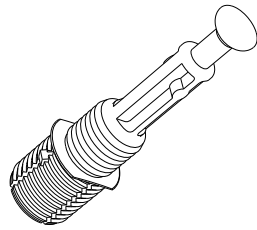


A22

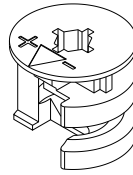


A12

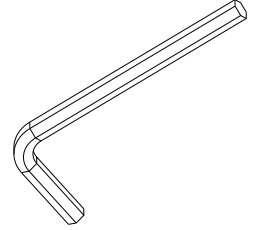


1

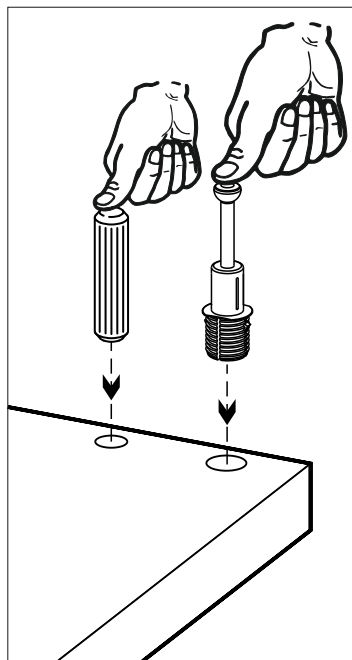


2

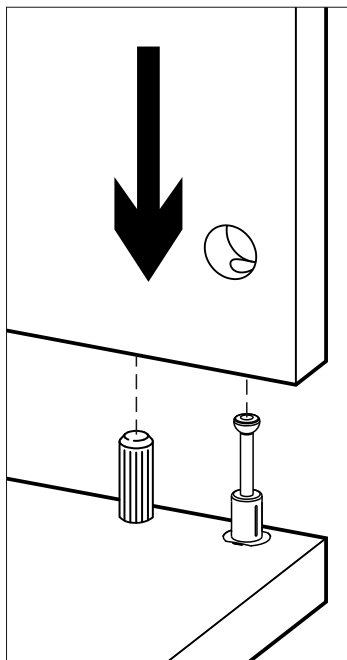

3

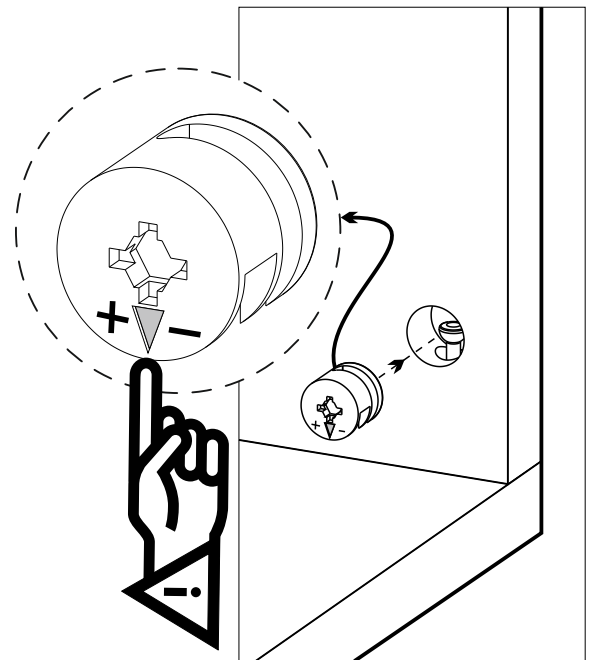






4

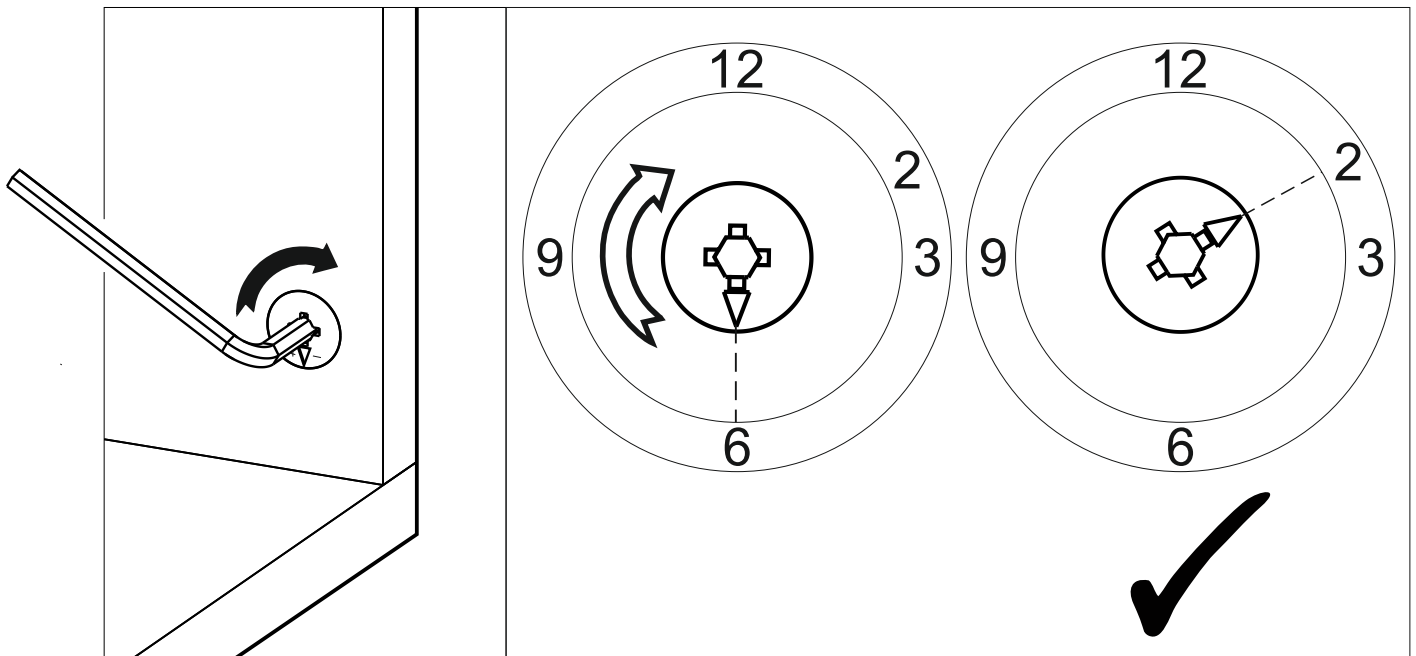


Follow the installation steps in the order as shown.  
Position the parts as shown in the installation guide steps.





## ACCESSORY LIST



|                                                                                                               |                                                                                                                          |                                                                                                                             |                                                                                                                       |                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>A04</b><br><br><b>10x</b> | <b>A06</b><br><br>18mm<br><b>C1-15x</b> | <b>A12</b><br><br>Minifix k18<br><b>1x</b> | <b>A13</b><br><br>50mm<br><b>3x</b> | <b>A22</b><br><br><b>12x</b> |
| <b>A23</b><br><br><b>12x</b> | <b>PB01</b><br><br>Kece<br><b>4x</b>    |                                                                                                                             |                                                                                                                       |                                                                                                                 |

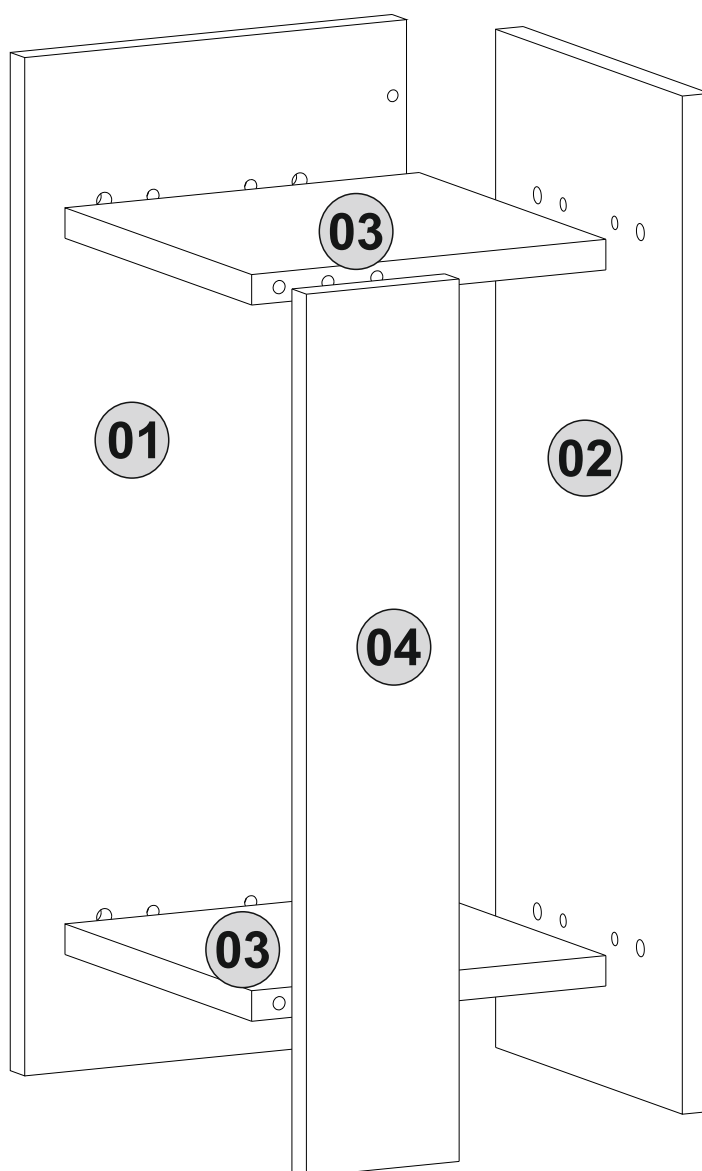




# 1<sub>step</sub>

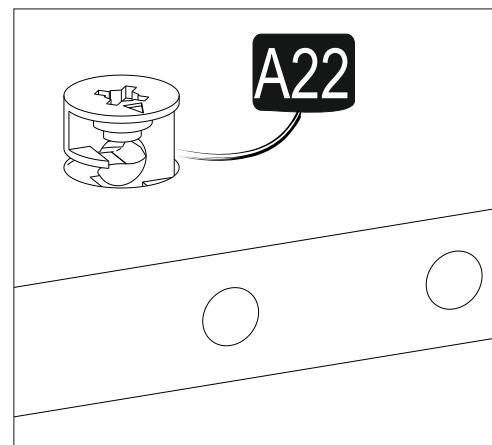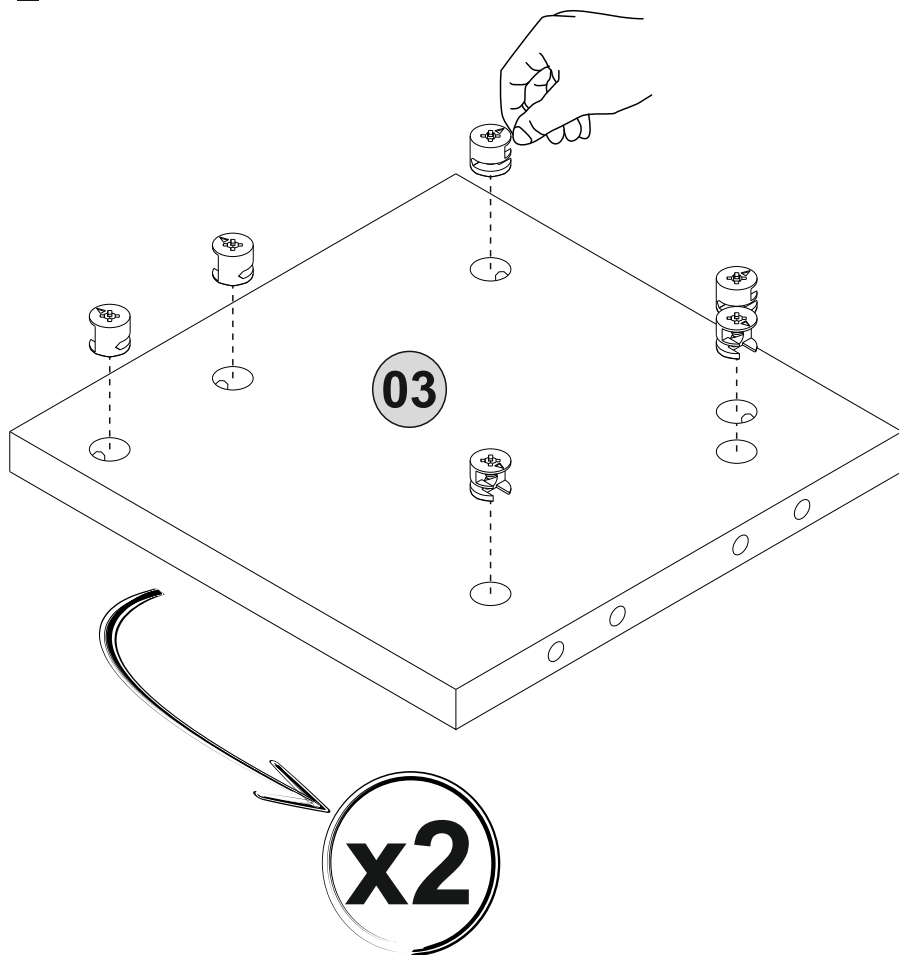



# 2<sub>step</sub>

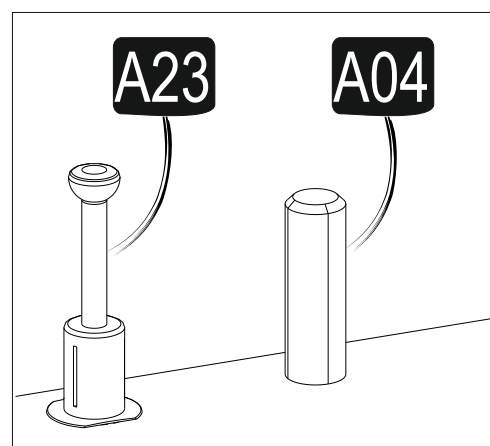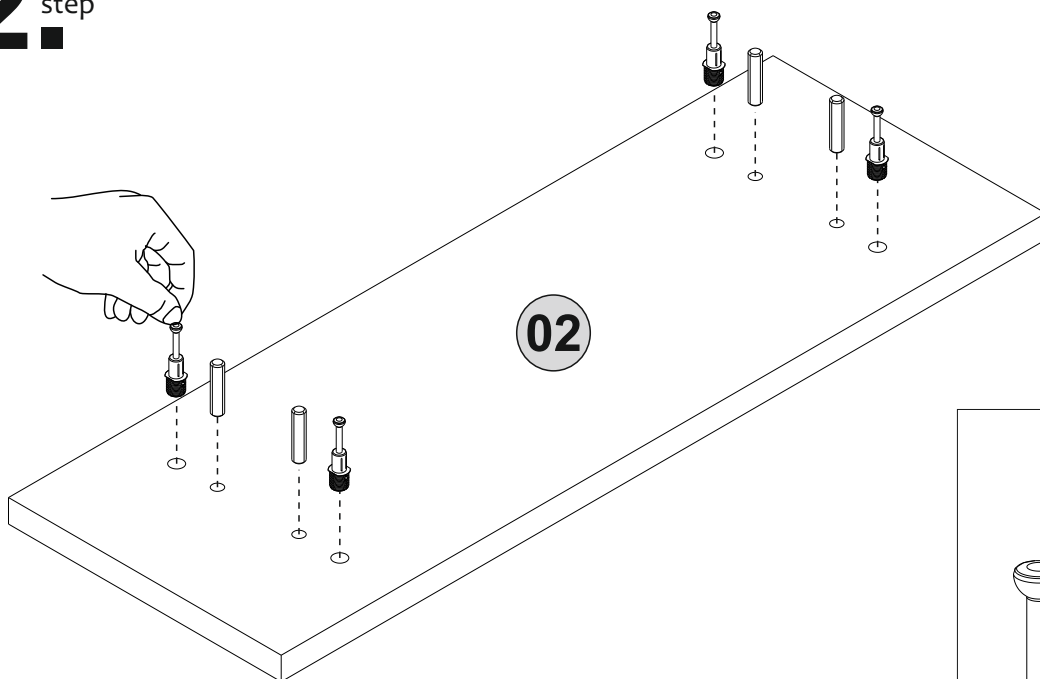




# 3<sub>step</sub>

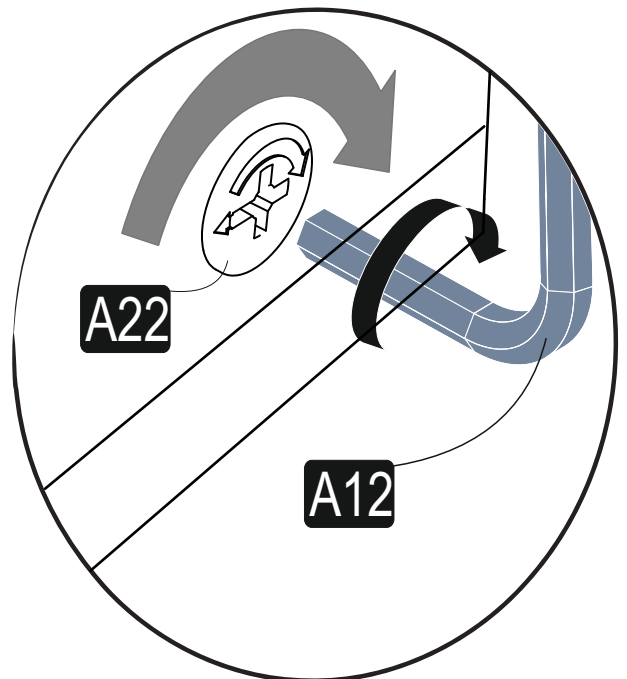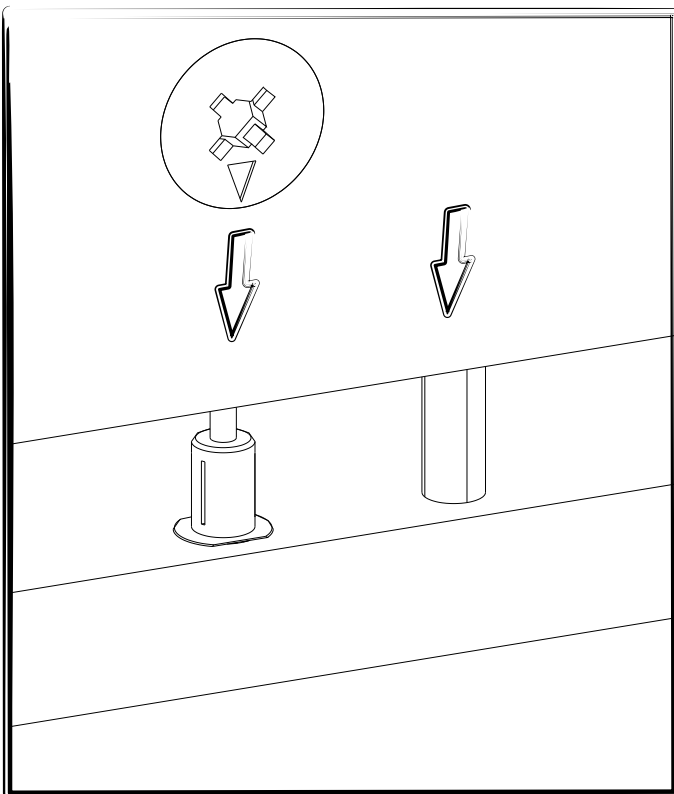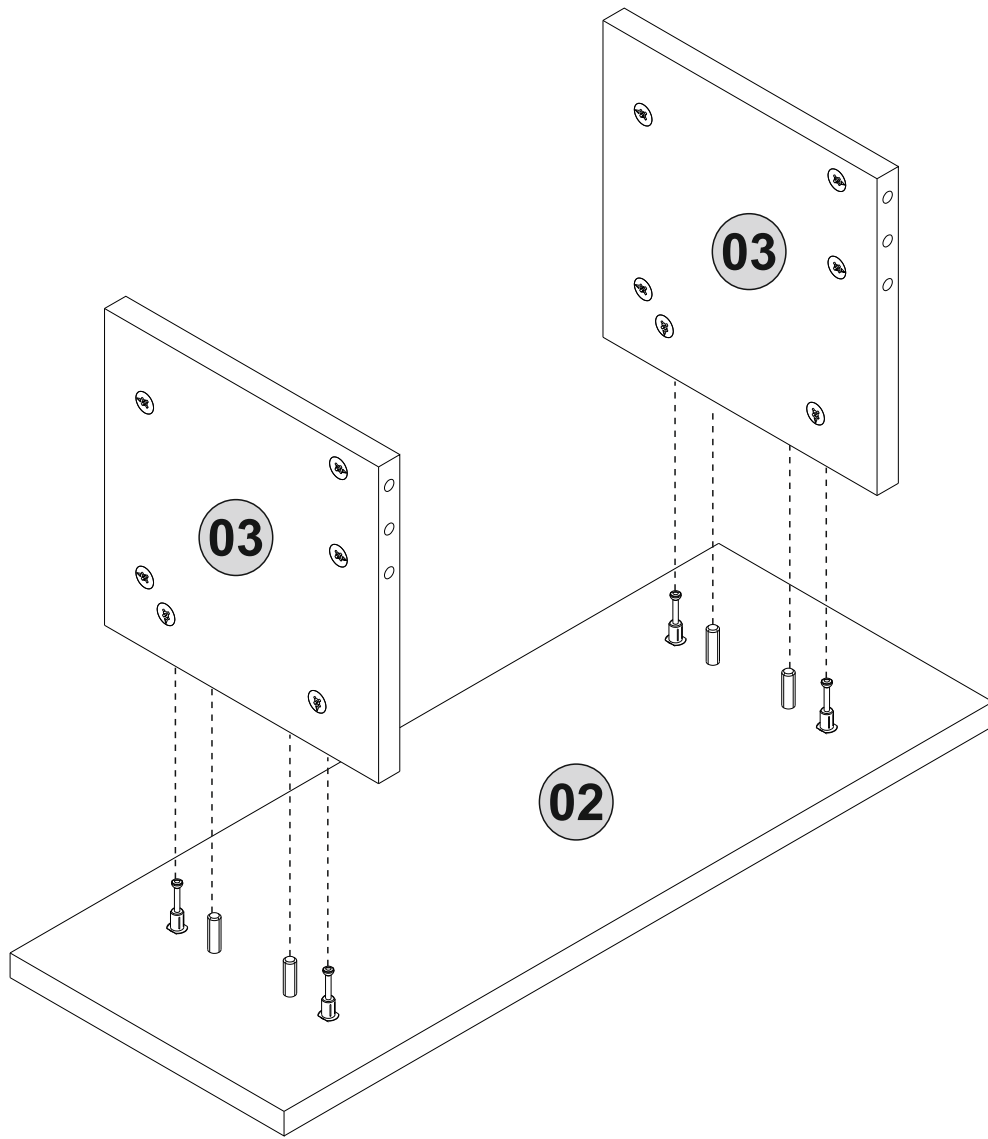


# 4.<sup>step</sup>

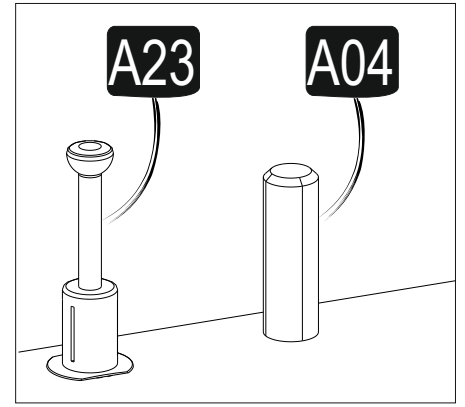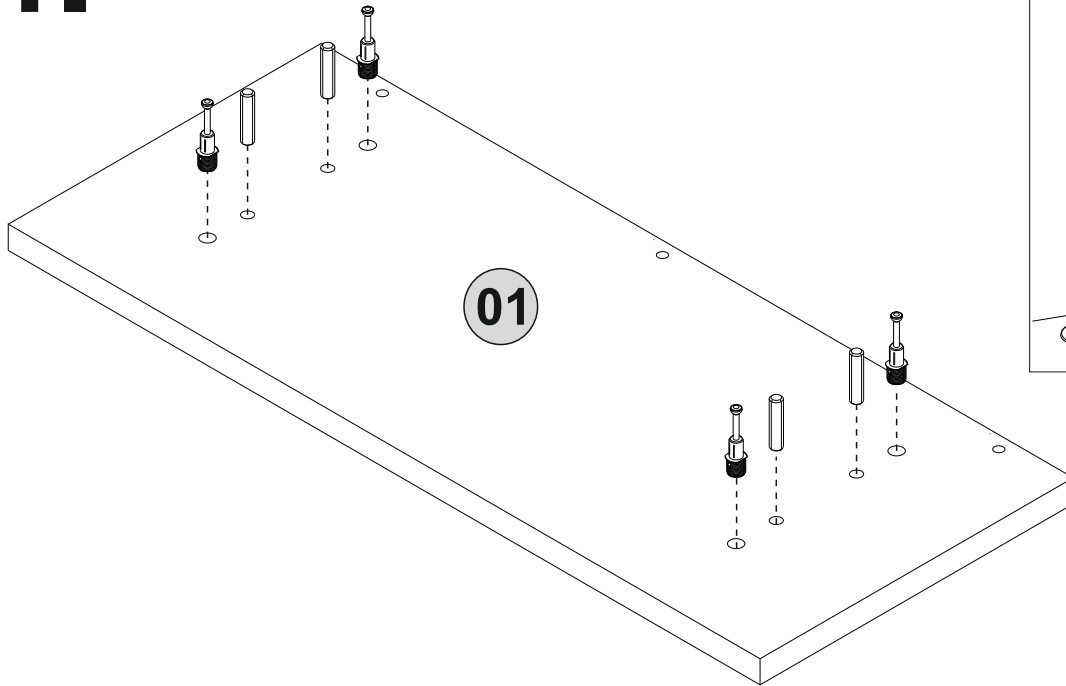



# 5.<sup>step</sup>

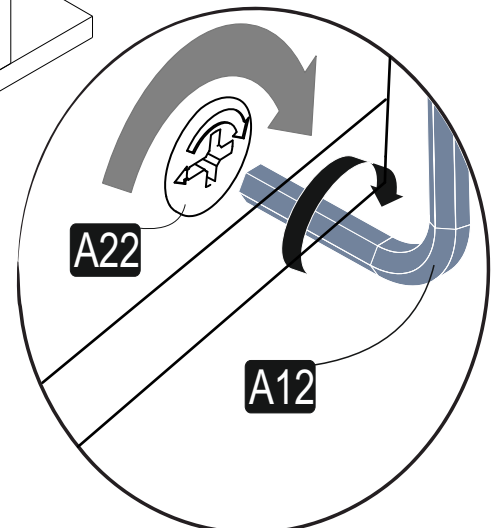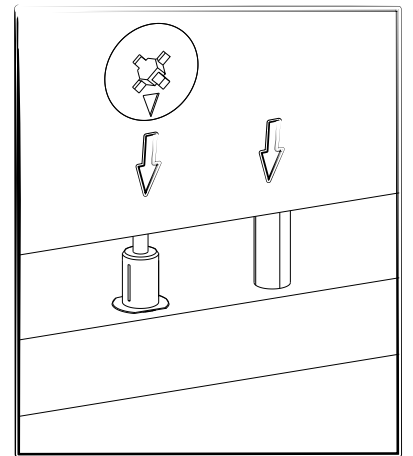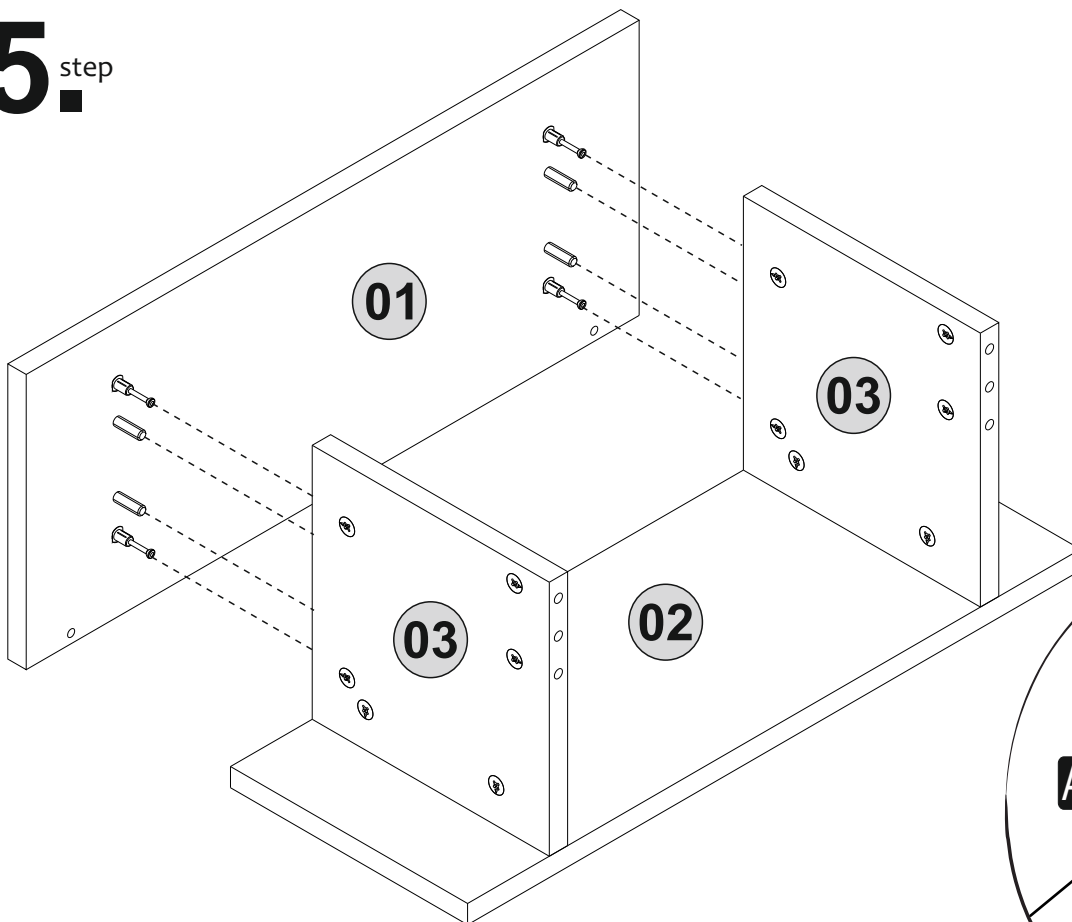




# 6<sup>step</sup>

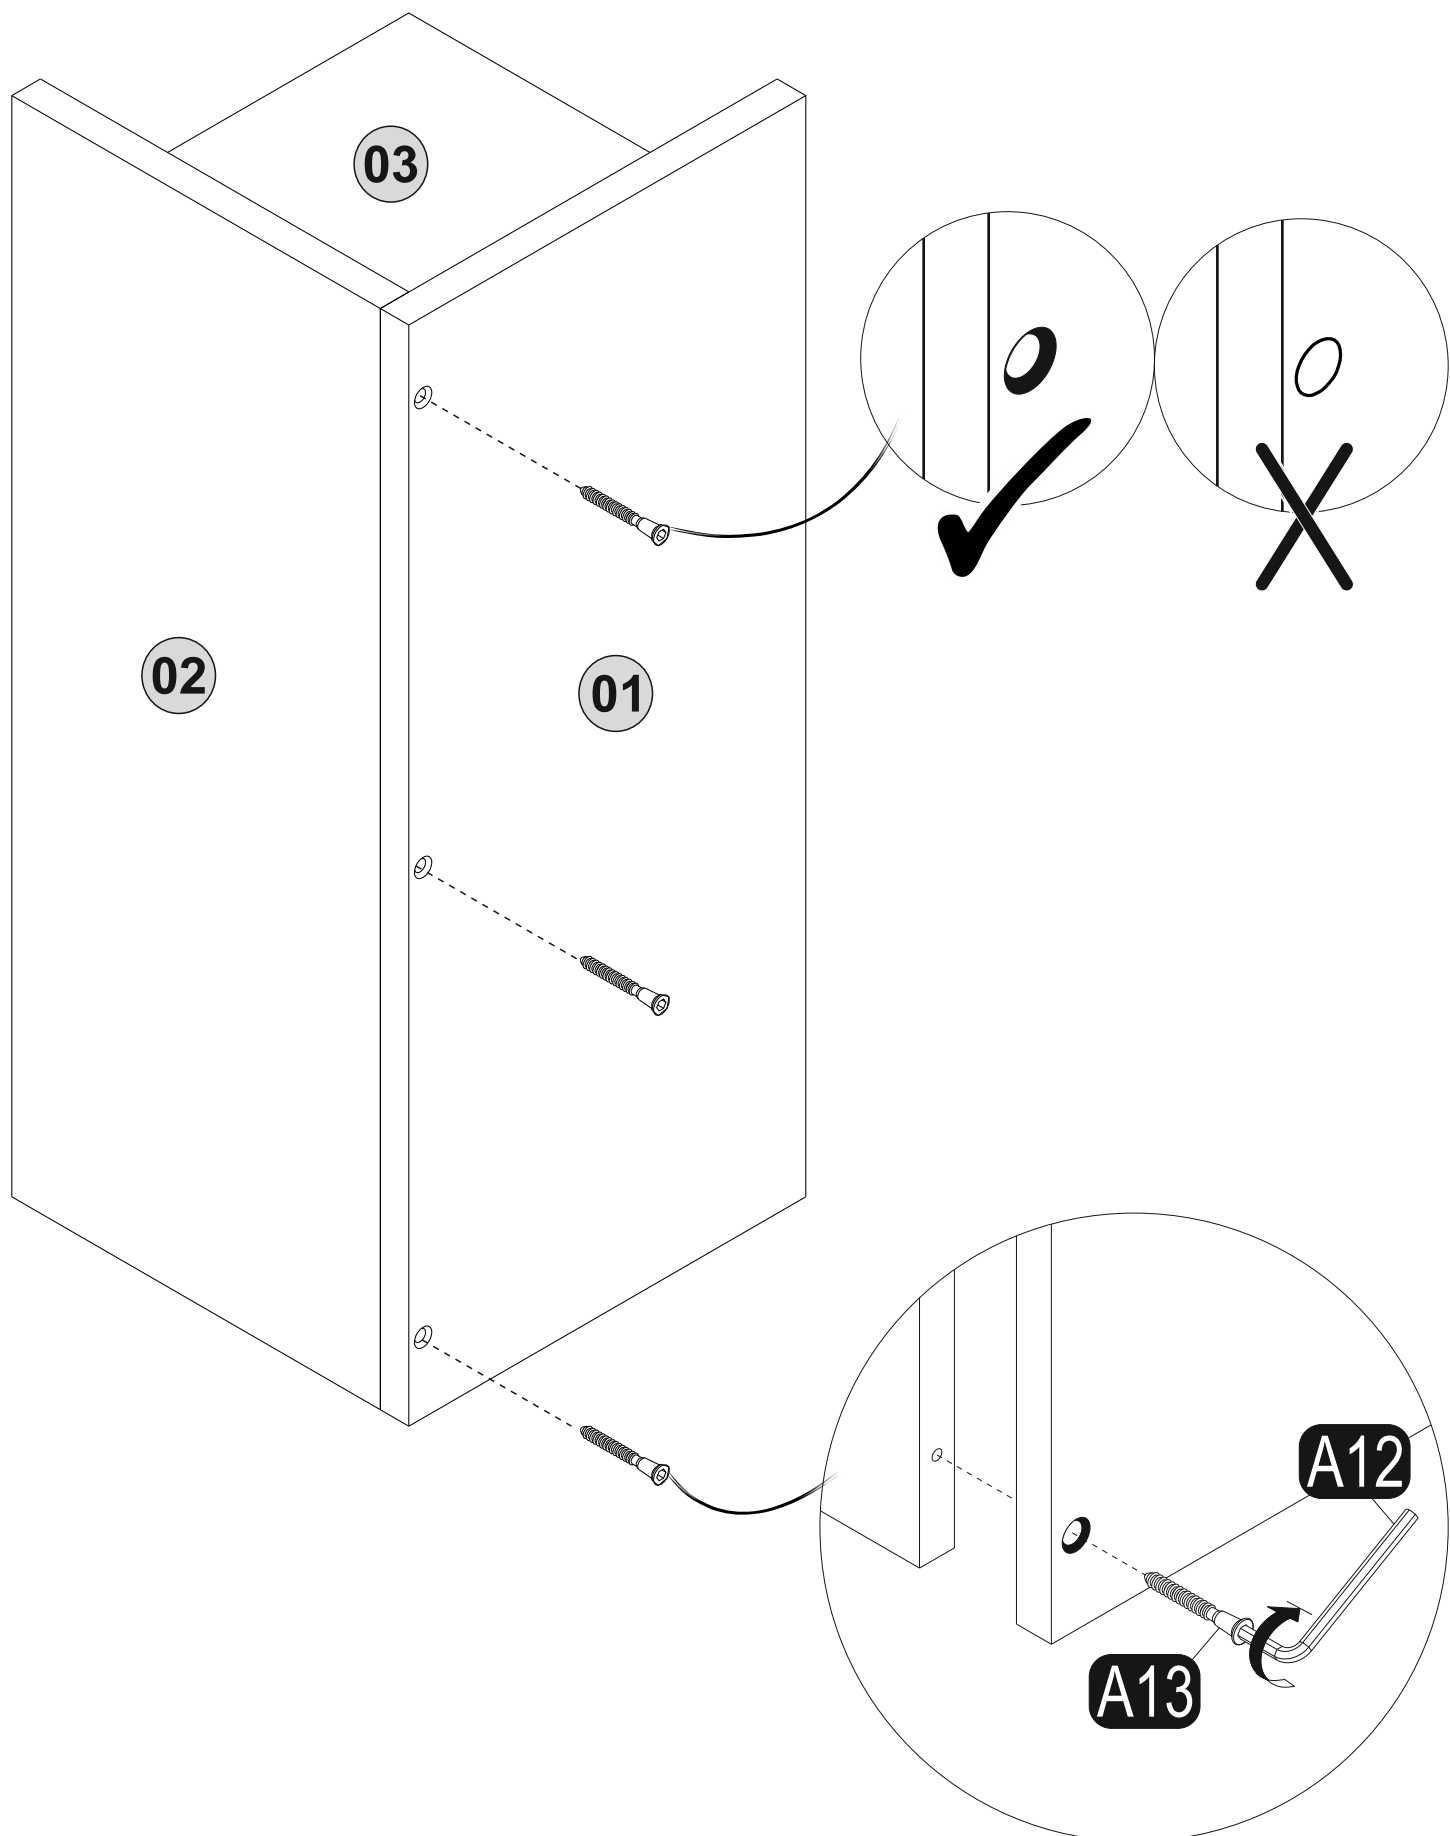


7<sup>step</sup>

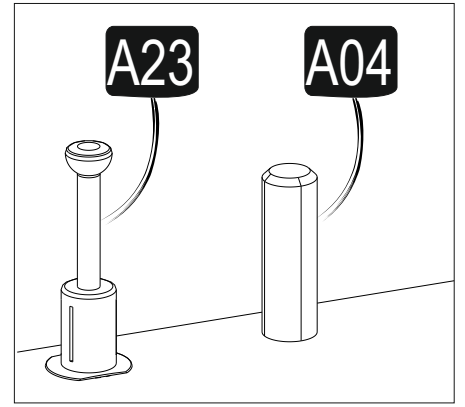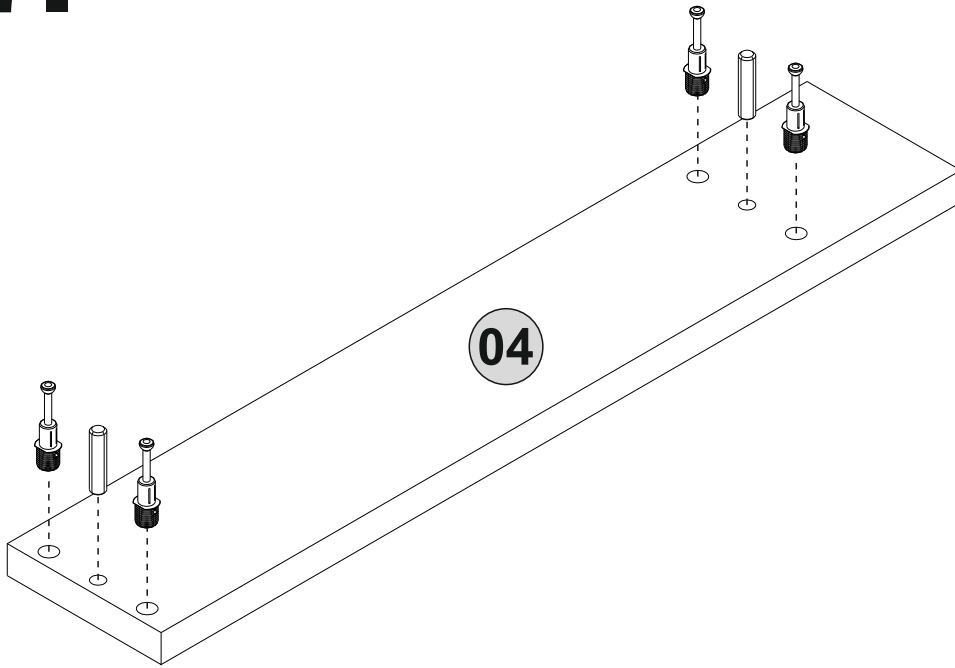

8<sup>step</sup>

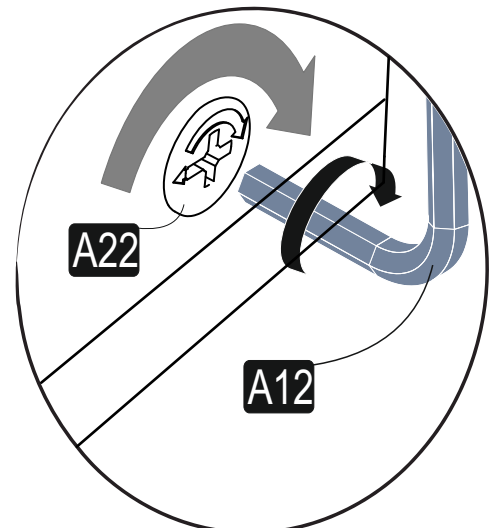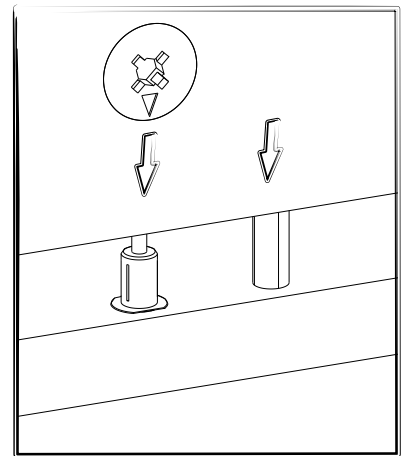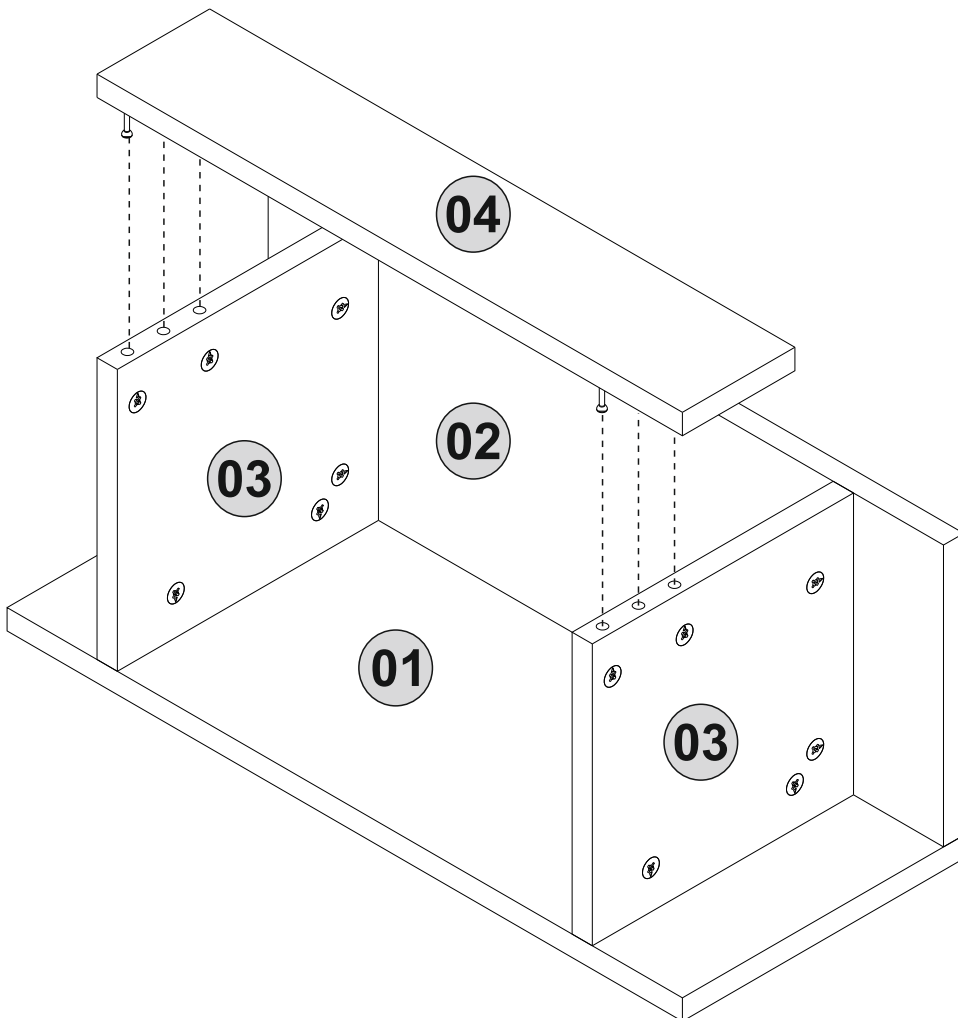

**9.**step

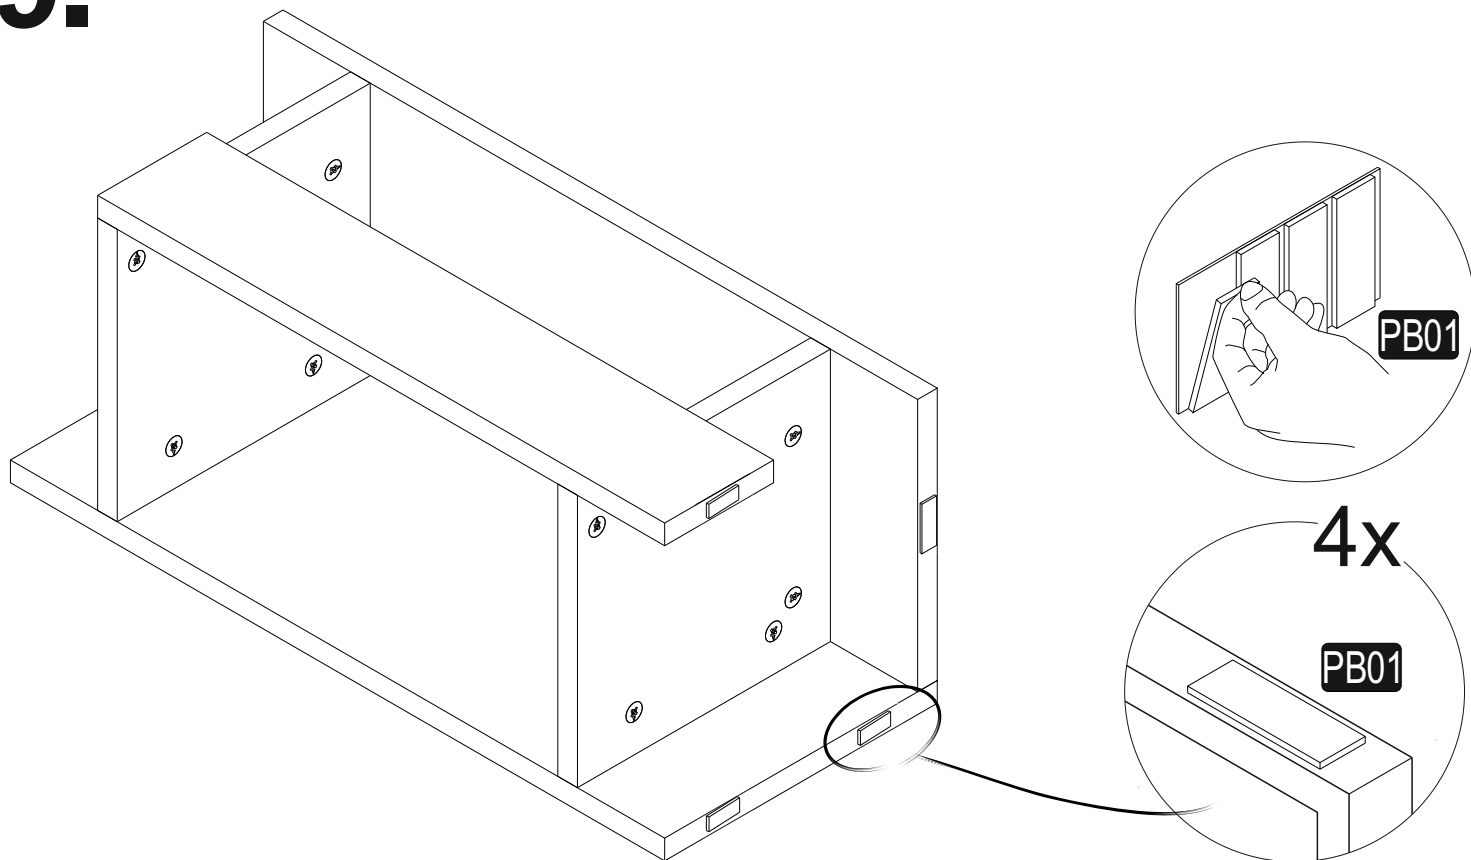

**10.**step

