


ASSEMBLY INSTRUCTION
MODEL : 8281 / TV CABINET


pake world 123-000169

Before you begin, please follow assembly instruction carefully.
 Then follow them step by step.


STEP 1

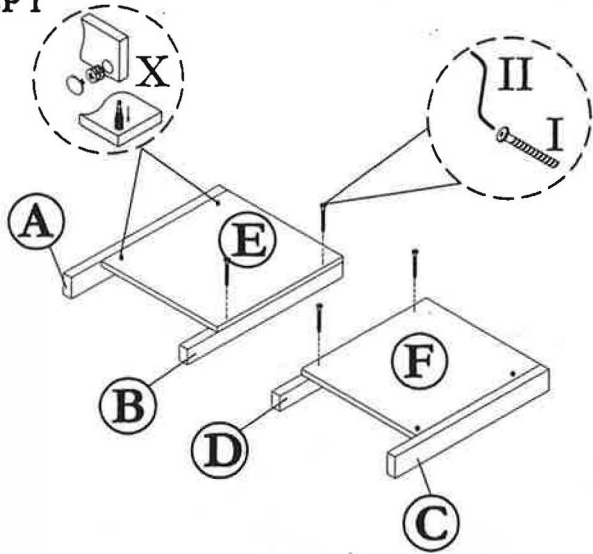


STEP 2

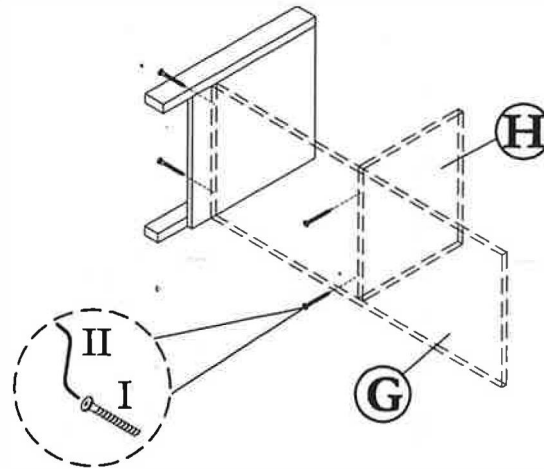


STEP 3

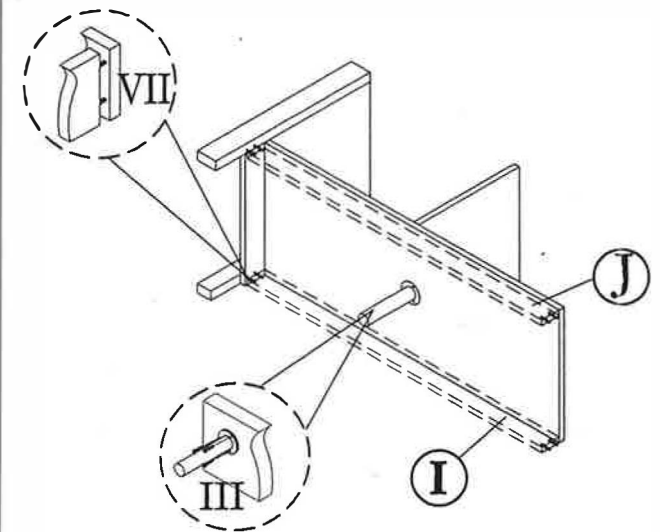


STEP 4

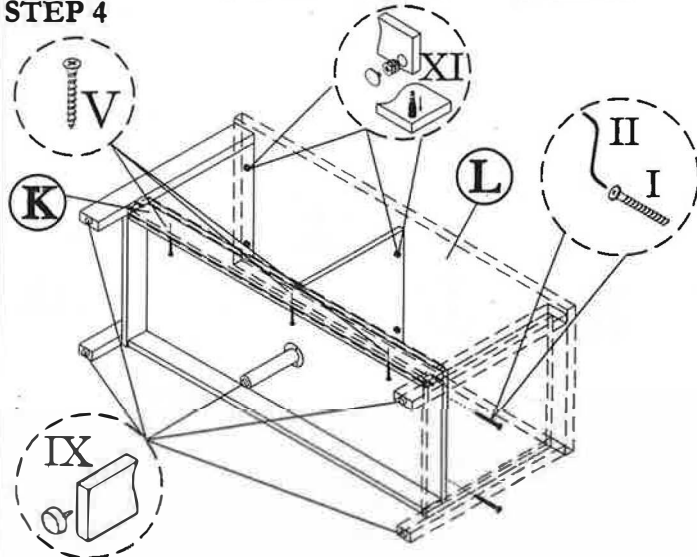

STEP 5

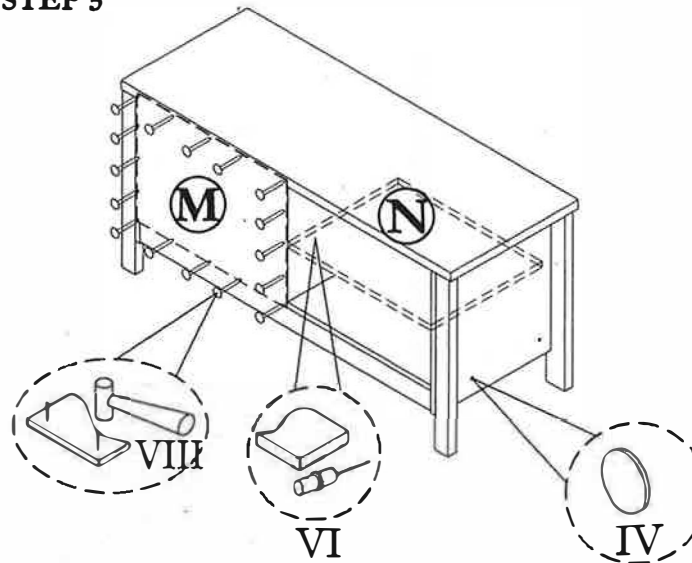

STEP 6

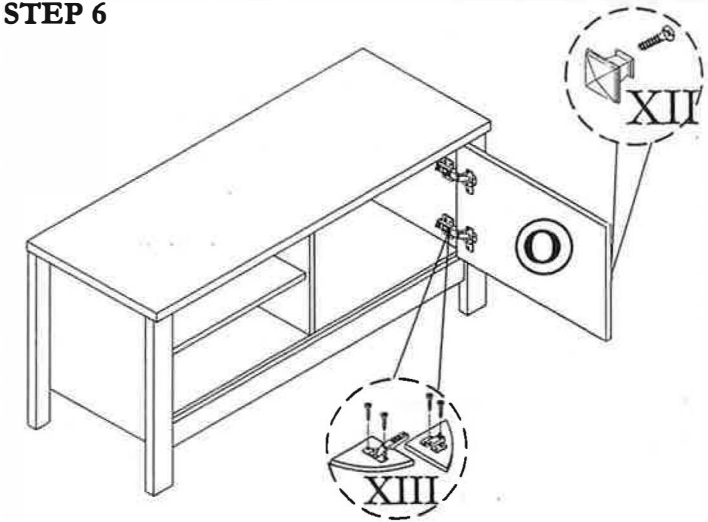

HARDWARE LIST

NO	DESCRIPTION		QTY
I	JCBCW SCREW M6.3 x 50		10pcs
II	M4 ALLEN KEY		1pc
III	150mm PLASTIC LEG & SCREW M3.5 x 16		1sets
IV	STICKER		4pcs


V	M4 x 25 CHIPBOARD SCREW		3pcs
VI	SHELF SUPPORT		4pcs
VII	M8 x 30 WOOD DOWEL		12pcs
VIII	NAIL		20pcs
IX	PVC NAIL WITH PIN		5pcs
X	Q-FIT (small)		4sets

XI	Q-FIT		6sets
XII	HANDLE & SCREW M4 x 22		1sets
XIII	HINGE (C) & SCREW M3.5 x 16		2sets

CAUTION:

To clean use soft, dry cloth. Do not use detergent or chemicals
Avoid contact with water and direct sunlight.


To be assembled on a soft, dry, clean and smooth surface.

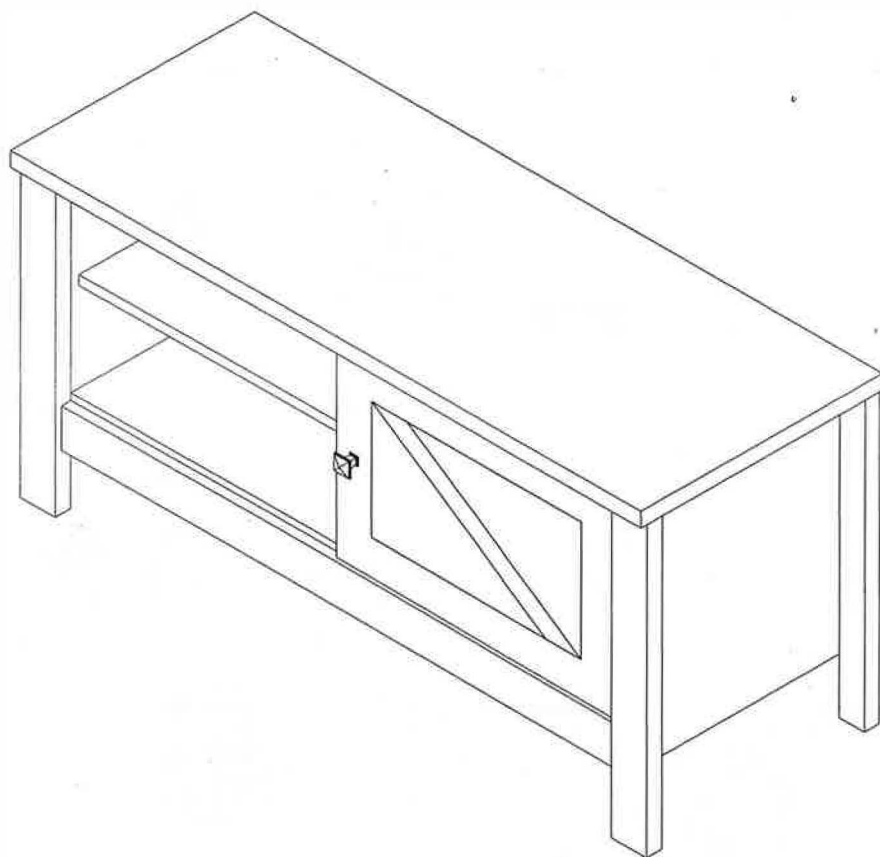

COMPLETE SET

ORDERING REPAIR PARTS

In order to obtain smooth and rapid service when ordering repair parts, please give full attention to the following of PART NUMBER.

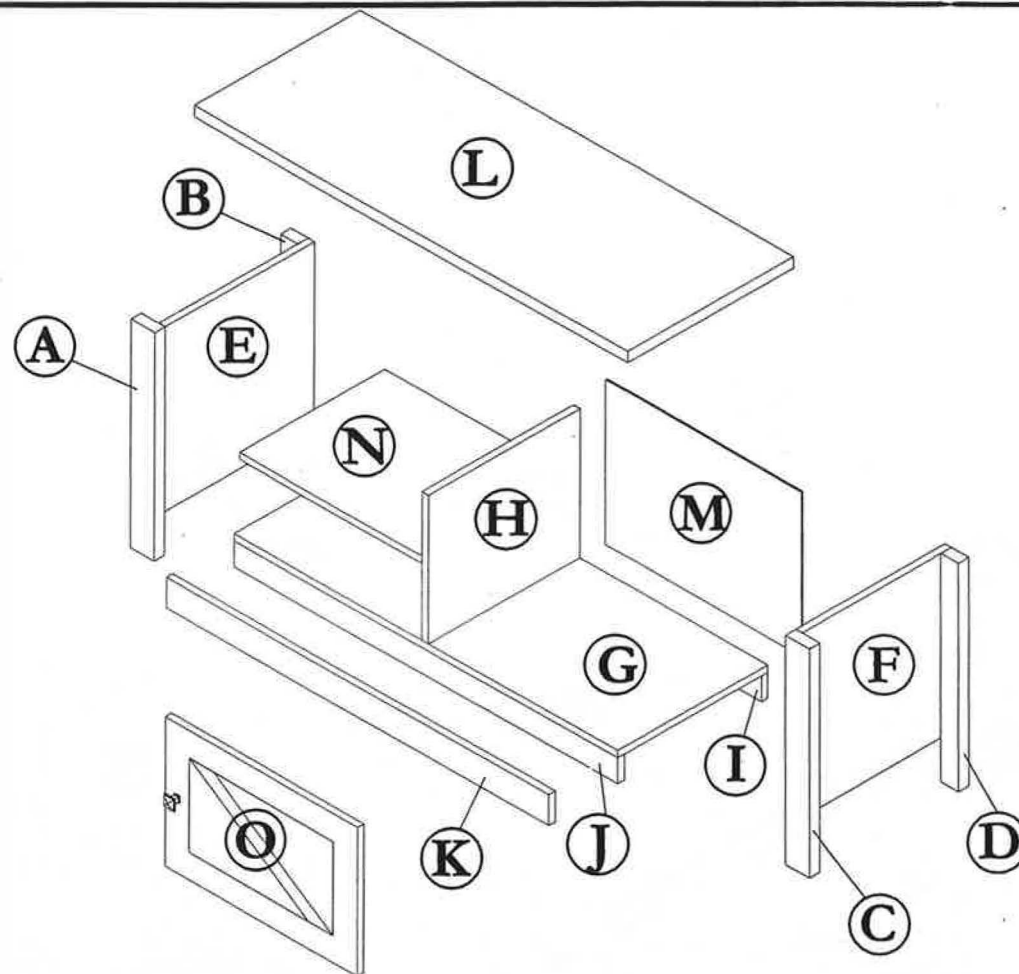

NO	DESCRIPTION	QTY
A	LEFT SIDE WRAPPING (Front)	01
B	LEFT SIDE WRAPPING (Back)	01
C	RIGHT SIDE WRAPPING (Front)	01
D	RIGHT SIDE WRAPPING (Back)	01
E	LEFT SIDE	01
F	RIGHT SIDE	01
G	LOWER SHELF	01
H	CENTRE VERTICAL	01

NO	DESCRIPTION	QTY
I	LEG (Back)	01
J	LEG (Front)	01
K	LEG DECORATIVE	01
L	TOP	01
M	BACK	01
N	MOVABLE SHELF	01
O	DOOR	01