



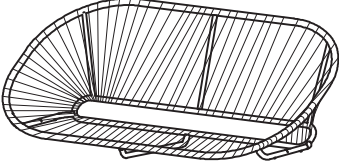

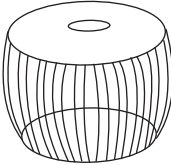


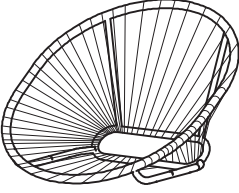



















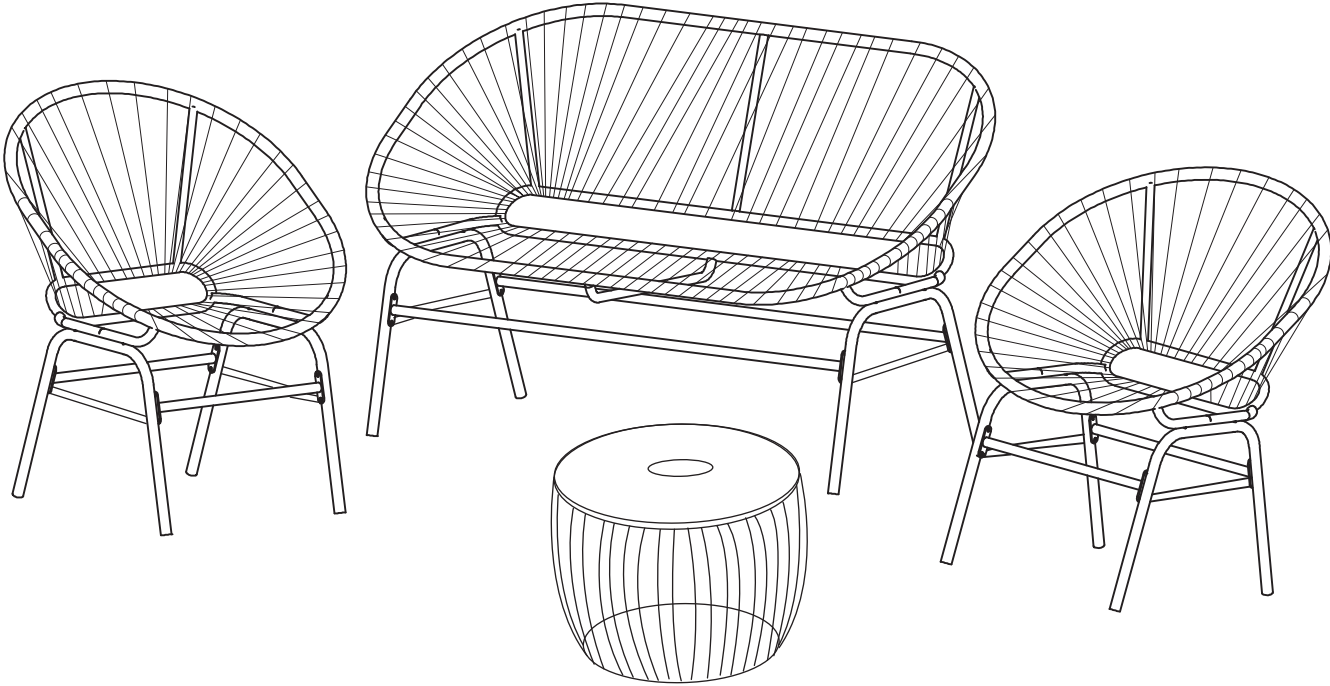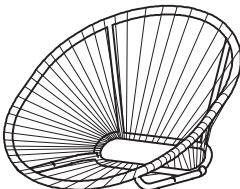


ASSEMBLY INSTRUCTION


Ax2	Bx3		Cx3	Dx4		
						
Ix1	Jx2	Mx1		Hx1		
						
Ex 24  M6*15MM	Fx 12  M6*45mm	Gx 48 	Kx 12 	Lx 36 	Mx 12 	Xx 1 
Yx1 						

 **Important Tip:** please fix the screws at right positions first and keep them loose, then tighten the screws one by one, this would help your assembly.




Ax1	Bx1		Cx1		Dx2	
						
Ex8	Fx4	Gx16	Kx4	Lx12	Mx4	Hx1
 M6*15MM	 M6*45mm					
Yx1						
						


①

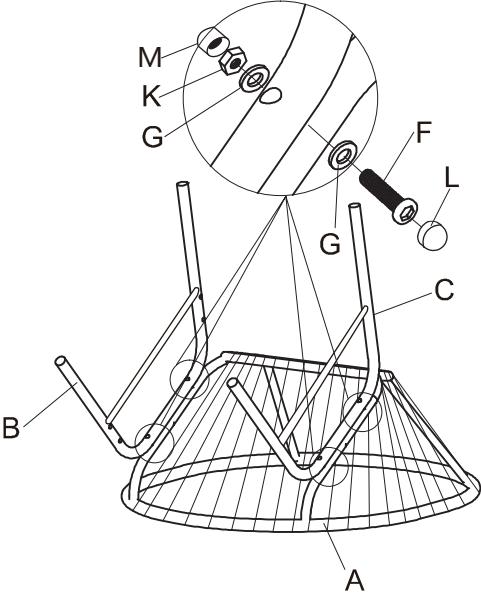




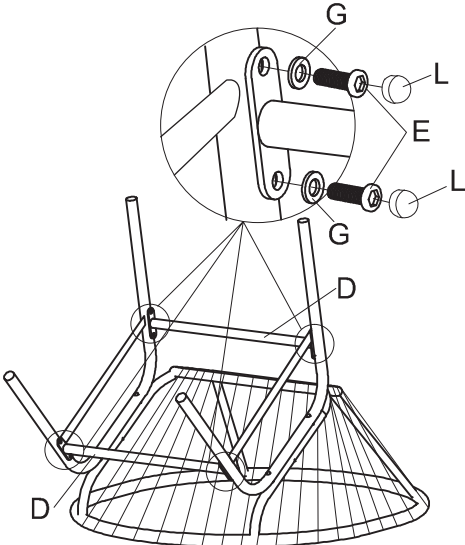



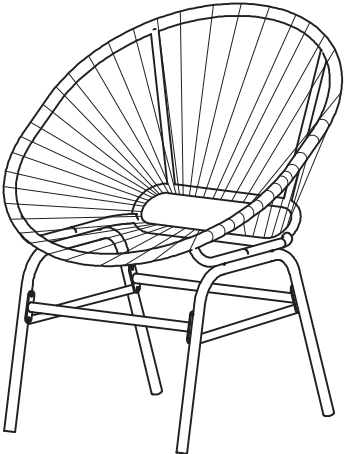

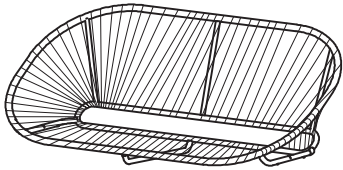


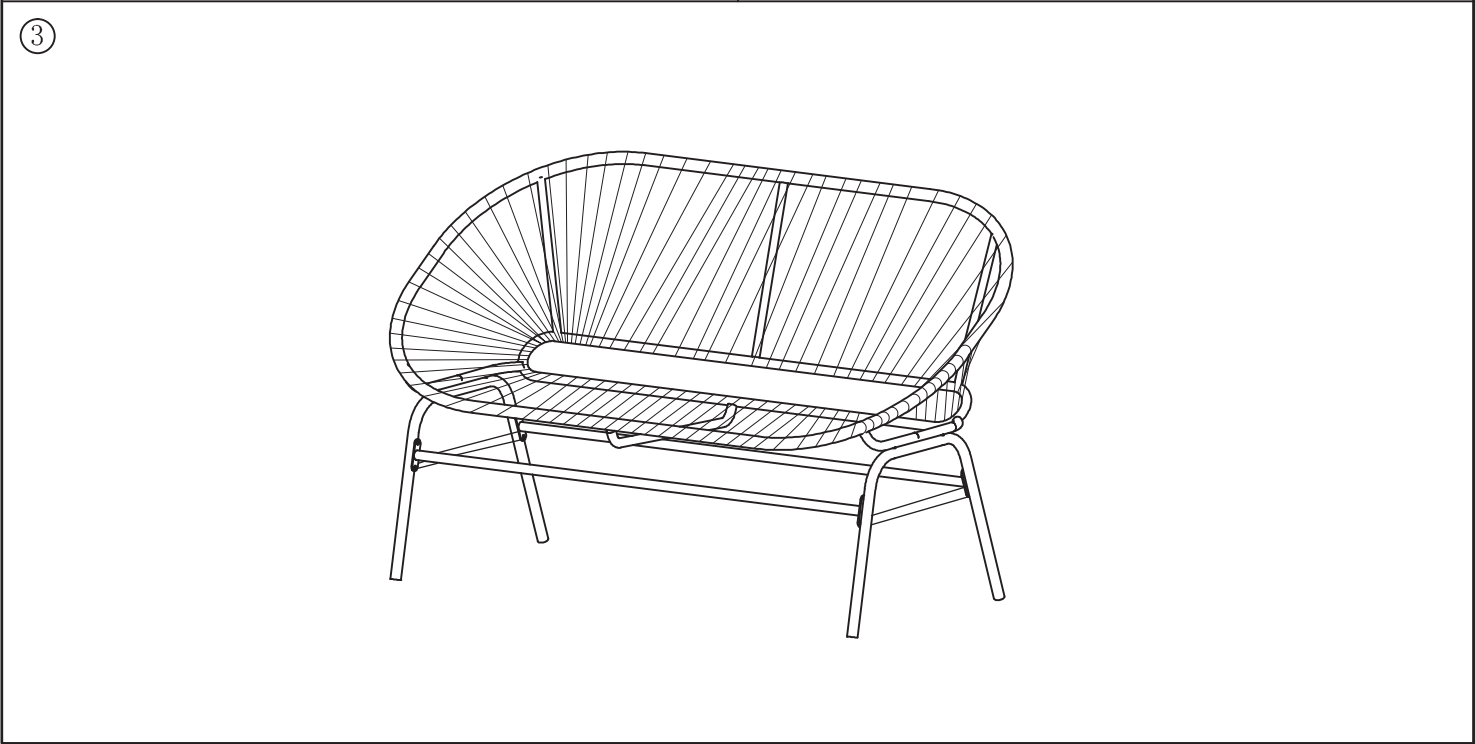
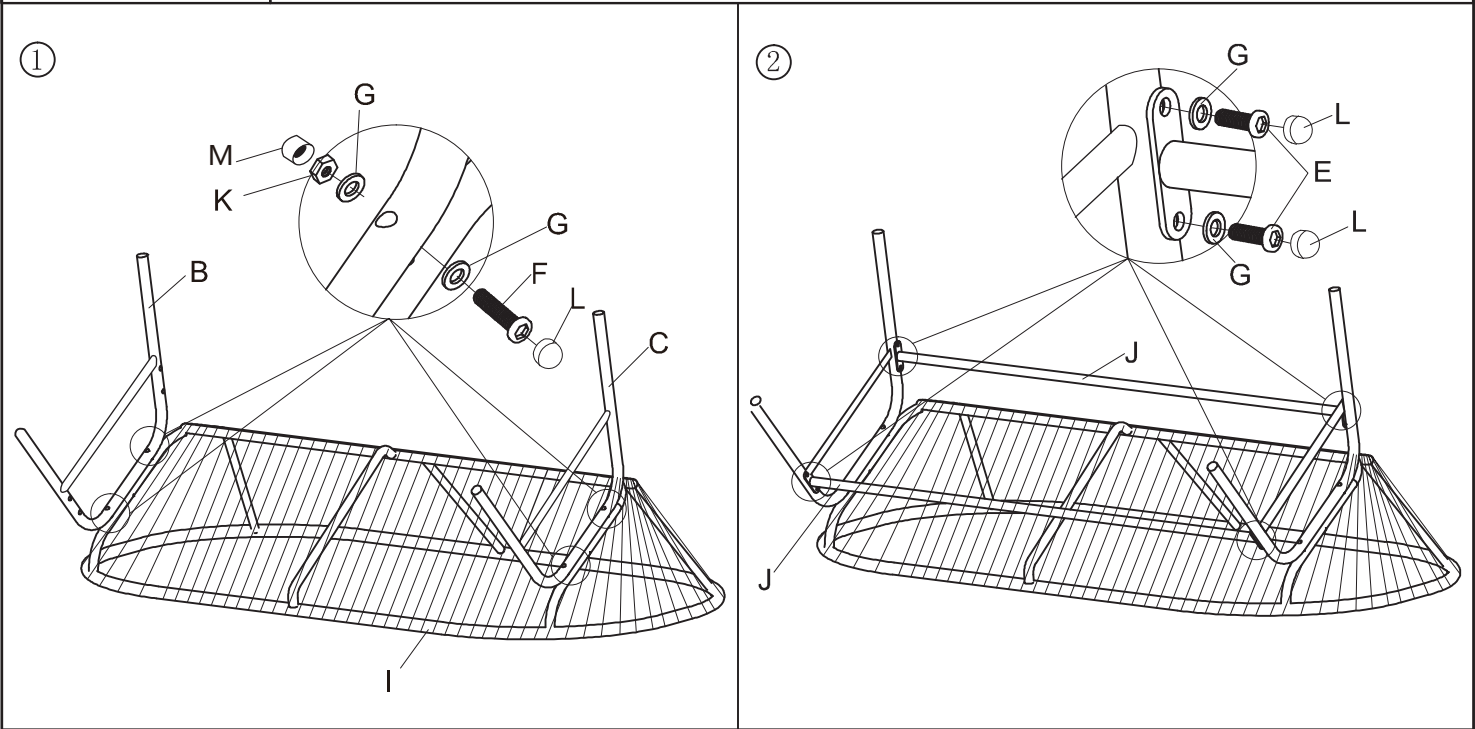
②




③



Ix1	Bx1		Cx1		Jx2	
						
Ex8	Fx4	Gx16	Kx4	Lx12	Mx4	Hx1
 M6*15MM	 M6*45mm					
Yx1						
						



Mx1

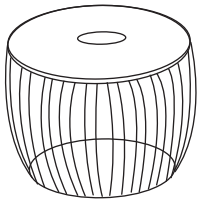

Xx1



STEP1

X

M

