






## Vera Corner

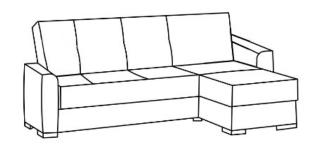


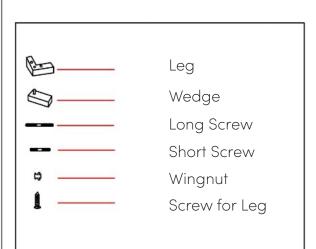

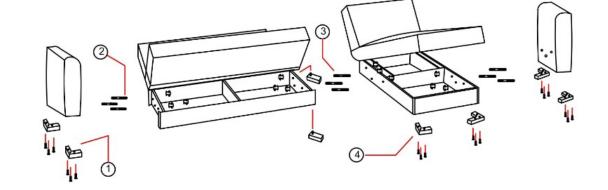


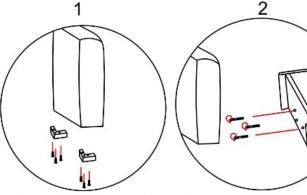




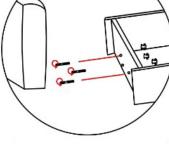

Armrest screws to the case

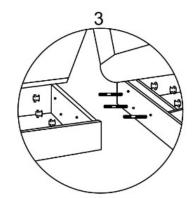

The cases are screwed together

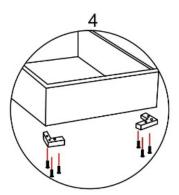

Finally, the other two legs are screwed into the case