


When installing the bedbase legs, you need to pierce the fabric under the bedbase at the level of the holes on the metal profile.

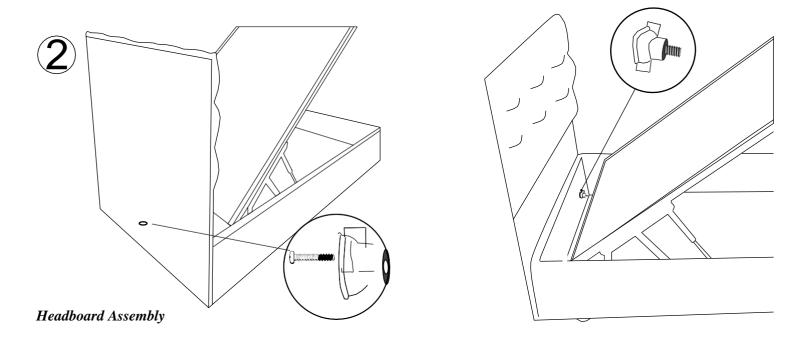

Mark the connection points of your bedbase or cot on the header with the help of a pencil. drill the head through the marked points and fix it in place with mounting screws.