


Assembly Instructions

TV UNIT

S 1

Tools required for the installation of this module.

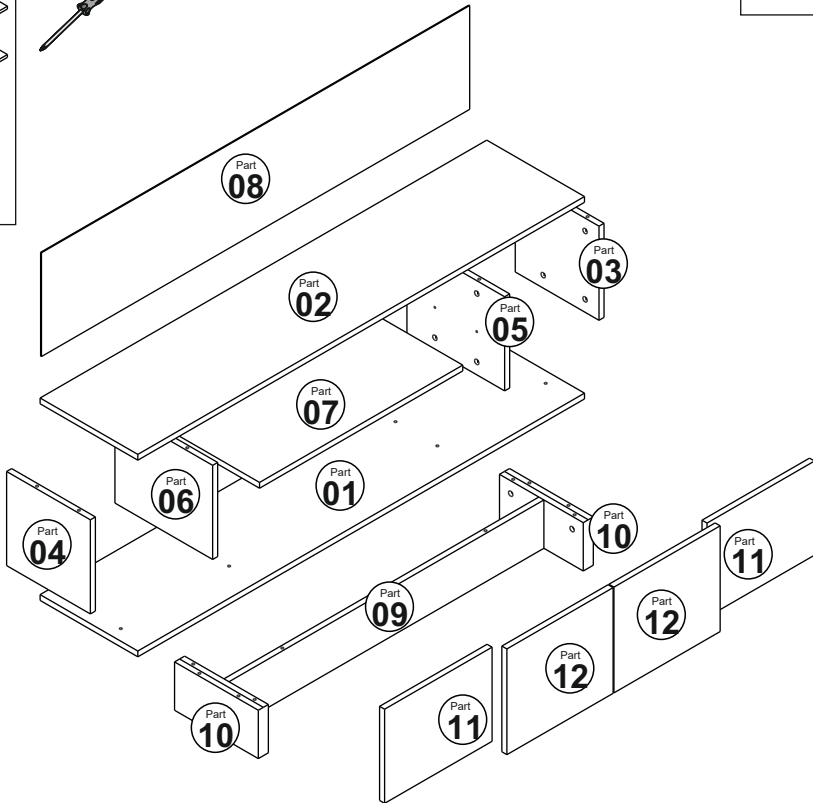


Minifix Body



A01 24x

Minifix Pin



A02 24x

Dowel



A03 4x

Shelf Pin




A23 4x

3.5x18 Screw




A10 32x

Nail



A28 22x

Hinge Base



A13 8x

Flat Hinge



A12 4x

Corner Hinge



A14 4x

Customer Information,

The product you purchased has been fully tested and inspected before it was delivered to you. However, some parts may still be damaged during transportation. If you encounter such a situation, do not return the entire product. Only request the damaged part. When requesting the necessary part, please refer to the service card to correctly identify it. The missing or damaged part will be sent to you as quickly as possible.

Before starting assembly, check all parts and accessories that come out of the boxes against the list. Start assembling only after ensuring that all parts and accessories are complete and undamaged. Before assembly, clean each part with a damp cloth.

If you have purchased more than one product, to avoid confusion, assemble one unit completely before moving to the next. Never drag your furniture during transport. Lift and carry it with at least two people.

For long-distance transportation, always use the packaging.

Cleaning the surface of your furniture is very easy. Simply wipe it with a damp, soapy cloth or standard household cleaners. Since furniture can be affected by excessive heat, cold, or humidity, do not expose it directly to these factors.


Do not use your furniture for purposes other than intended.

Assembly Instructions


TV UNIT

S 2


STEP 1

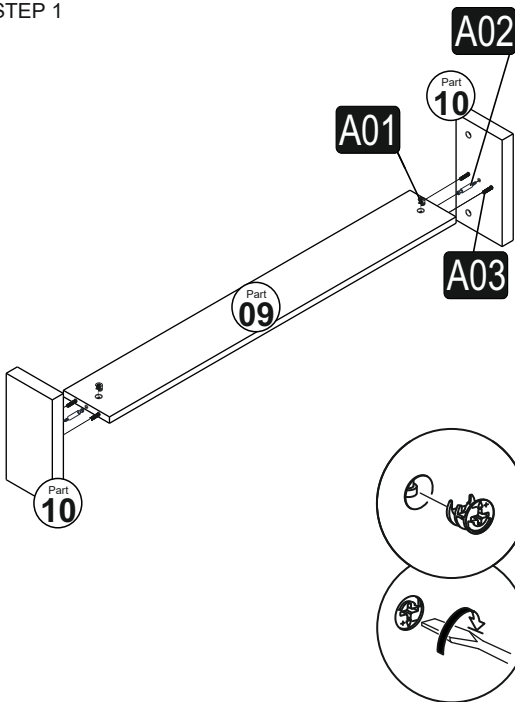


STEP 3

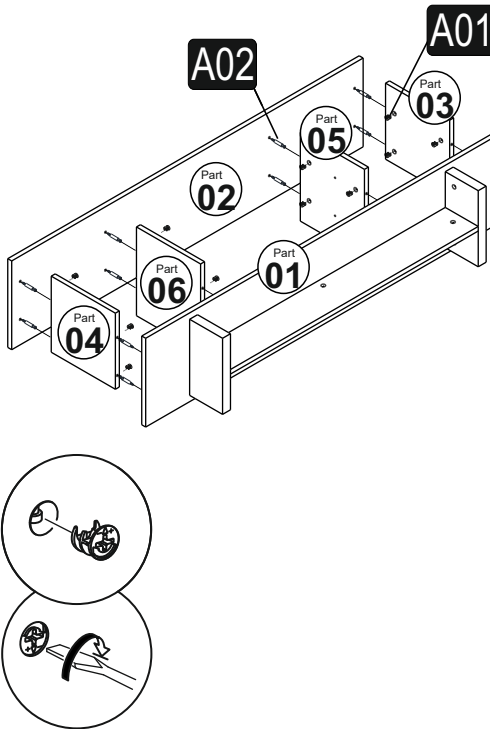

STEP 2

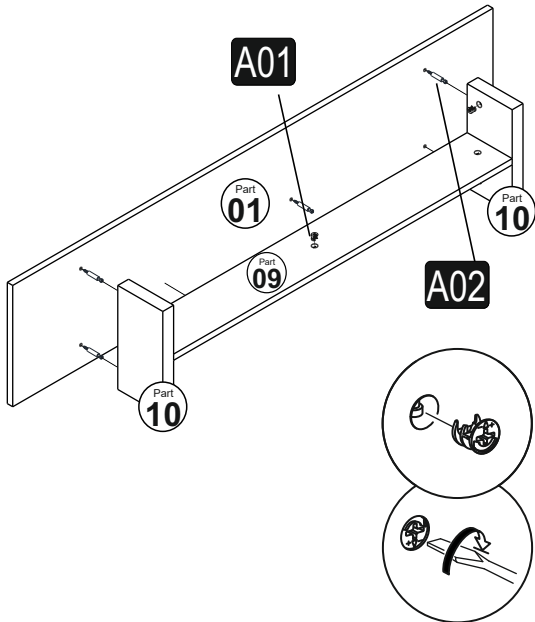

STEP 4

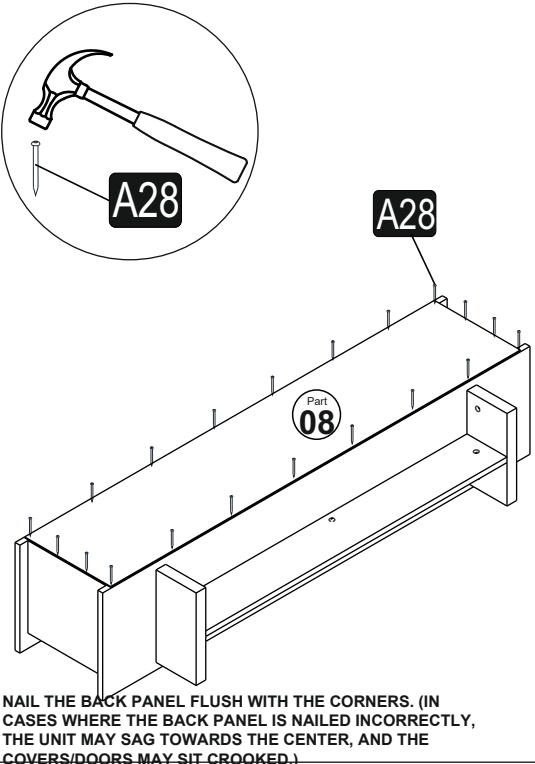

NAIL THE BACK PANEL FLUSH WITH THE CORNERS. (IN CASES WHERE THE BACK PANEL IS NAILED INCORRECTLY, THE UNIT MAY SAG TOWARDS THE CENTER, AND THE COVERS/DOORS MAY SIT CROOKED.)

