


## Components:


D. FRAME LEGS X 2

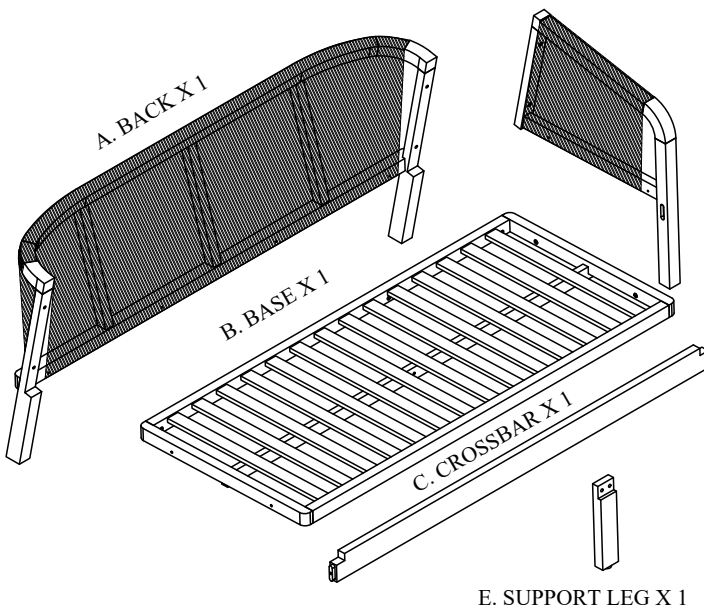


- |   |  |                        |      |   |  |                       |      |
|---|--|------------------------|------|---|--|-----------------------|------|
| 1 |  | BOLT M6 x 80mm = 2pcs  | Nuts | 4 |  | BOLT M6 x 30mm = 2pcs | Caps |
| 2 |  | BOLT M6 x 40mm = 4pcs  | Caps | 5 |  | ALLEN KEY 4 = 2pcs    |      |
| 3 |  | SCREW M6 x 55mm = 8pcs |      |   |  |                       |      |

These instructions must be used to ease the assembly of your furniture. Please ensure that you have all the components before assembly. Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.

## Step 1:

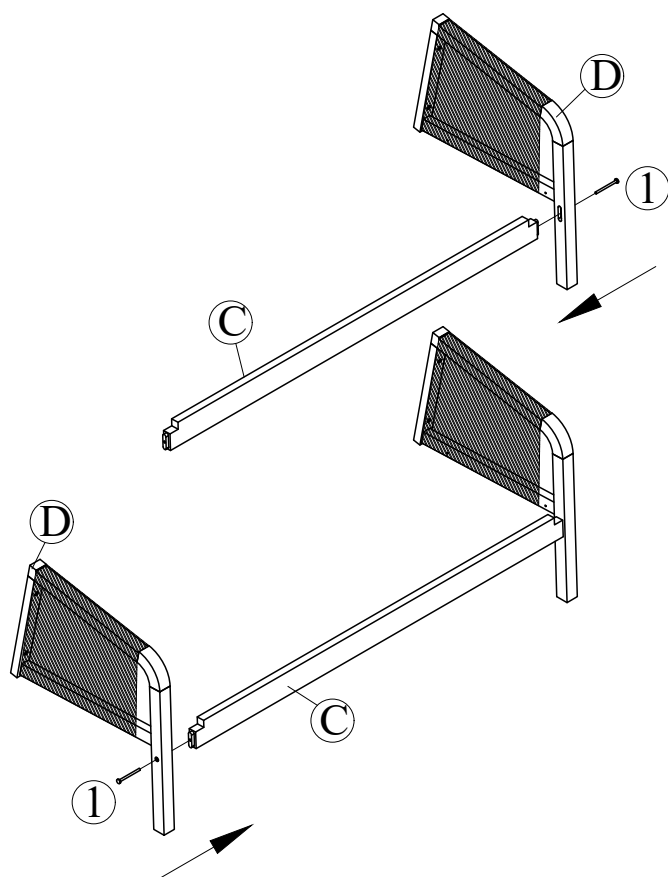



## Step 2:

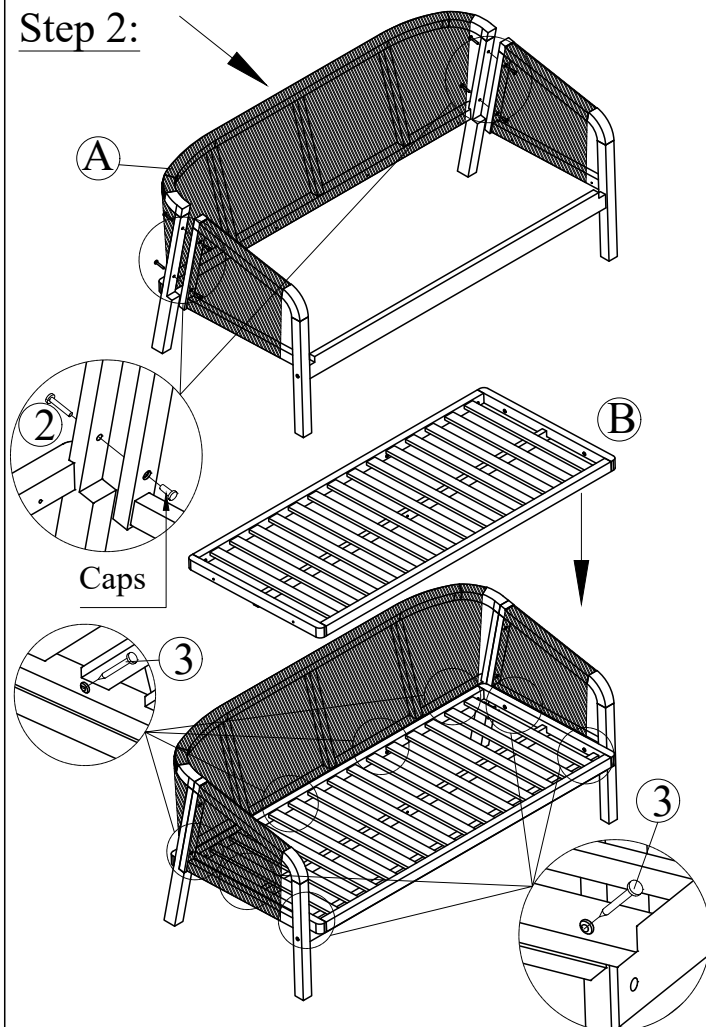

# ASSEMBLY INSTRUCTION

228-000008

Step 3:

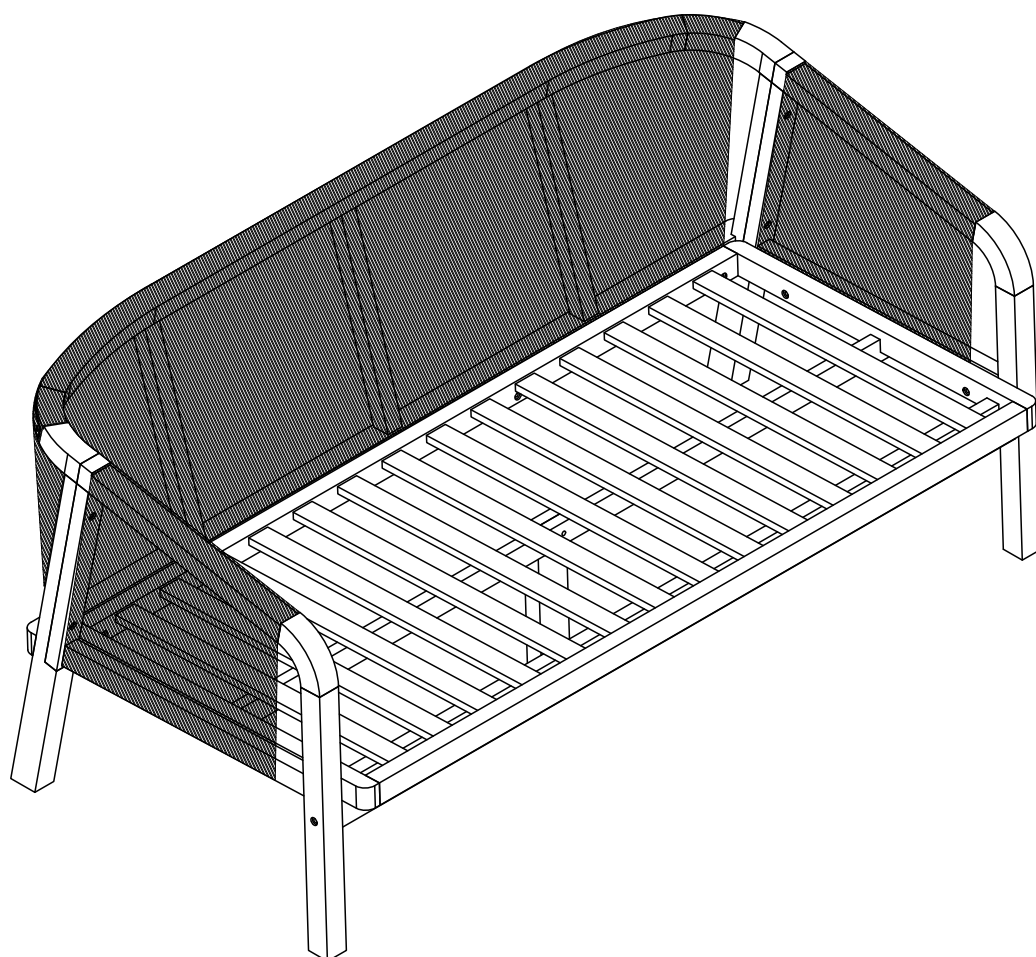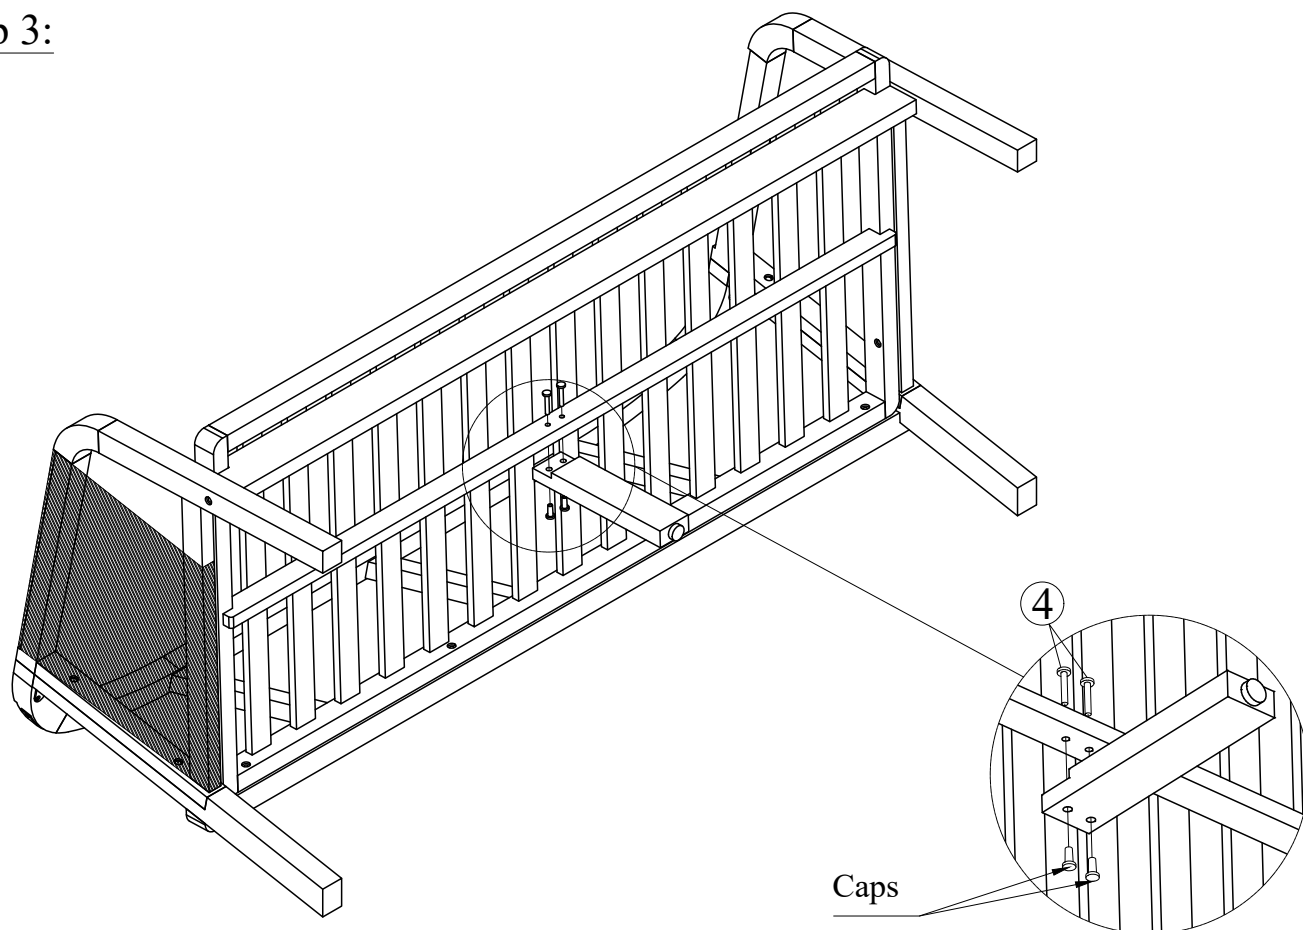

Finished