

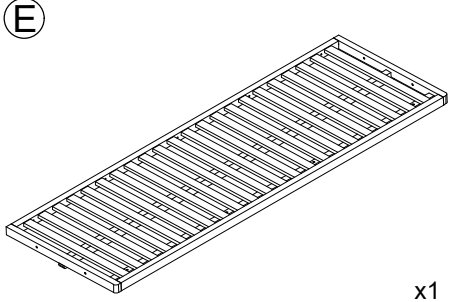
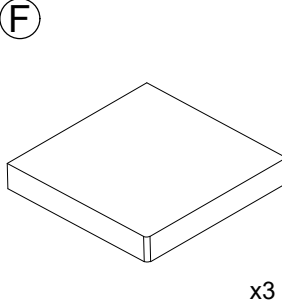
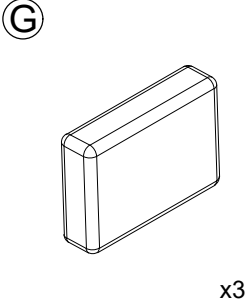



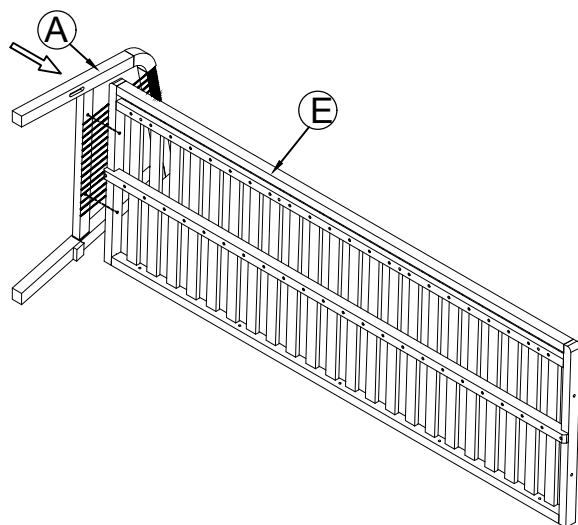
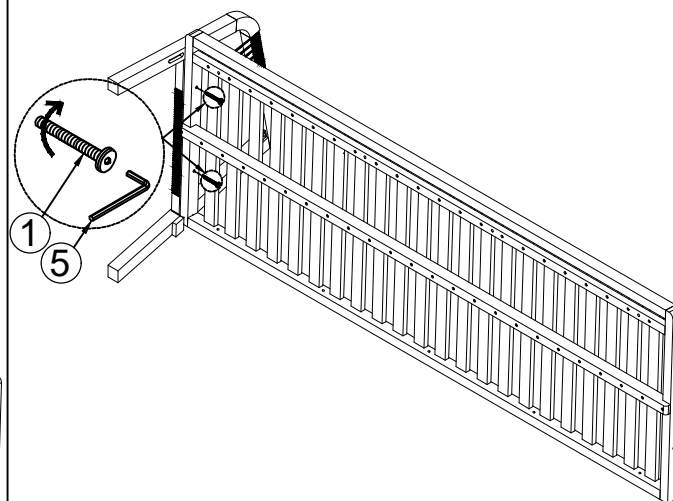
	① M8 X 55(mm) x4
						② M6 X 45(mm) x4
						③ M7 X 80(mm) x2
						④ M6 X 40(mm) x4
						⑤ M4 x1
						⑥ M7 X 60(mm) x5


Step 1



Step 2




Step 3

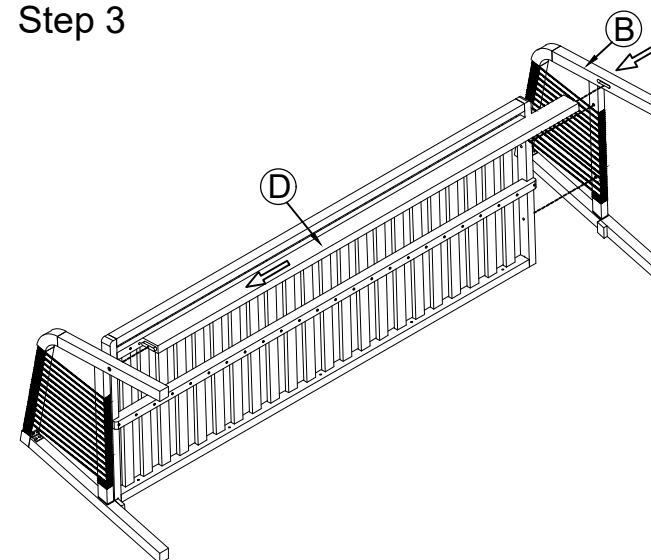

# ASSEMBLY INSTRUCTION


228-000013

Step 4

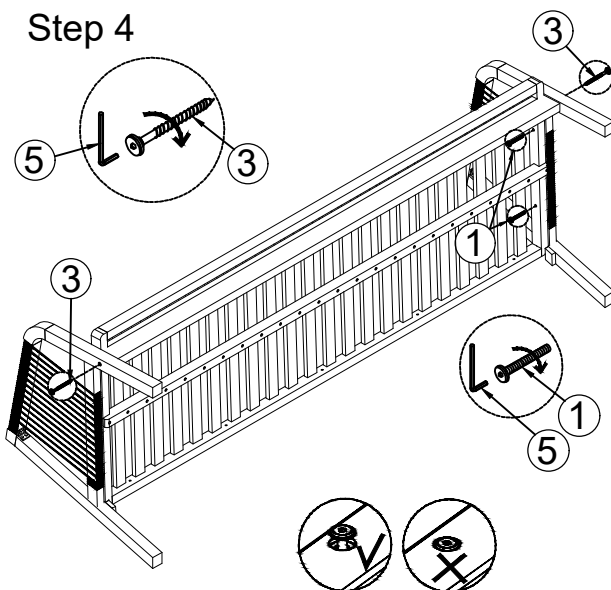


"Do not completely tighten the Screws"


Step 5

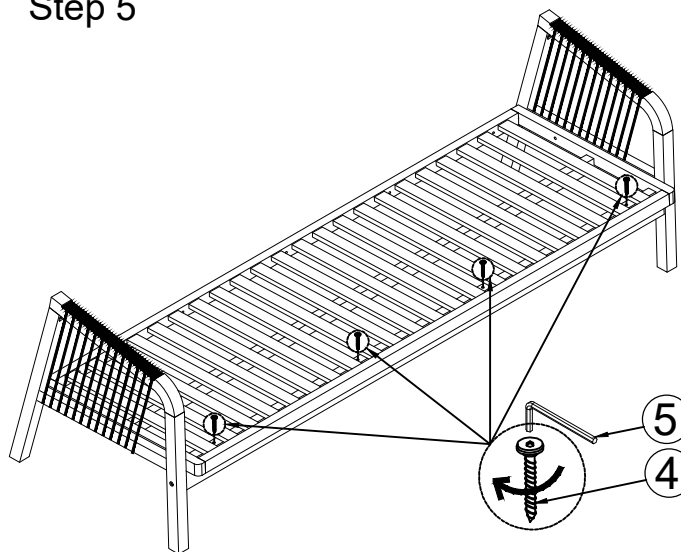


Step 6

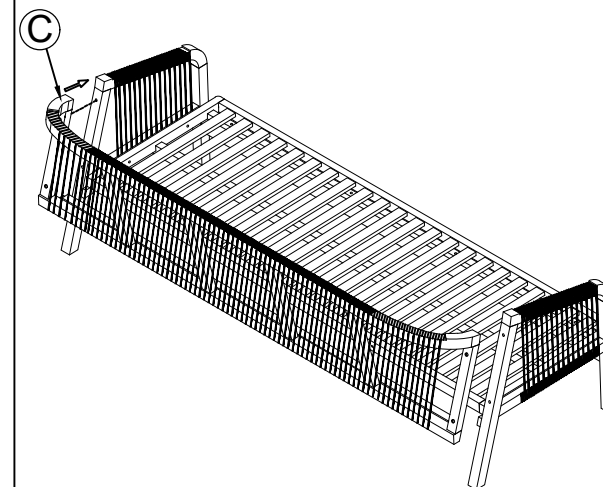

Step 7

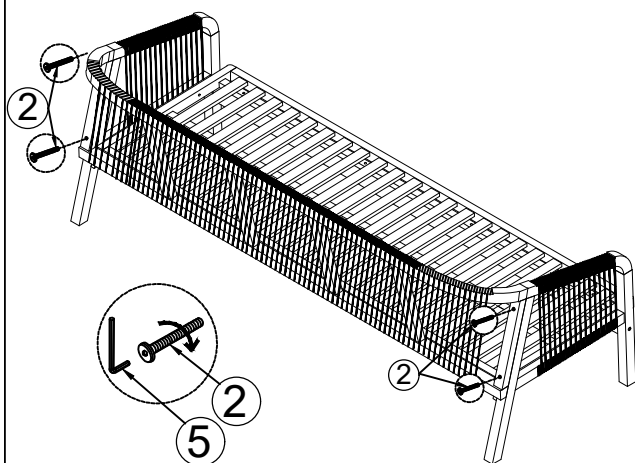










Step 8

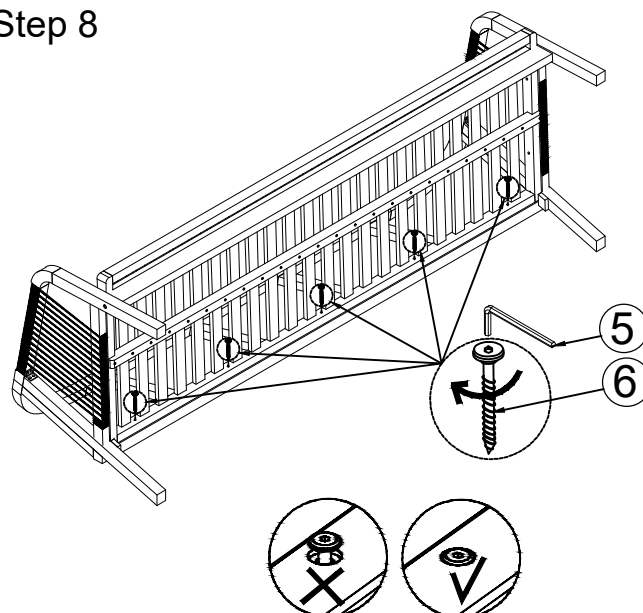


"Ensure that all Screws are completely tightened"

Step 9

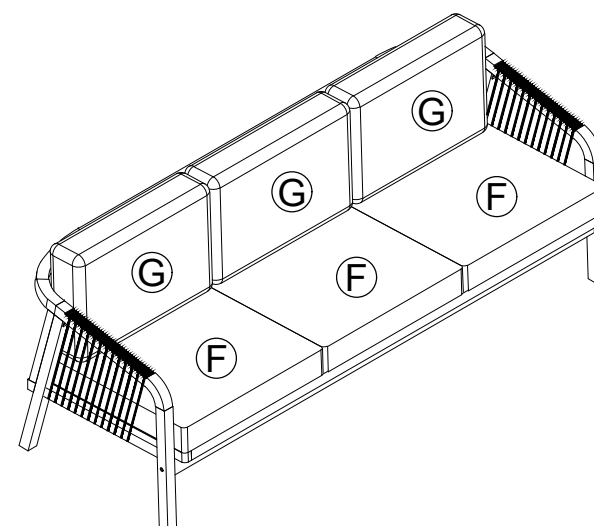


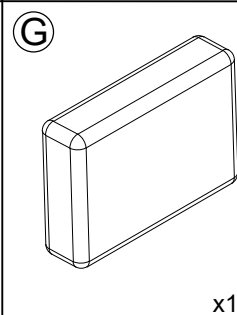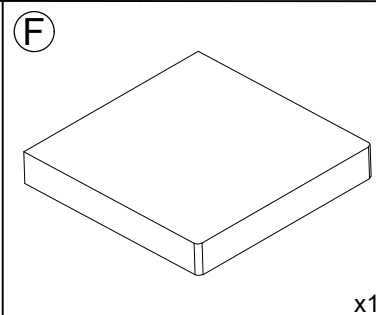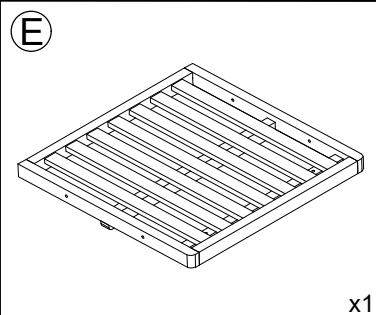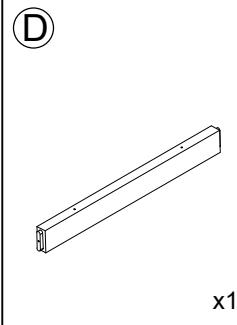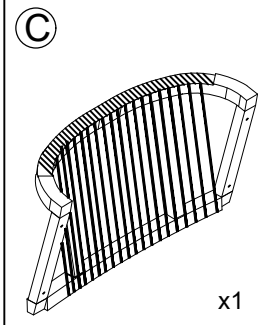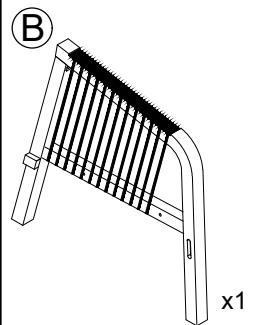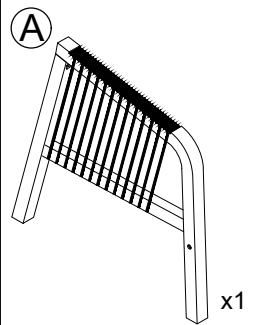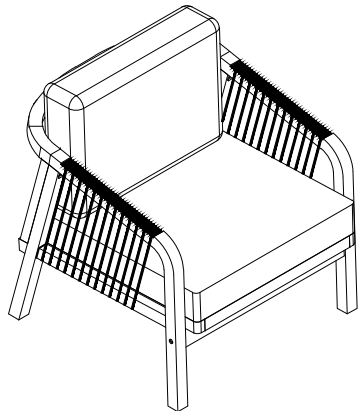

① M8 X 55(mm) x4



② M6 X 45(mm) x4



③ M7 X 80(mm) x2




④ M6 X 40(mm) x2




⑤ M4 x1

## Step 1

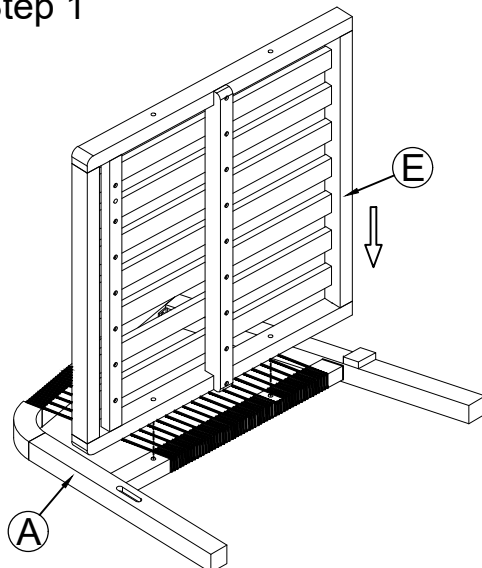


## Step 2

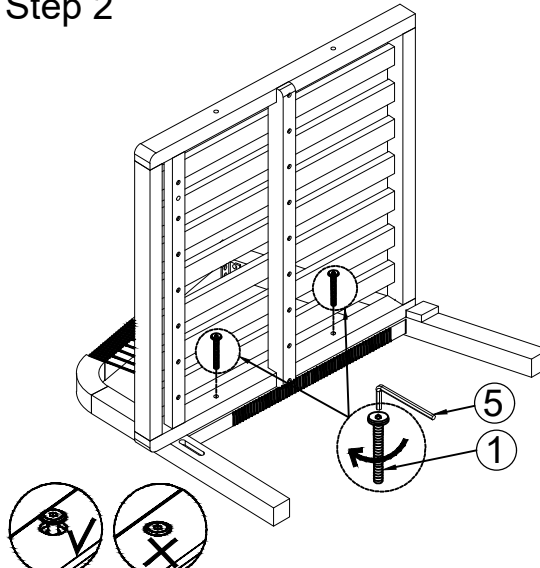

"Do not completely tighten the Screws"


## Step 3

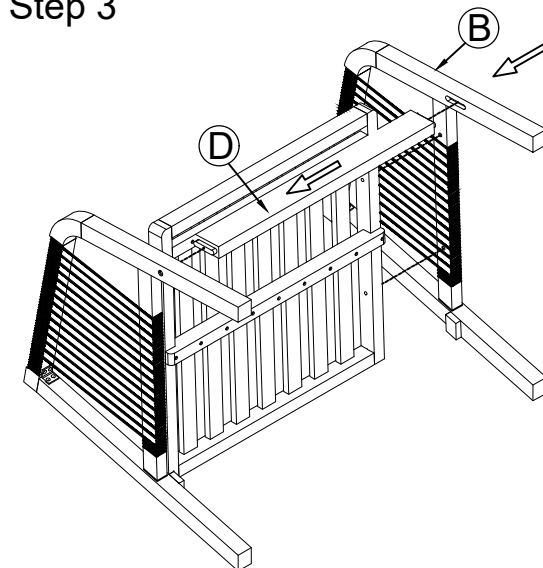

# ASSEMBLY INSTRUCTION


228-000013

Step 4

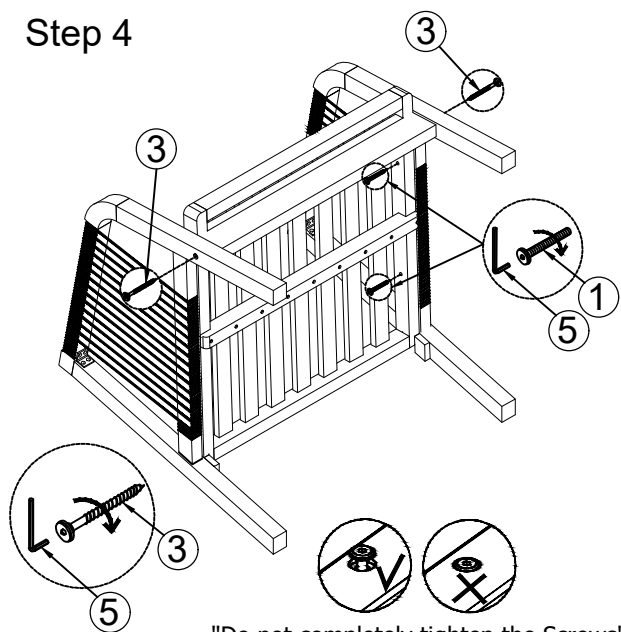


"Do not completely tighten the Screws"


Step 5

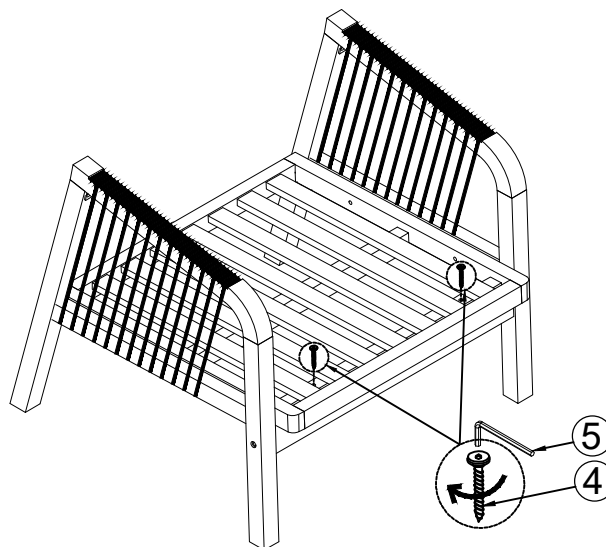

Step 6

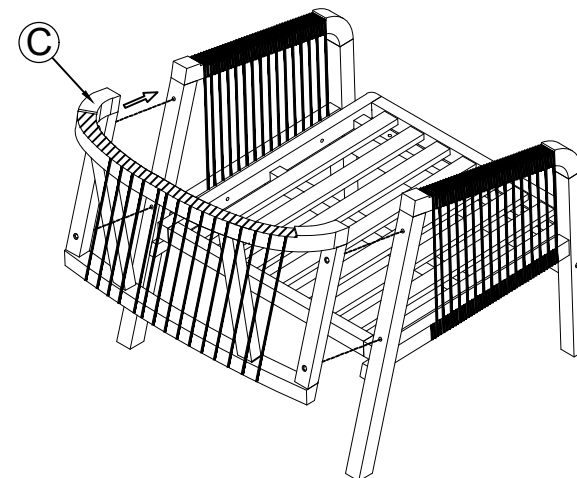


Step 7

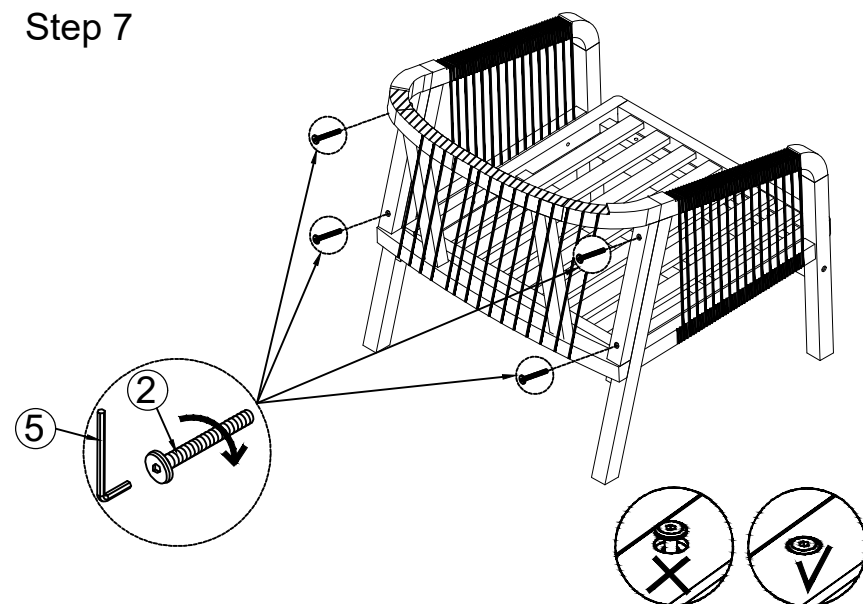



"Ensure that all Screws are completely tightened"

Step 8

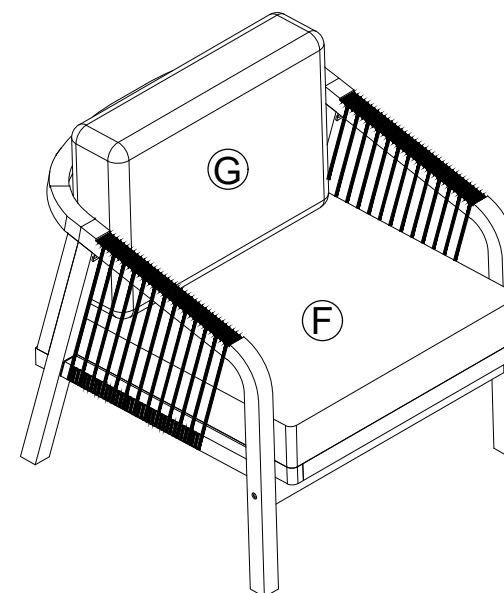


# ASSEMBLY INSTRUCTION


228-000013

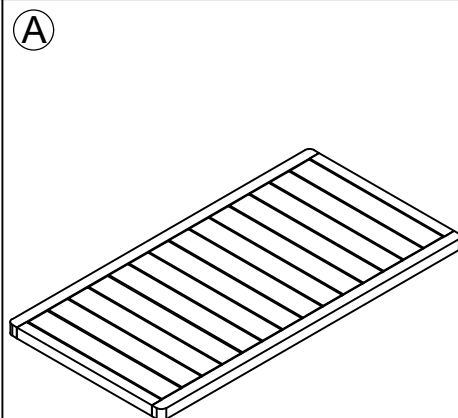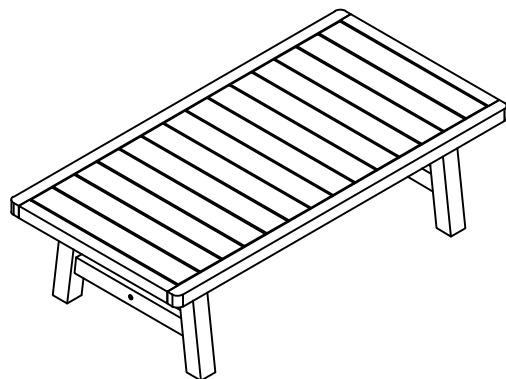


x1

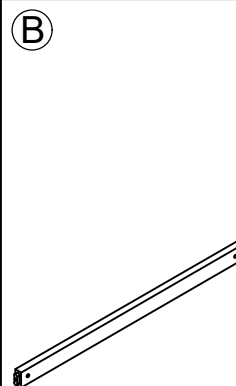

x1

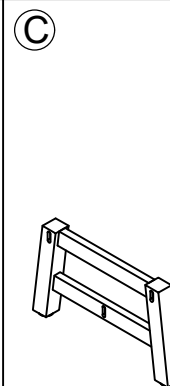


x2



① M6 X 90(mm) x4



② M6 X 70(mm) x2



③ M6 X 45(mm) x1




④ M6 X 13(mm) x6





⑤ M4 x1

## Step 1

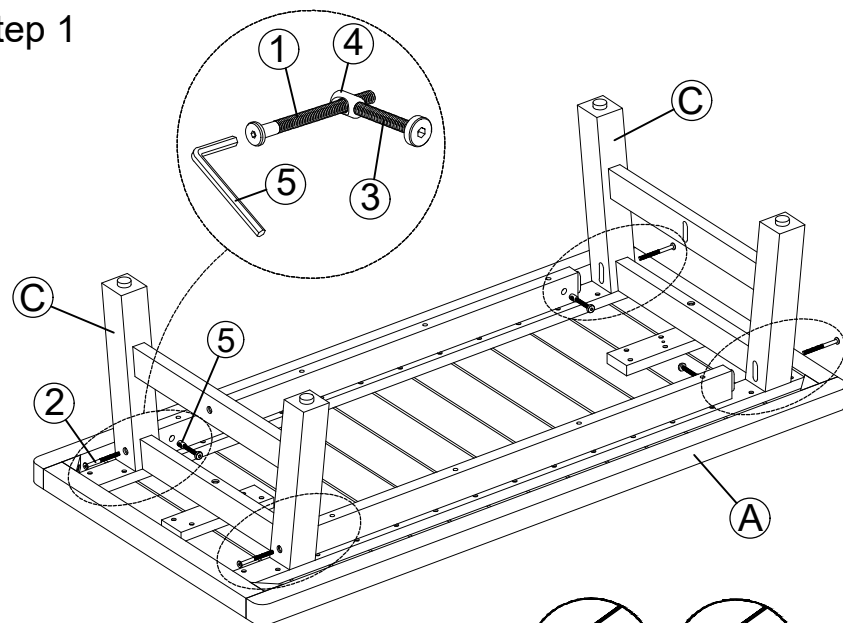

"Do not completely tighten the Bolts"

## Step 2

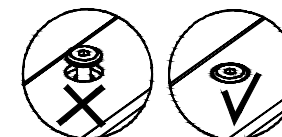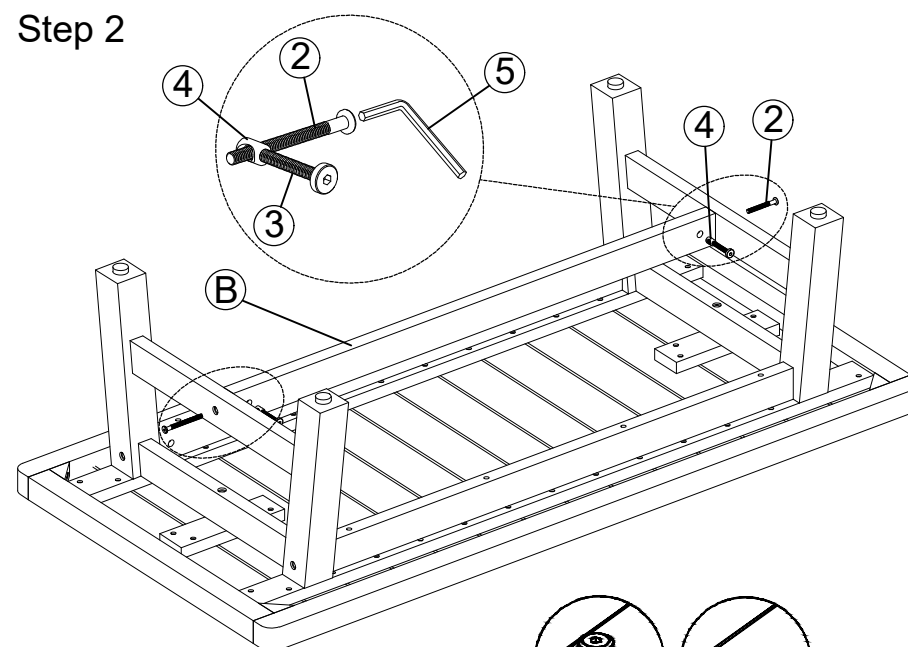

"Ensure that all Bolts are completely tightened"