


Components:


D. FRAME LEGS X 2

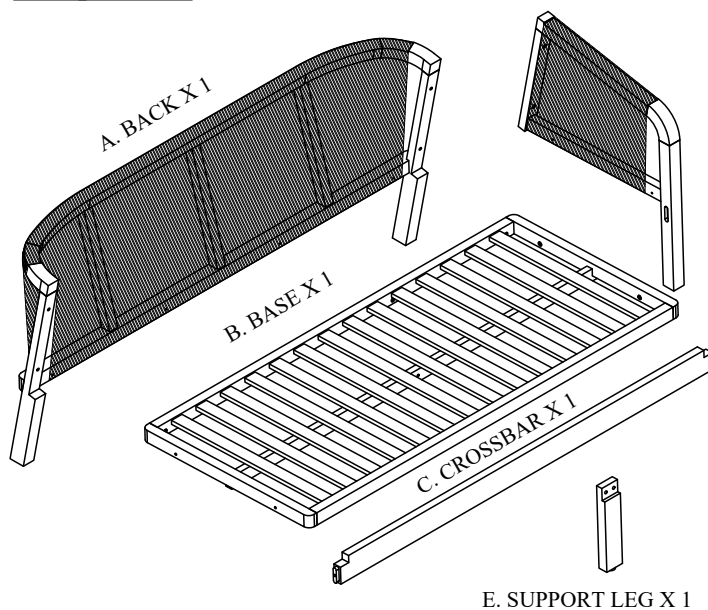


- | | | | | | | | |
|---|--|------------------------|------|---|--|-----------------------|------|
| 1 | | BOLT M6 x 80mm = 2pcs | Nuts | 4 | | BOLT M6 x 30mm = 2pcs | Caps |
| 2 | | BOLT M6 x 40mm = 4pcs | Caps | 5 | | ALLEN KEY 4 = 2pcs | |
| 3 | | SCREW M6 x 55mm = 8pcs | | | | | |

These instructions must be used to ease the assembly of your furniture. Please ensure that you have all the components before assembly. Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.



Step 1:

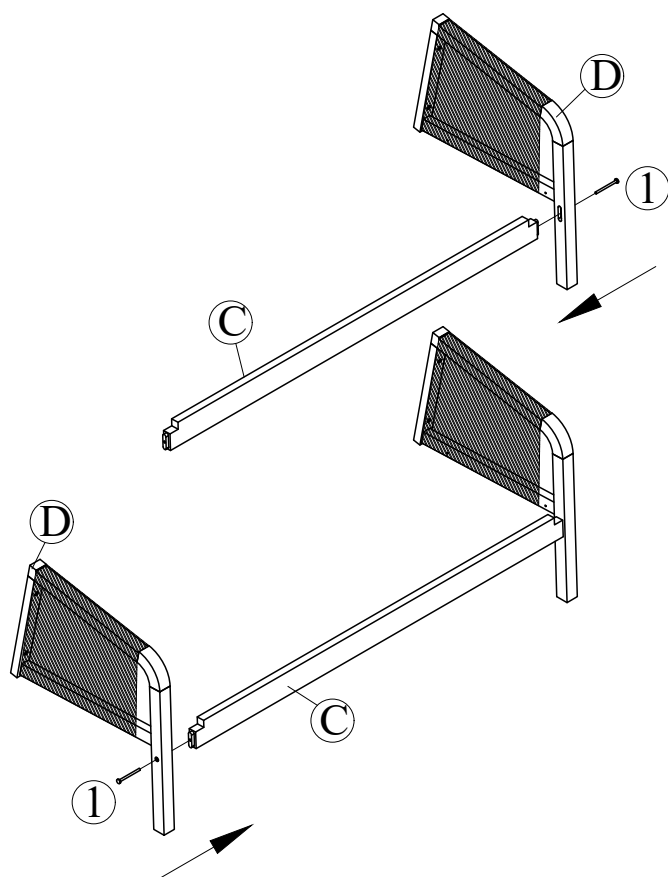


Step 2:

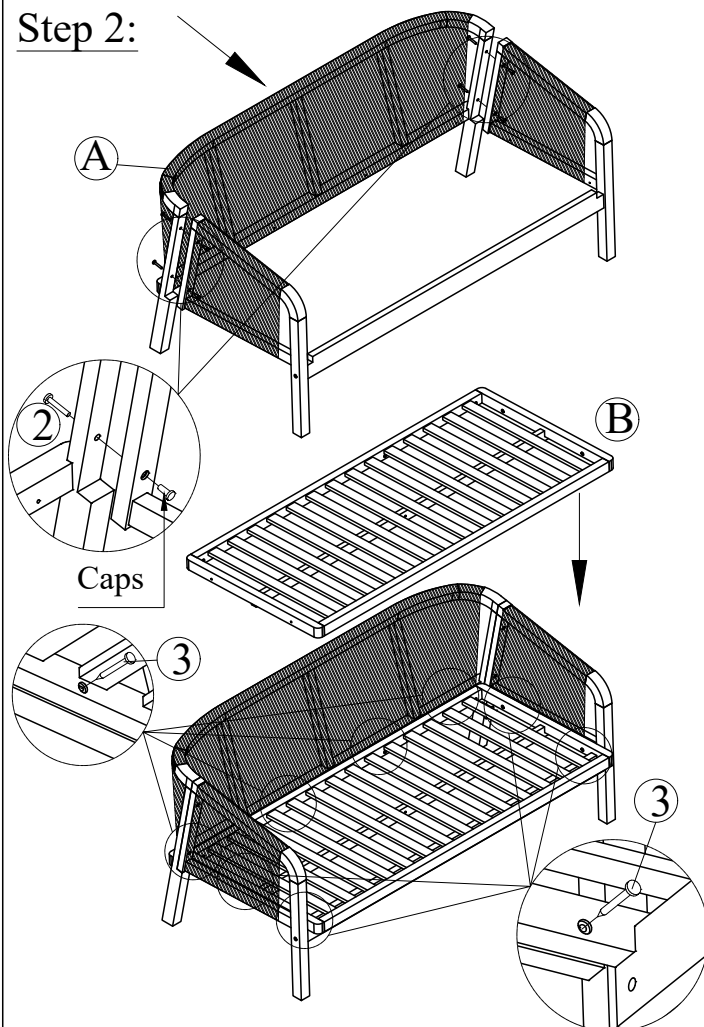



Step 3:

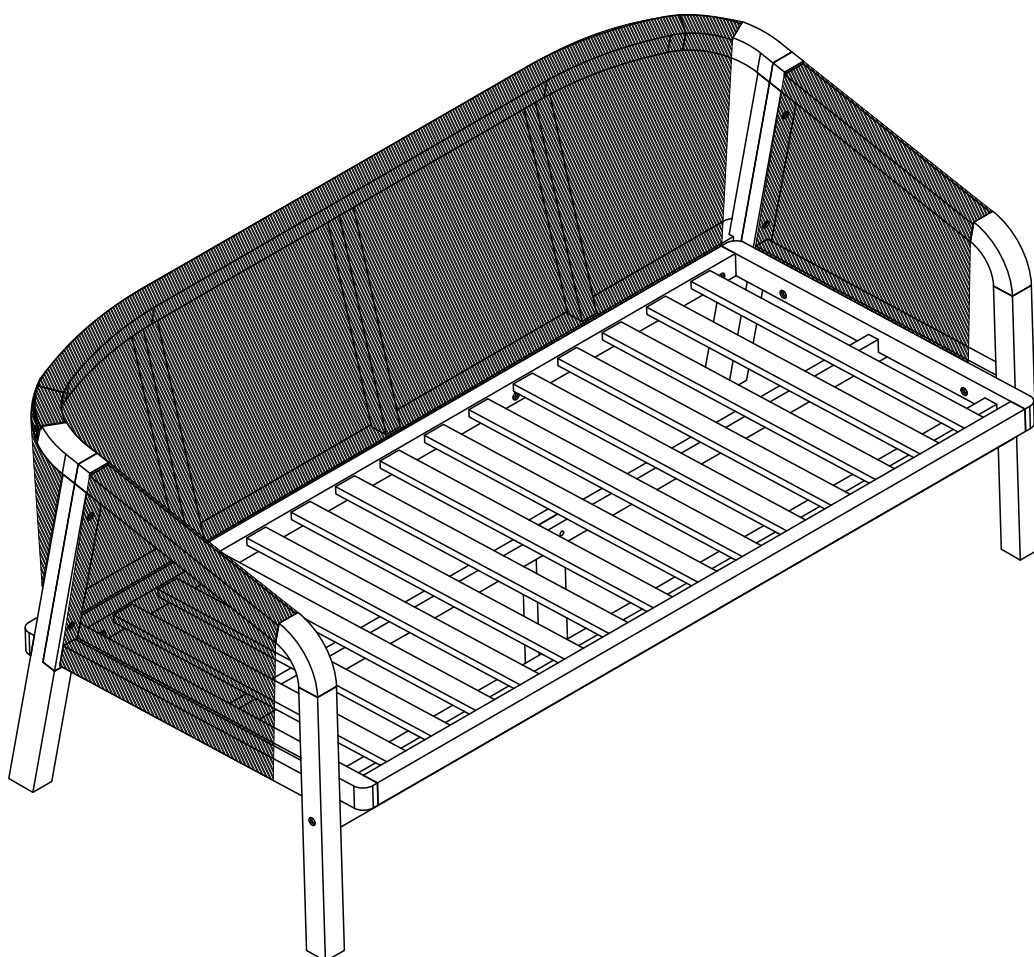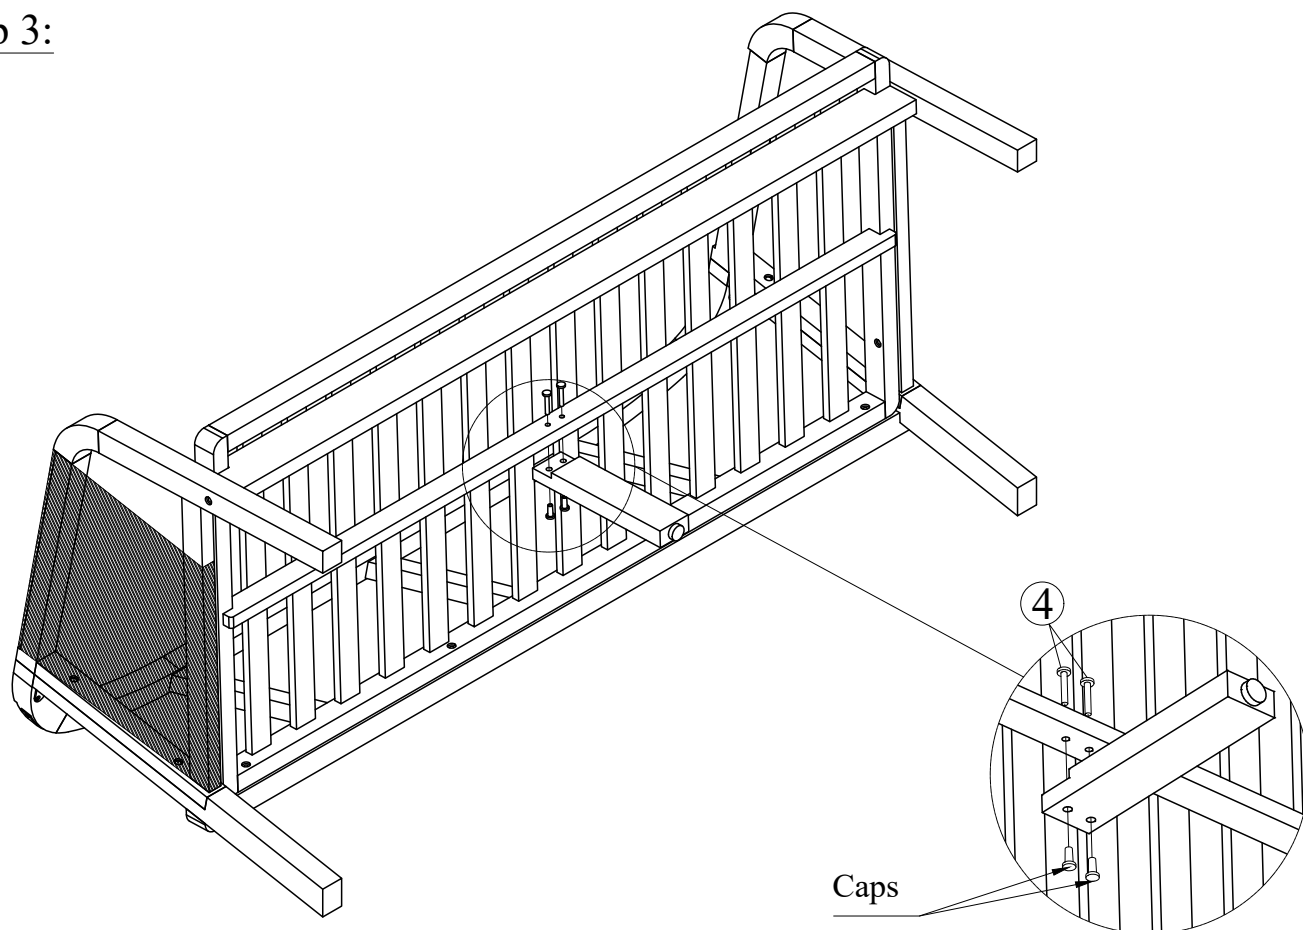

Finished

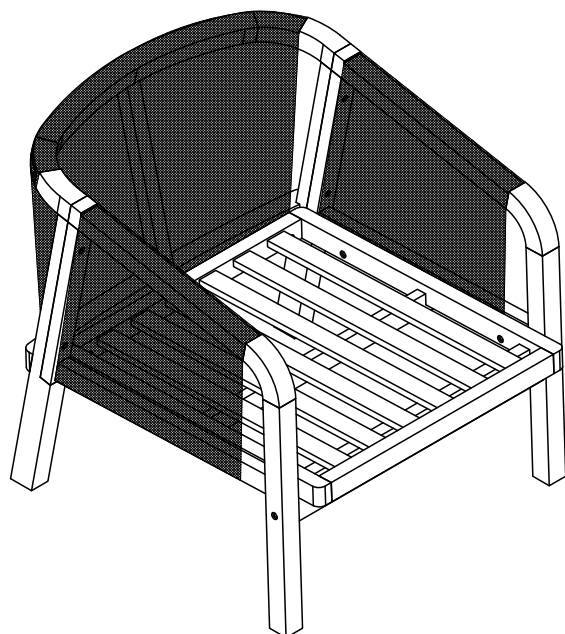


Components:

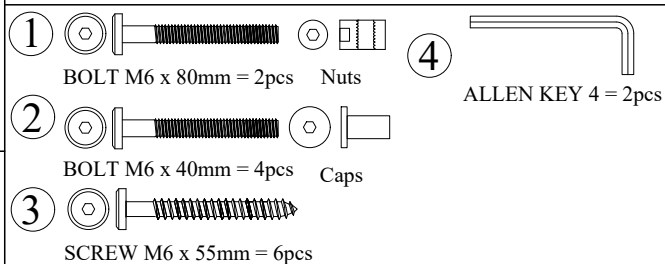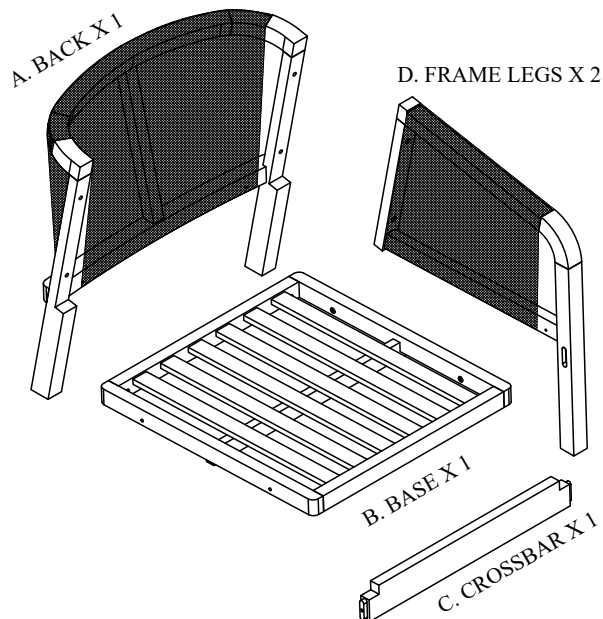


These instructions must be used to ease the assembly of your furniture. Please ensure that you have all the components before assembly. Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.


Step 1:

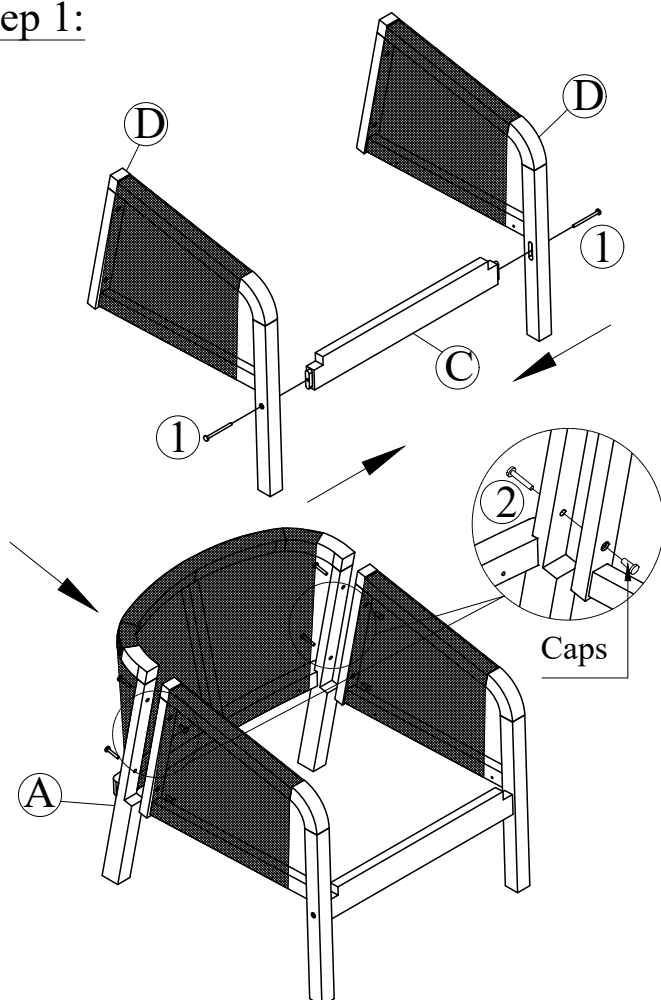






Step 2:

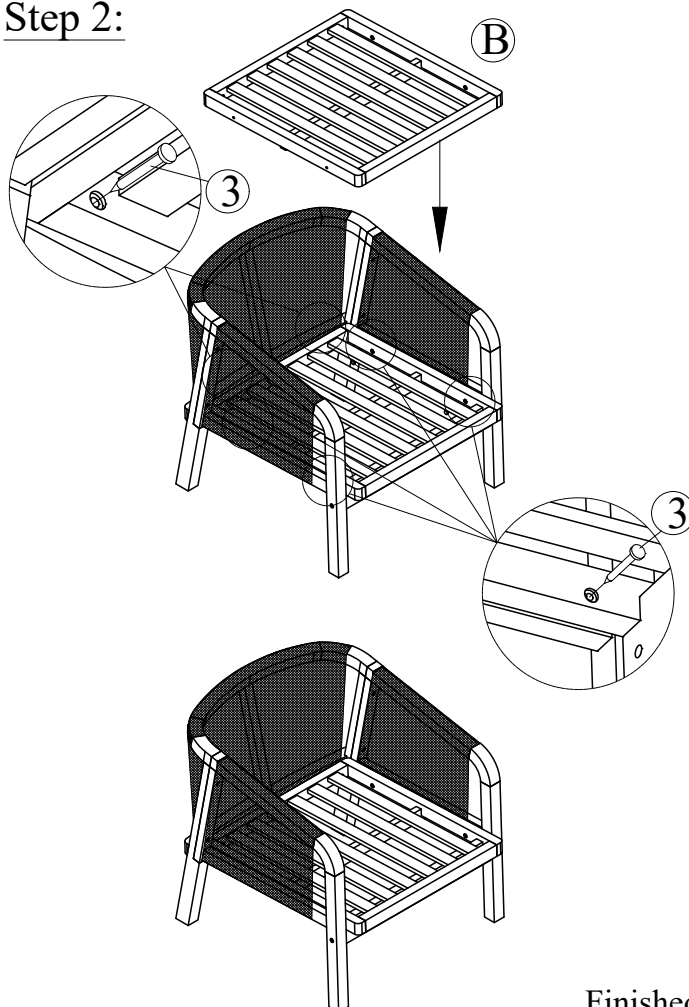

Finished

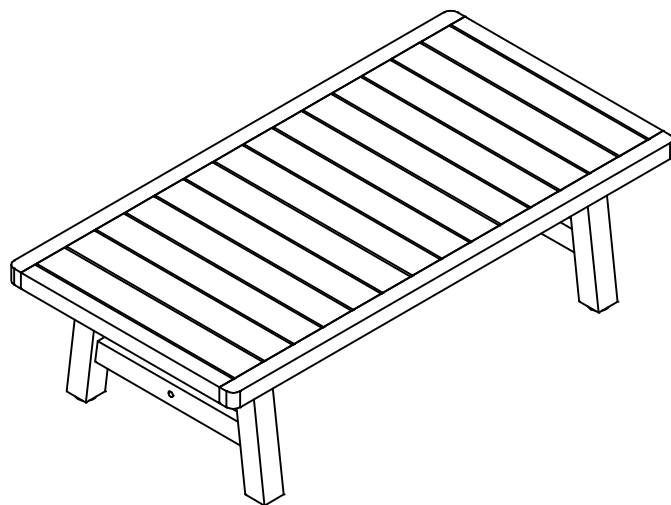


Components:


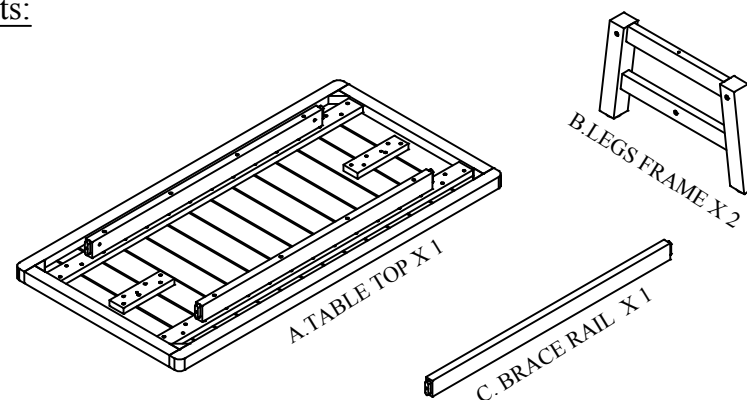


These instructions must be used to ease the assembly of your furniture.
Please ensure that you have all the components before assembly.
Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.

Step 1:

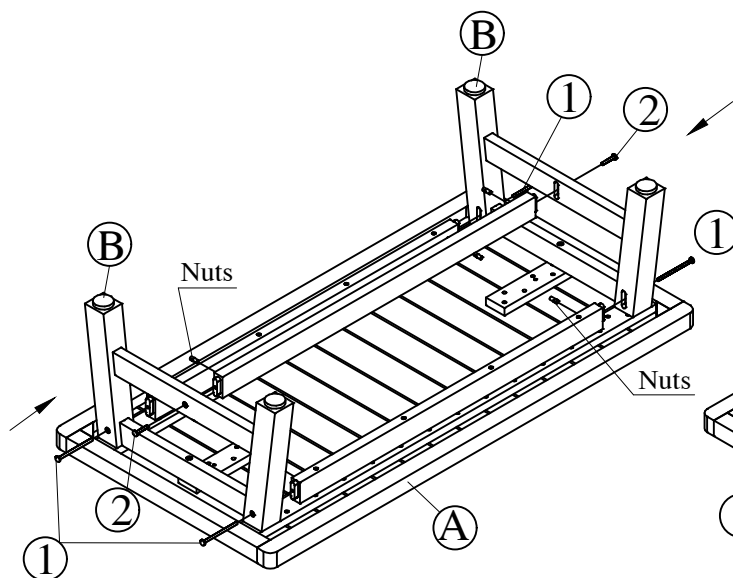

Step 2:

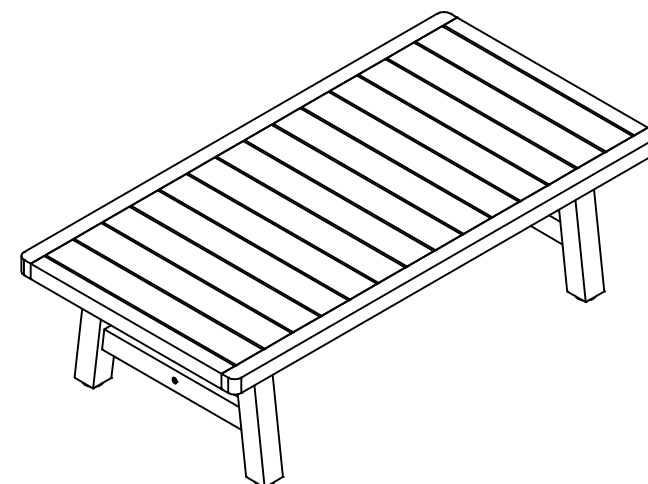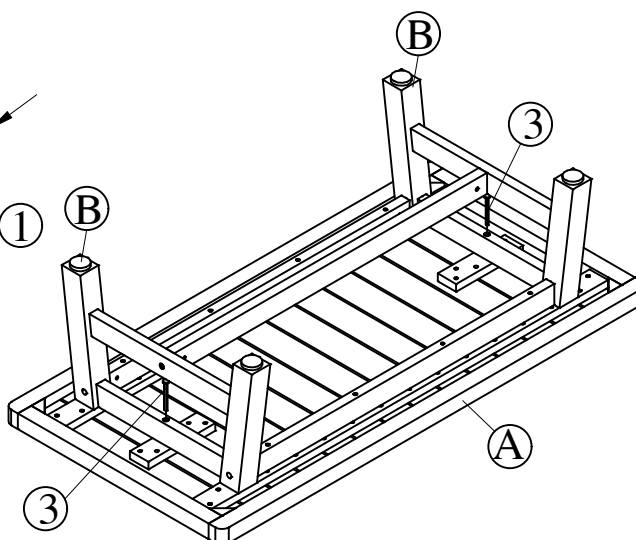

Finished