





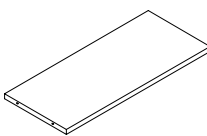
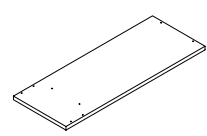
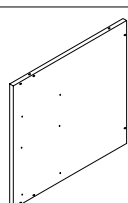
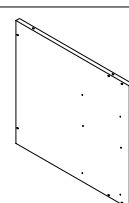
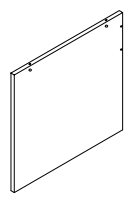
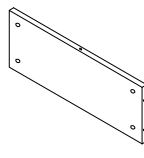


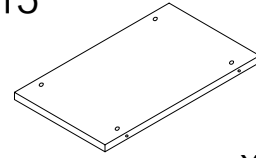
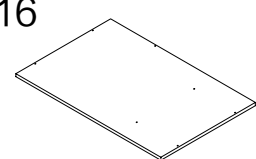
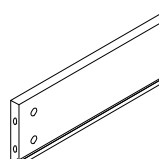
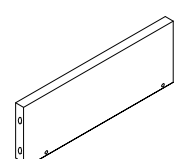
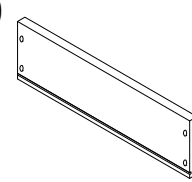
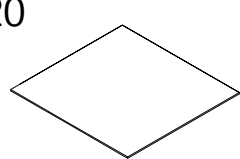
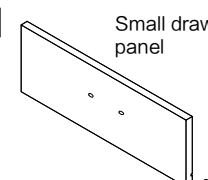
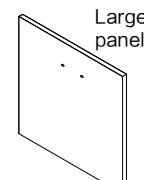



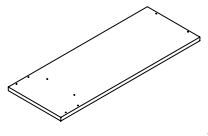






230-000016


1  x1	2  x1	3  x1	4  x1	5  x2
6  x1	7  x1	8  x1	9  x1	10  x1
11  x1	12  x1	13  x1	14  x1	15  x1
16  x1	17  x3	18  x3	19  x3	20  x3
21  x2 Small drawer panel	22  x1 Large drawer panel	A  x59	B  x59	C  (5x50mm) x20
D  (3.5x12mm) x24	E  (4x18mm) x6	F  x3	G  x6	

Step 1

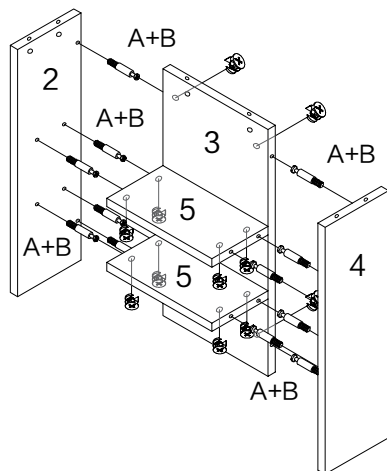


A	x12
B	x12

Step 2

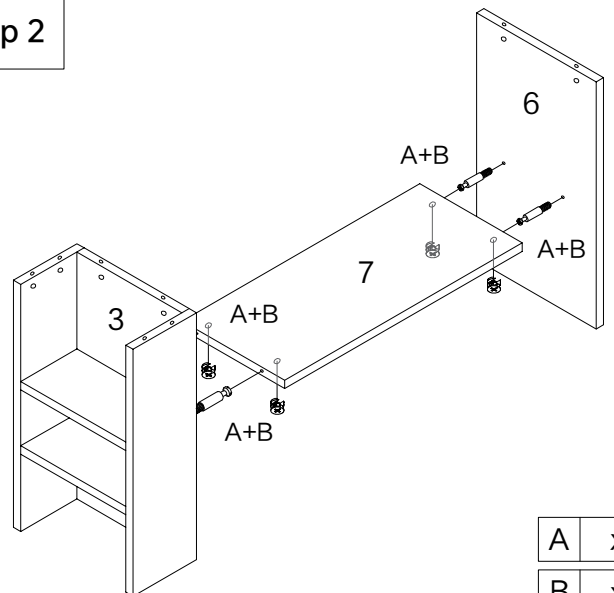


A	x4
B	x4

Step 3

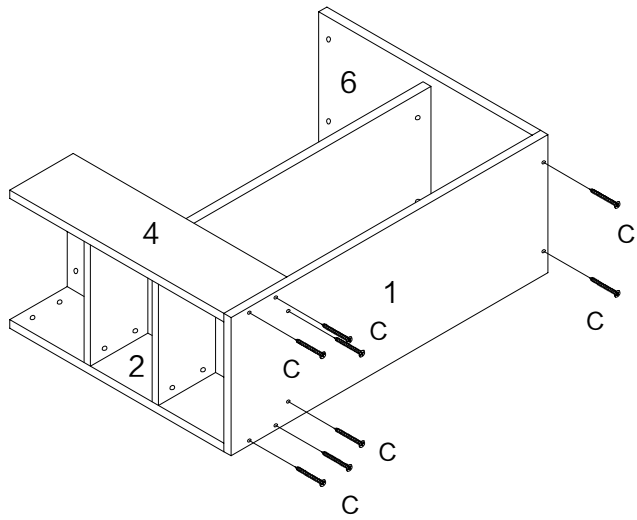


C x8

Step 4

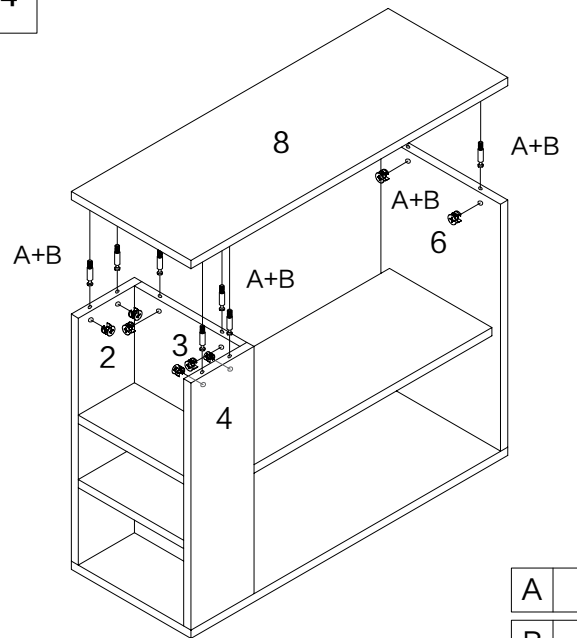


A x8

B x8

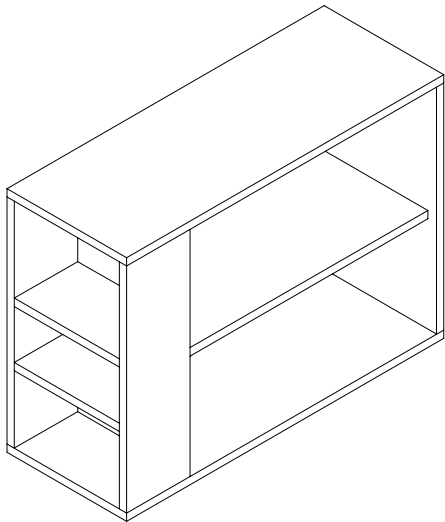


Step 5

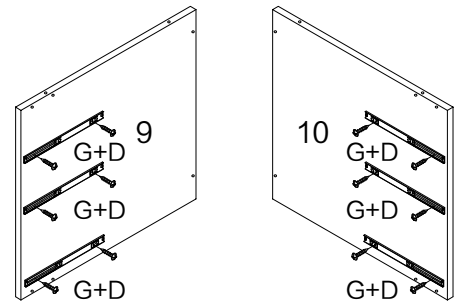

D x12


Step 6

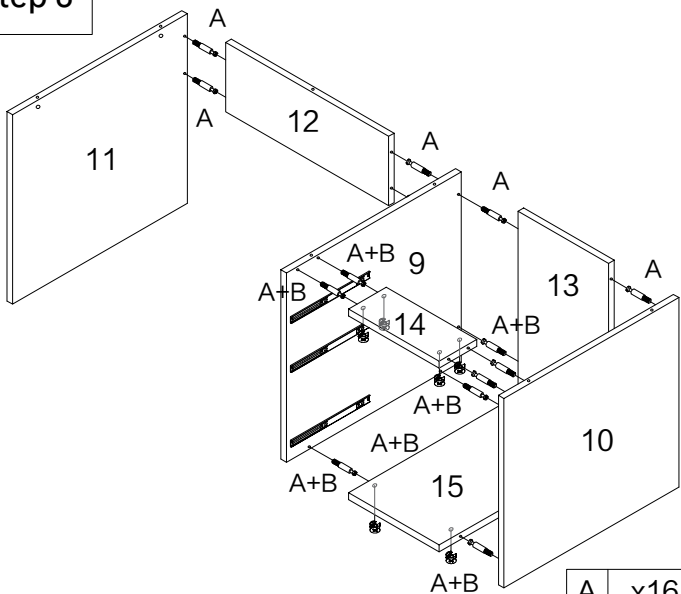

A x16

B x8


Step 7

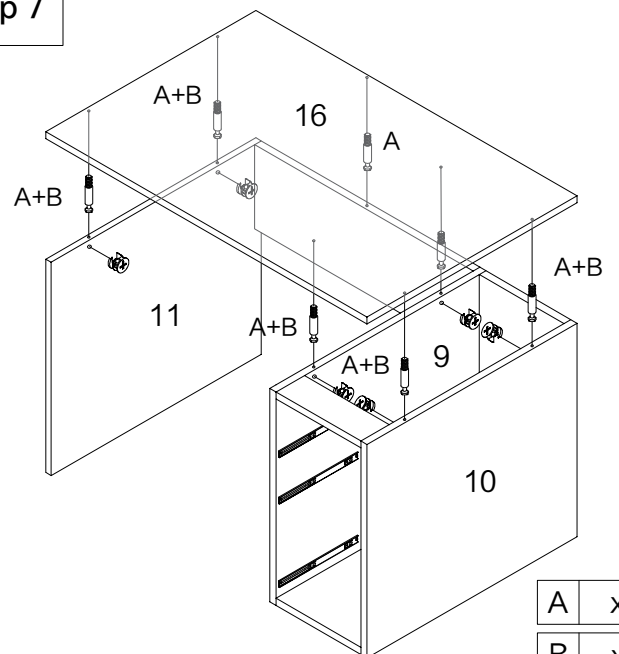

A x7

B x6


Step 8

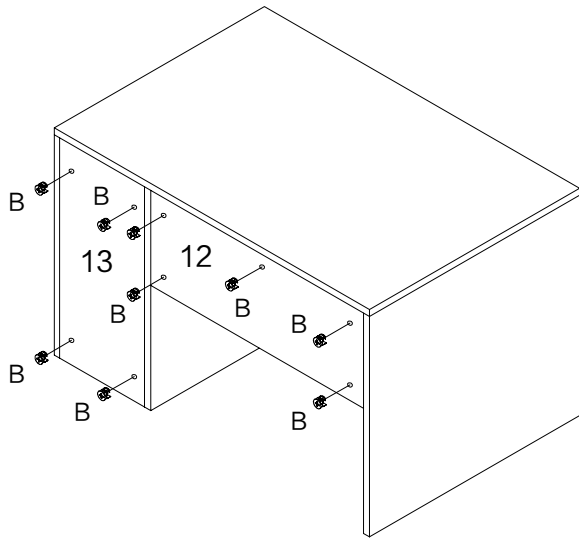

B x9

Step 9


Follow this procedure to install the three drawers.

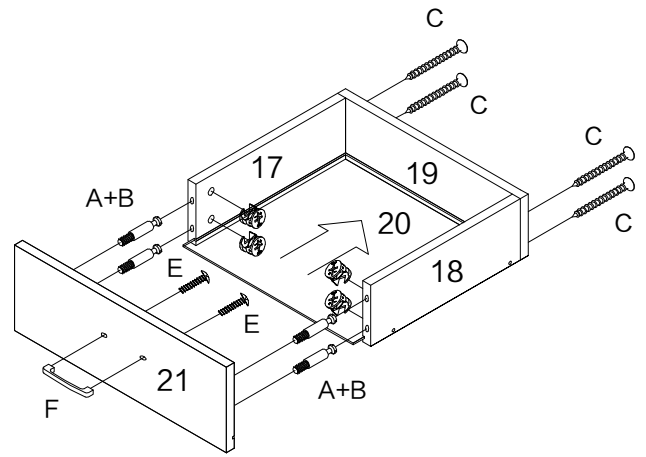


A	x4	C	x4
B	x4	E	x2

Step 10

Follow this procedure to install the lower guide rail for all three drawers.

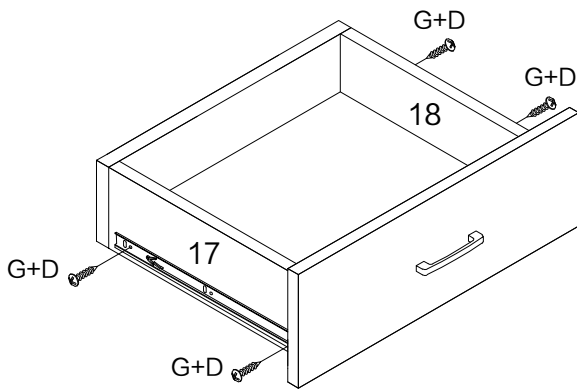

D x4

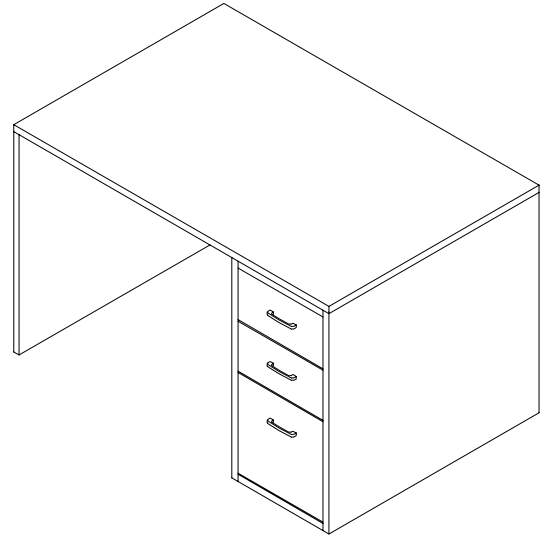

Complete

