
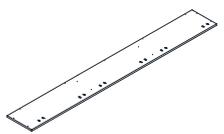
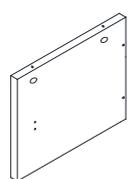
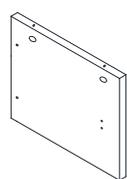
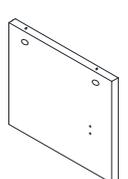
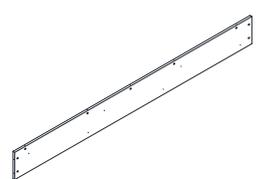
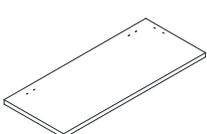



# 230-000196

<p>1</p>  <p>x1</p>	<p>2</p>  <p>x1</p>	<p>3</p>  <p>x1</p>	<p>4</p>  <p>x2</p>	<p>5</p>  <p>x1</p>
<p>6</p>  <p>x1</p>	<p>7</p>  <p>x3</p>			
<p>A</p>  <p>x17</p>	<p>B</p>  <p>x17</p>	<p>C (6.3x50mm)</p>  <p>x13</p>	<p>D</p>  <p>x6</p>	<p>E</p>  <p>x3</p>
<p>F (3.5x12mm)</p>  <p>x48</p>	<p>G</p>  <p>x6</p>	<p>H</p>  <p>x1</p>		


## Step 1

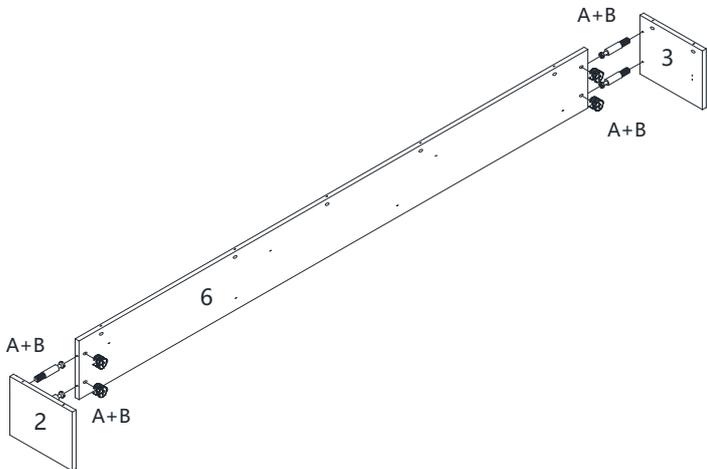

A x4


B x4

## Step 2

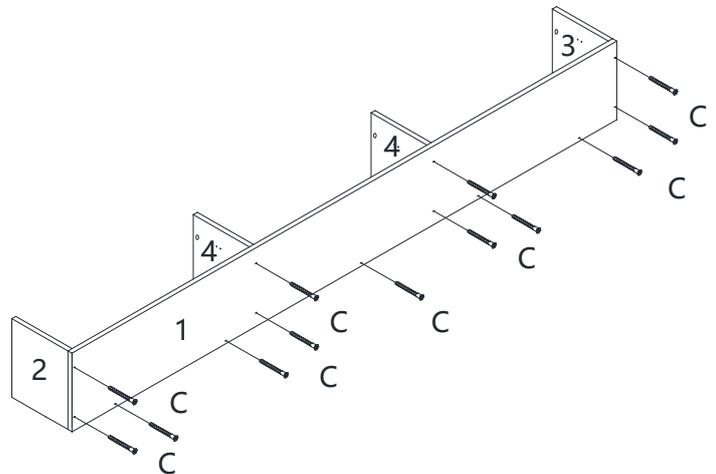

C x13


### Step 3

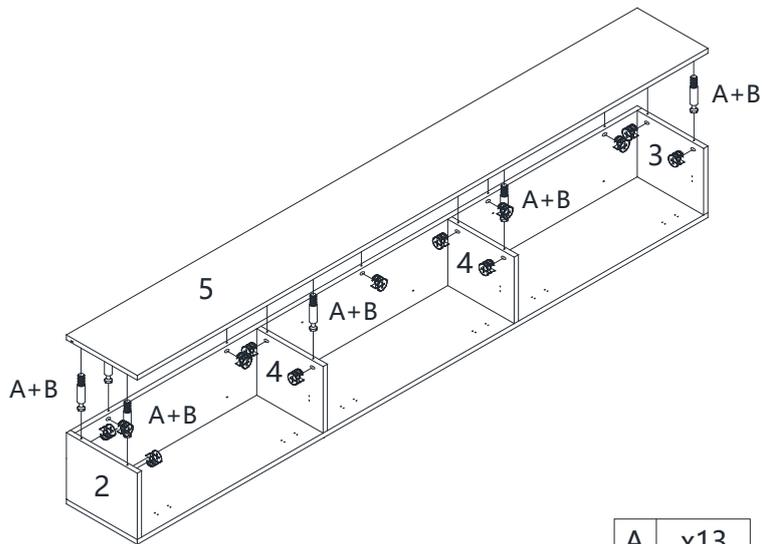

A x13

B x13


### Step 4

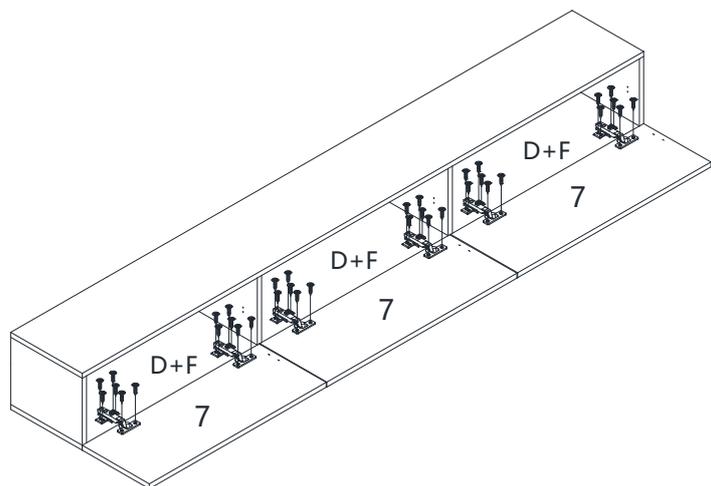

D x6

F x36


### Step 5

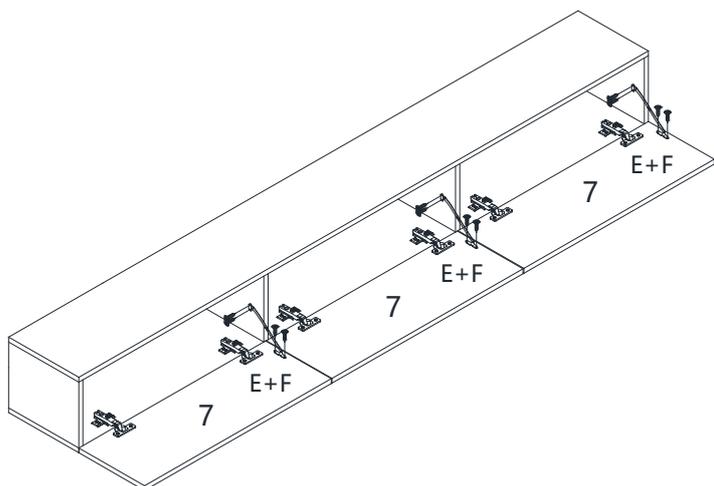

D x3


F x12

### Step 6

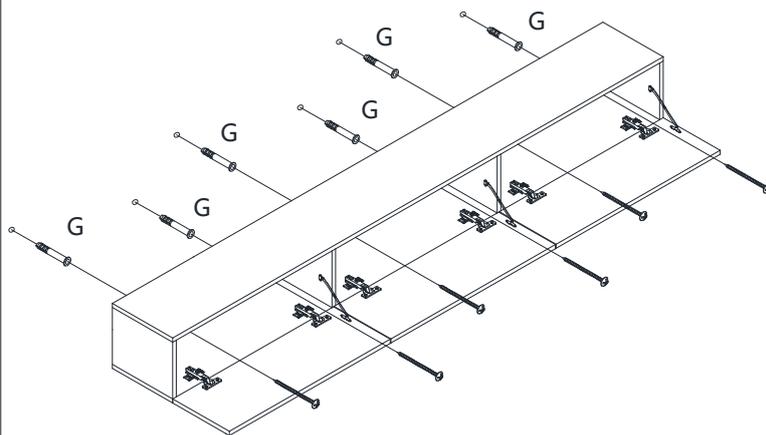

G x6

### Step 7

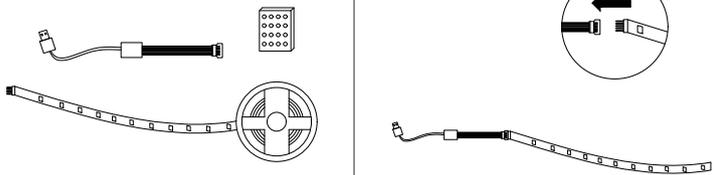

H x1

### Complete

