

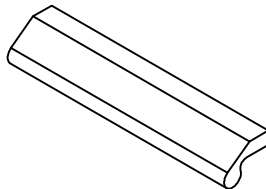
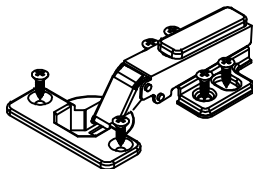



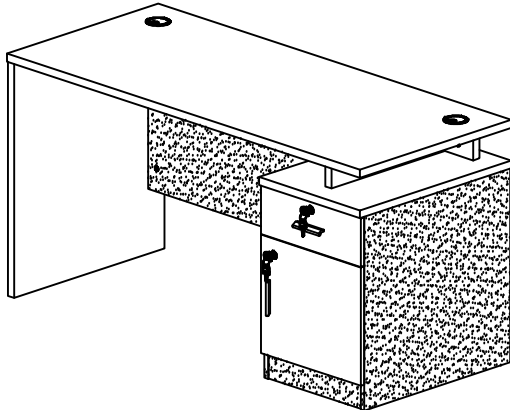
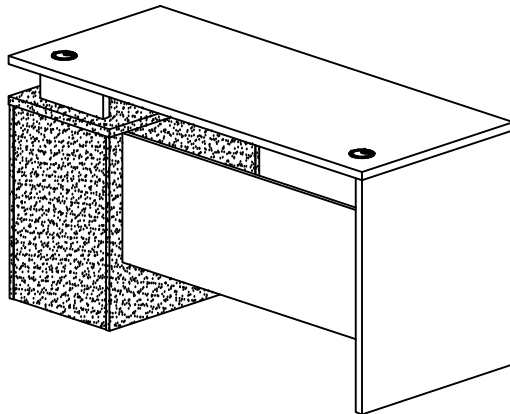

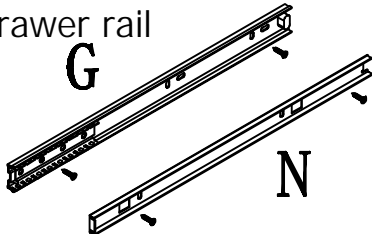
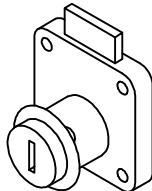
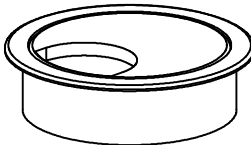
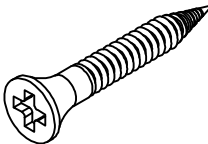

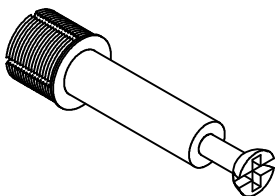
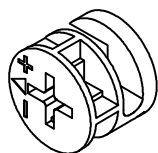


Minifix Screw  X37 A	Screw 3.5*14  X26 E	Handle  X2 I	Full overlay hinge  X2 M
Minifix  X37 B	Lock metal minifix  X2 F	Handle screw M*18  X4 J	  (1500X800X760)
Wood Minifix  X8 C	Drawer rail  X1 G/N	Lock  X2 K	
Wire box  X2 D	Screw 4*30  X4 H	Screw 4*20  X8 L	

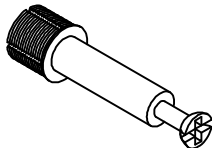

X6

A



X6

B




X2

C


## STEP:1

To fix the panel 3 and panel 4,  
then to fix panel 2 ,final to fix the panel 1

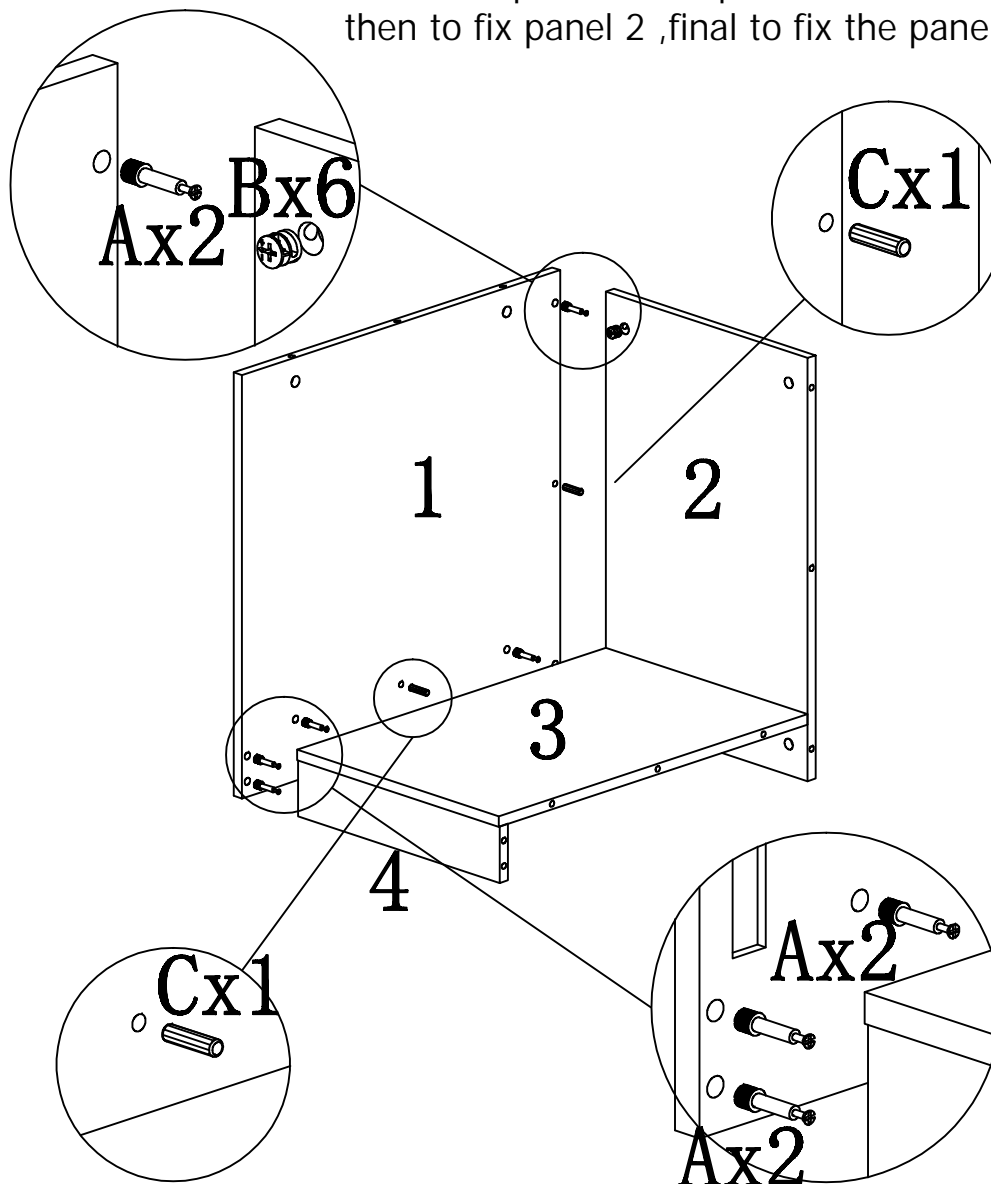


## STEP:2

To fix the side panel 5

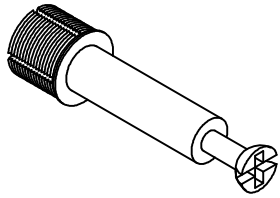


X6

A

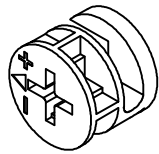


X6


B



X2


C

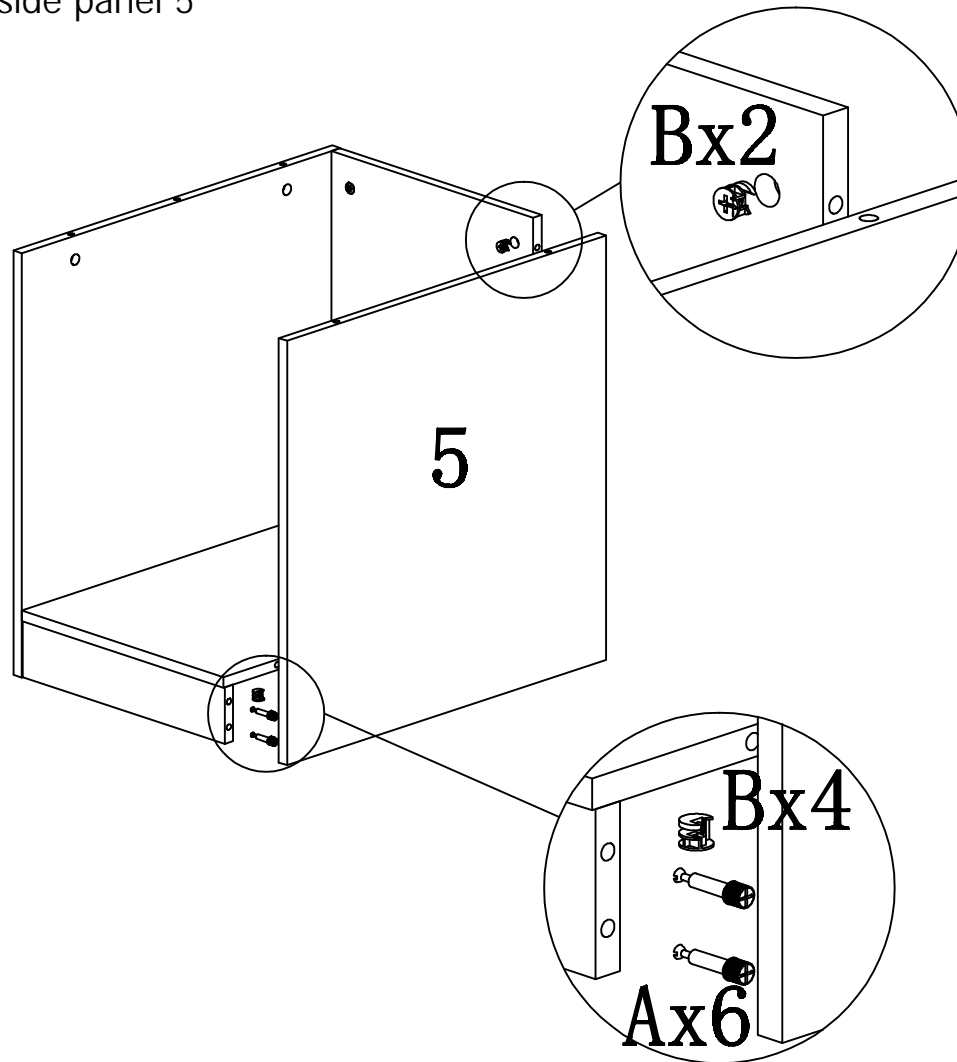

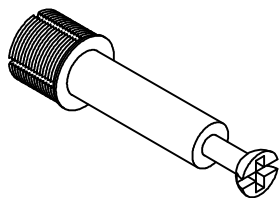


X4

A

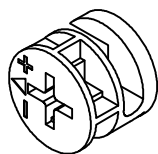

X4

B




X2


C

## STEP:3


To fix the upper panel 6

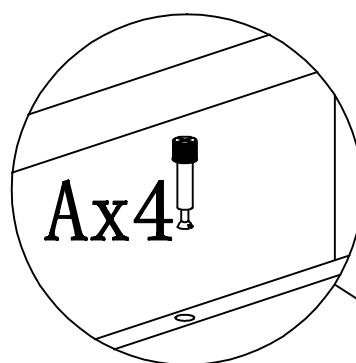


Ax4

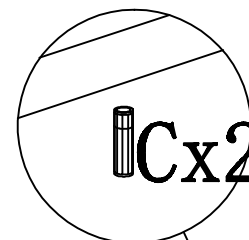

Cx2

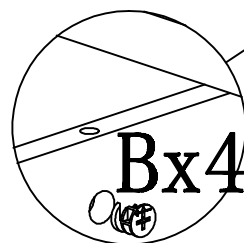


Bx4

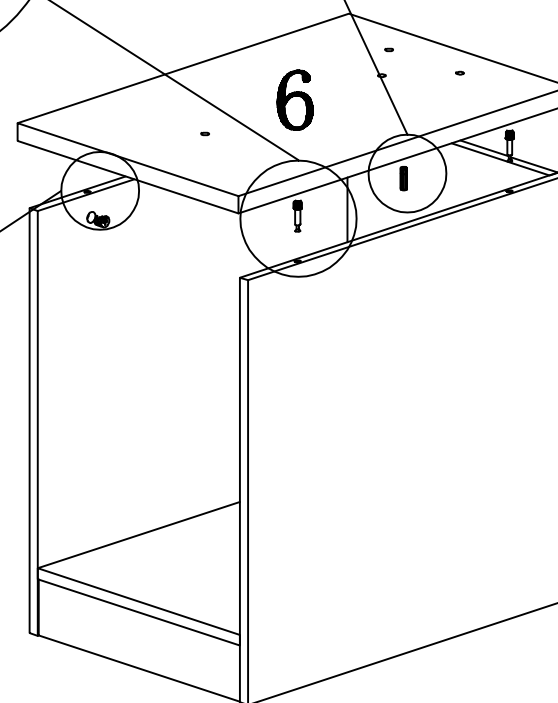


## STEP:4

To fix the support panel 7 and panel 8

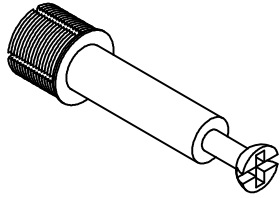


X1

A

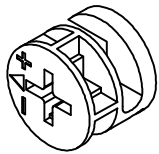


X1

B

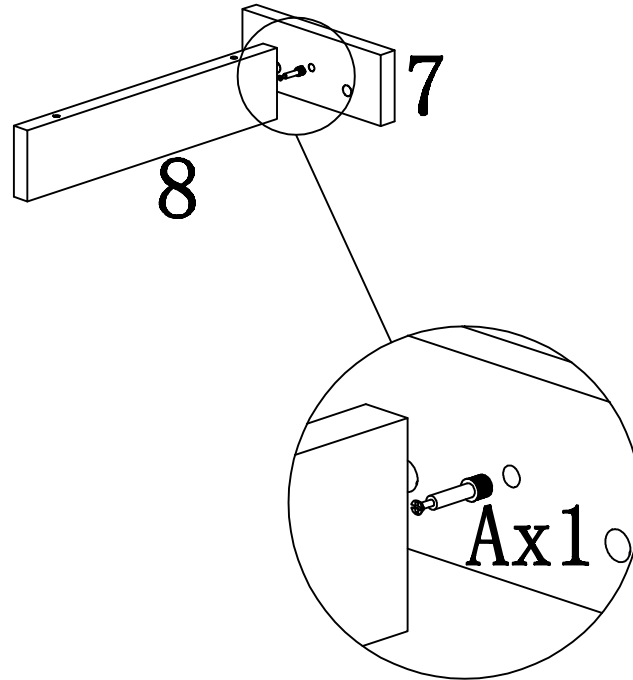


## STEP: 5

To fix the support frame on upper panel 6

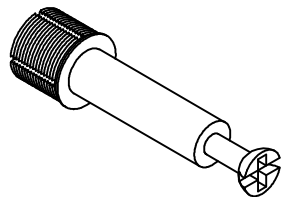


X4

A

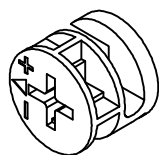


X4

B

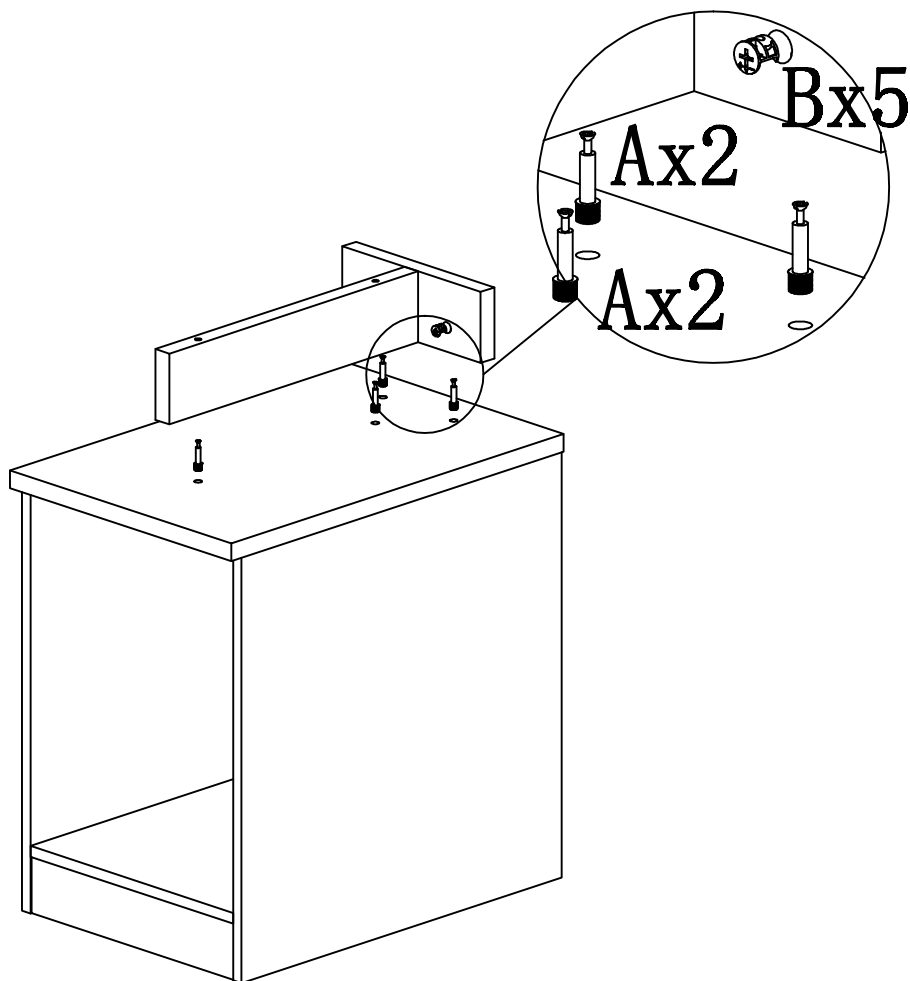


## STEP:6 To fix the front panel 9 and side panel 10

To fix the support panel 55

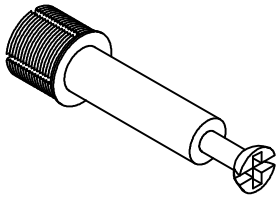


X8

A

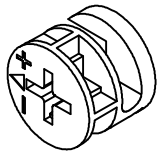



X8

B




X2

C

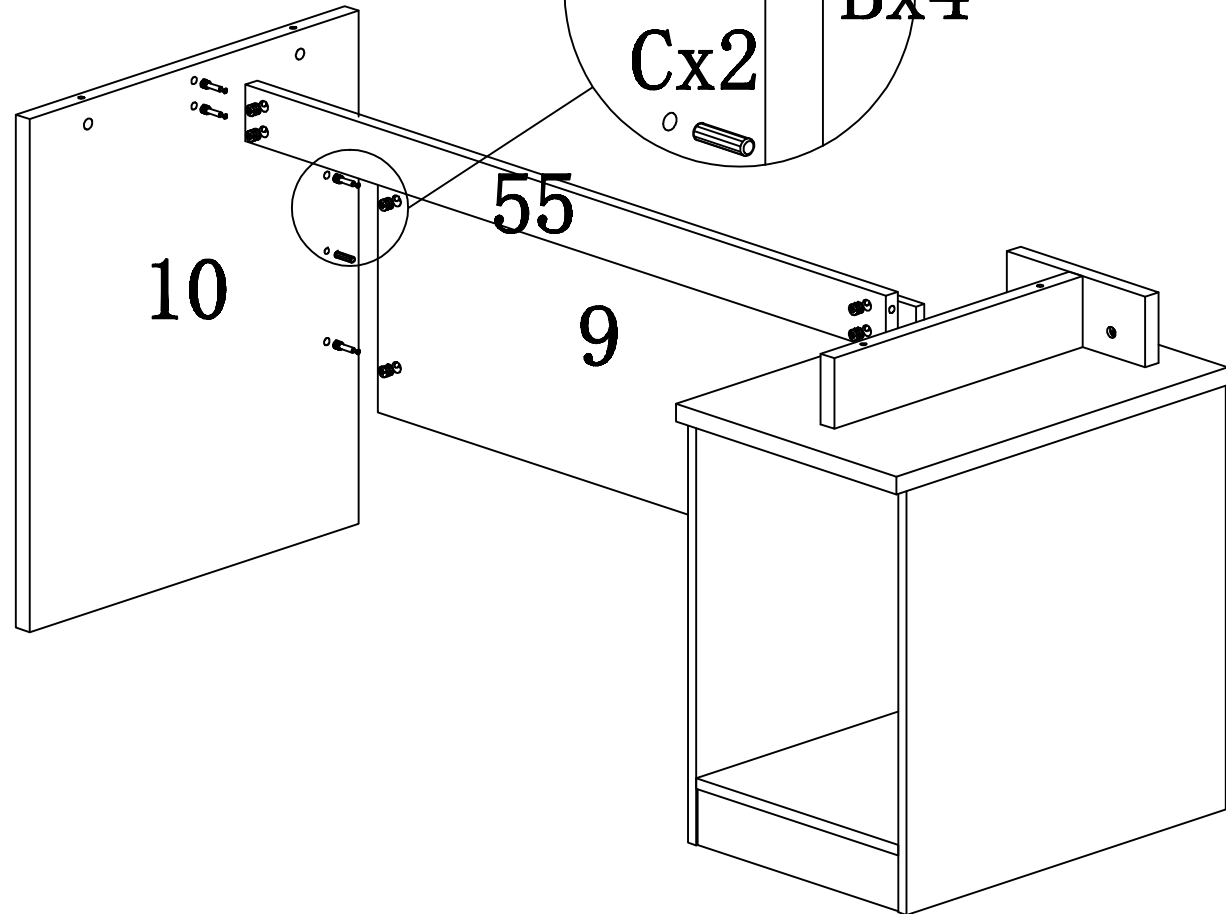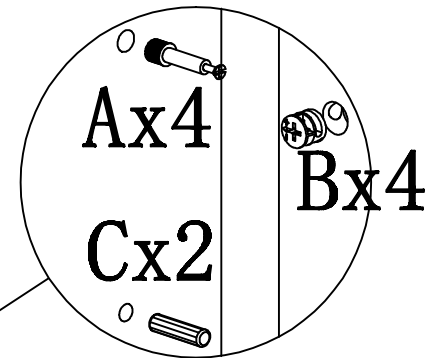


## STEP:7 To put the mixfix B on both side

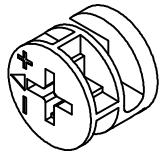

X4


B

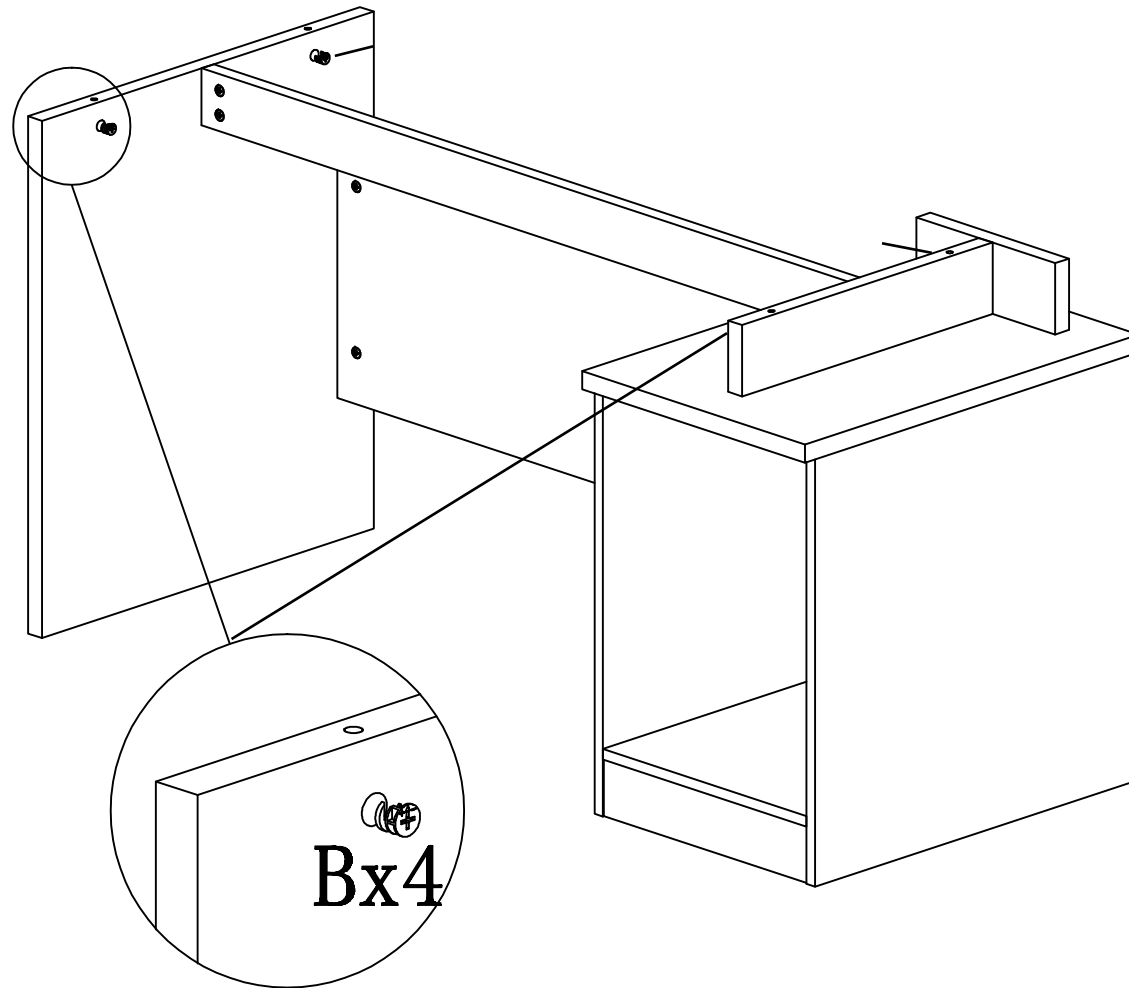





## STEP:8

To fix the mixfix screw A on table top panel 11

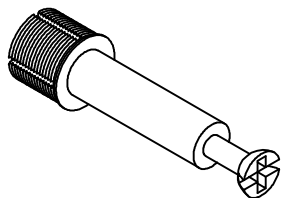


X4

A

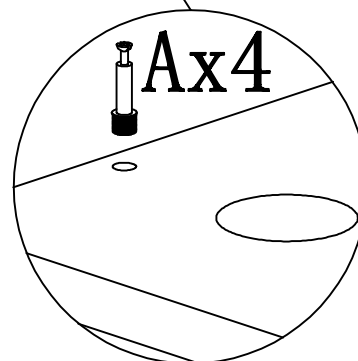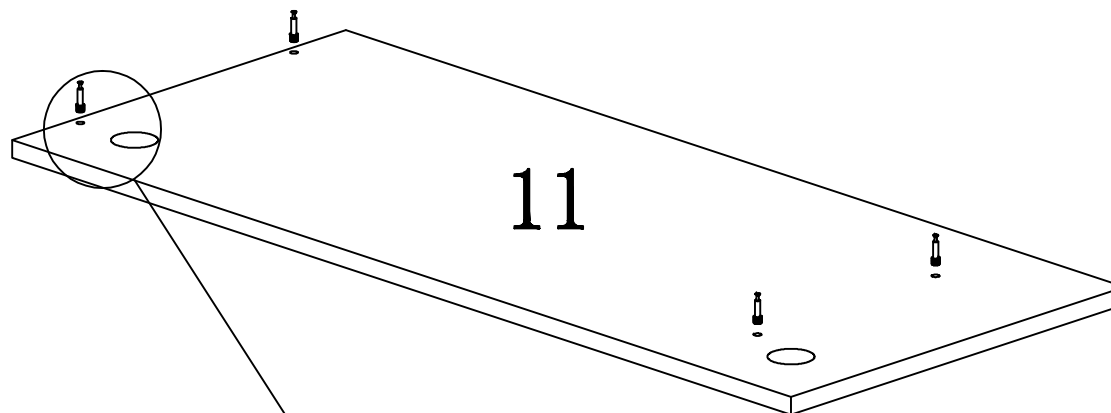


# 3. 5\*14STEP:9




X8

E




X2

F

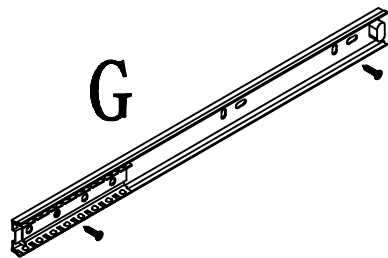

X1

G

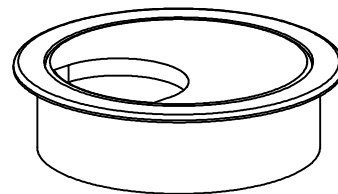

X2

D

Dx1

To fix the lock metal support F

Fx1+Ex2

Dx1








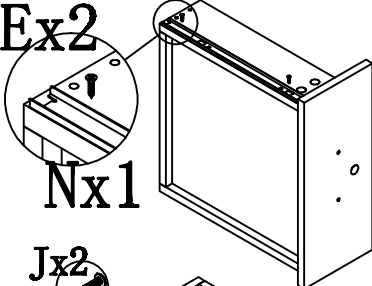
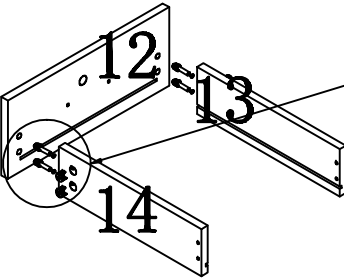
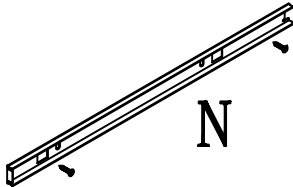
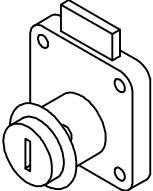
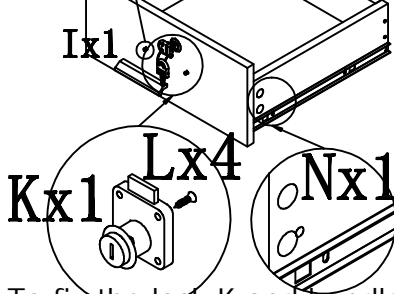
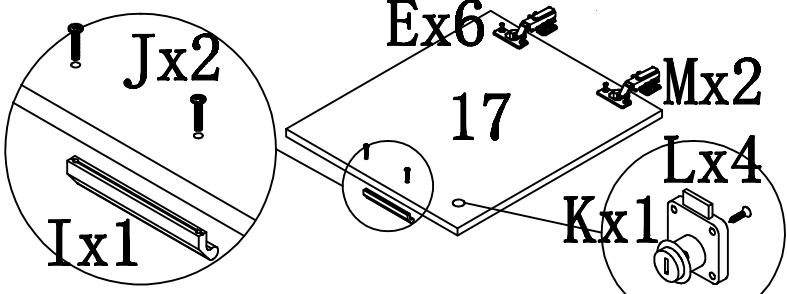
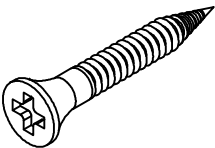

Gx2

To fix the drawer rail G on both side

Ex2

Fx1+Ex2

To fix the lock metal support F

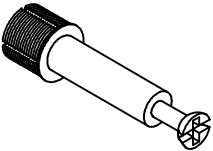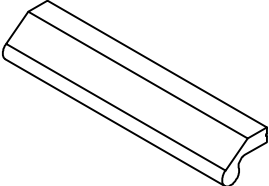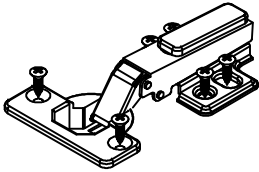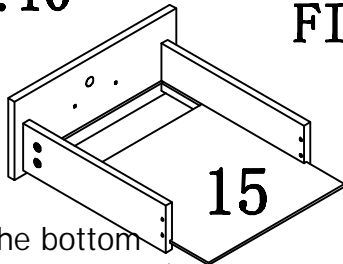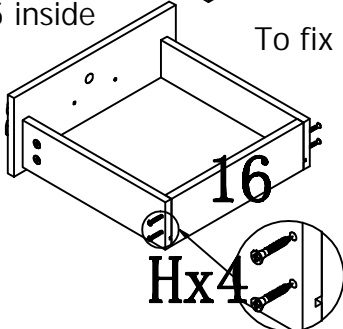 <p>X4 A</p>	 <p>X2 I</p>	 <p>X2 M</p> <p>To fix the both side rail N</p>	<p>STEP:10 FINISH</p>  <p>15</p> <p>To put the bottom panel 15 inside</p>  <p>16</p> <p>To fix panel 16</p> <p>Hx4</p> <p>Second</p>
 <p>X4 B</p>	 <p>X4 J</p>	 <p>Ex2 Nx1 Jx2</p> <p>Third</p>	<p>To fix the panel 12,13,14</p>  <p>12 13 14</p> <p>Ax4 Bx4</p> <p>First</p>
 <p>X1 N</p>	 <p>X2 K</p>	 <p>Ix1 Kx1 Lx4 Nx1</p> <p>To fix the lock K and handle I</p>	 <p>Ex6 Jx2 Ix1 Mx2 Lx4 Kx1</p> <p>17</p> <p>Final</p> <p>To fix the door hinge M and handle I ,then to fix the door in cabinet</p>
 <p>X4 H</p>	 <p>X8 L</p>		

Remark: In third ,to use screw L to fix bottom panel 15 four side more tough