




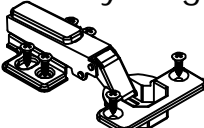
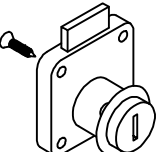

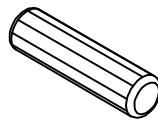
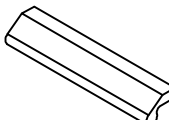

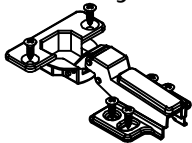



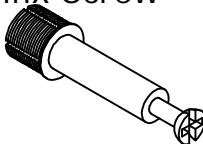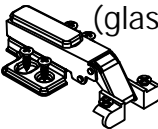



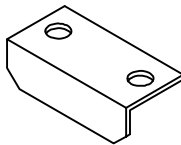


<div>Minifix Screw</div> <div></div> <div>X50A</div>	<div>Full overlay hinge (glass door)</div> <div></div> <div>X3F</div>	<div>Lock metal minifix</div> <div></div> <div>X3K</div>	<div>Back panel rubber fix</div> <div></div> <div>X12P</div>
<div>Minifix</div> <div></div> <div>X50B</div>	<div>Full overlay hinge</div> <div></div> <div>X7G</div>	<div>Lock</div> <div></div> <div>X2L</div>	<div>Half overlay hinge (glass door)</div> <div></div> <div>X3Q</div>
<div>Wood Minifix</div> <div></div> <div>X10C</div>	<div>Handle</div> <div></div> <div>X6H</div>	<div>Screw</div> <div></div> <div>X8M</div>	<div>Half overlay hinge</div> <div></div> <div>X2R</div>
<div>Back panel bar fix</div> <div></div> <div>X1D</div>	<div>Handle screw</div> <div></div> <div>X8I</div>	<div>Screw</div> <div></div> <div>X112N</div>	
<div>Shelves fix screw</div> <div></div> <div>X24E</div>	<div>Handle screw</div> <div></div> <div>X4J</div>	<div>Lock (inside)</div> <div></div> <div>X1O</div>	



(1200X400X2000)

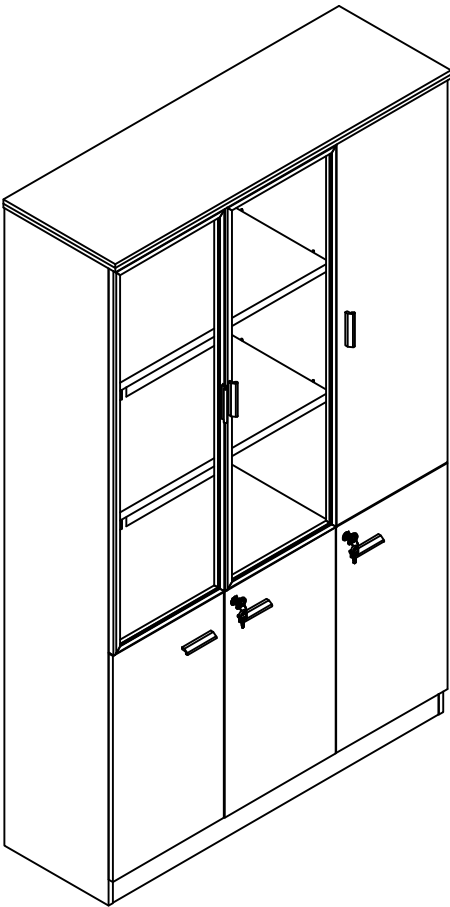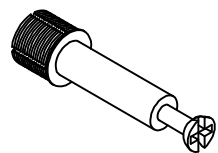


X20

A



X20

B




X3


C


STEP:1

To fix the panel 1 and panel 2

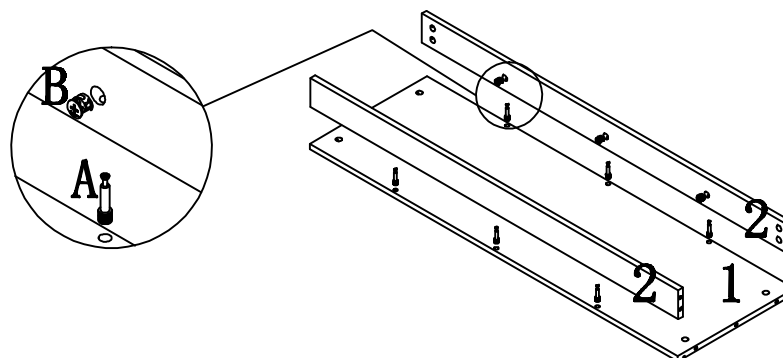

To fix the panel 3 firstly, then to fix the panel 5 and 7, final to fix the panel 4 and 6

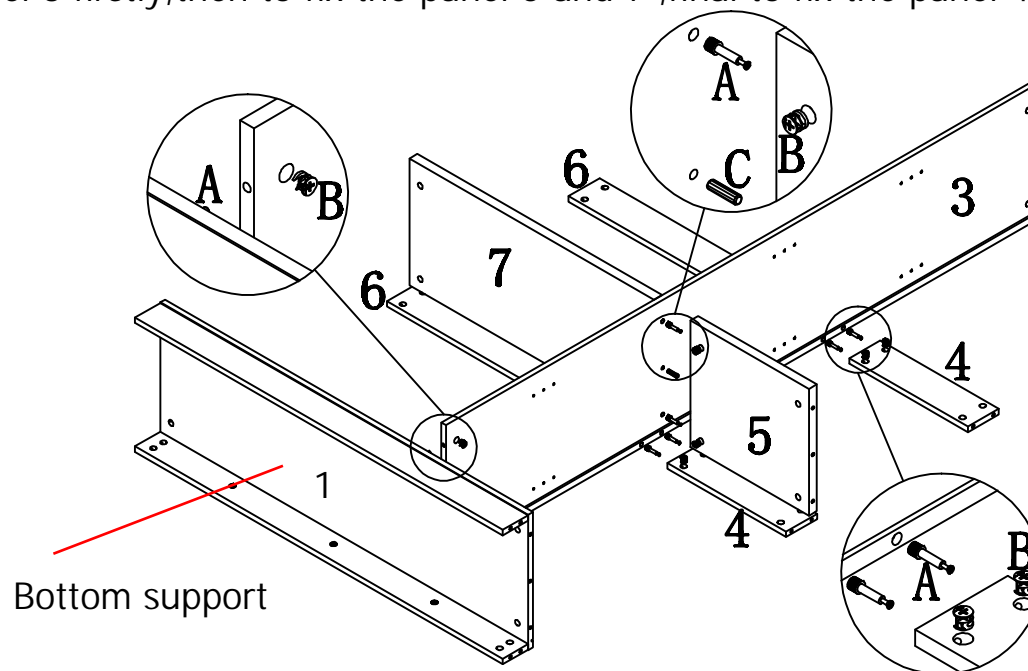

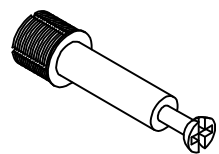


X24

A



X24

B




X4

C


STEP:2

To fix the side panel 8 and panel 9

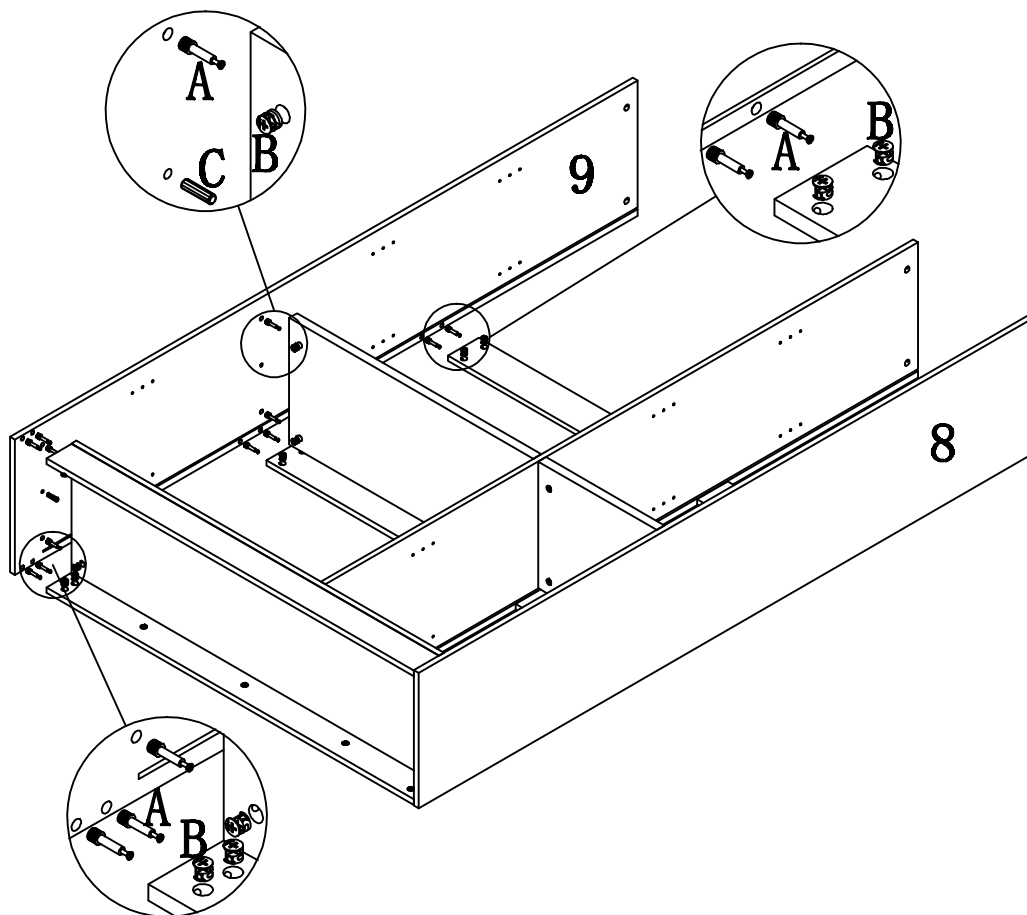

STEP:3

To put the back panel 10 and panel 11 inside ,
then use D to fix two panel 11

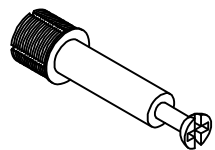


X6

A




X6

B




X3

C




X1

D

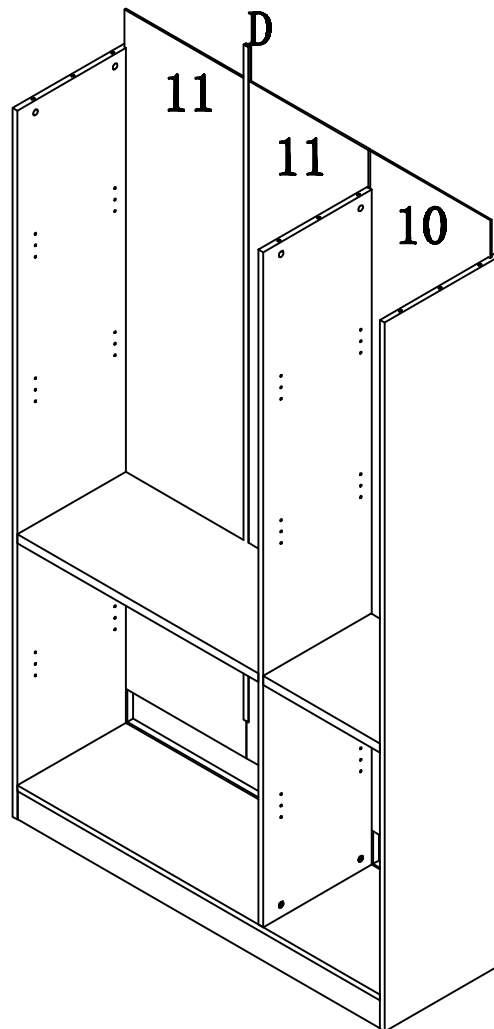

To fix the top panel 12

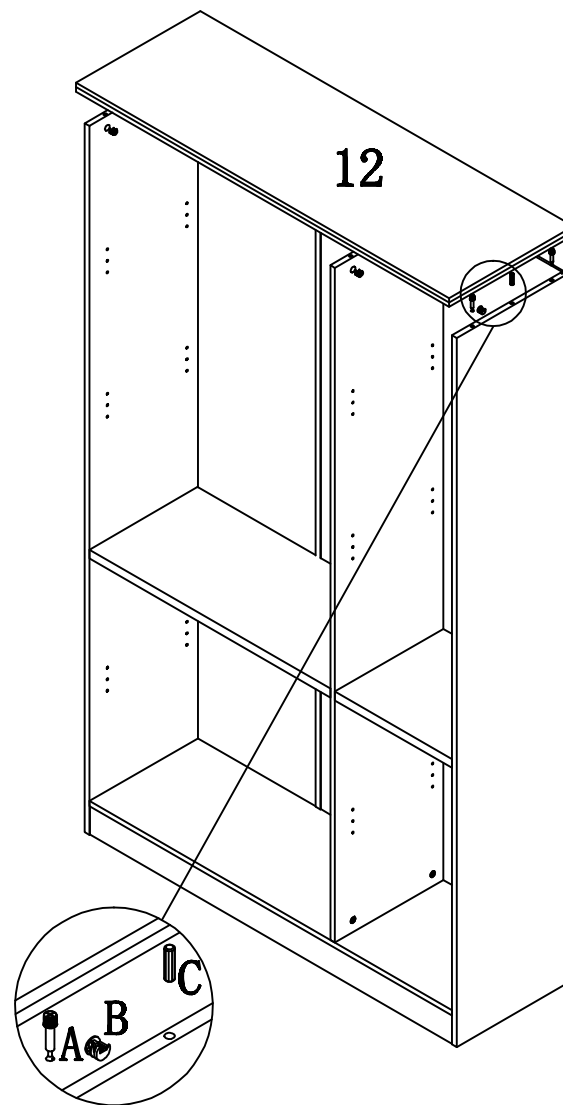




X24

E

STEP:4


To fix shelves fix screw E

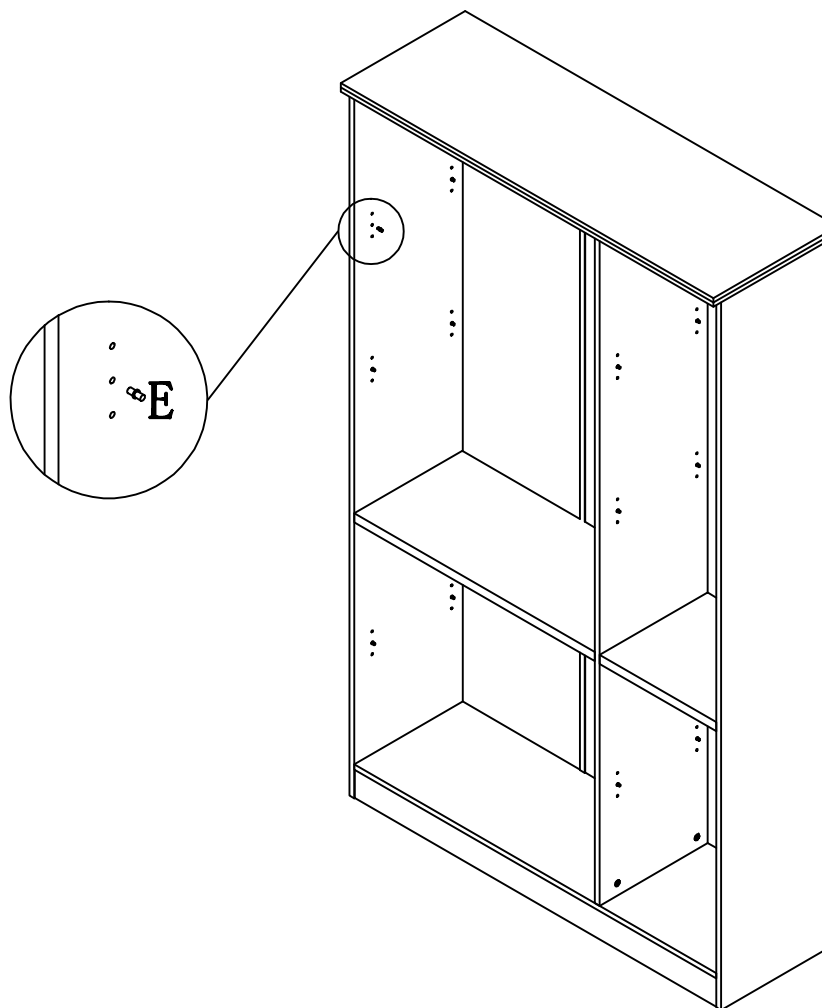

STEP:5

To put the all shelves panel inside ,to fix the hinges on doors,then to fix in cabinet

To fix lock metal support K

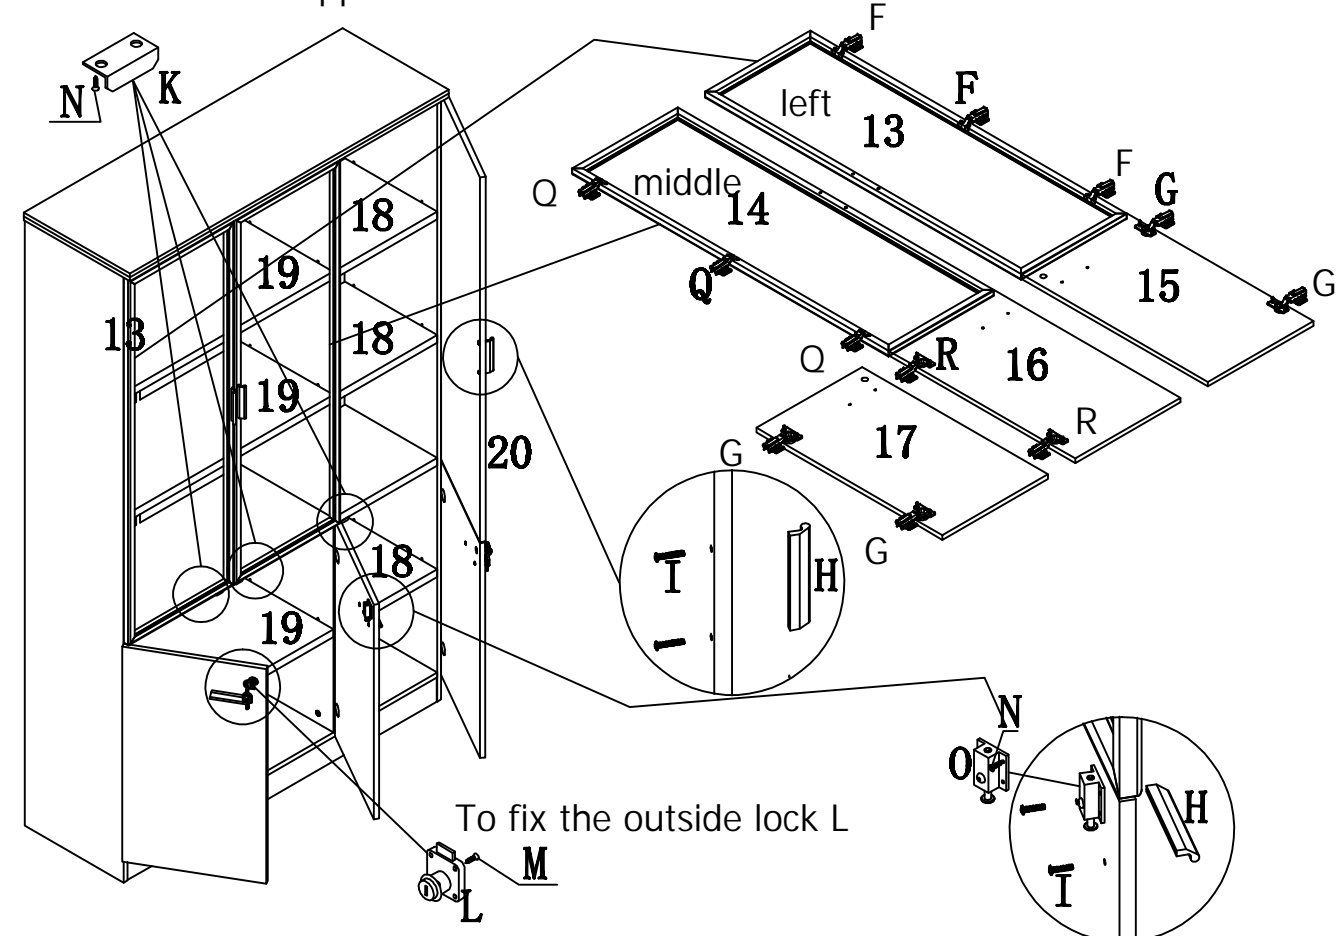

To fix the inside lock O on middle wood door and fix the handles for all doors

Remark: To use hinge G to fix right side upper wood door

X3	F	X2	L
X7	G	X8	M
X6	H	X112	N
X8	I	X1	O
X4	J	X3	Q
X3	K	X2	R

3.5*14STEP:6


To fix the back panel rubber P

FINISH



X12

N



X12

P

