





















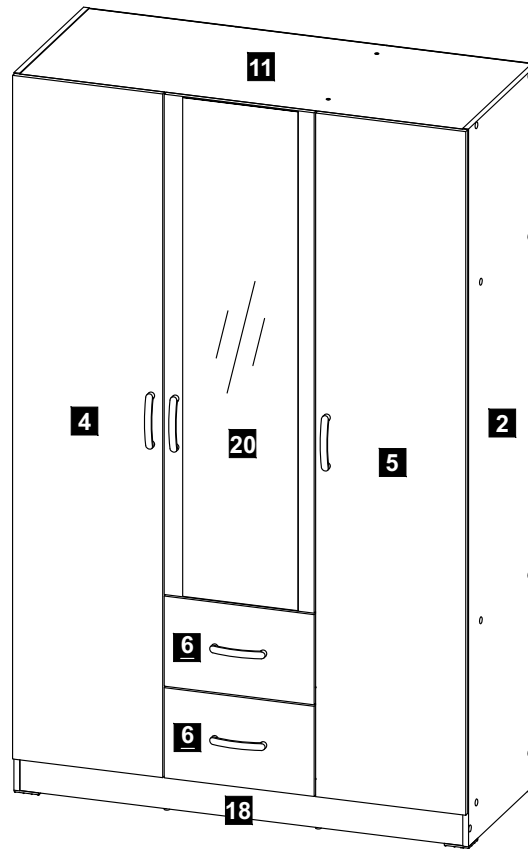


HARDWARE ITEM			QTY
A2		Screw m3.5 x 14mm	100
A7		Screw m4 x 30mm	10
A10		Screw m4 x 38mm	8
A17		Crosshead Screw m6.3 x 40mm	28
A34		Euro Screw m5 x 8mm	8
D6		Wood Dowel 8 x 25mm	8
E7		Door Hinges 2/8"	3
E8		Door Hinges 5/8"	6
F2		Mini Fix 15mm	10 Sets
F3		Mini Fix Double End Bolt 64mm	2 Sets
H6		Handle 128mm	5
L1		Leg Pin	4
L2		Plastic Leg L Shape	4
M7		Drawer Metal Slide 400mm	2 Sets
N1		Allen Key	1
N3		Nail	50 (+-3)
P		Hanging Steel Pipe 18mm x 786mm	1
P1		Hanger 21	1
Q4		Plastic Shelf Support with Steel Pin	4
R1		L Bracket	4
R2		Single Plastic Cap	8
Y		Crosshead Cover	22


COMPLETE**CAUTION**

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL. AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.


USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

**PRE - ASSEMBLY**


STEP 1 Assemble the Door Hinges 2/8" (E7) at panel no. 3 and Door Hinges 5/8" (E8) at panel no. 4 & 5 by using Screw m3.5 x 14mm (A2). Then, assemble the Handle (H6) by using Screw m4 x 30mm (A7) at all door panels.

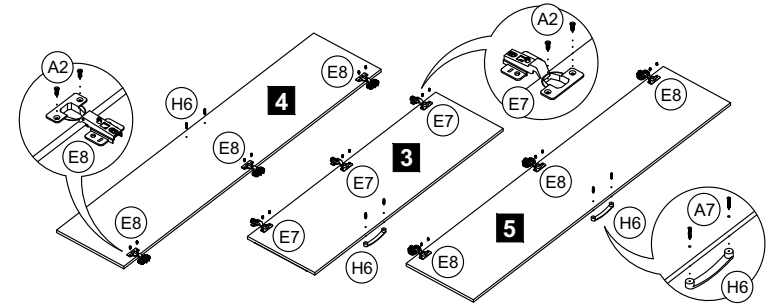


STEP 2 Assemble the Hanger 21 (P1) at panel no. 11 by using Screw m3.5 x 14mm (A2). Insert the Wood Dowel 8 x 25mm (D6) at panel no. 11 & 12. Then, insert the Mini Fix Cam (F3) at panel no. 13 & 14. Insert the Mini Fix Bolt (F2) at panel no. 13.

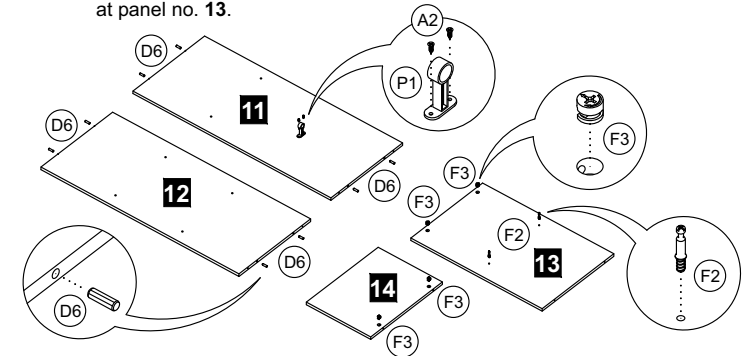


STEP 3 Assemble Drawer Metal Slide 400mm (M7) at panel no. 9 & 10 by using Euro Screw m5 x 8mm (A34). Insert the Mini Fix Cam (F2) at panel no. 10. Insert the Plastic Shelf Support with Steel Pin (Q4) at panel no. 2 & 9.

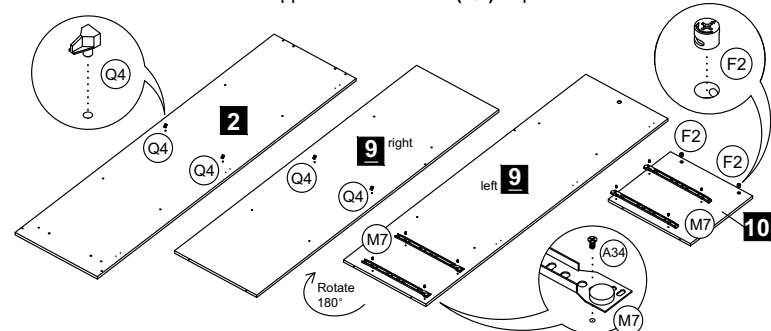


STEP 4 Insert the Mini Fix Bolt (F2) & assemble the Handle (H6) by using Screw m4 x 30mm (A7) at panel no. 6. Then, insert the Mini Fix Cam (F2) at panel no. 7 & 8.

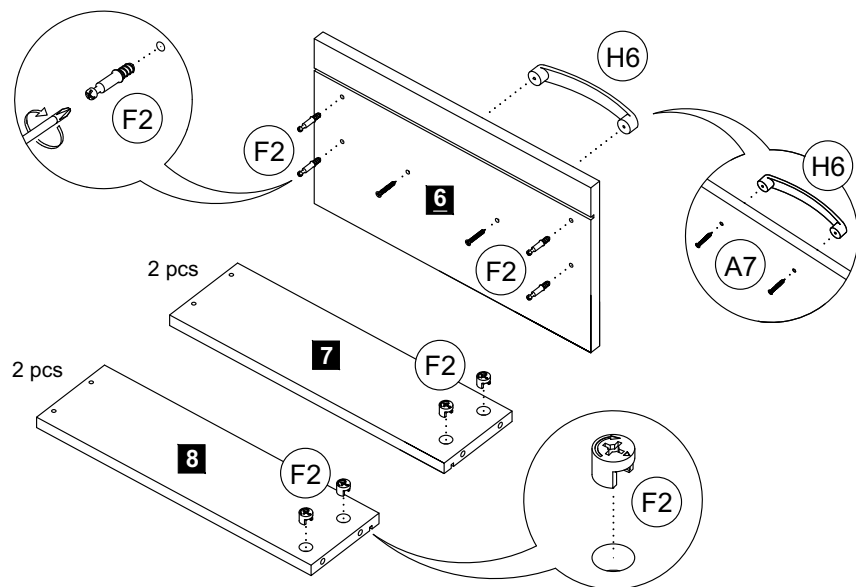


STEP 5 Assemble the panel no. 7, 8 & 19 together by using Screw m4 x 38mm (A10). Assemble 2 sets of drawer frame in repeated at step 5.

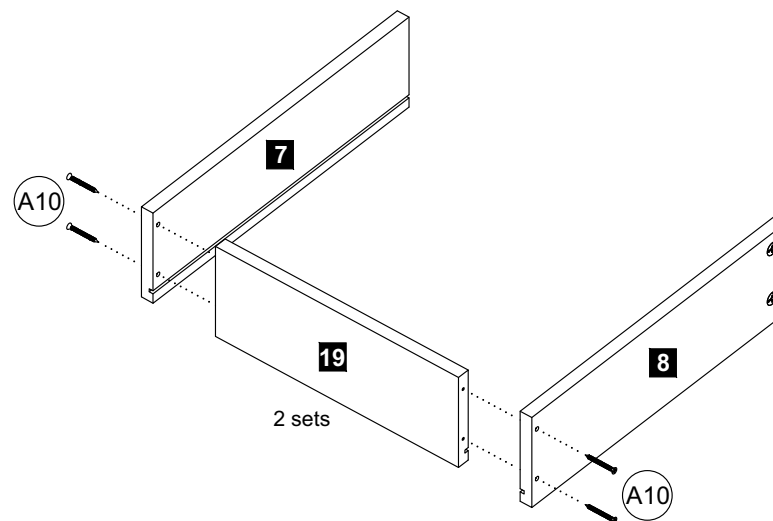


STEP 6 Slide the bottom panel no. 22 until the groove end & assemble the drawer front panel no. 6 by using Mini Fix 15mm (F2). Assemble 2 sets of drawer in repeated at step 6.

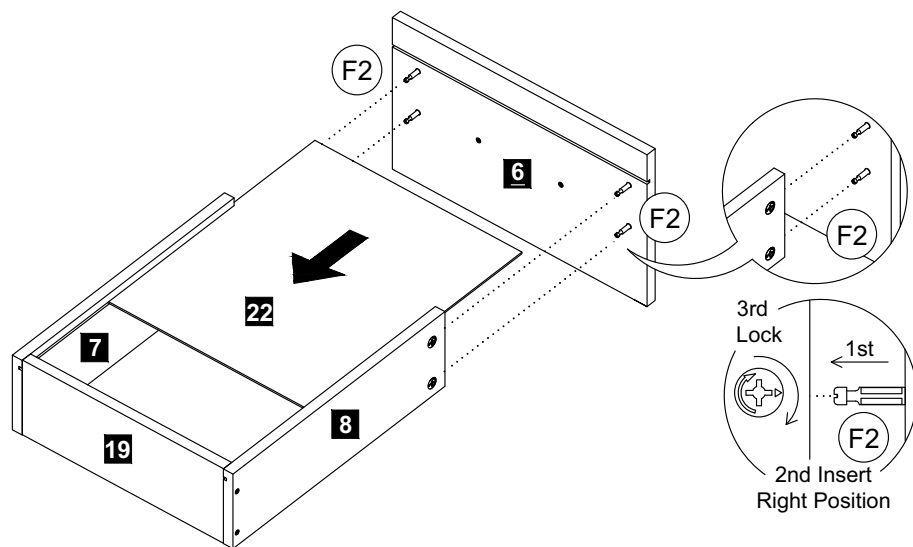


STEP 7 Assemble the Drawer Metal Slide 400mm (M7) & use Single Plastic Cap (R2) to secure the drawer bottom panel by using Screw m3.5 x 14mm (A2). Assemble 2 sets of drawer in repeated at step 7.

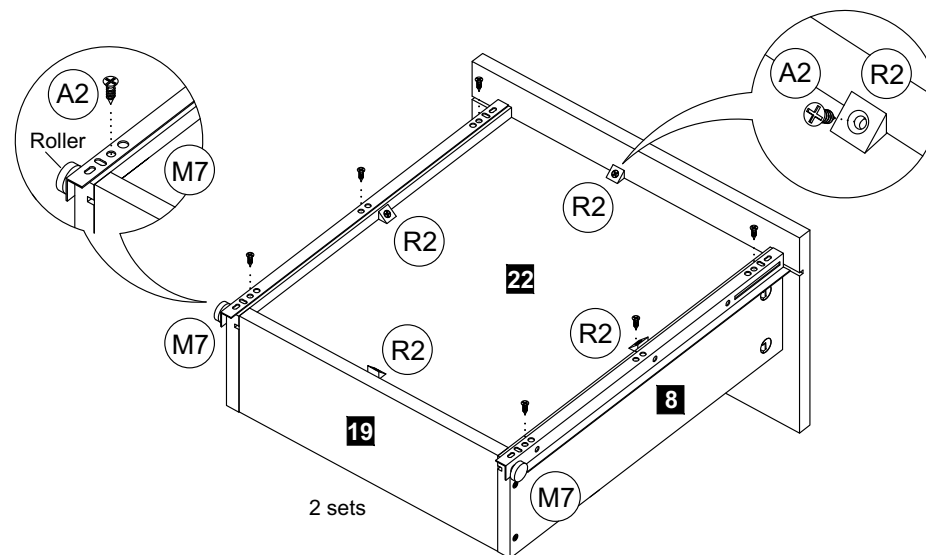


STEP 8 Assemble panel no. 9, 13 & 14 together by using Mini Fix End Bolt 64mm (F3).

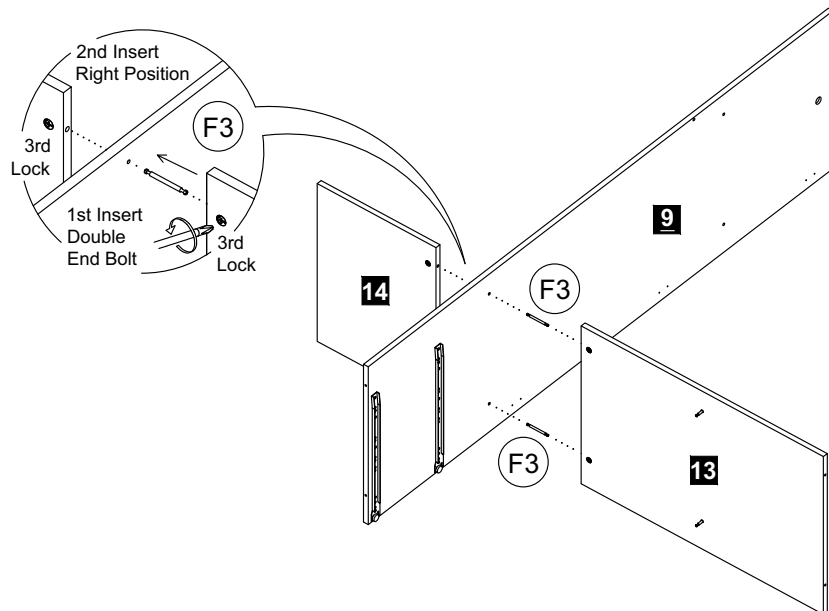


STEP 9 Assemble the panel no. 10 to the unit by using Mini Fix 15mm (F2). Assemble the panel no. 15 & 17 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17) & button the screw head with Crosshead Cover (Y).

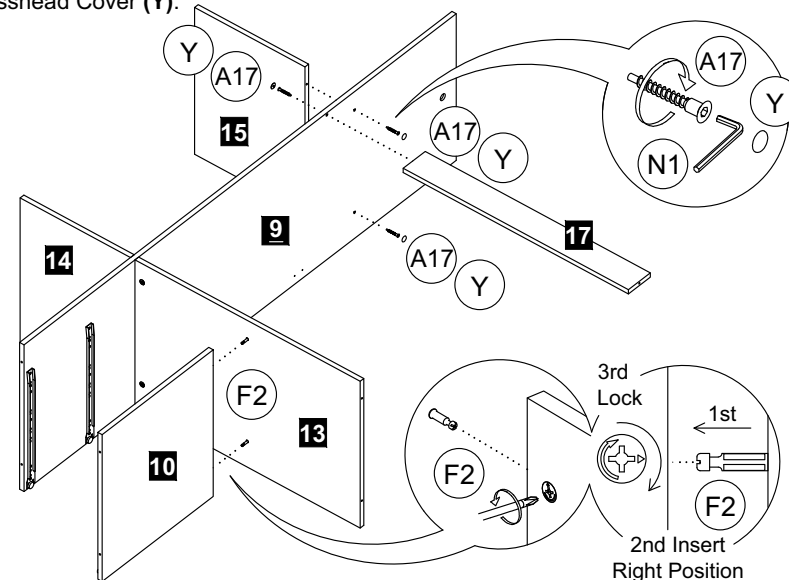


STEP 10 Assemble the panel no. 11 & 12 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17).

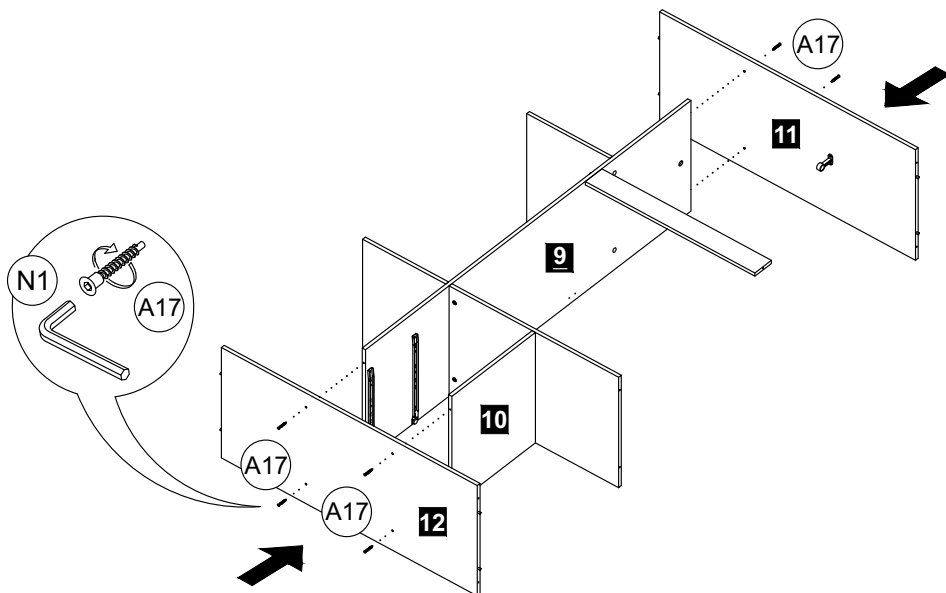


STEP 11 Assemble the panel no. 2 & 18 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17) & button the screw head with Crosshead Cover (Y). Then, insert the Hanging Steel Pipe 18 x 786mm (P) through the Hanger 21 (P1) until marking hole at panel no. 9.

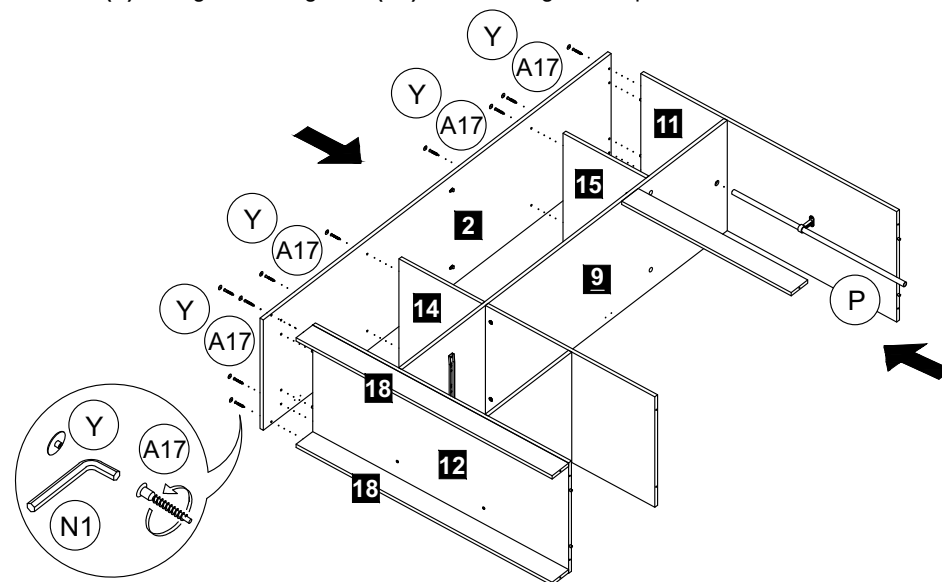


- STEP 12** Assemble the panel no. **1** to the unit by using Crosshead Screw m6.3 x 40mm (**A17**). Use Allen Key (**N1**) to tighten the Crosshead Screw m6.3 x 40mm (**A17**) & button the screw head with Crosshead Cover (**Y**).

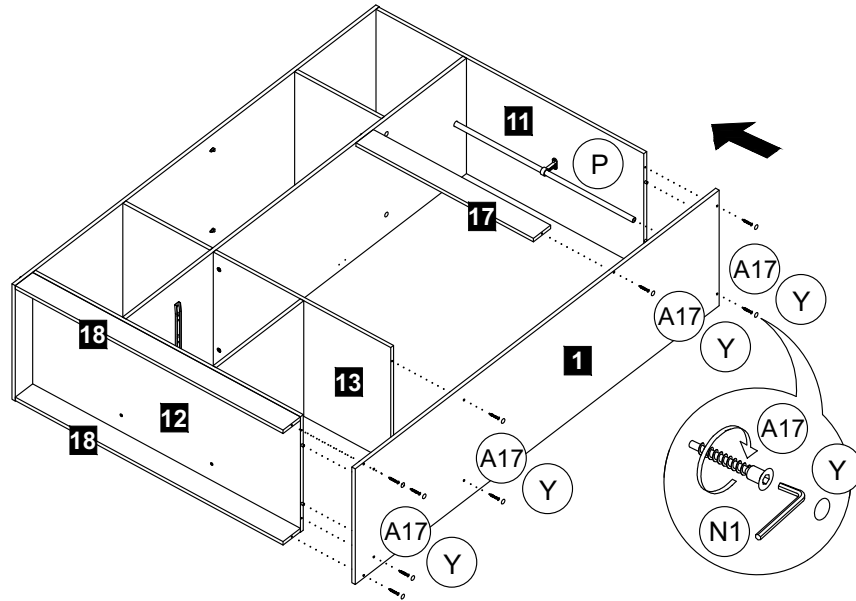

- STEP 13** Attach the panel no. **21** to the unit by using Nail (**N3**). Use Screw m3.5 x 14mm (**A2**) to secure the panel no. **21** to panel no. **17** & **18**. Then, assemble the L Bracket (**R1**) by using Screw m3.5 x 14mm (**A2**) at between panel no. **12** & **18**. Assemble the Plastic Leg L Shape (**L2**) by using Screw m3.5 x 14mm (**A2**) at between panel no. **18** and side panels. Nail the Leg Pin (**L1**) at the bottom of panel no. **18**.

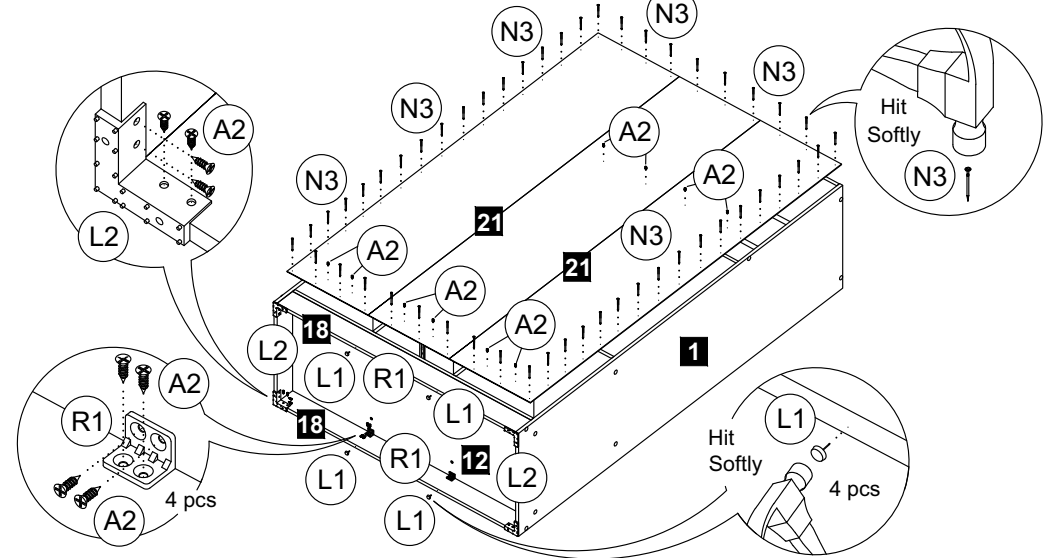

- STEP 14** Put in the panel no. **16** and support by the Plastic Shelf Support With Steel Pin (**Q4**). Then, insert the drawers to the unit.

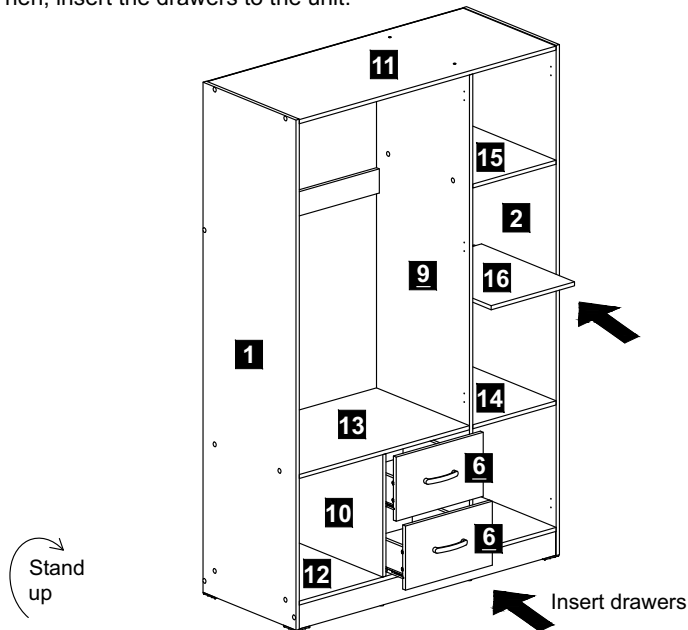

- STEP 15** Attach the door panels no. **3**, **4** & **5** to the unit. Adjust the Door Hinges 2/8" (**E7**) & Door Hinges 5/8" (**E8**) to screw parallel between door gaps.

