


HARDWARE ITEM			QTY
A2		Screw m3.5 x 14mm	100
A7		Screw m4 x 30mm	10
A10		Screw m4 x 38mm	8
A17		Crosshead Screw m6.3 x 40mm	28
A34		Euro Screw m5 x 8mm	8
D6		Wood Dowel 8 x 25mm	8
E7		Door Hinges 2/8"	3
E8		Door Hinges 5/8"	6
F2		Mini Fix 15mm	10 Sets
F3		Mini Fix Double End Bolt 64mm	2 Sets
H6		Handle 128mm	5
L1		Leg Pin	4
L2		Plastic Leg L Shape	4
M7		Drawer Metal Slide 400mm	2 Sets
N1		Allen Key	1
N3		Nail	50 (+-3)
P		Hanging Steel Pipe 18mm x 786mm	1
P1		Hanger 21	1
Q4		Plastic Shelf Support with Steel Pin	4
R1		L Bracket	4
R2		Single Plastic Cap	8
Y		Crosshead Cover	22

COMPLETE

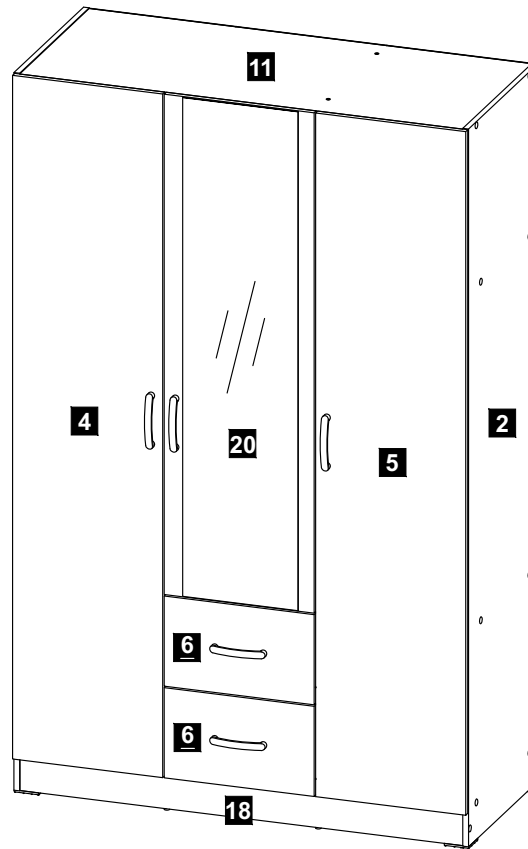

CAUTION


MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL. AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.

USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




PRE - ASSEMBLY


STEP 1 Assemble the Door Hinges 2/8" (E7) at panel no. 3 and Door Hinges 5/8" (E8) at panel no. 4 & 5 by using Screw m3.5 x 14mm (A2). Then, assemble the Handle (H6) by using Screw m4 x 30mm (A7) at all door panels.

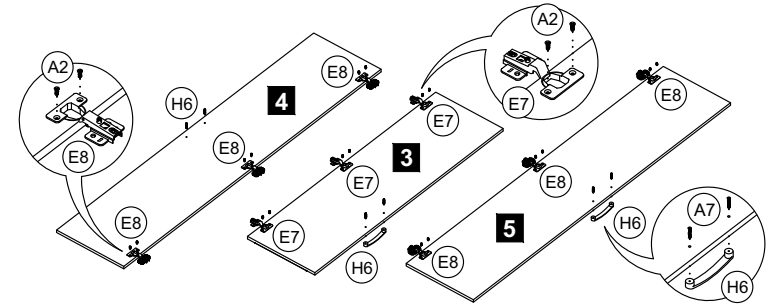


STEP 2 Assemble the Hanger 21 (P1) at panel no. 11 by using Screw m3.5 x 14mm (A2). Insert the Wood Dowel 8 x 25mm (D6) at panel no. 11 & 12. Then, insert the Mini Fix Cam (F3) at panel no. 13 & 14. Insert the Mini Fix Bolt (F2) at panel no. 13.

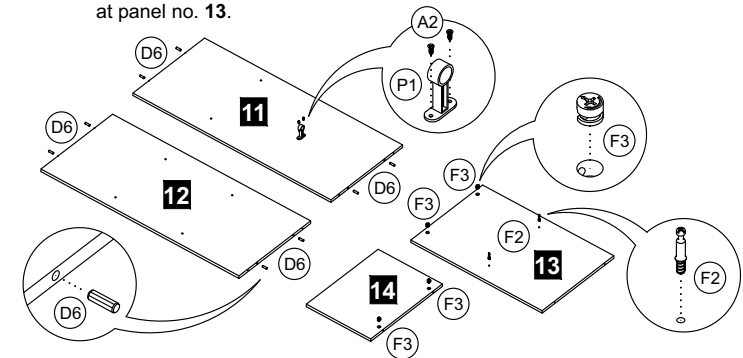


STEP 3 Assemble Drawer Metal Slide 400mm (M7) at panel no. 9 & 10 by using Euro Screw m5 x 8mm (A34). Insert the Mini Fix Cam (F2) at panel no. 10. Insert the Plastic Shelf Support with Steel Pin (Q4) at panel no. 2 & 9.

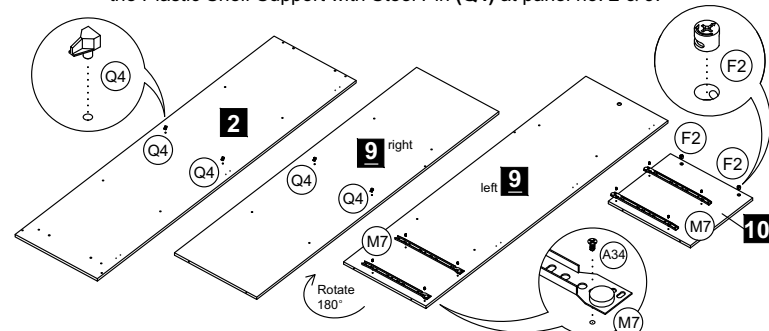


STEP 4 Insert the Mini Fix Bolt (F2) & assemble the Handle (H6) by using Screw m4 x 30mm (A7) at panel no. 6. Then, insert the Mini Fix Cam (F2) at panel no. 7 & 8.

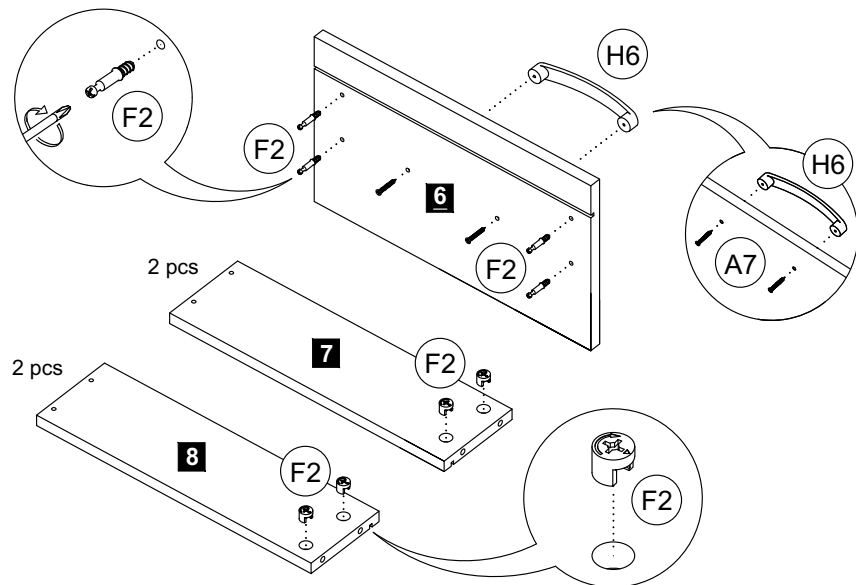


STEP 5 Assemble the panel no. 7, 8 & 19 together by using Screw m4 x 38mm (A10). Assemble 2 sets of drawer frame in repeated at step 5.

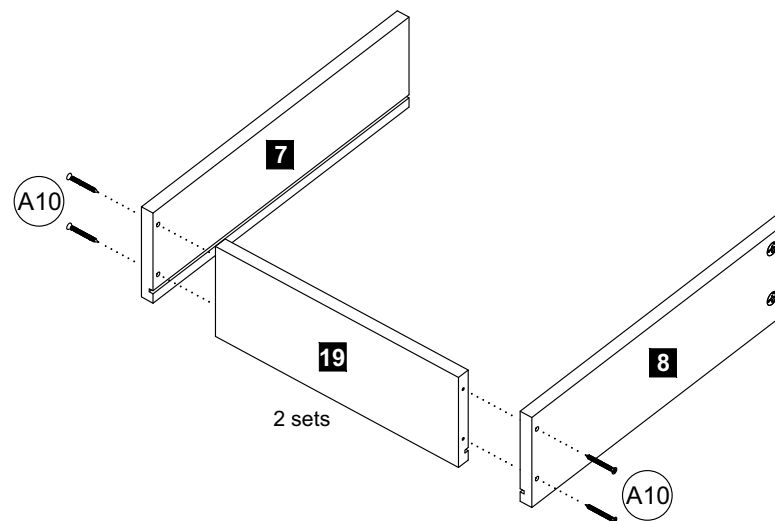


STEP 6 Slide the bottom panel no. 22 until the groove end & assemble the drawer front panel no. 6 by using Mini Fix 15mm (F2). Assemble 2 sets of drawer in repeated at step 6.

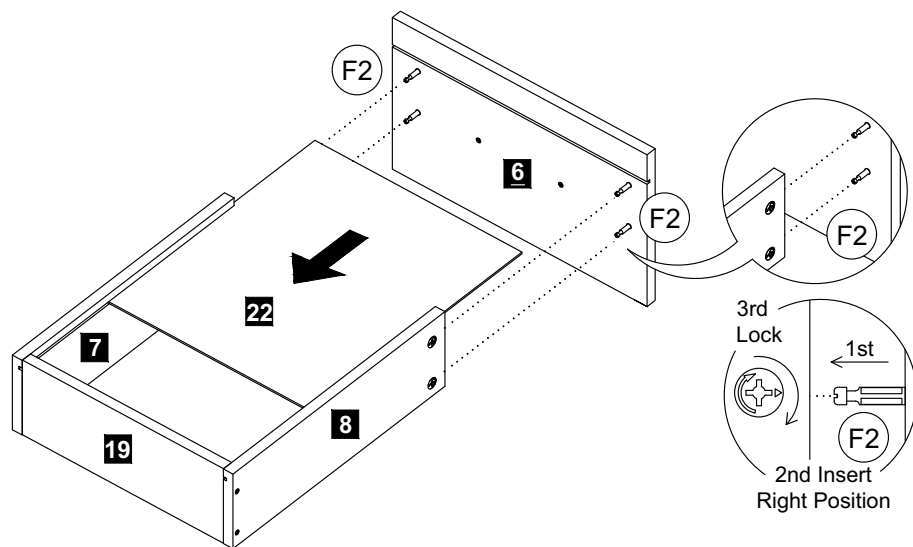


STEP 7 Assemble the Drawer Metal Slide 400mm (M7) & use Single Plastic Cap (R2) to secure the drawer bottom panel by using Screw m3.5 x 14mm (A2). Assemble 2 sets of drawer in repeated at step 7.

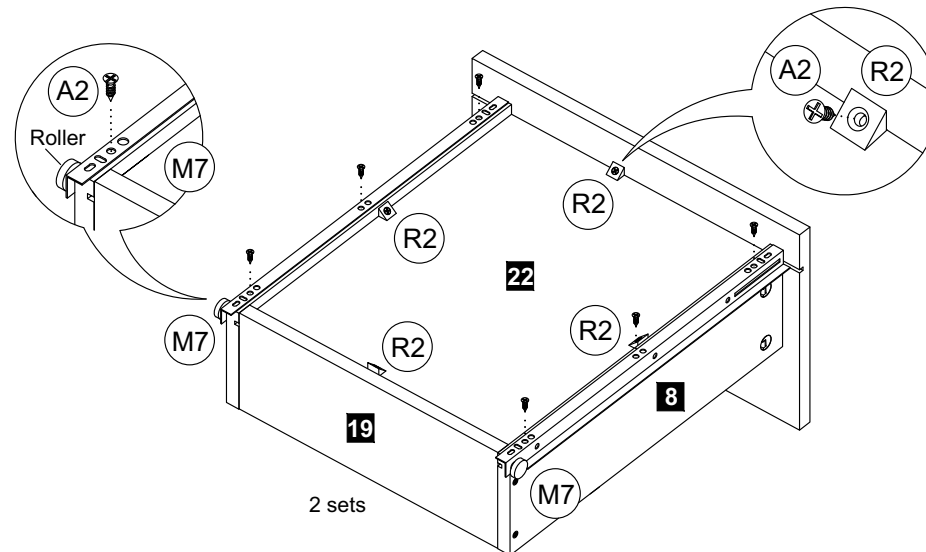


STEP 8 Assemble panel no. 9, 13 & 14 together by using Mini Fix End Bolt 64mm (F3).

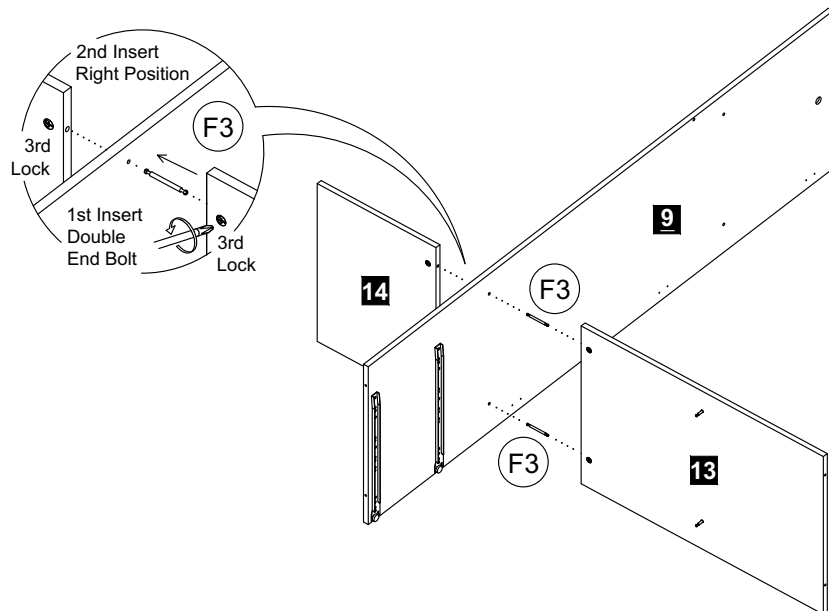


STEP 9 Assemble the panel no. 10 to the unit by using Mini Fix 15mm (F2). Assemble the panel no. 15 & 17 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17) & button the screw head with Crosshead Cover (Y).

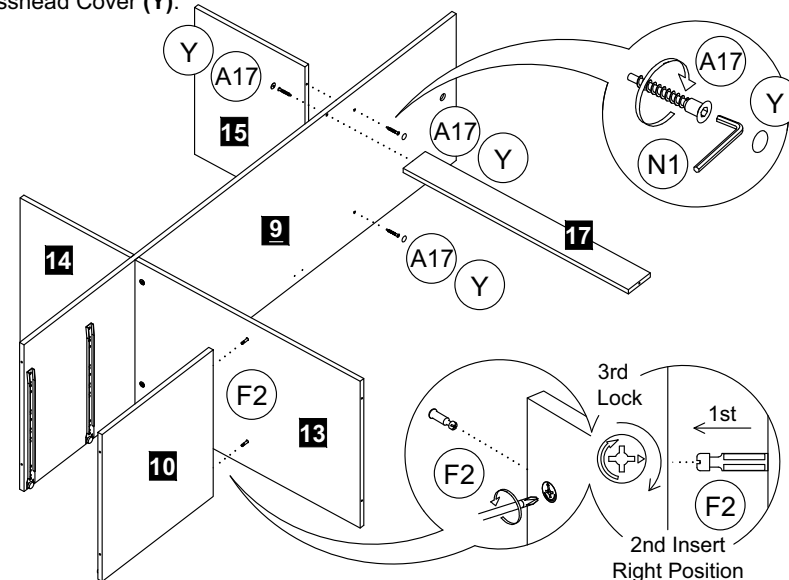


STEP 10 Assemble the panel no. 11 & 12 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17).

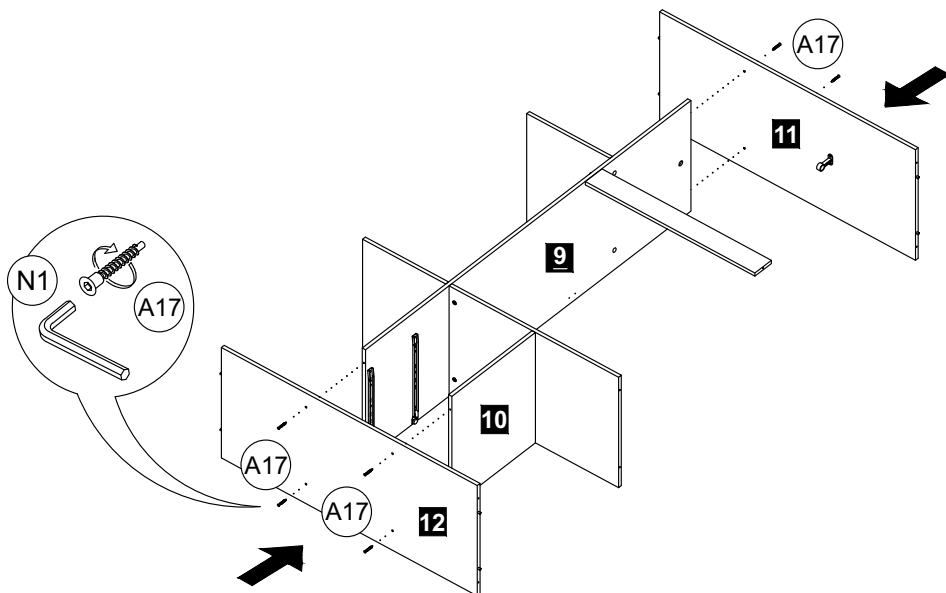


STEP 11 Assemble the panel no. 2 & 18 to the unit by using Crosshead Screw m6.3 x 40mm (A17). Use Allen Key (N1) to tighten the Crosshead Screw m6.3 x 40mm (A17) & button the screw head with Crosshead Cover (Y). Then, insert the Hanging Steel Pipe 18 x 786mm (P) through the Hanger 21 (P1) until marking hole at panel no. 9.

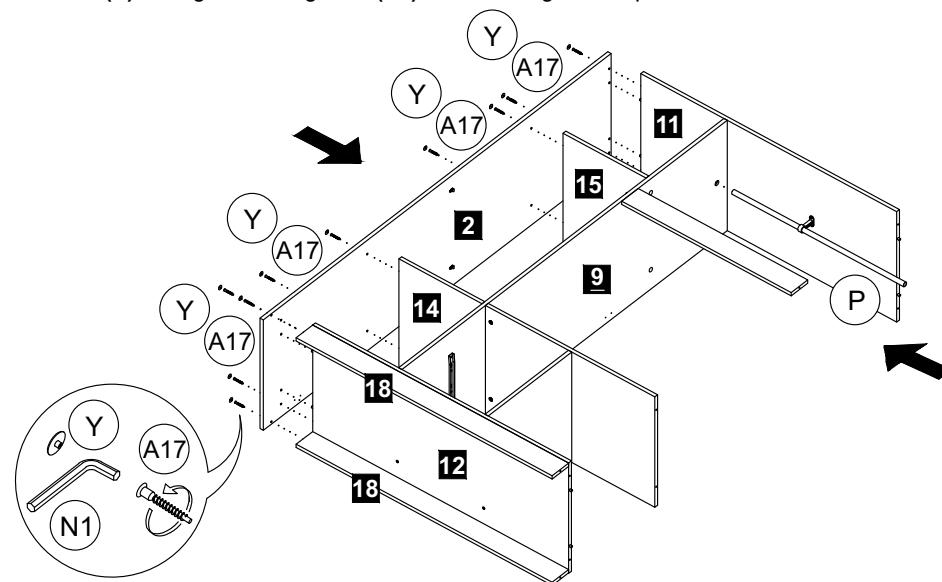


- STEP 12** Assemble the panel no. **1** to the unit by using Crosshead Screw m6.3 x 40mm (**A17**). Use Allen Key (**N1**) to tighten the Crosshead Screw m6.3 x 40mm (**A17**) & button the screw head with Crosshead Cover (**Y**).

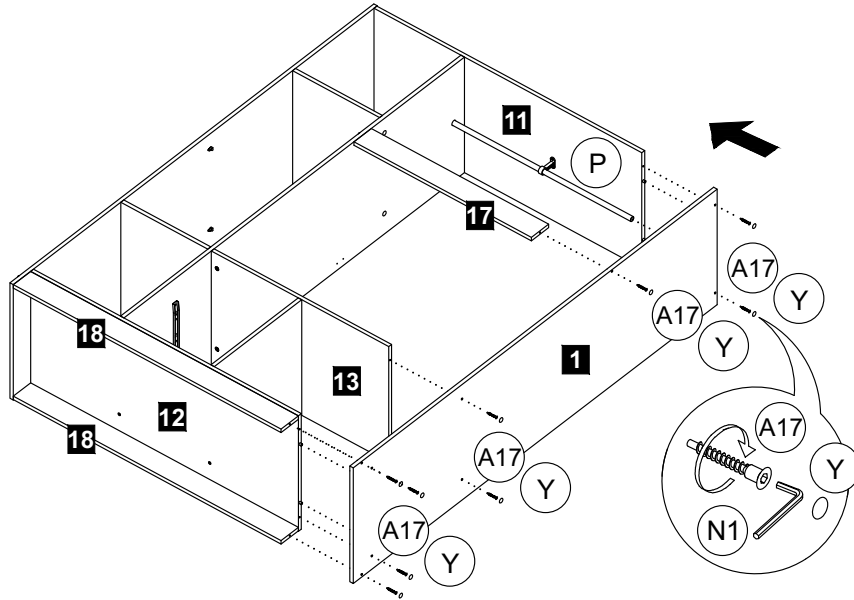

- STEP 13** Attach the panel no. **21** to the unit by using Nail (**N3**). Use Screw m3.5 x 14mm (**A2**) to secure the panel no. **21** to panel no. **17** & **18**. Then, assemble the L Bracket (**R1**) by using Screw m3.5 x 14mm (**A2**) at between panel no. **12** & **18**. Assemble the Plastic Leg L Shape (**L2**) by using Screw m3.5 x 14mm (**A2**) at between panel no. **18** and side panels. Nail the Leg Pin (**L1**) at the bottom of panel no. **18**.

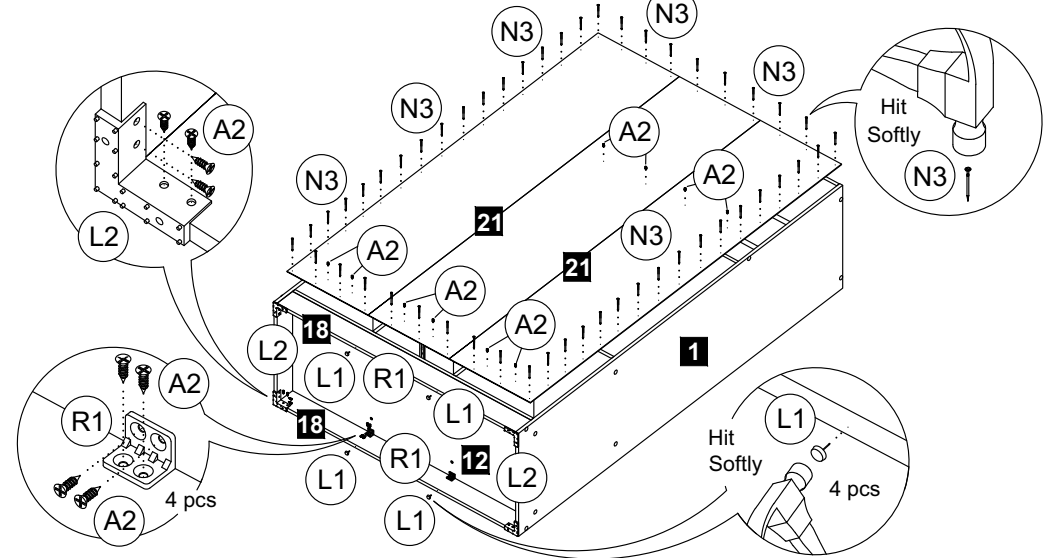

- STEP 14** Put in the panel no. **16** and support by the Plastic Shelf Support With Steel Pin (**Q4**). Then, insert the drawers to the unit.

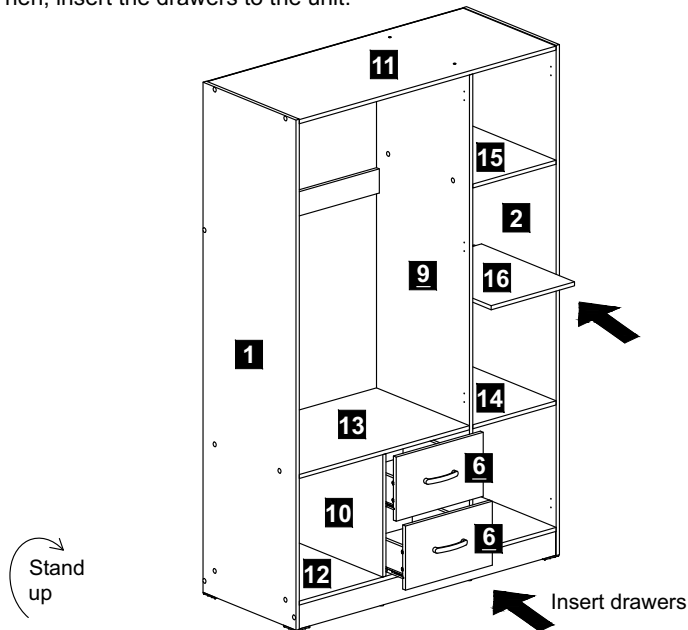

- STEP 15** Attach the door panels no. **3**, **4** & **5** to the unit. Adjust the Door Hinges 2/8" (**E7**) & Door Hinges 5/8" (**E8**) to screw parallel between door gaps.

