
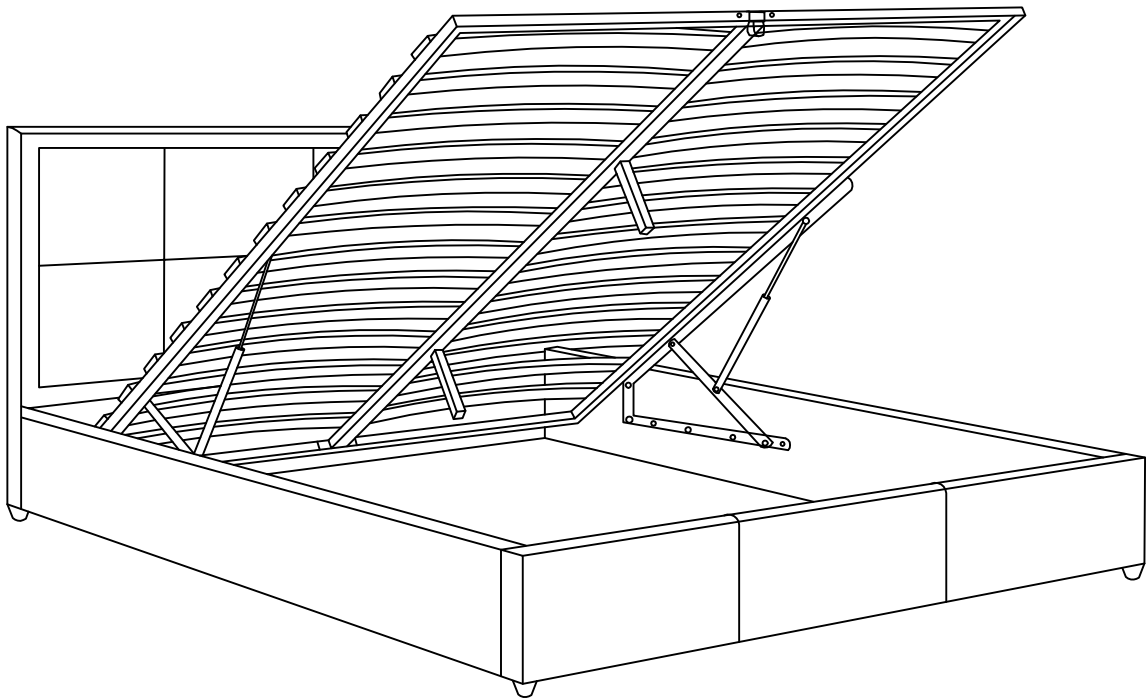
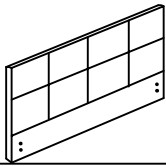
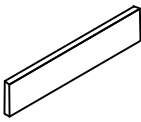
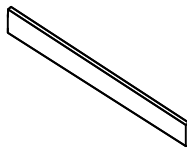
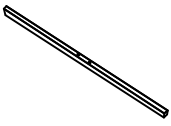




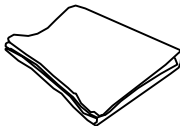


279-000005





ASSEMBLY INSTRUCTIONS




Parts List

A HEAD BOARD 1PC 	B FOOT BOARD 1PC 	C SIDE RAIL 2PCS 	D BEDSTEAD RAIL 2 SETS 
E BEDSTEAD RAIL 2 SETS 	F SLAT 30 PCS 	G Single Plastic Cap 30pcs 	H Double Plastic Cap 15pcs 
I LEG 4 PCS 	J 4 PCS 	K Support Leg 2 PCS 	L 2 pcs 
M Non-woven fabrics 1pc 	N 1 PCS 	O Center Support Bar 1pc 	P Digging rope 1PC 

Hardware List


1 M8*30 x16 PCS 	2 M8*40 x 14 PCS 	3 14 pcs 	4 8 pcs 
5 8 pcs 	6 M5 x1 PC 	7 1 pcs 	8 1 pcs 
9 M4*40x 4PCS 			

Step1

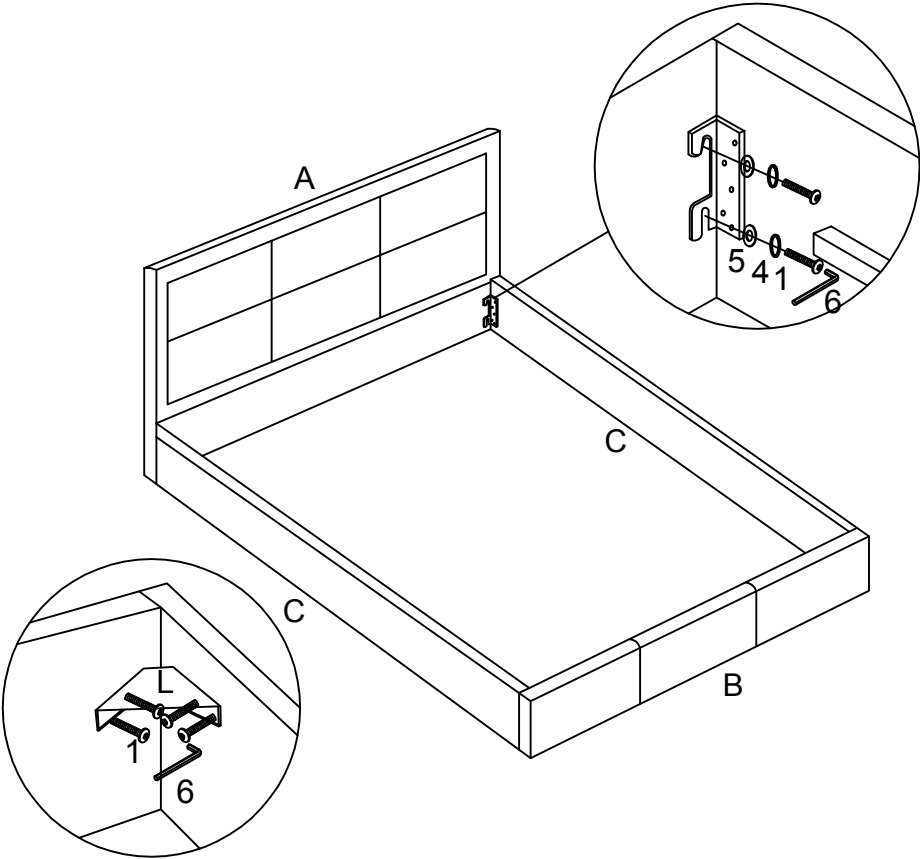


5.x8	
4.x8	
L.x2	
6.x1	
1.x16	

Step2

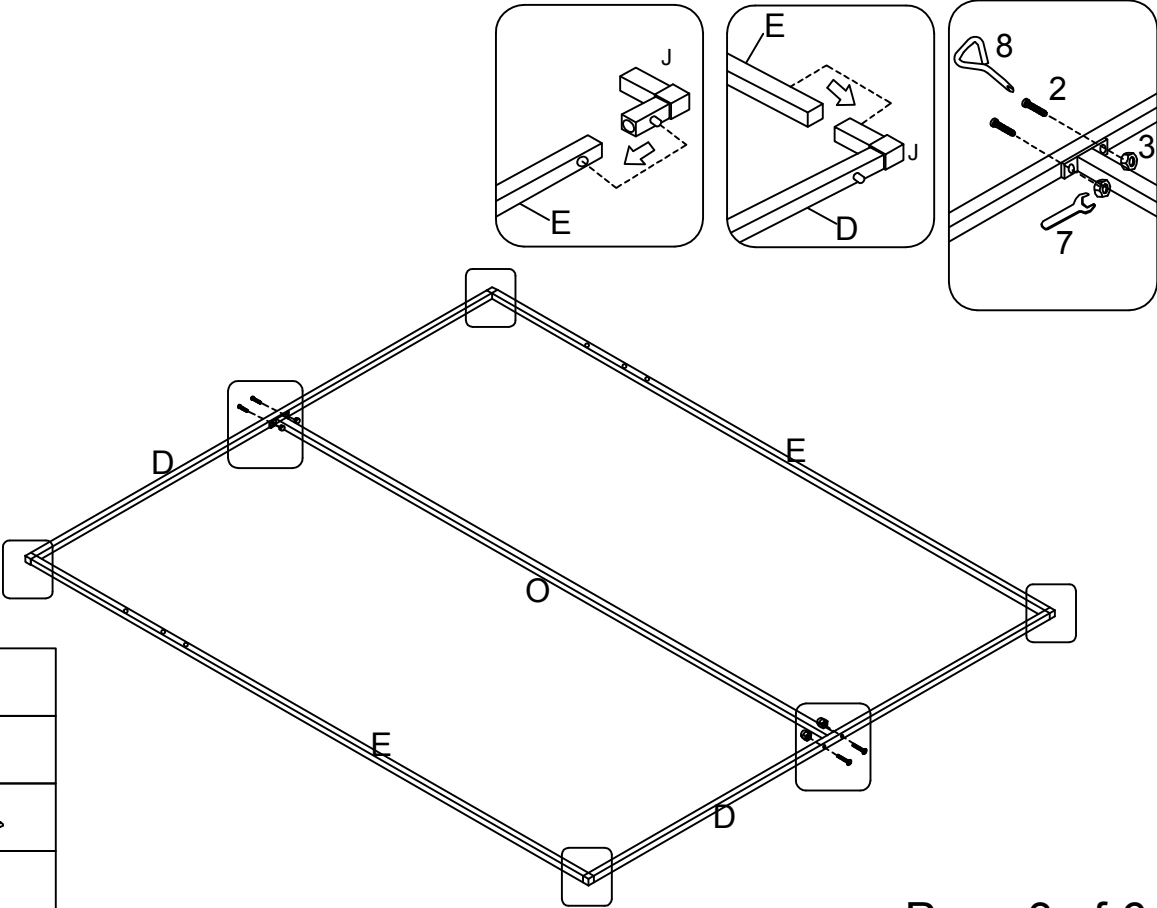

J.x4	
7.x1	
8.x1	
3.x4	
2.x4	


Step3

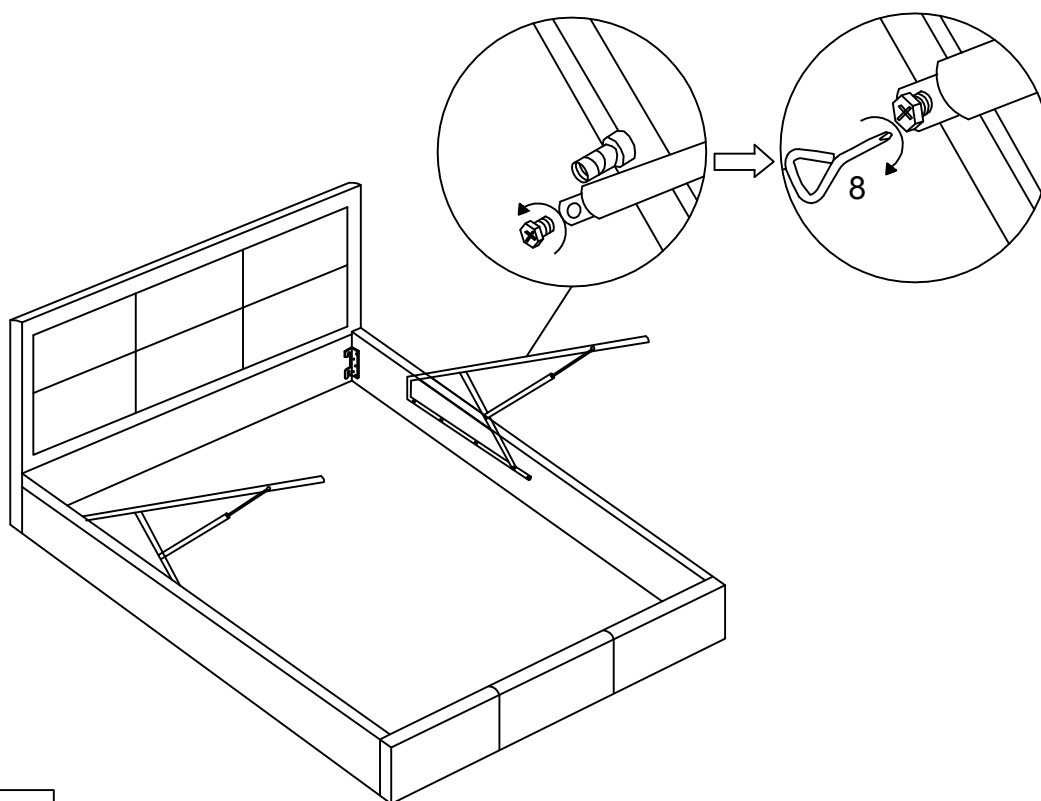

8.x1



Step4

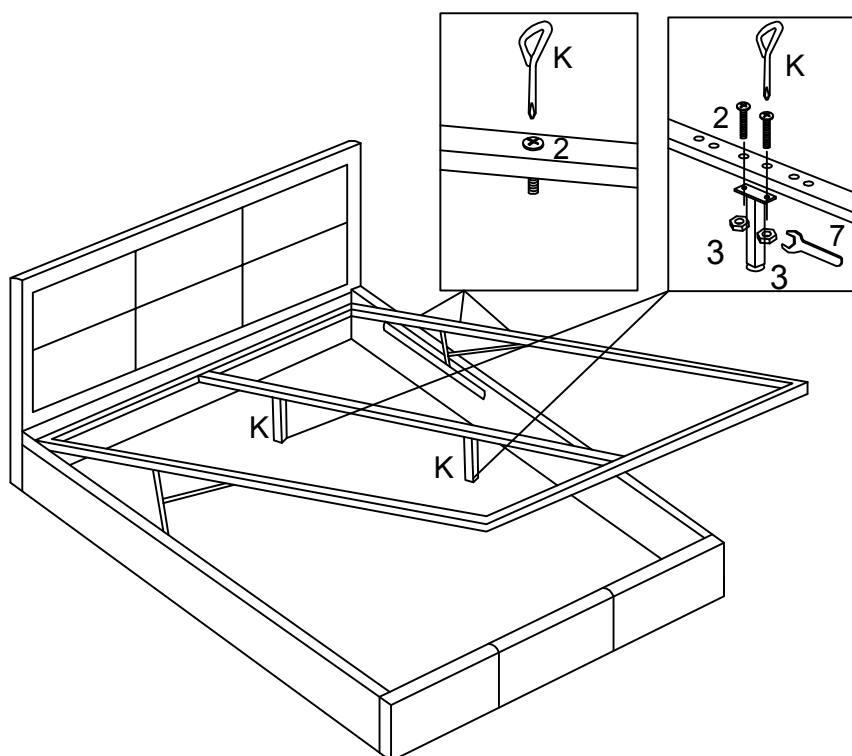

K.x2



7.x1



8.x1




3.x4



2.x10




Step5

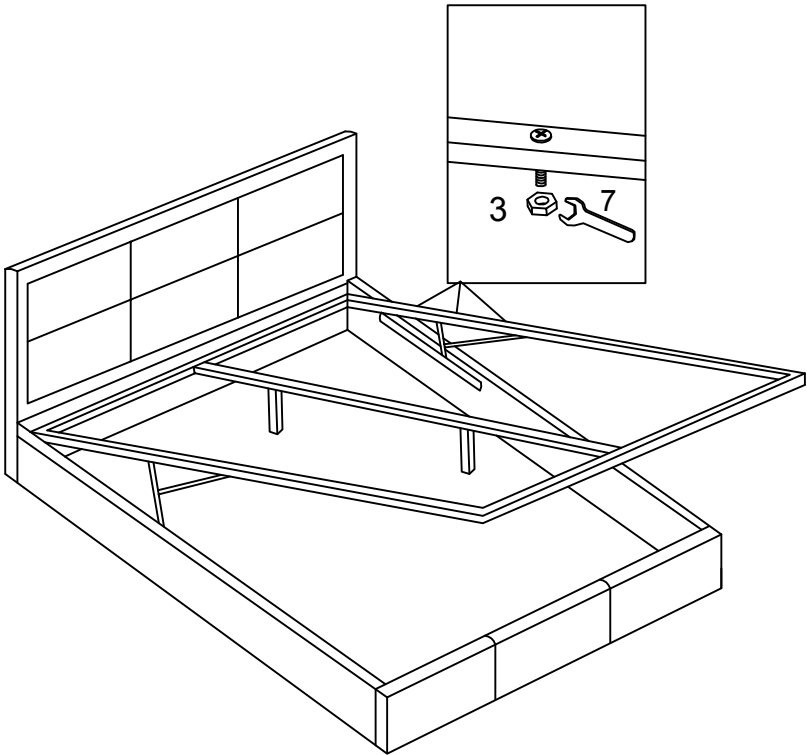


7.x1	
3.x6	

Step6

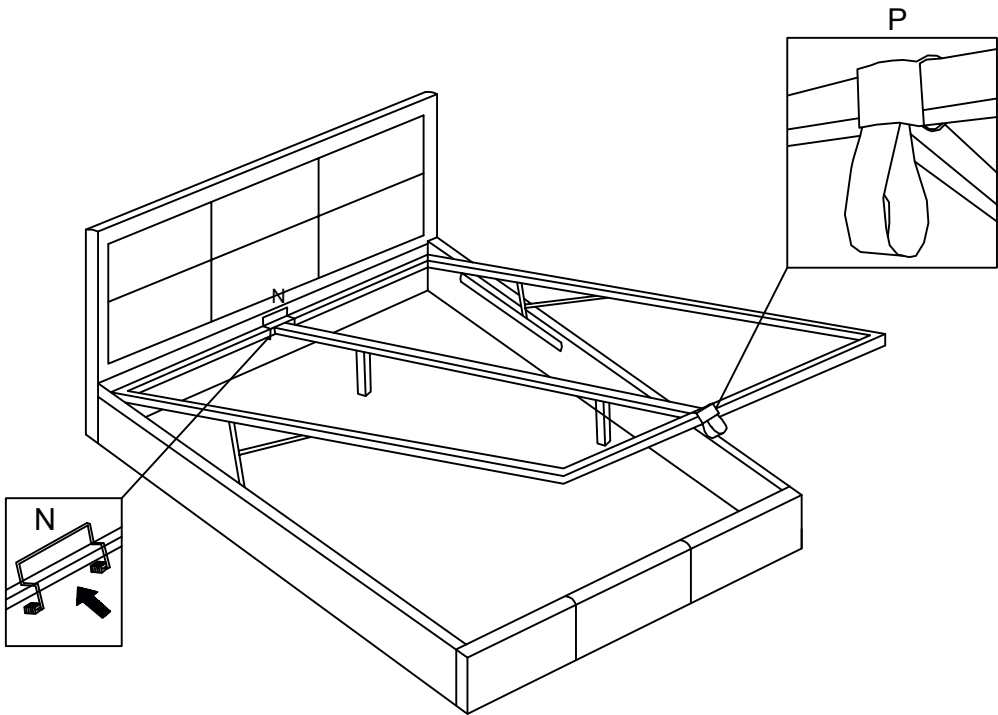

P.x1	
N.x1	

Step7

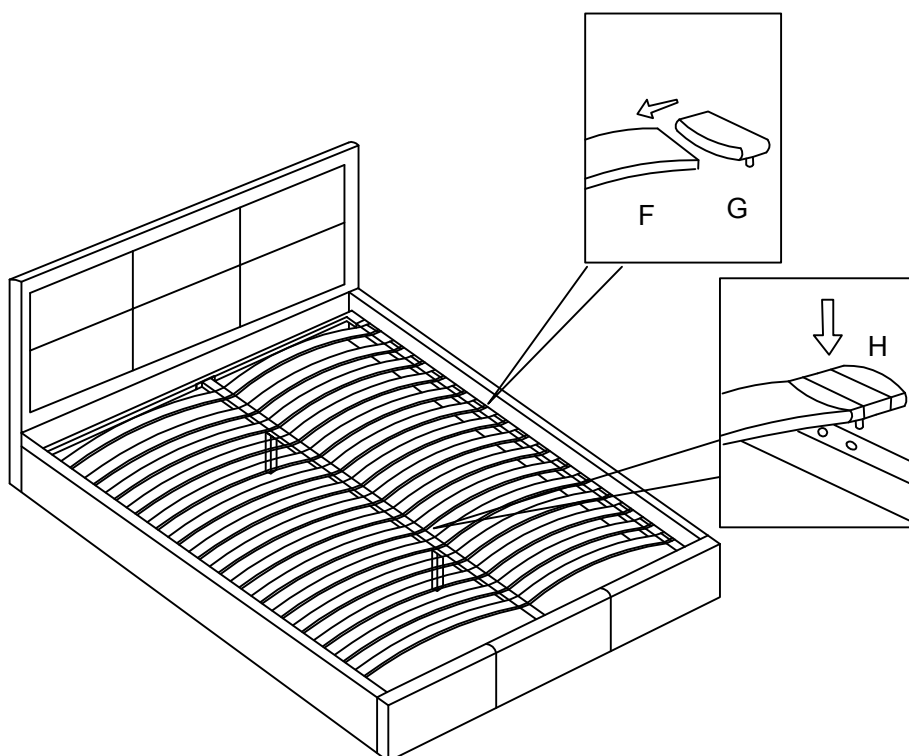

F.x30




G.x30



H.x15



Step8

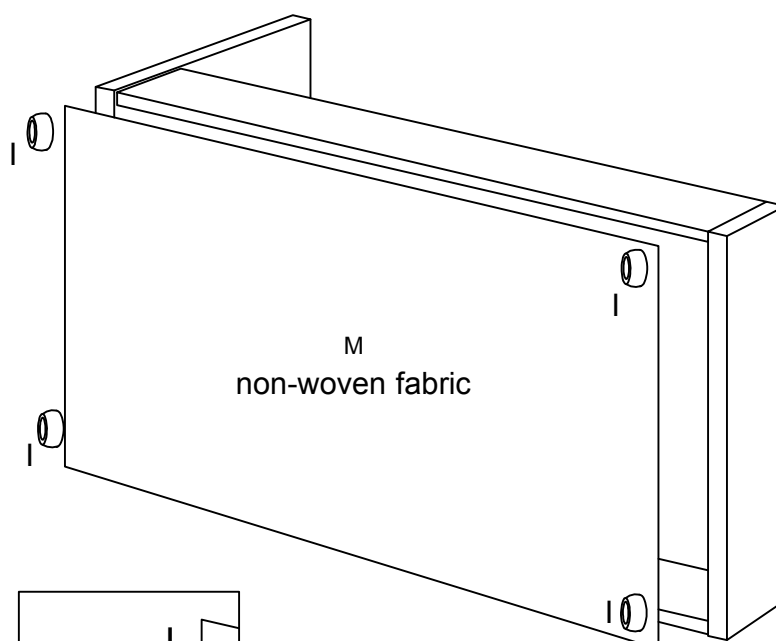

9.x4





M.x1



I.x4



8.x1

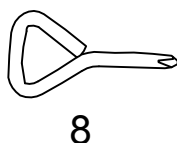

9



Stick the non-woven
fabric on bottom and
then assemble the 4
foot