
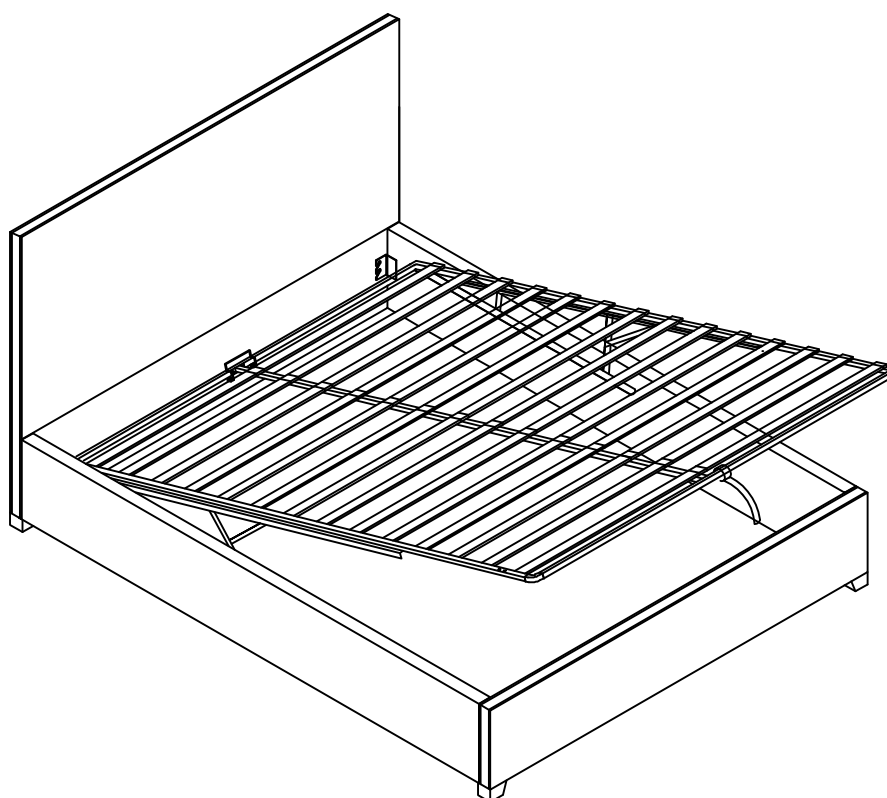
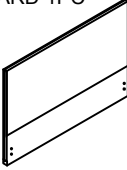
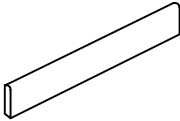
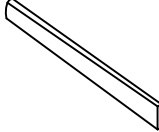






279-000012






ASSEMBLY INSTRUCTIONS




Parts List

1. HEAD BOARD 1PC 	2. FOOT BOARD 1PC 	3. SIDE RAIL 2PCS 	4. BEDSTEAD RAIL 2 SETS 
5. BEDSTEAD RAIL 2 SETS 	6. SLAT 30 PCS 	7. Single Plastic Cap 30pcs 	8. Double Plastic Cap 15pcs 
9. 4 PCS 	10. 4 PCS 	11. Center Support Bar 1pc 	12. 2 pcs 
13. Digging rope 1PC 	14. 1 PCS 	15. Support Leg 2 PCS 	16. Non-woven fabrics 1pc 

Hardware List

A. M8*30 x16 PCS 	B. M8*40 x 14 PCS 	C. 14 pcs 	D. 8 pcs 
E. 12 PCS 	F. M5*1PC 	G. 1 pcs 	H. 1 pcs 
I. M8*50 x4 PCS 			

Step1

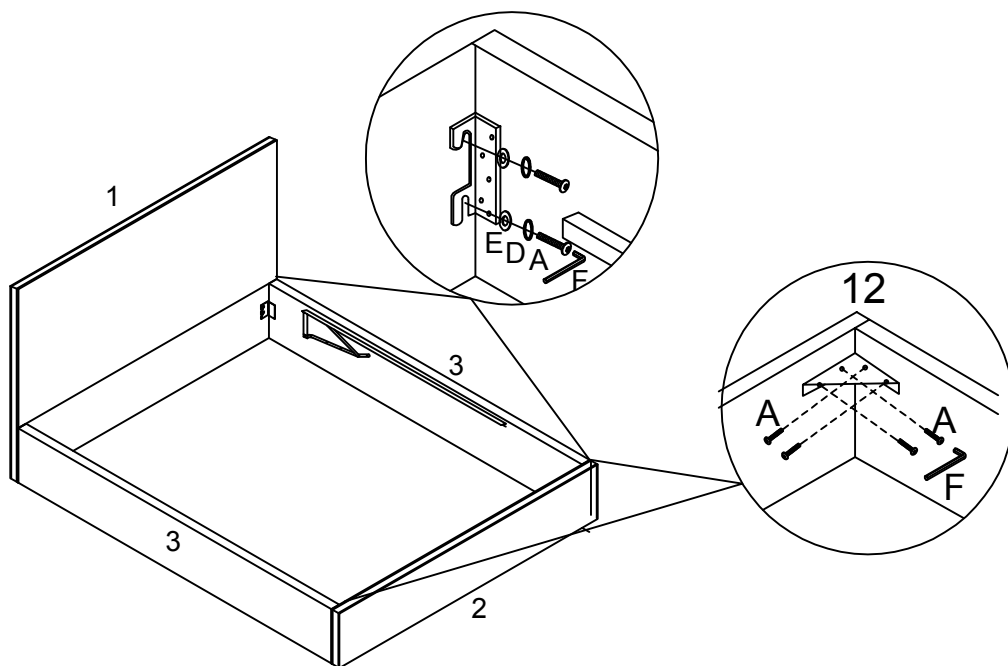

12.x2



E.x8



D.x8







F.x1



A.x16



Step2

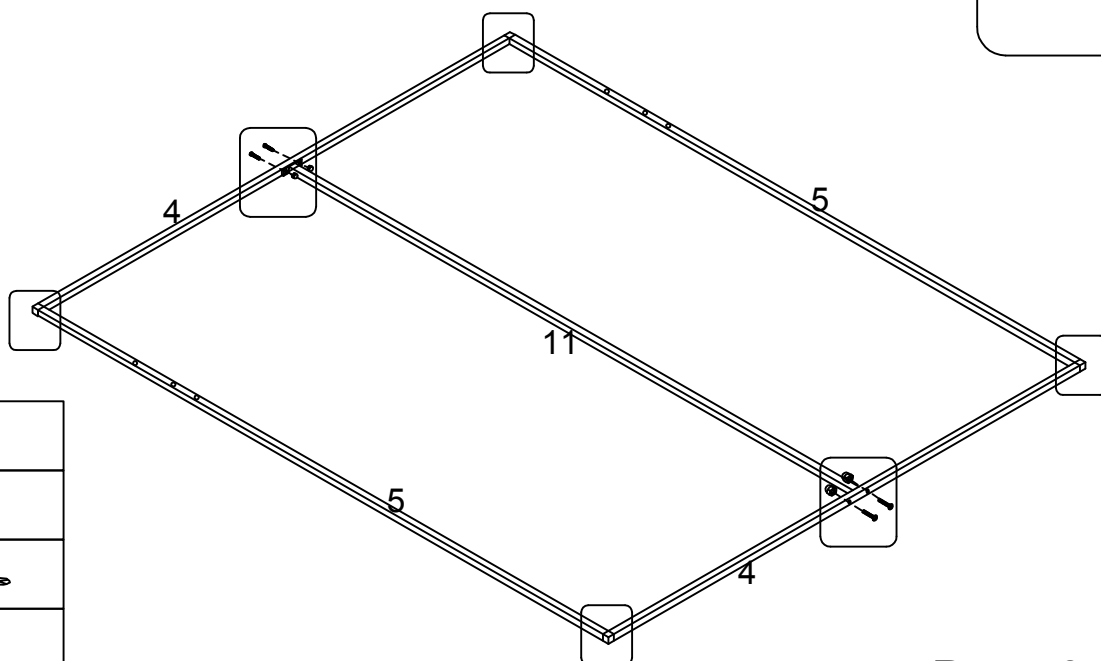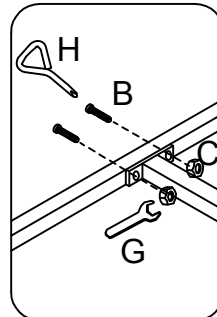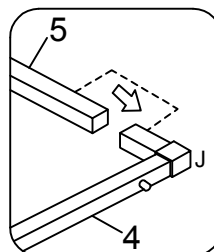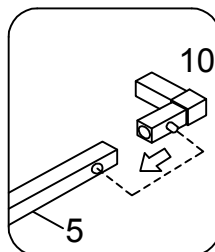

10.x4



G.x1



H.x1




C.x4



B.x4



Step3

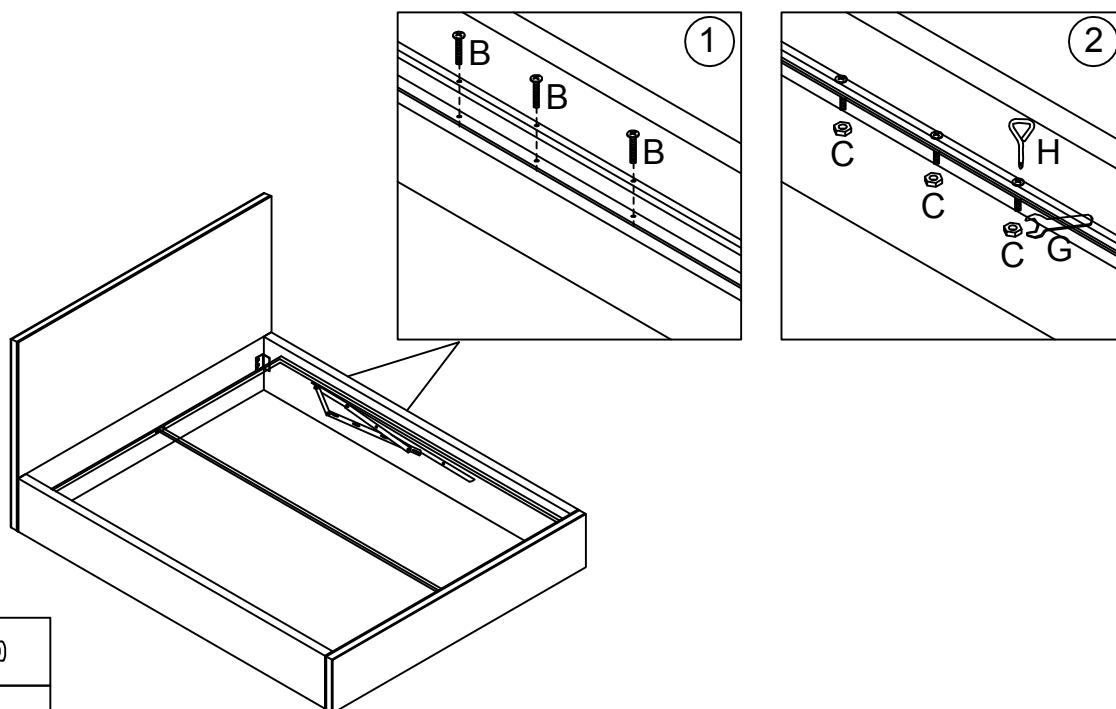


B.x6 

G.x1 

C.x6 

H.x1 

Step4

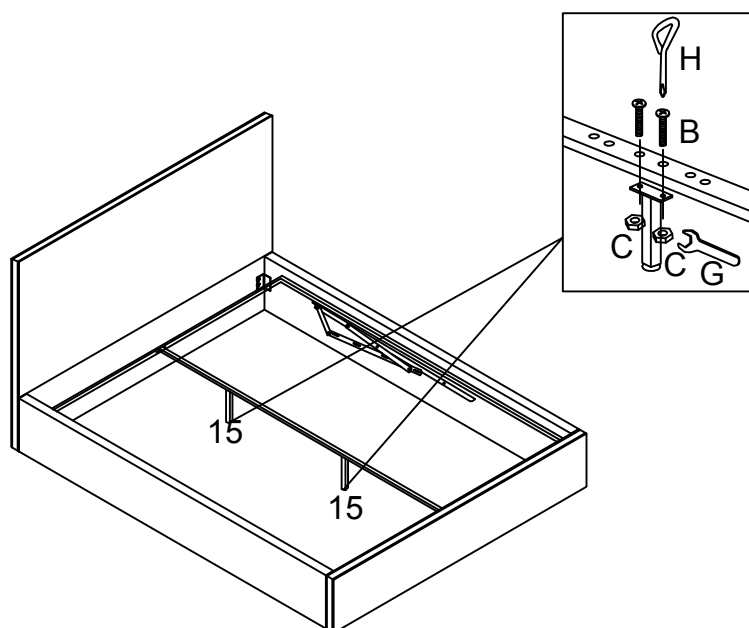


B.x4 

G.x1 

C.x4 

H.x1 


Step5

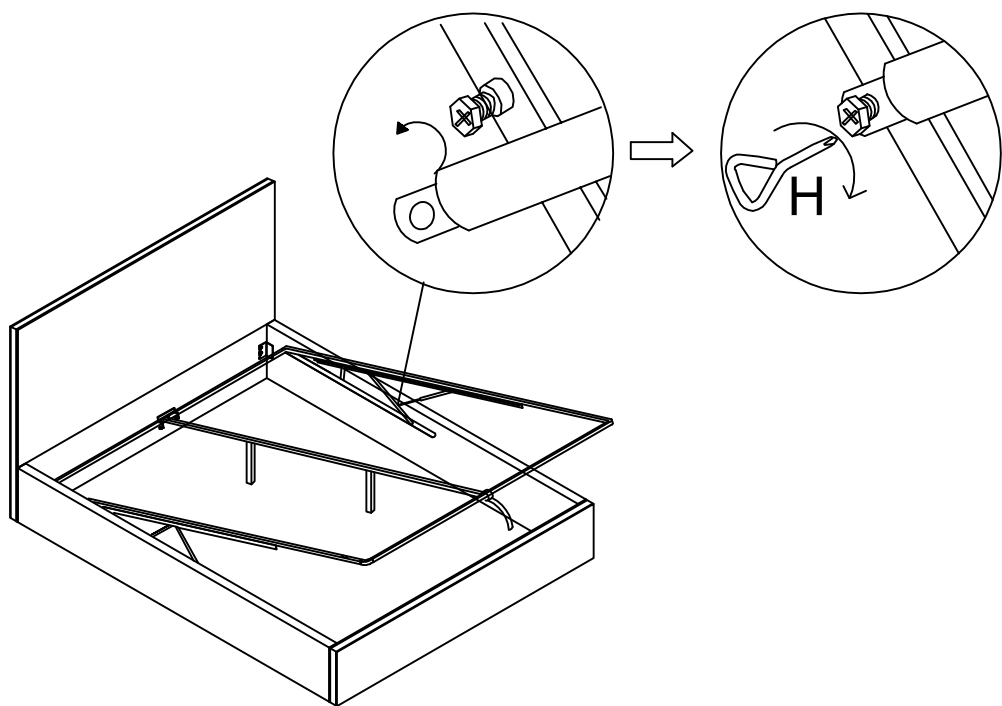

H.x1



Step6

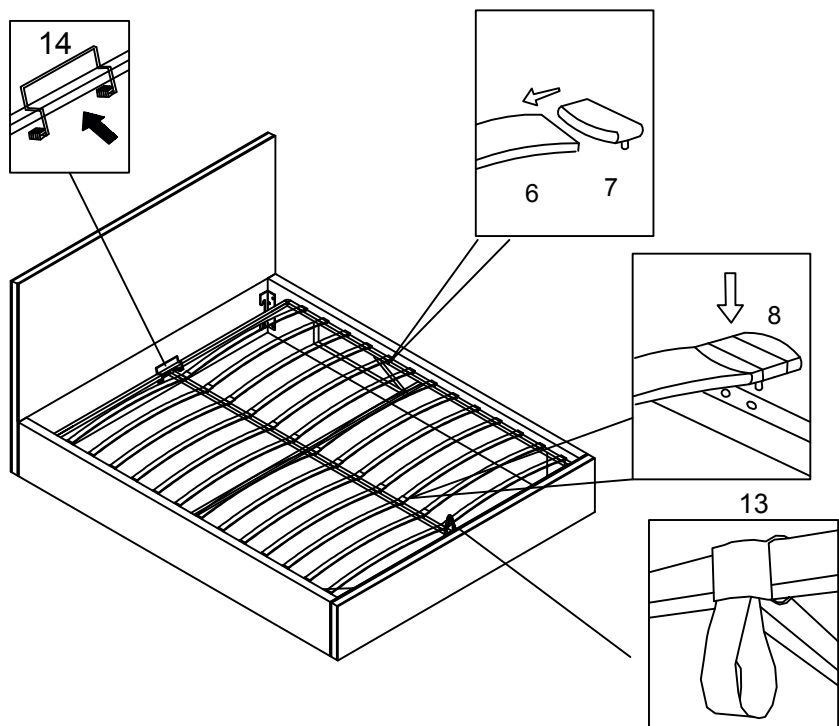

13.x1



14.x1



6.x30





7.x30



8.x15



Step7

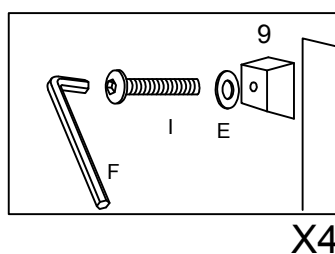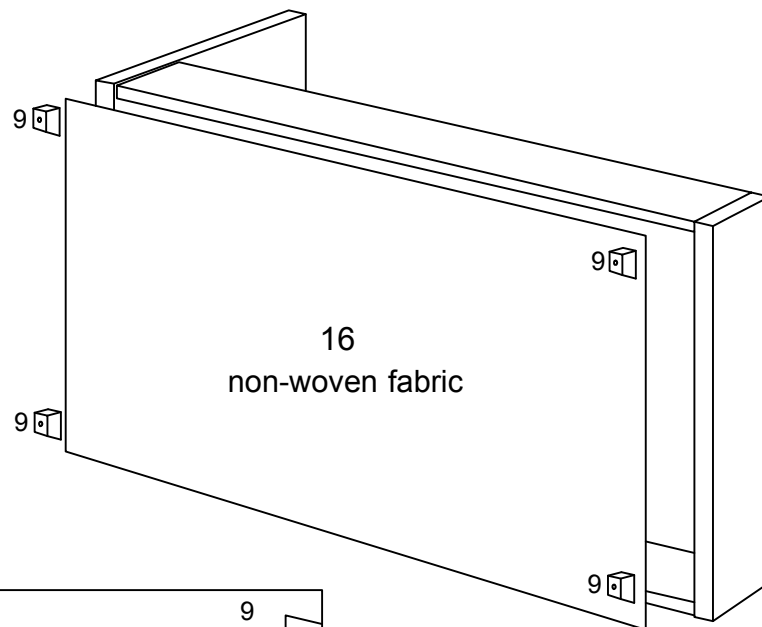

Stick the non-woven fabric on bottom and then assemble the 4 foot

E.x4	
9.x4	
F.x1	
I.x4	

Step8

