
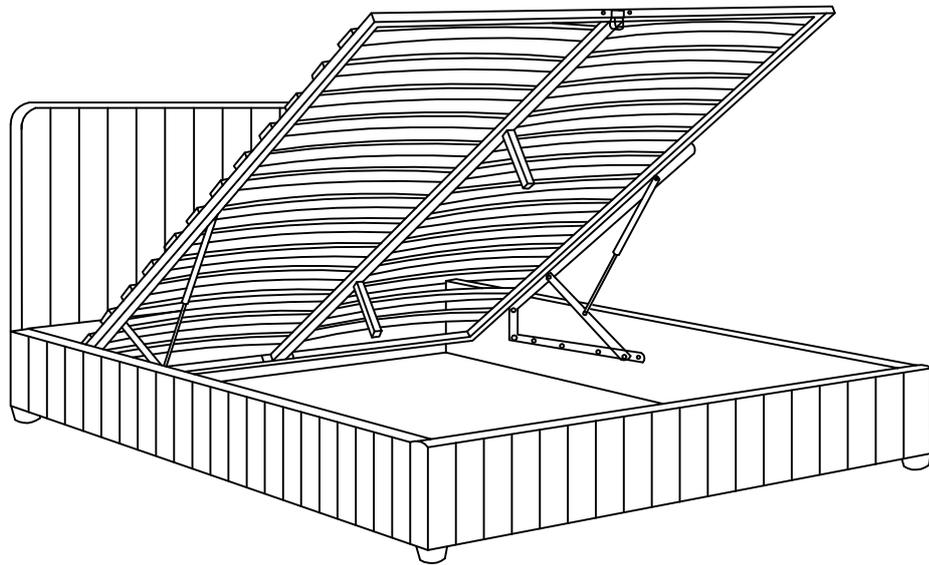
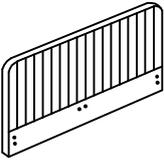

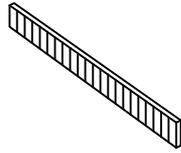
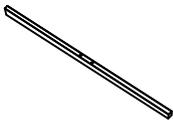




279-000022




# ASSEMBLY INSTRUCTIONS




# Parts List

|  |  |   |  |
|--|--|---|--|
| <b>A</b> HEAD BOARD 1PC<br>         | <b>B</b> FOOT BOARD 1PC<br> | <b>C</b> SIDE RALL 2PCS<br>           | <b>D</b> BEDSTEAD RAIL 2 SETS<br>     |
| <b>E</b> BEDSTEAD RAIL 2 SETS<br>   | <b>F</b> SLAT 30 PCS<br>    | <b>G</b> Single Plastic Cap 30pcs<br> | <b>H</b> Double Plastic Cap 15pcs<br> |
| <b>I</b> LEG 4 PCS<br>              | <b>J</b> 4 PCS<br>          | <b>K</b> Support Leg 2 PCS<br>         | <b>L</b> 2 pcs<br>                    |
| <b>M</b> Non-woven fabrics 1pc<br> | <b>N</b> 1 PCS<br>         | <b>O</b> Center Support Bar 1pc<br> | <b>P</b> Digging rope 1PC<br>        |

# Hardware List


|   |  |   |   |
|---|--|---|---|
| <b>1</b> M8*30 x16 PCS<br> | <b>2</b> M8*40 x 14 PCS<br> | <b>3</b> 14 pcs<br> | <b>4</b> 8 pcs<br> |
| <b>5</b> 8 pcs<br>         | <b>6</b> M5 x1 PC<br>       | <b>7</b> 1 pcs<br>  | <b>8</b> 1 pcs<br> |
| <b>9</b> M4*40 x4 PCS<br>  |  |   |   |

# Step1

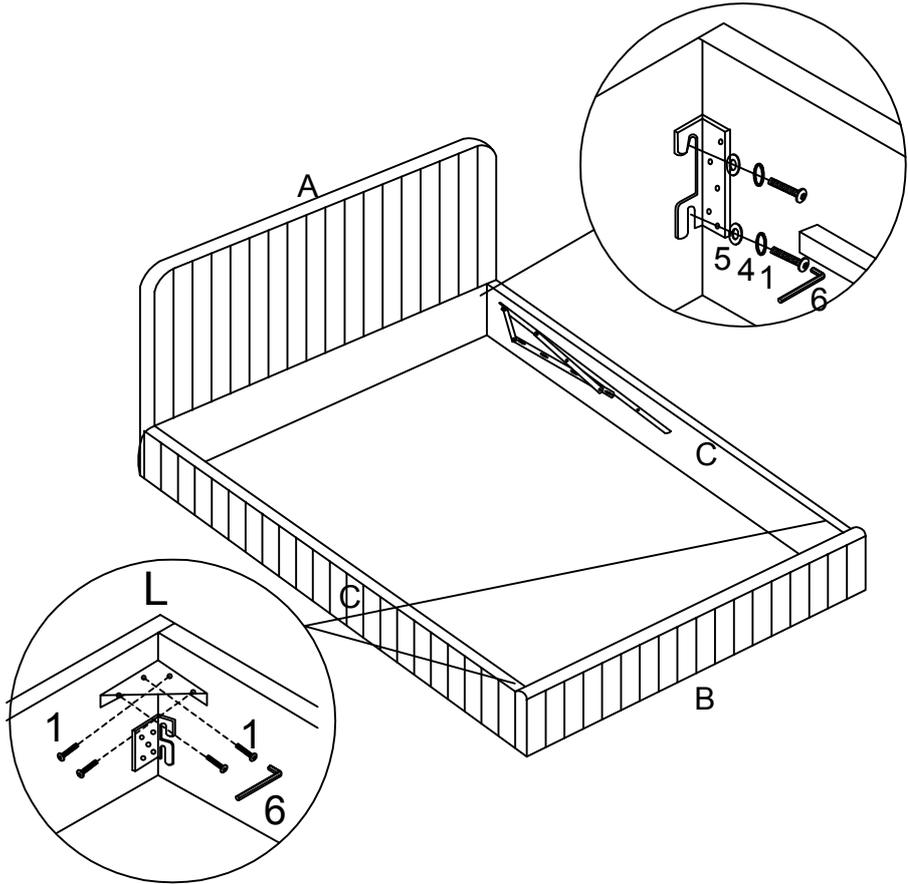


|       |  |
|-------|--|
| 5.x8  |  |
| 4.x8  |  |
| L.x2  |  |
| 6.x1  |  |
| 1.x16 |  |

# Step2

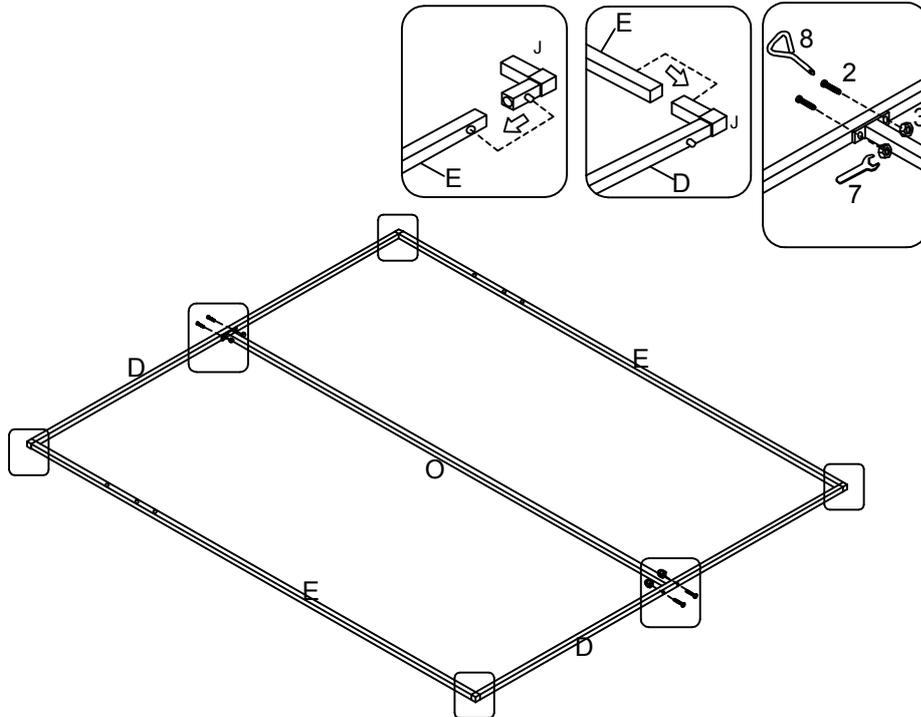

|      |  |
|------|--|
| J.x4 |  |
| 7.x1 |  |
| 8.x1 |  |
| 3.x4 |  |
| 2.x4 |  |


# Step3

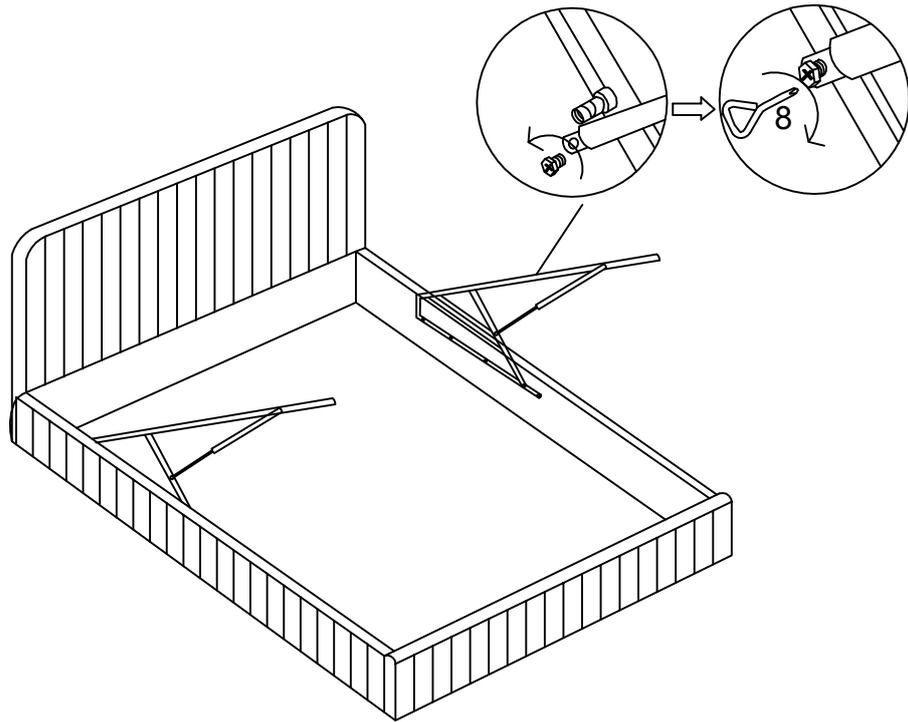

8.x1



# Step4

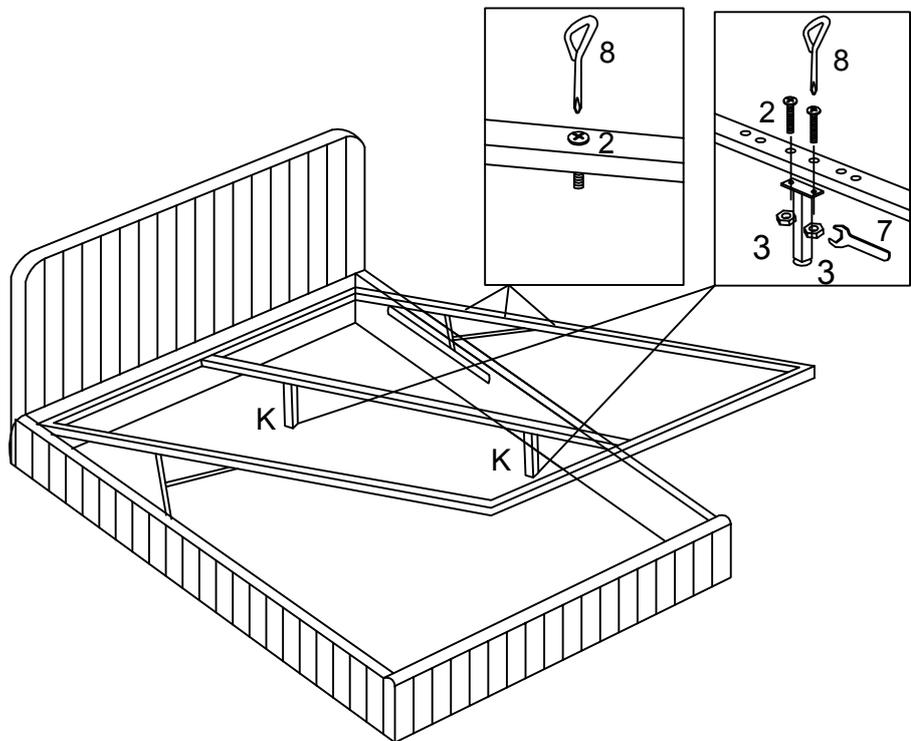

K.x2



7.x1



8.x1




3.x4



2.x10




# Step5

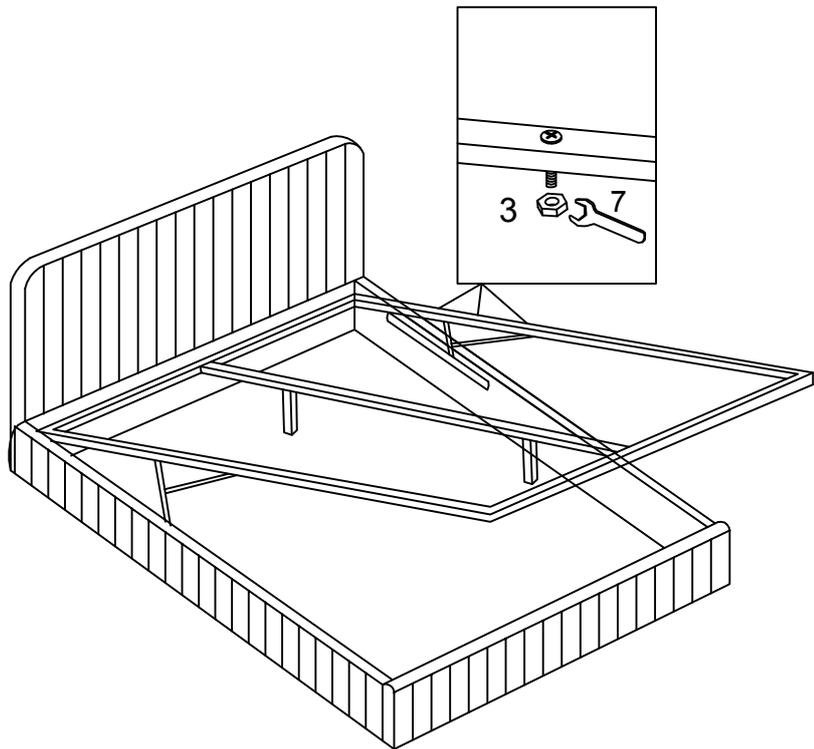


|      |   |
|------|---|
| 7.x1 |   |
| 3.x6 |  |

# Step6

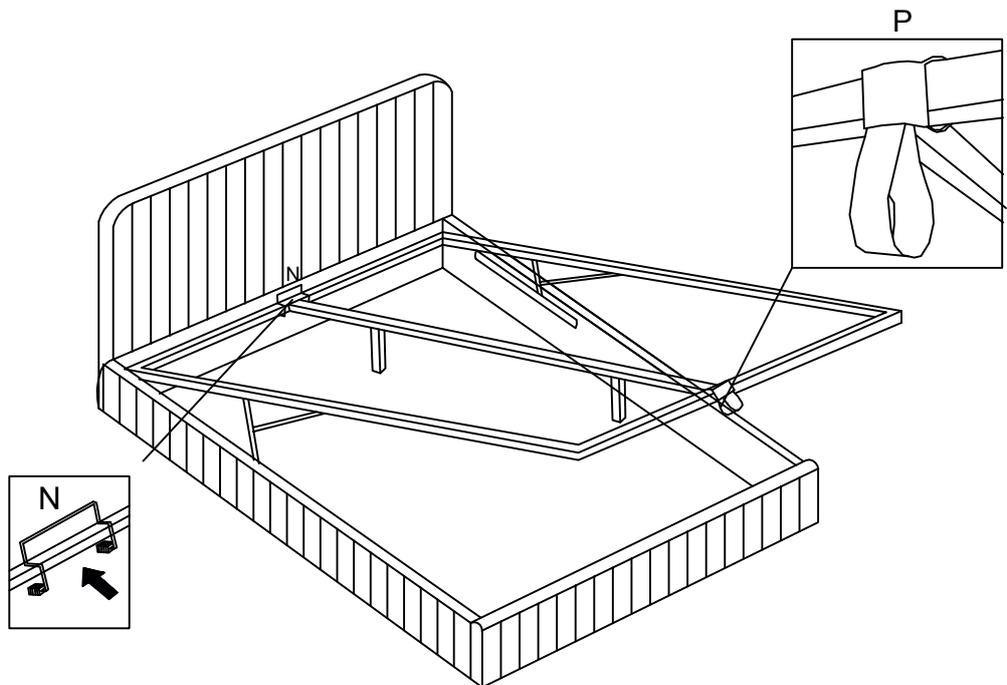


|      |   |
|------|---|
| P.x1 |  |
| N.x1 |  |

# Step7

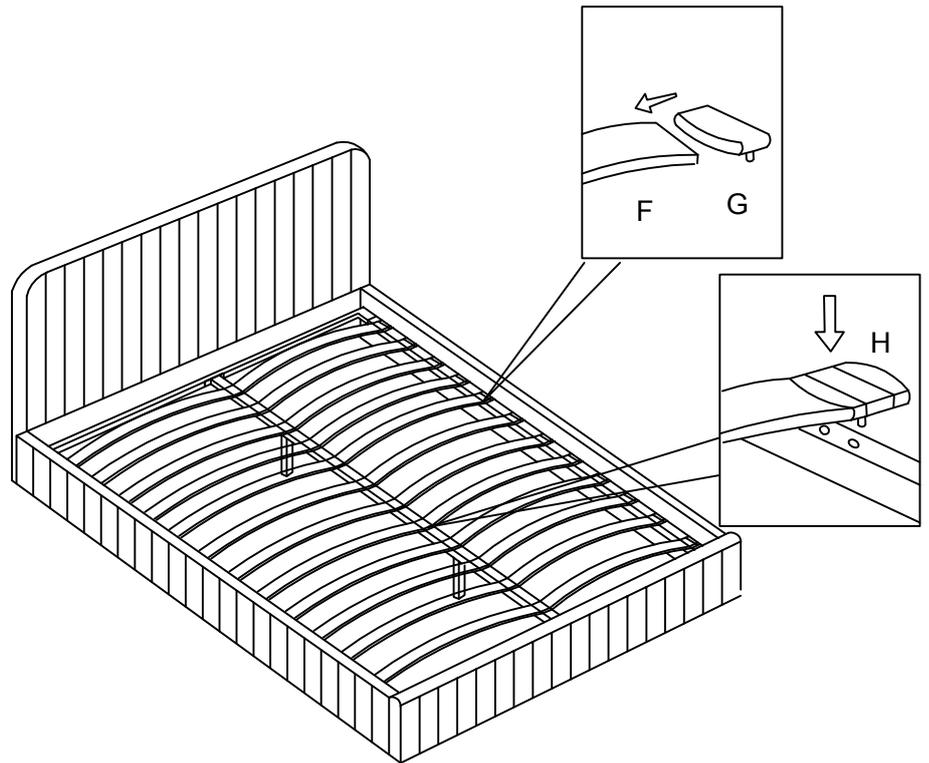


|       |  |
|-------|--|
| F.x30 |  |
| G.x30 |  |
| H.x15 |  |

# Step8

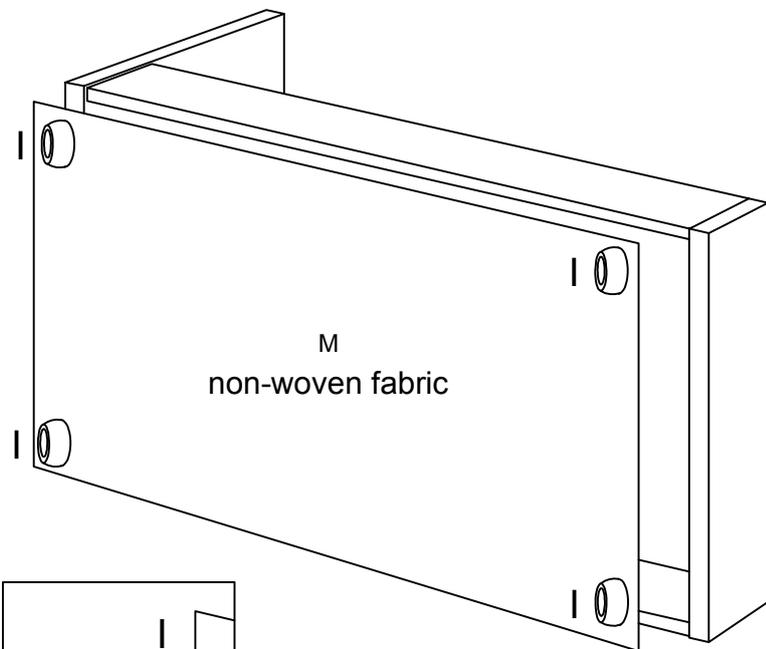

|      |  |
|------|--|
| 9.x4 |  |
| M.x1 |  |
| I.x4 |  |
| 8.x1 |  |

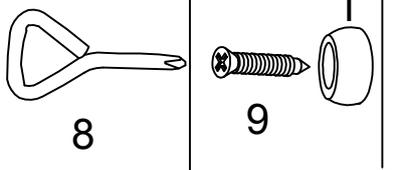

Stick the non-woven fabric on bottom and then assemble the 4 foot