


ASSEMBLY INSTRUCTION


Page 1

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.


330-000018



(A) M7 X 50MM X JCBW SCREW - 8 PCS/SETS





(B) WOOD DOWEL M8 X 30MM - 4 PCS/SETS

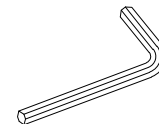

(C) M4 ALLEN KEY - 1 PC



(D) WOOD BUTTON - 8 PCS

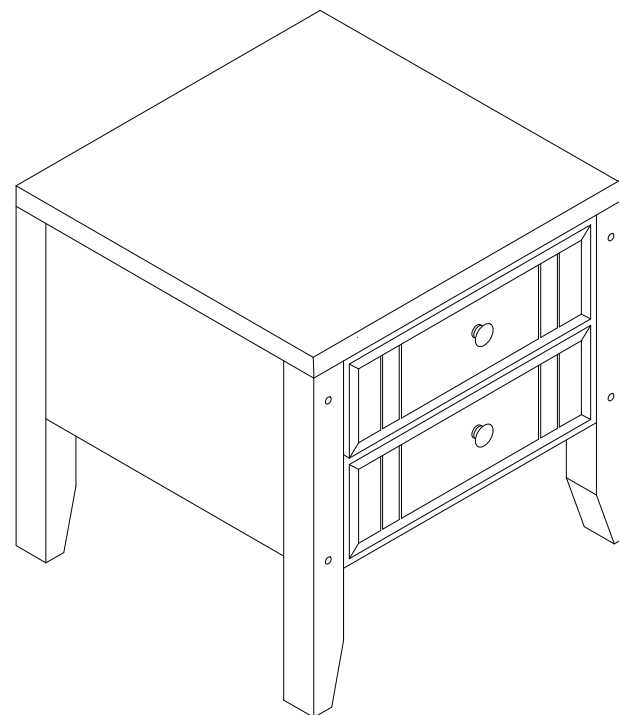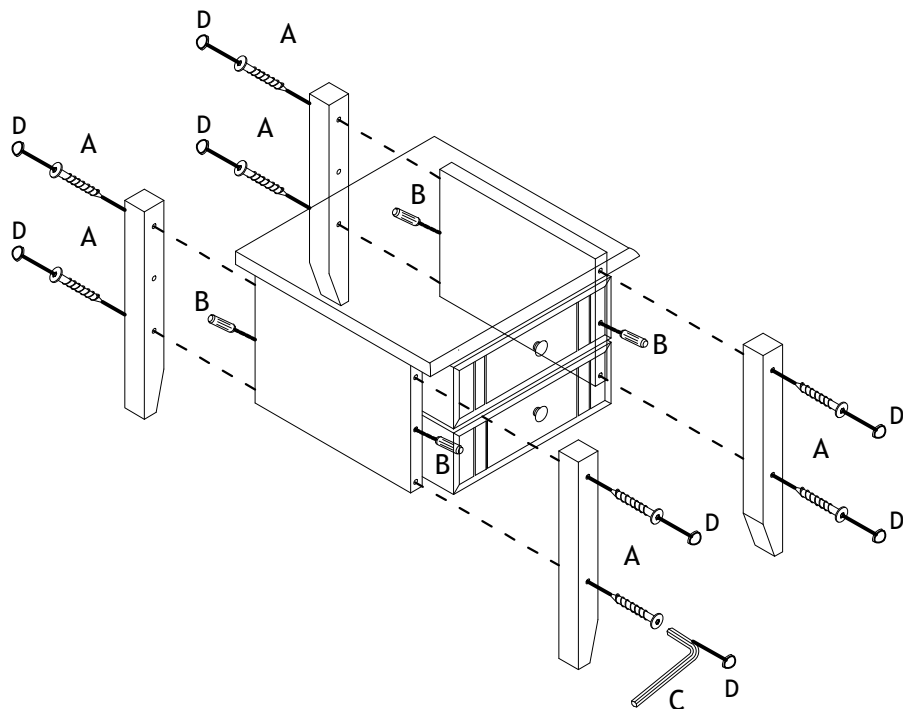

FULL SETUP