


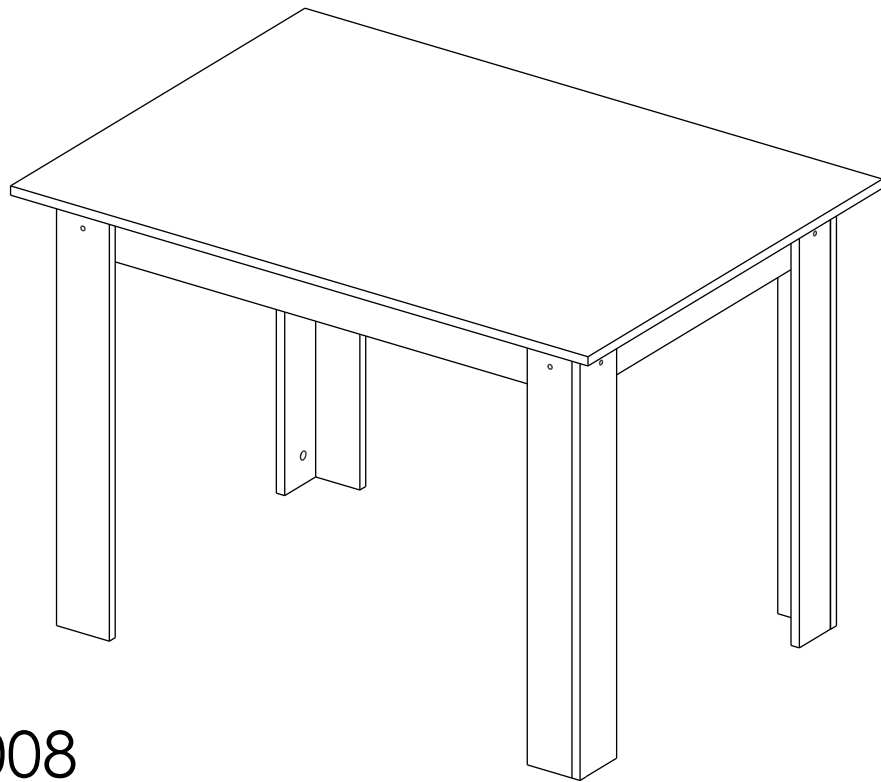
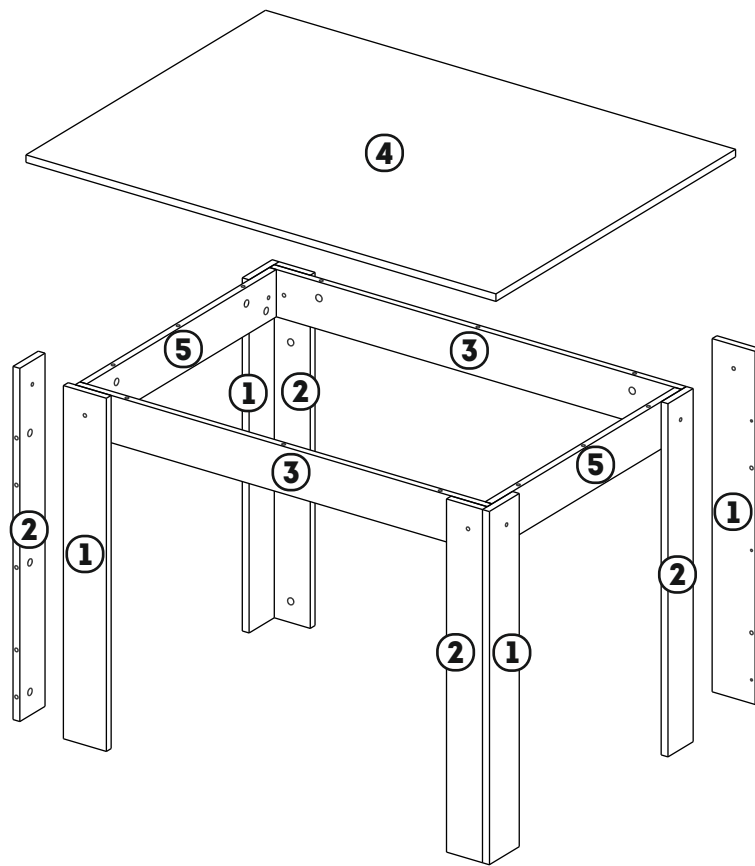
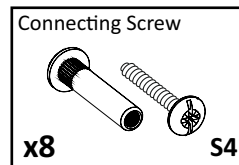
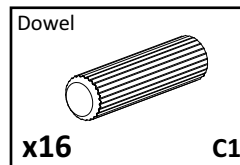
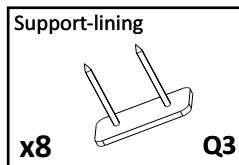




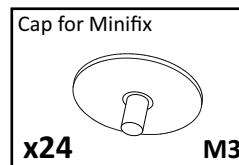


361-000008

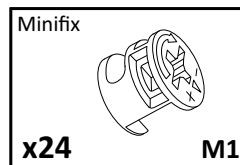

| No | a*b     | X | Pack |
|----|---------|---|------|
| 1  | 750x101 | 4 | 1/1  |
| 2  | 750x84  | 4 | 1/1  |
| 3  | 100x668 | 2 | 1/1  |
| 4  | 804x804 | 1 | 1/1  |
| 5  | 100x636 | 2 | 1/1  |

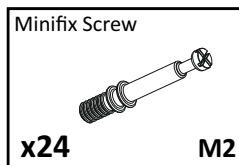

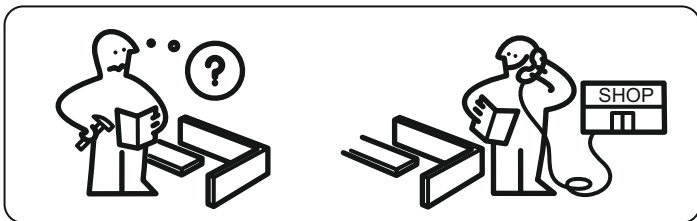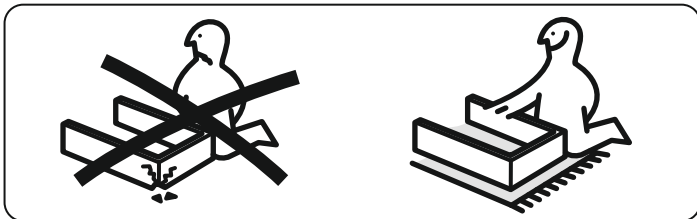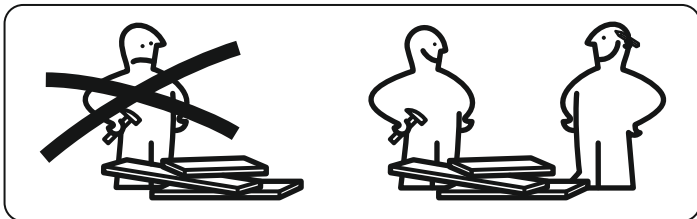

## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

## CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

# 1


Minifix



x24

M1


Dowel



x8

C1


Minifix Screw



x16





M2

Connecting Screw





x8

S4

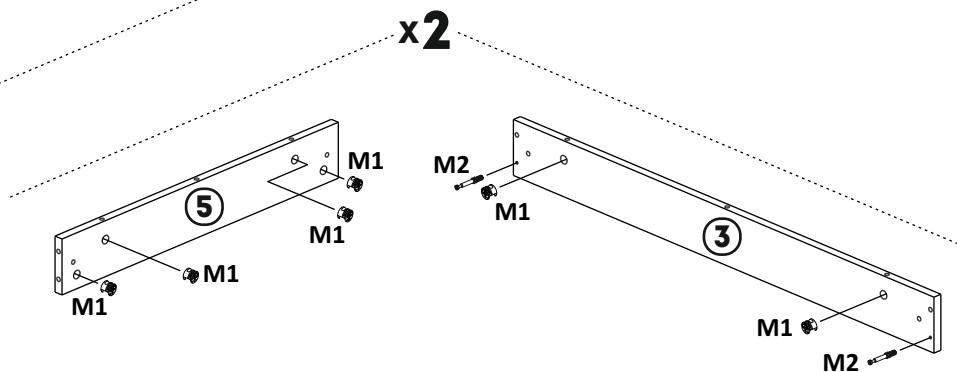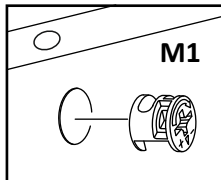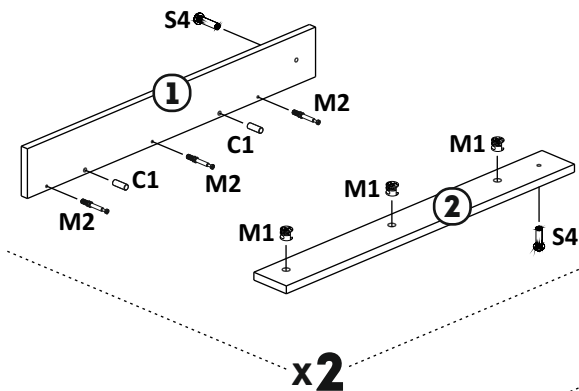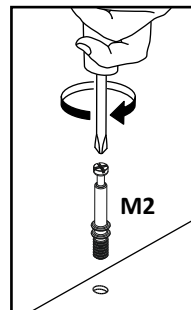

# 2

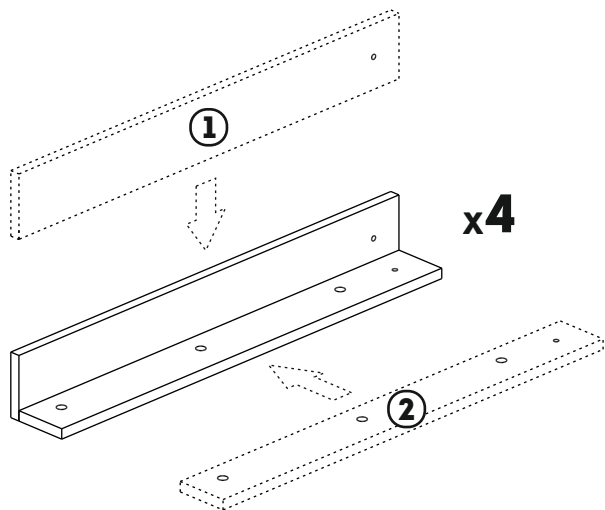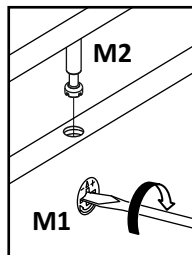


# 3

Dowel

x8



C1



Minifix Screw




x8

M2

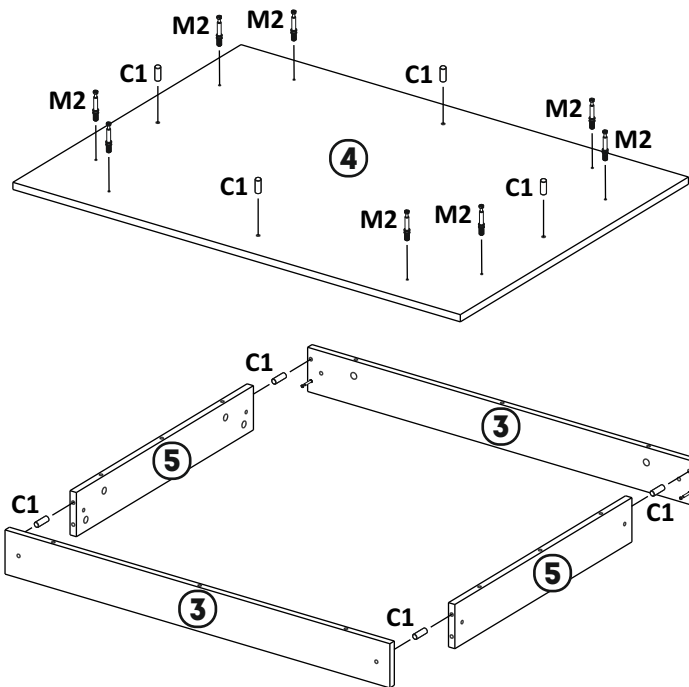

# 4

Connecting Screw

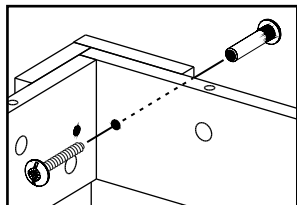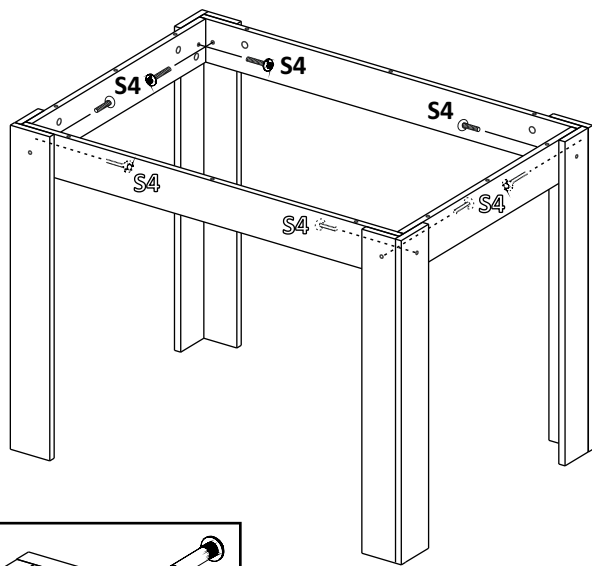

# 5

Support-lining

