



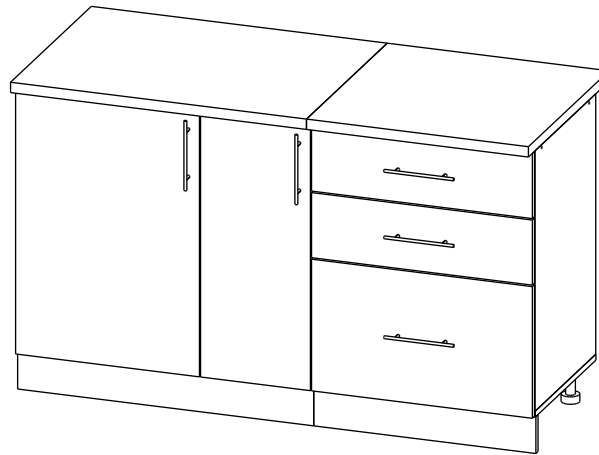
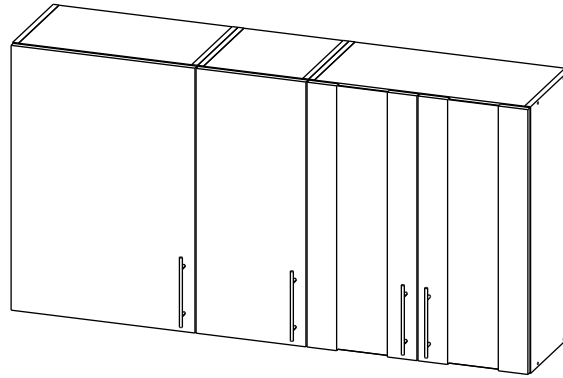
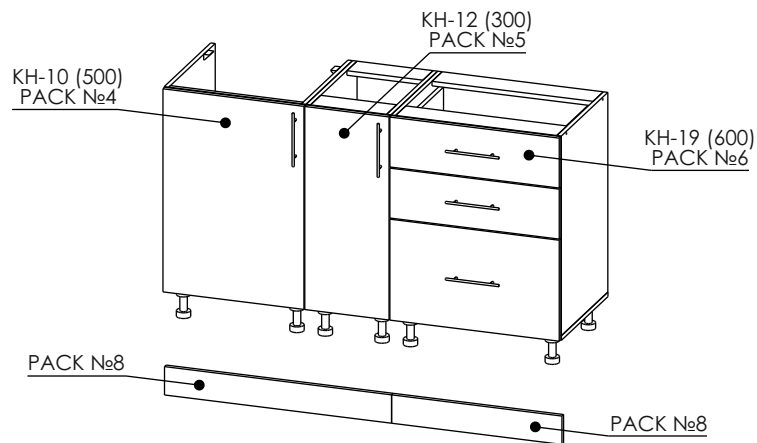


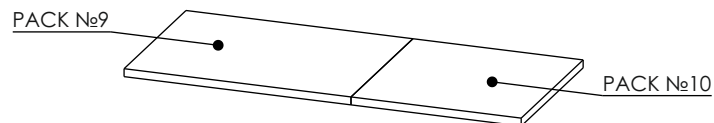












361-000013



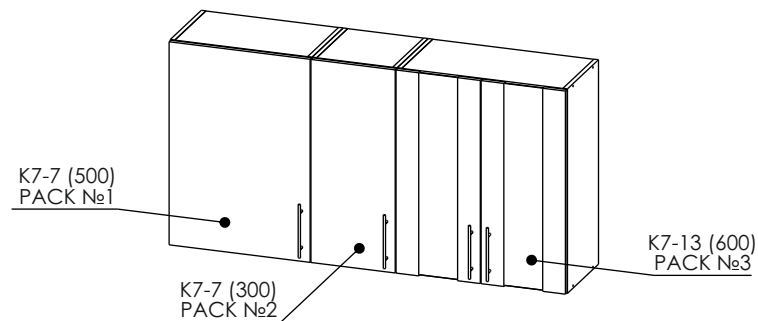


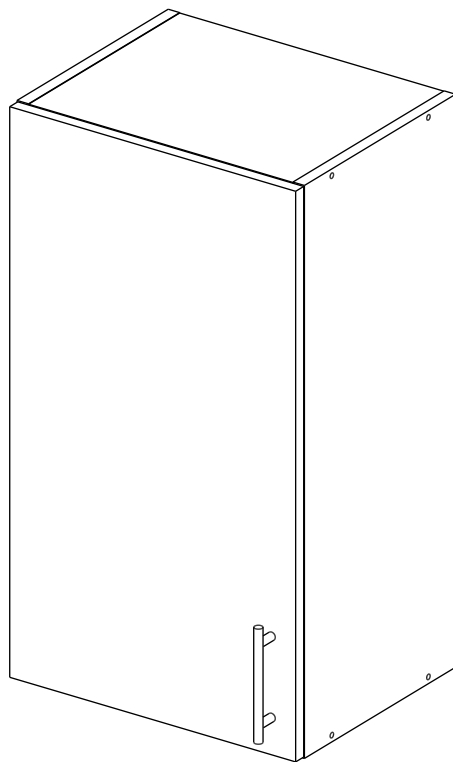

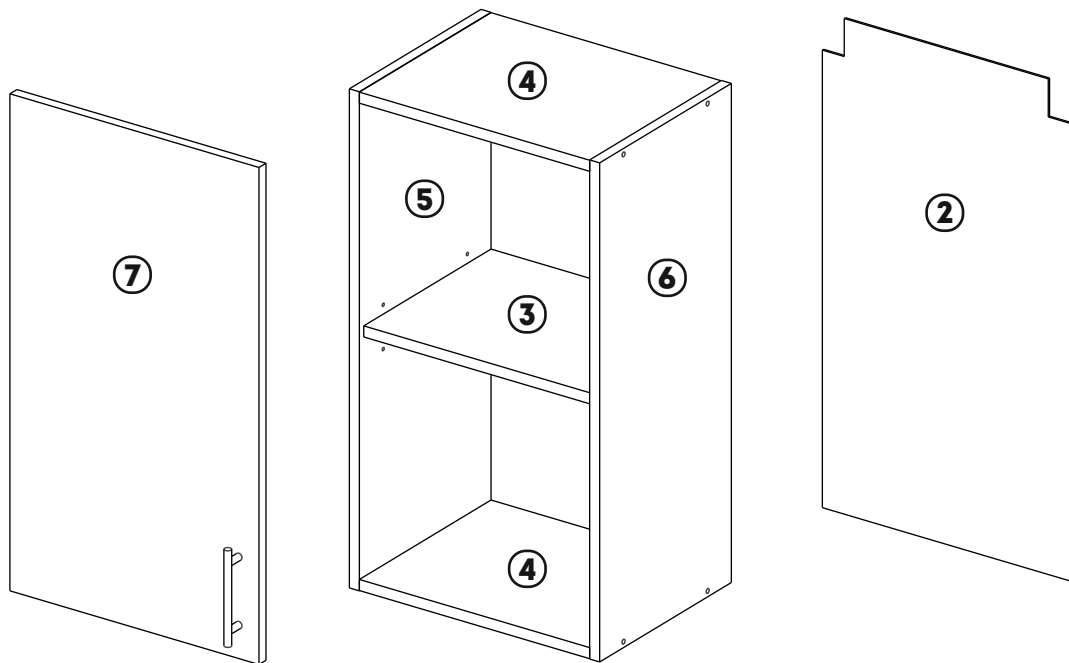

K7-7 (500)			
No	a*b	X	Pack
2	716x246	2	1/10
3	468x291	1	1/10
4	468x301	2	1/10
5	721x301	1	1/10
6	721x301	1	1/10
7	716x497	1	7/10

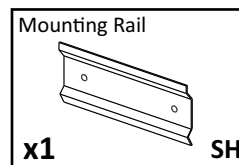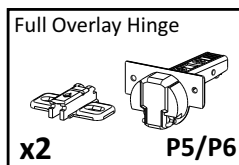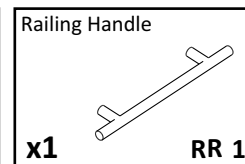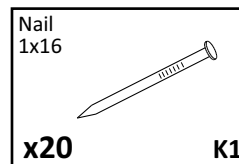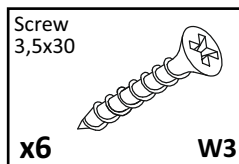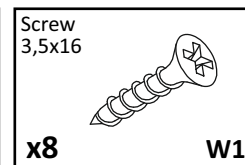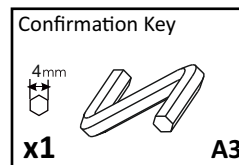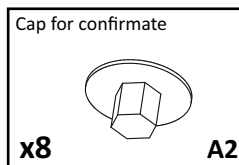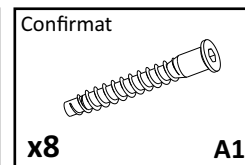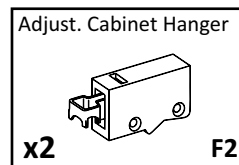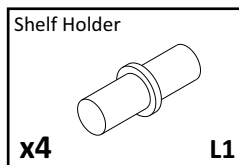

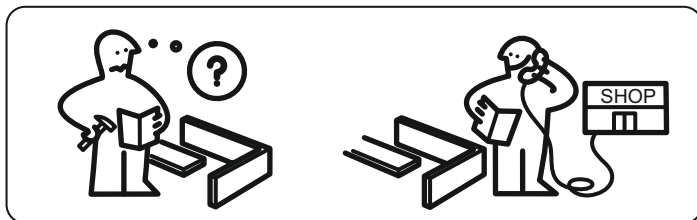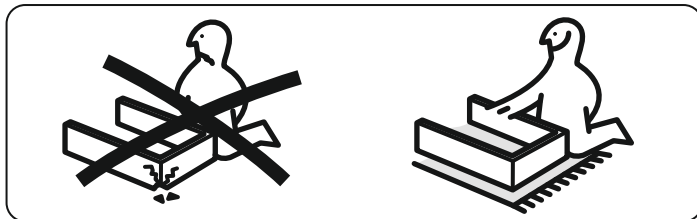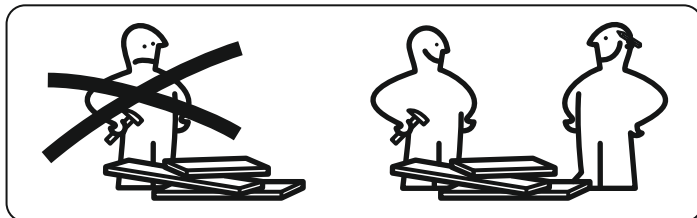

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY



- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE



- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Mounting Plate

**x2****P6**Screw
3,5x16**x4****W1**


Shelf Holder

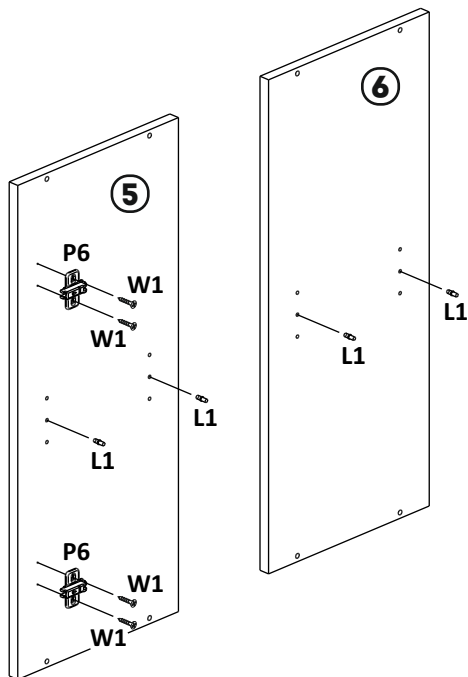**x4****L1****2**

Confirmat


**x8****A1**

Cap for confirmate


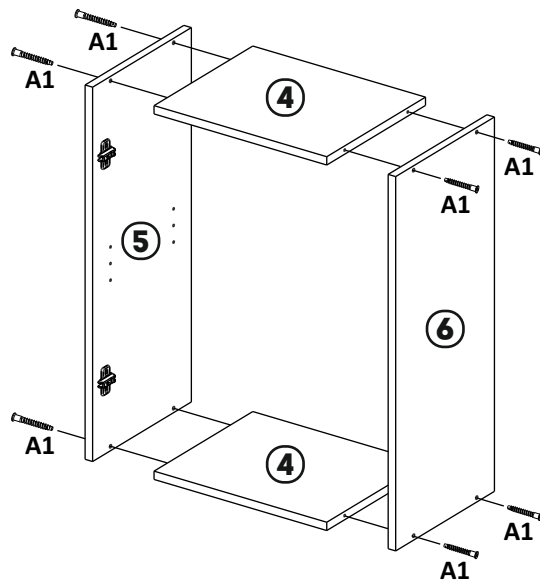
**x8****A2**

3





Screw
3,5x30

**x4****W3**

Adjust. Cabinet Hanger

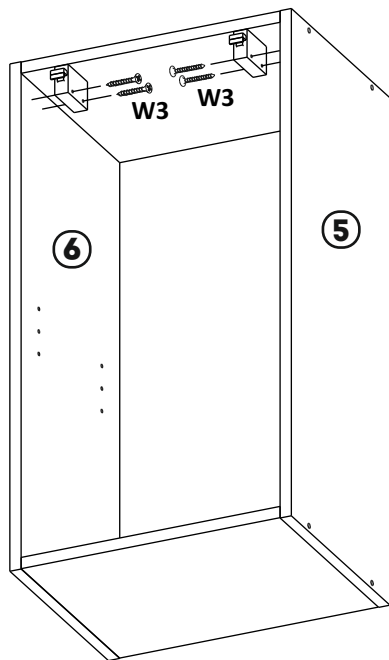**x2****F2****4**

Nail
1x16

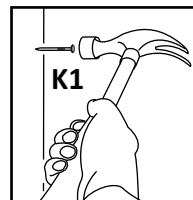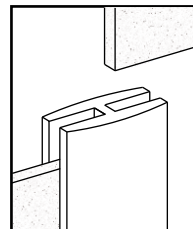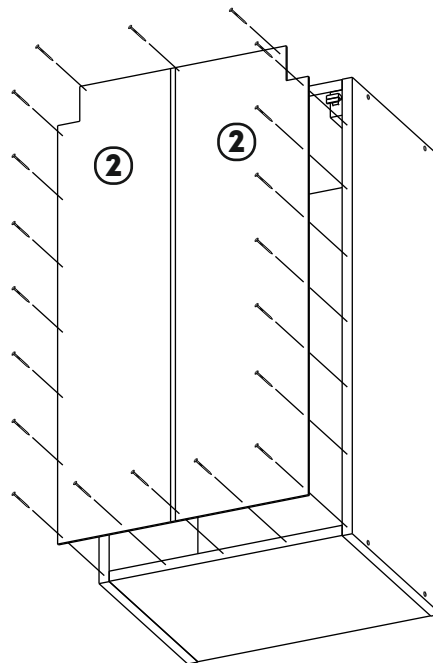
**x20****K1**

5

Railing Handle

x1


RR 1



Screw
3,5x16

x4




W1







Full Overlay Hinge


x2


P5

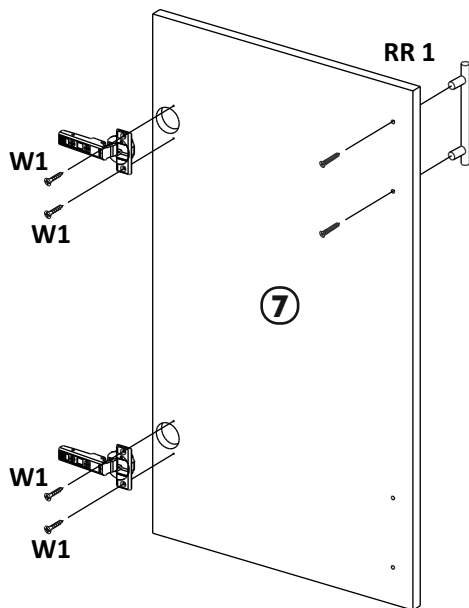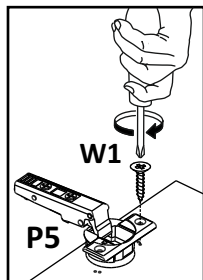












6

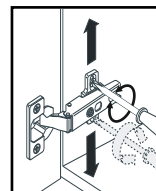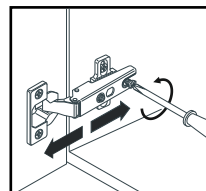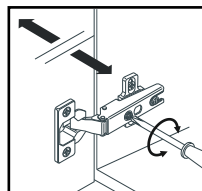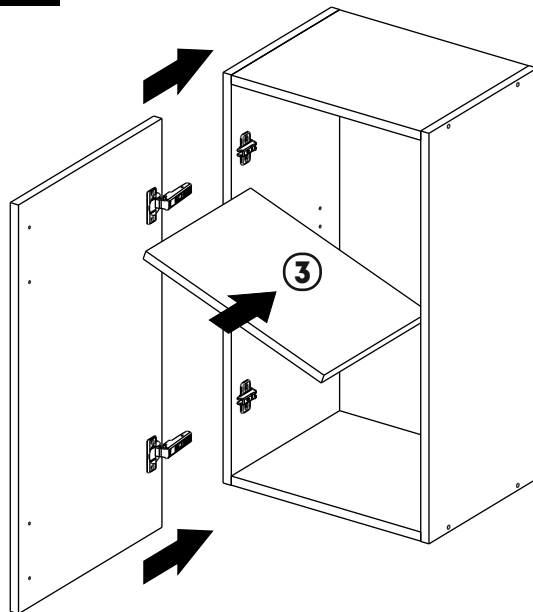

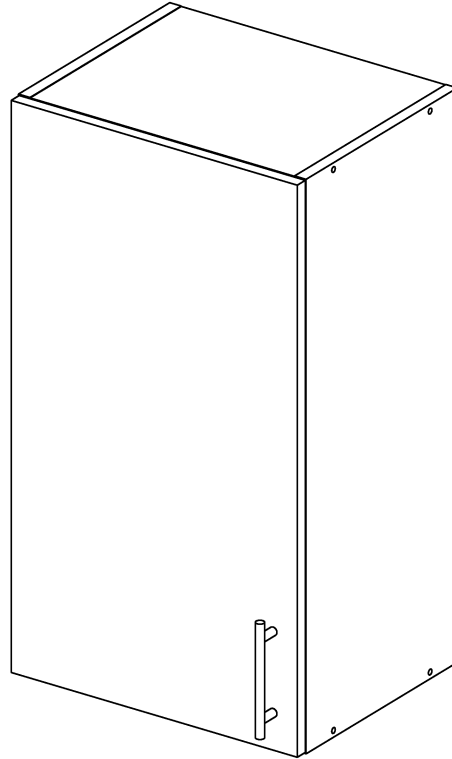


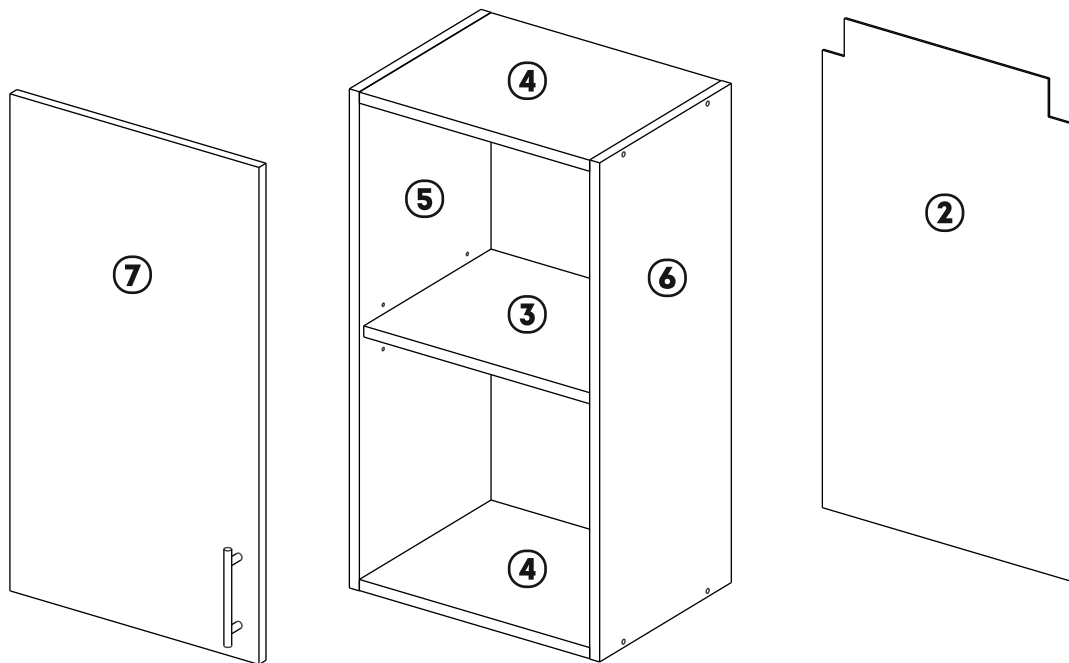


K7-7 (300)			
No	a*b	X	Pack
2	716x297	1	2/10
3	268x291	1	2/10
4	268x301	2	2/10
5	721x301	1	2/10
6	721x301	1	2/10
7	716x297	1	7/10

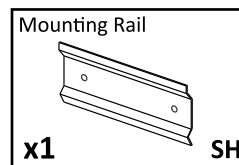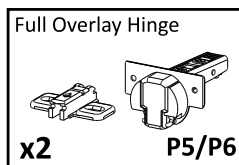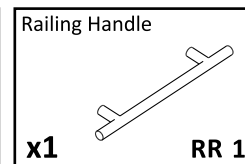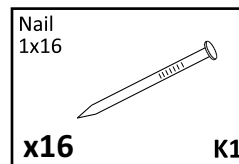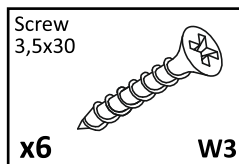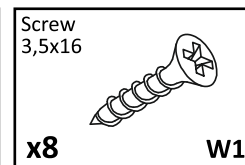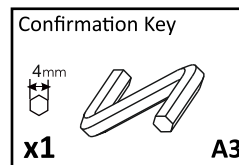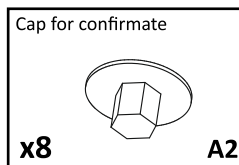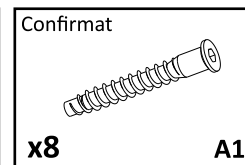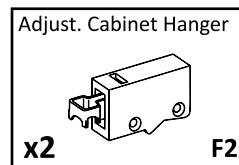
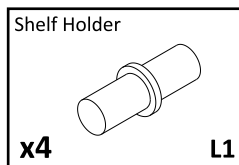


1


Mounting Plate

**x2****P6**Screw
3,5x16**x4****W1**


Shelf Holder

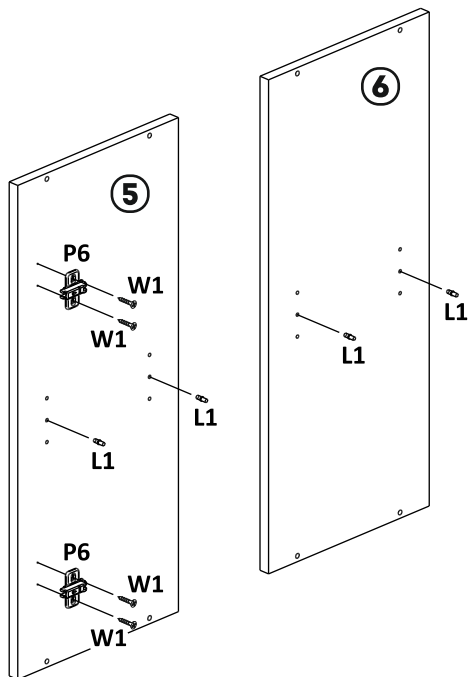**x4****L1****2**

Confirmat


**x8****A1**

Cap for confirmate

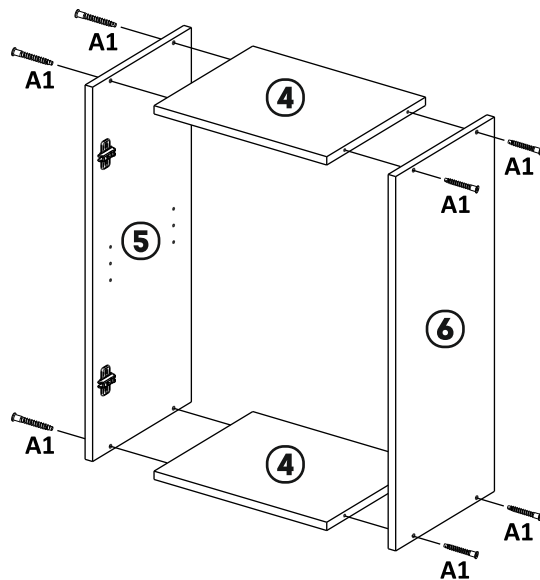**x8****A2**

3


Screw
3,5x30



x4


W3

Adjust. Cabinet Hanger




x2

F2

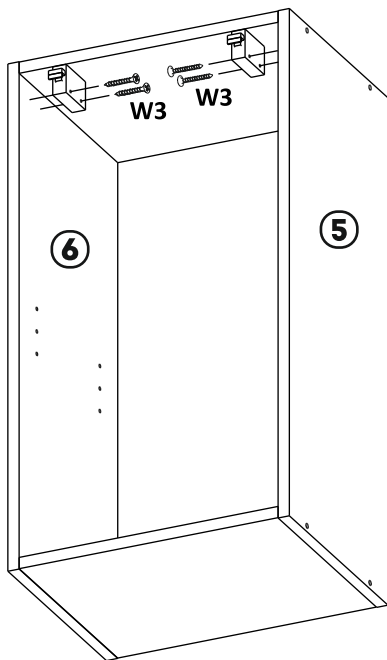



4

Nail
1x16



x16

K1

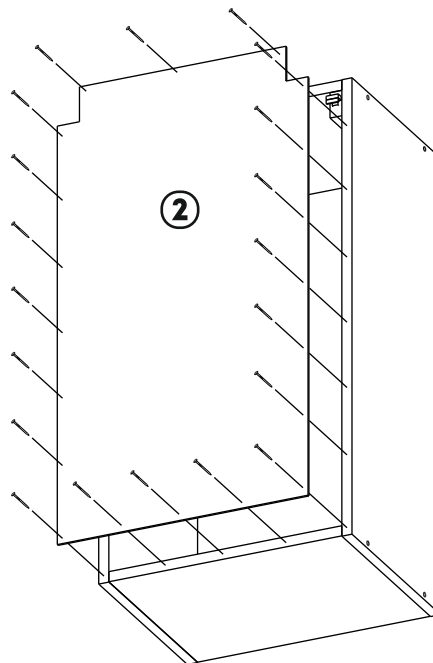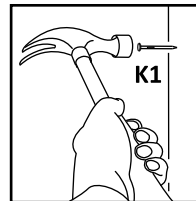


5

Railing Handle

x1


RR 1



Screw
3,5x16

x4




W1







Full Overlay Hinge


x2




P5

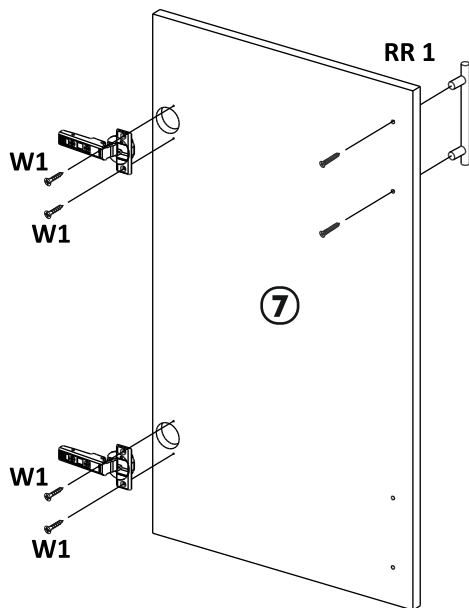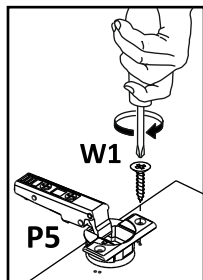













6

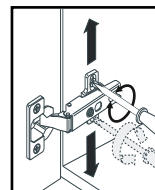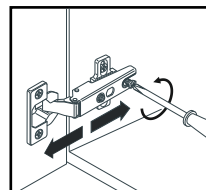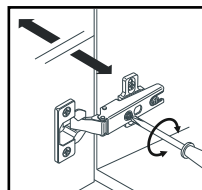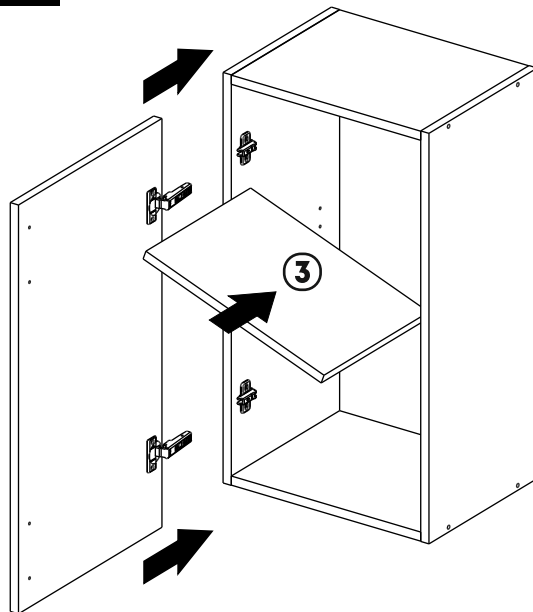

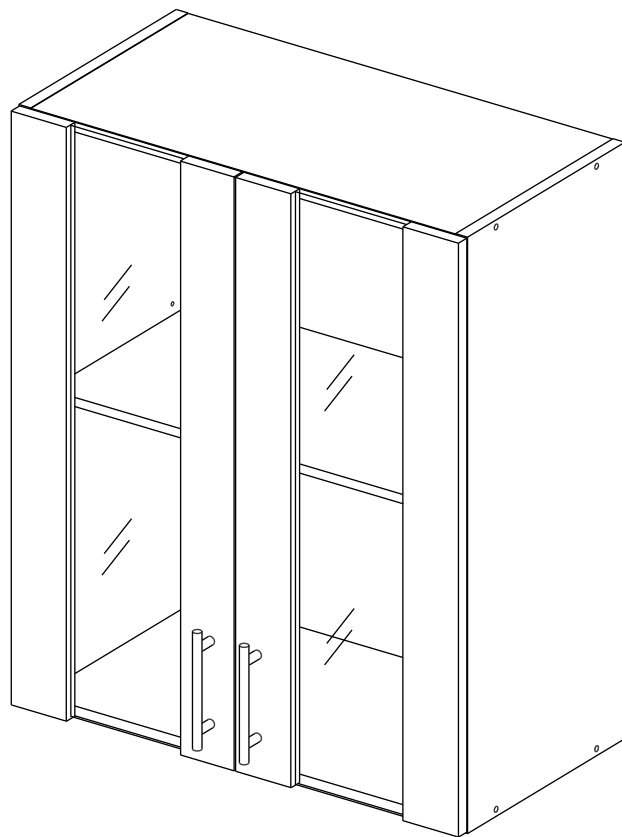

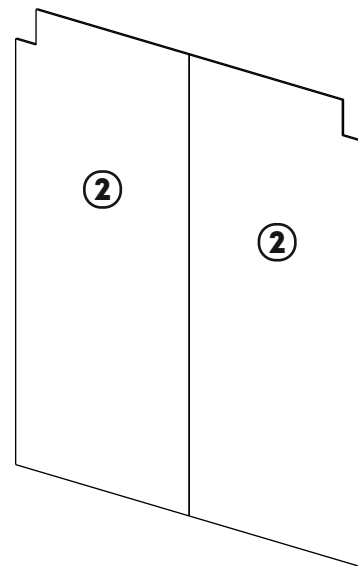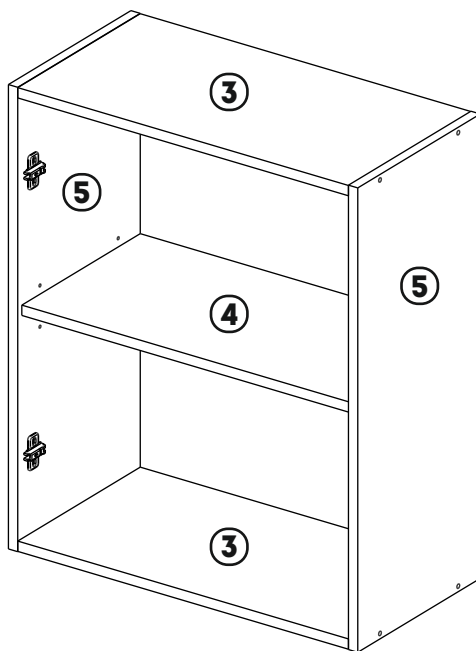
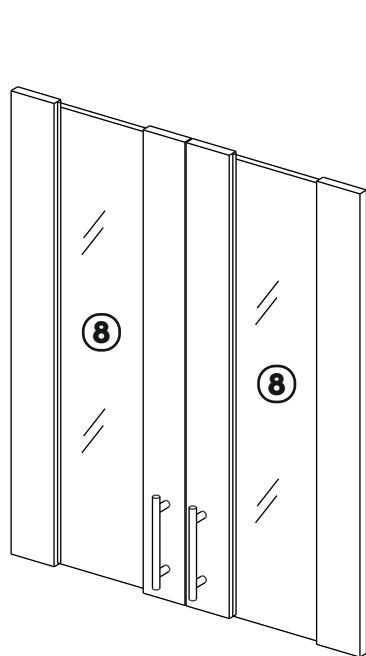


K7-13 (600)			
No	a*b	X	Pack
2	712x298	2	3/10
3	568x301	2	3/10
4	568x291	1	3/10
5	721x301	2	3/10
8	297x716	2	7/10

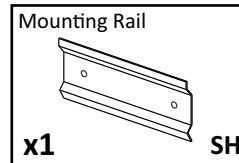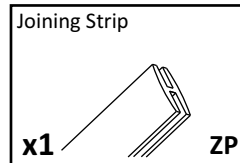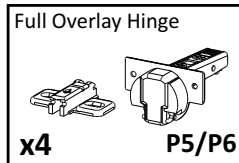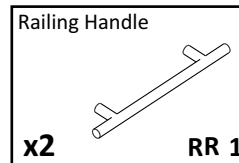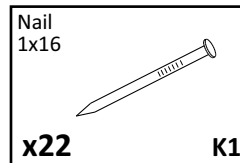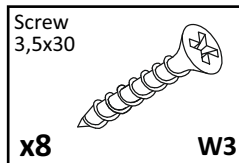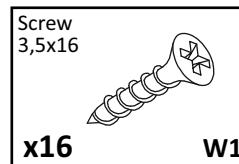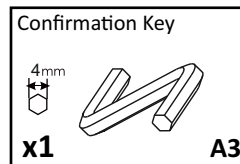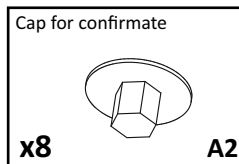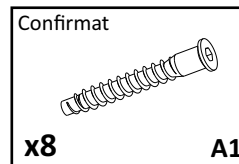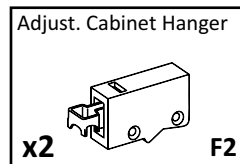
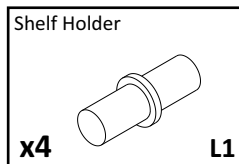


1


Mounting Plate

**x4****P6**Screw
3,5x16**x8****W1**


Shelf Holder

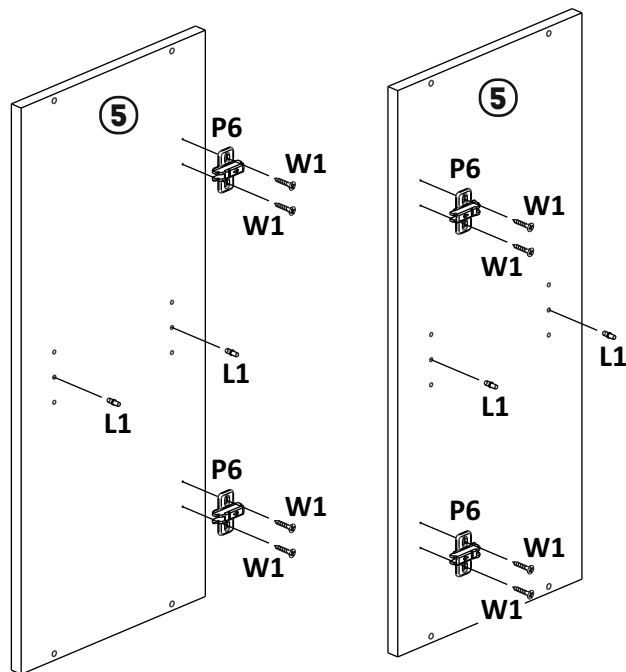**x4****L1****2**

Confirmat


**x8****A1**

Cap for confirmate


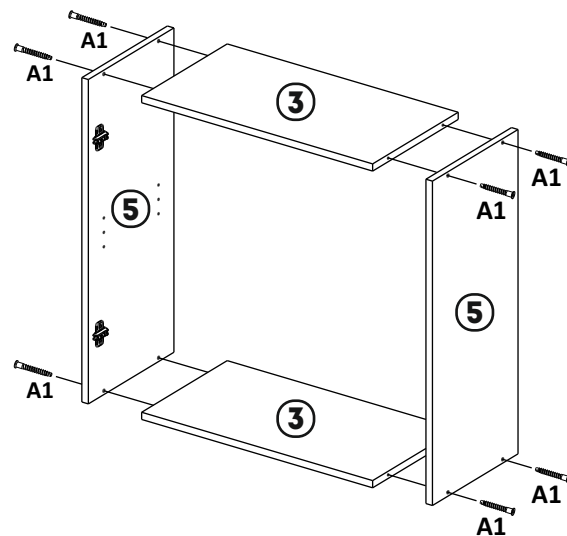
**x8****A2**

3


Screw
3,5x30

**x4****W3**



Adjust. Cabinet Hanger

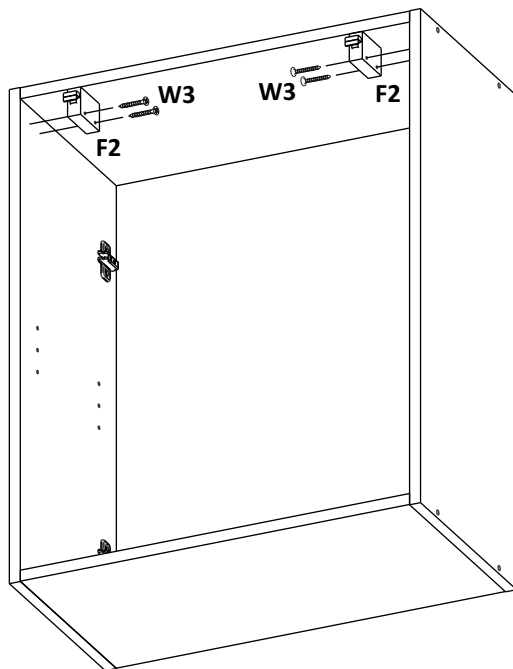**x2****F2****4**

Nail
1x16

**x22****K1**

Joining Strip

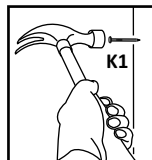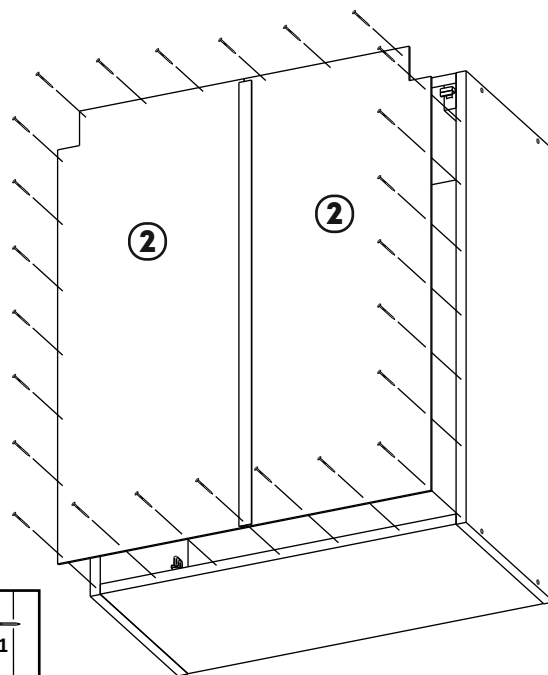
**x1****ZP**

5

Railing Handle

x2


RR 1



Screw
3,5x16

x8



W1







Full Overlay Hinge


x4


P5

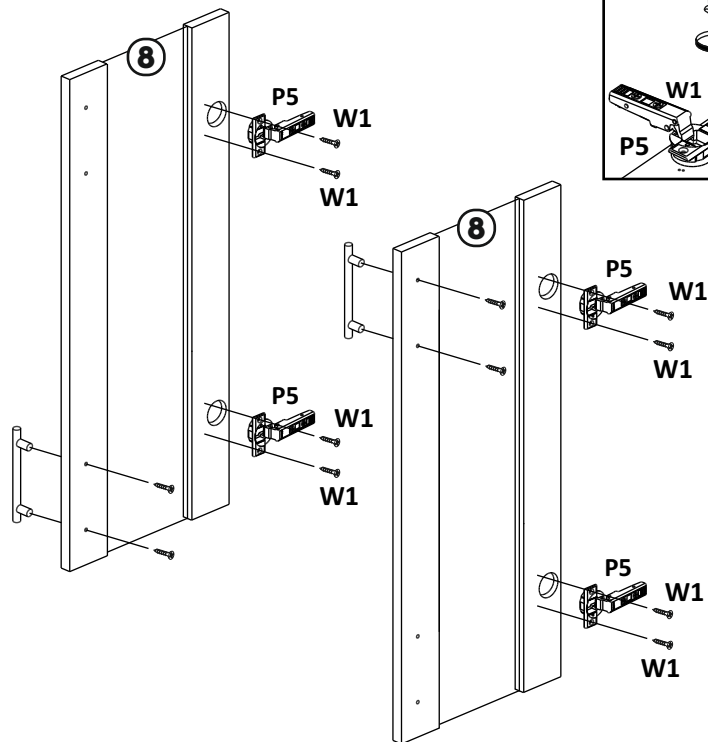











6

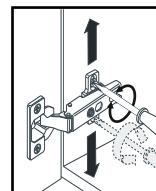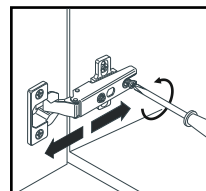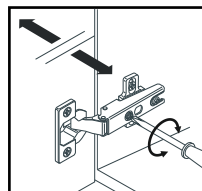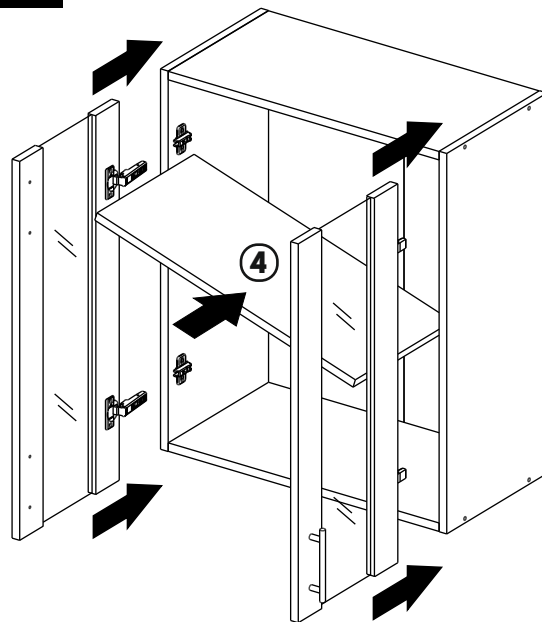

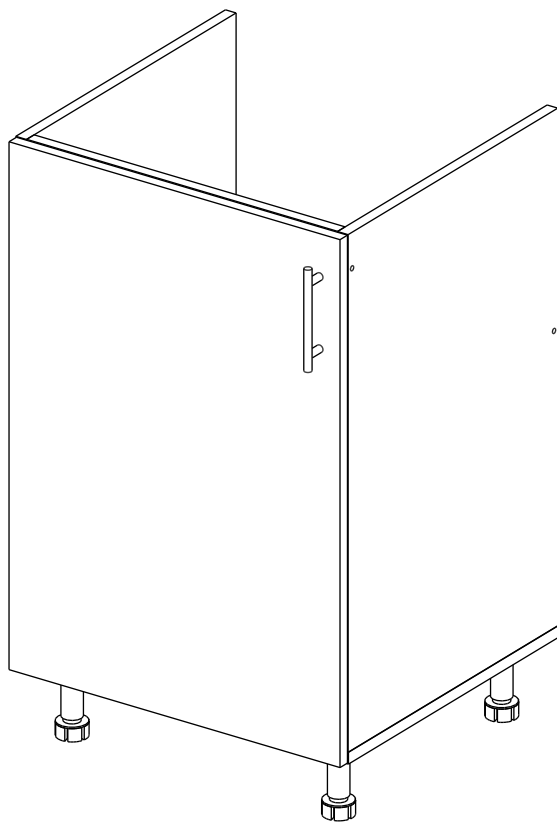




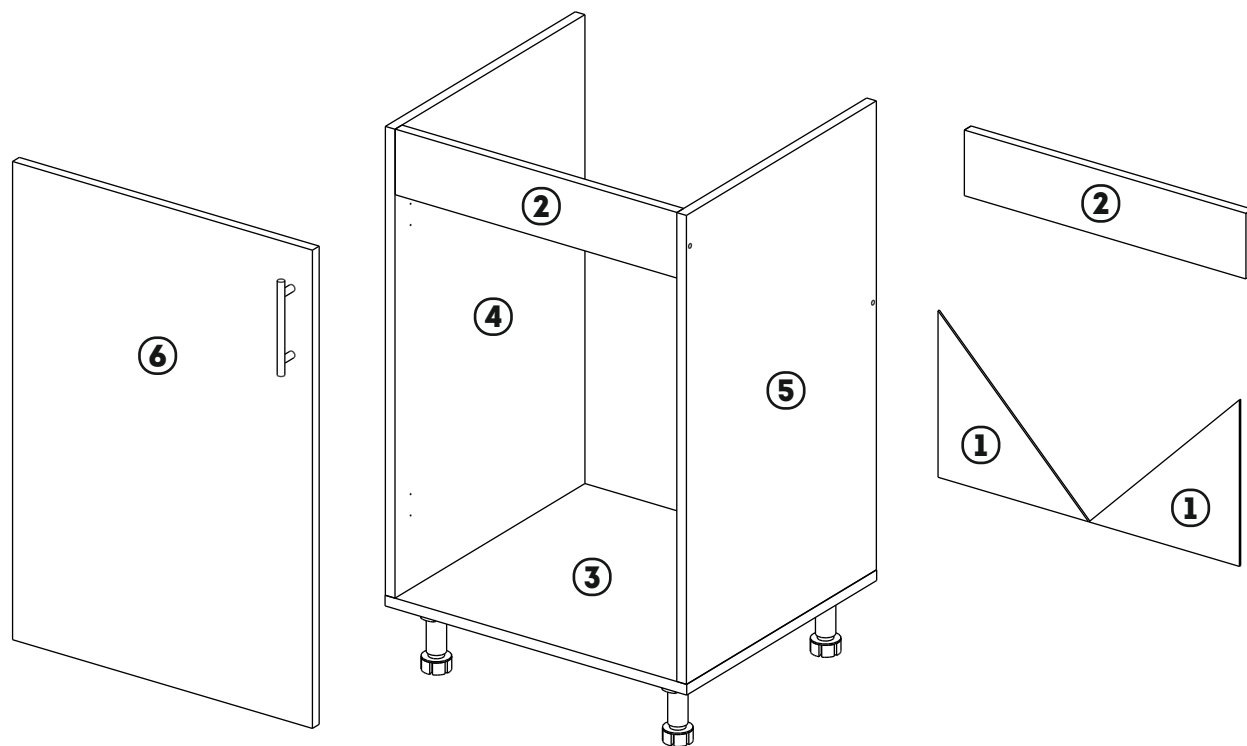


No	a*b	X	Pack
1	250x250	2	4/10
2	468x98	2	4/10
3	500x450	1	4/10
4	704x450	1	4/10
5	704x450	1	4/10
8	716x497	1	7/10

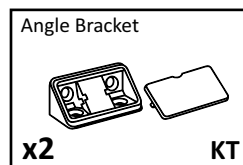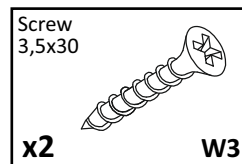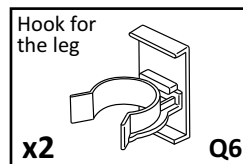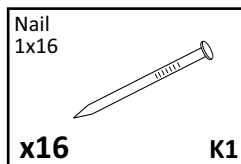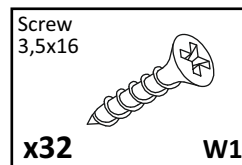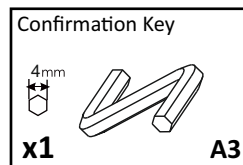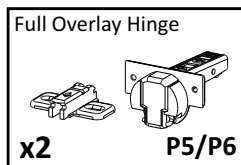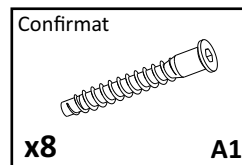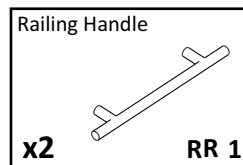
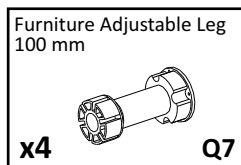


1

Mounting Plate

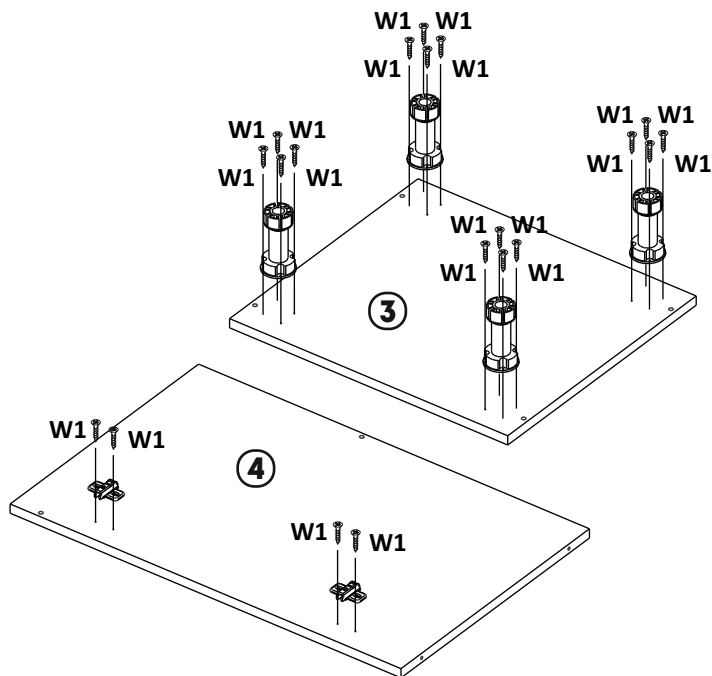
x2**P6**Screw
3,5x16**x20****W1**Furniture Adjustable Leg
100 mm**x4****Q7****2**

Conformat

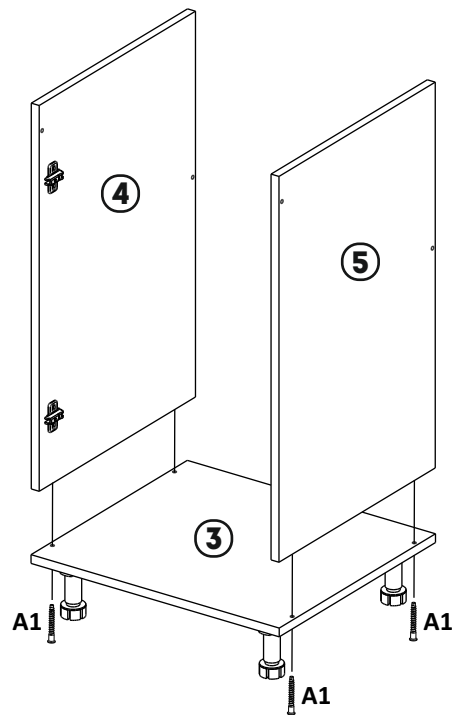x4**A1**

3


Nail
1x16



x30


K1

Confirmat




x4

A1

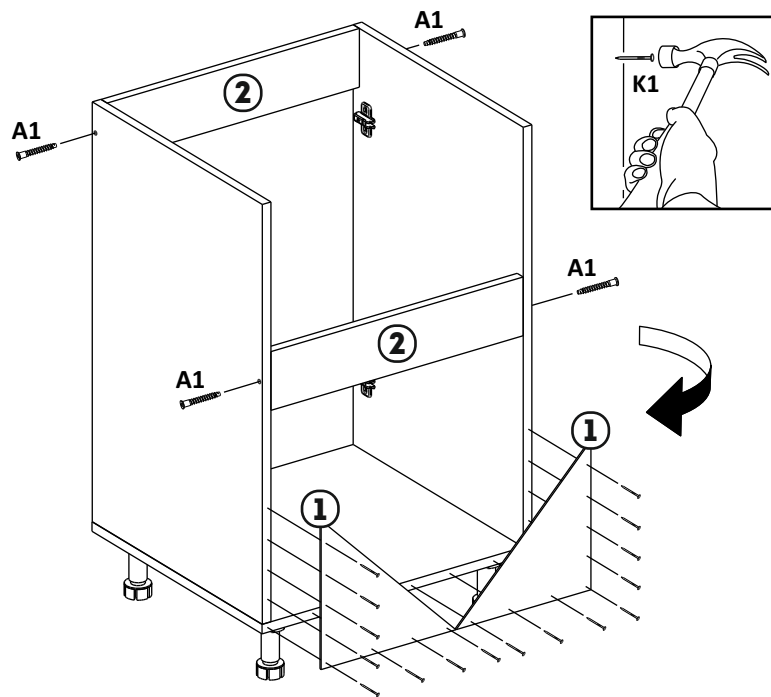

4


Railing Handle



x1


RR 1





Full Overlay Hinge





x2

P5

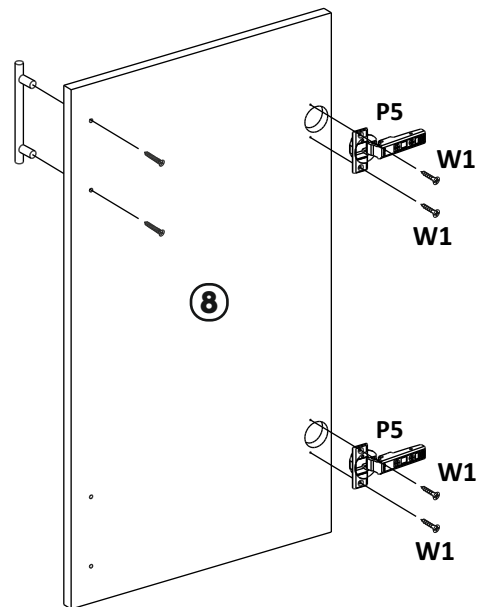

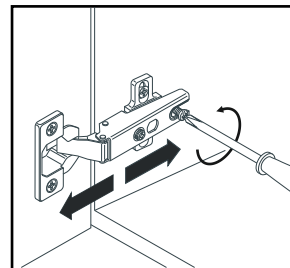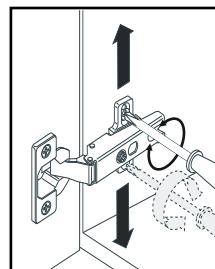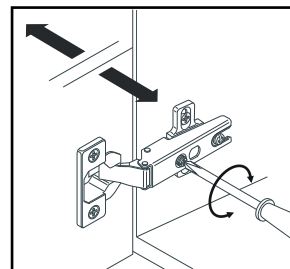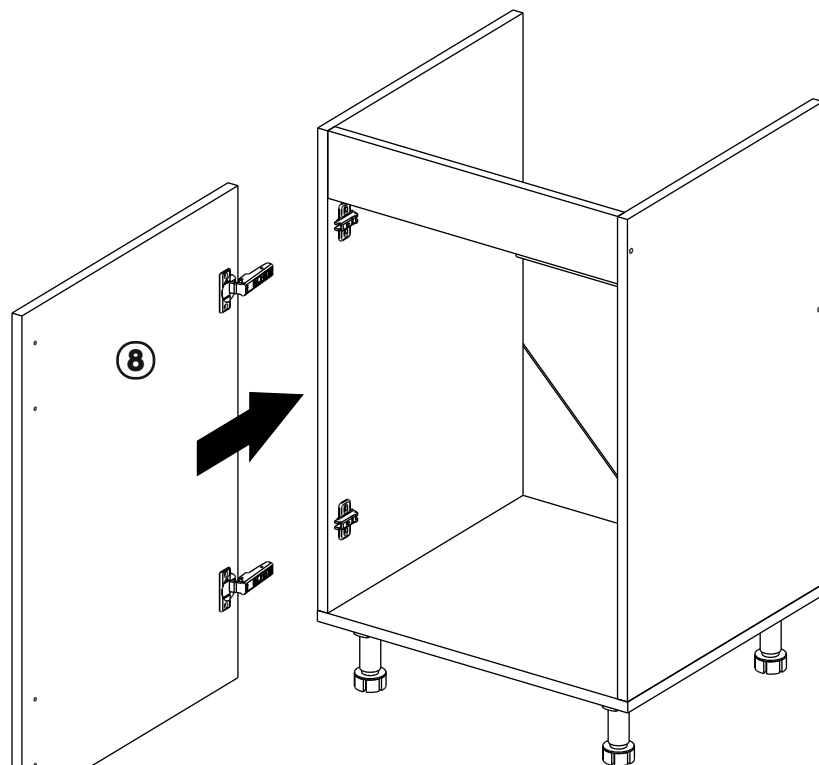

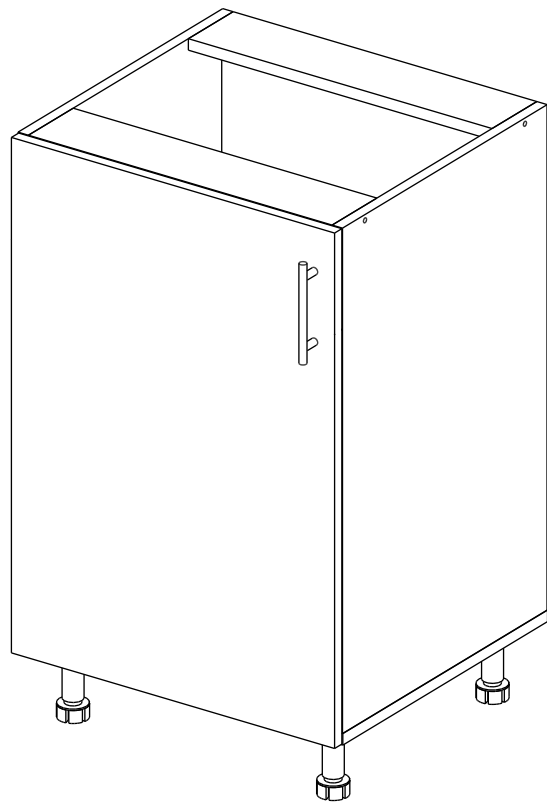


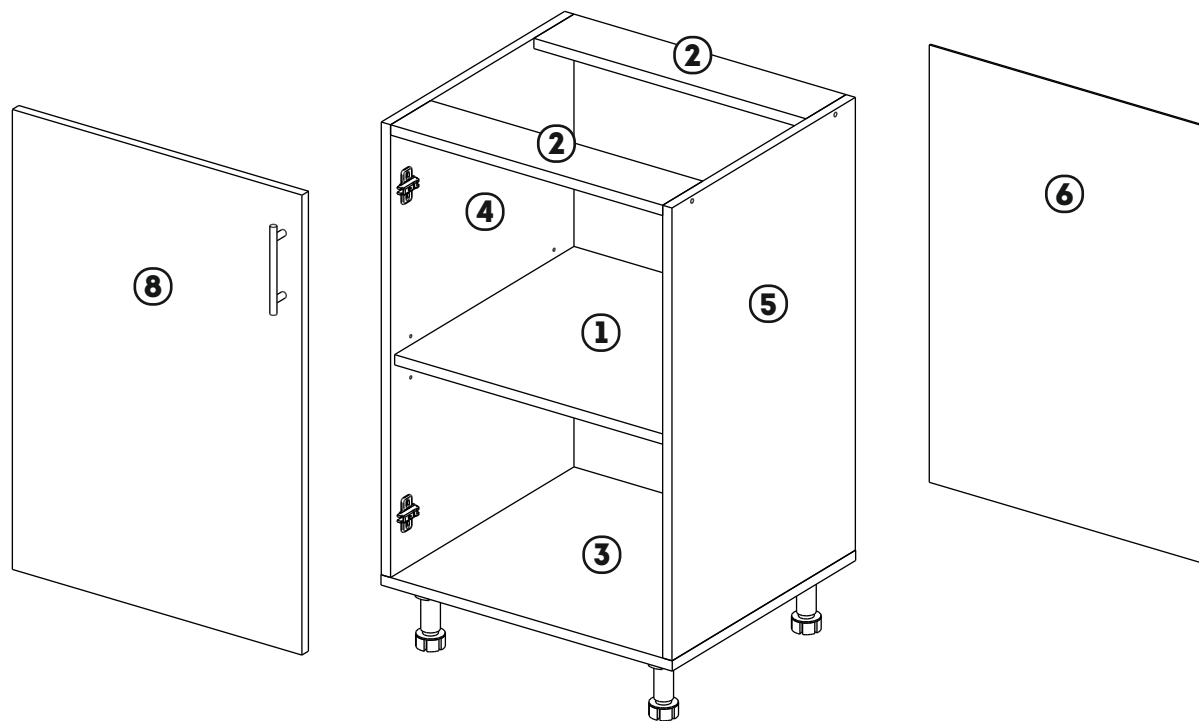

KH-12 (300)

No	a*b	X	Pack
1	268x440	1	5/10
2	268x98	2	5/10
3	300x450	1	5/10
4	704x450	1	5/10
5	704x450	1	5/10
6	716x296	1	5/10
8	716x296	1	7/10


Shelf Holder



x4

L1


Furniture Adjustable Leg
100 mm



x4

Q7


Railing Handle



x1

RR 1

Conformat



x8

A1


Hook for
the leg



x2

Q6


Nail
1x16



x17

K1

Full Overlay Hinge



x2

P5/P6


Confirmation Key



x1

A3


Screw
3,5x16



x24

W1

Screw
3,5x30




x4








W3

1

Shelf Holder


x4**L1**

Mounting Plate

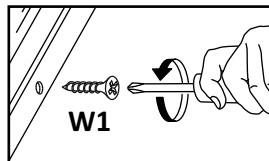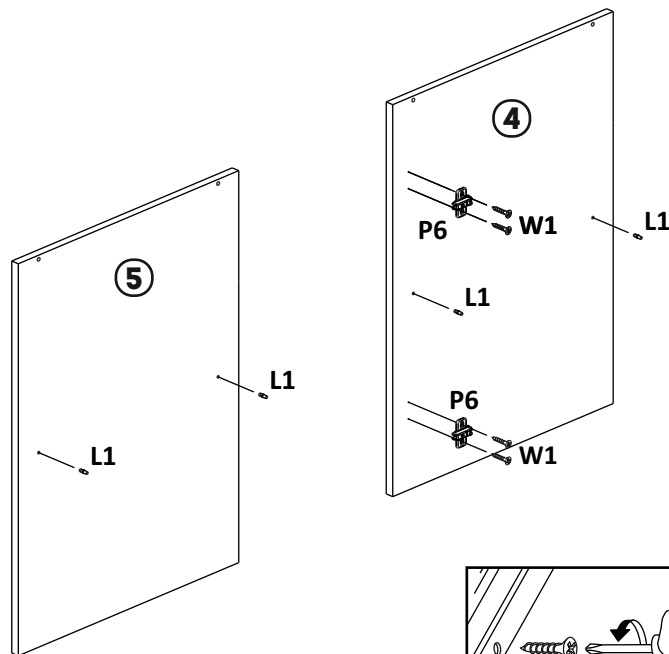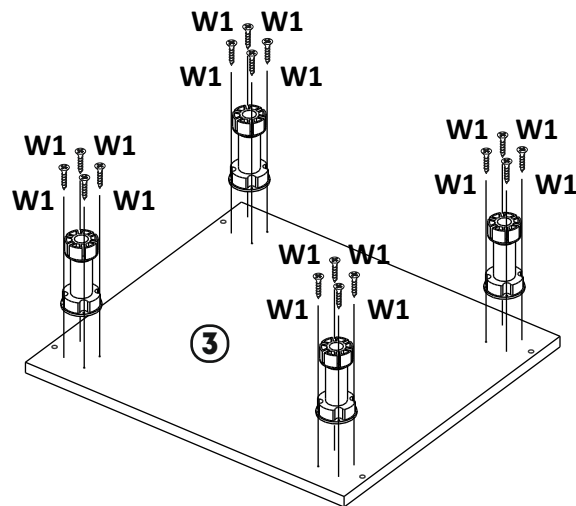x2**P6**Screw
3,5x16**x8****W1****2**Screw
3,5x16**x16****W1**Furniture Adjustable Leg
100 mm**x4****Q7**



3

Confirmat




x4

A1

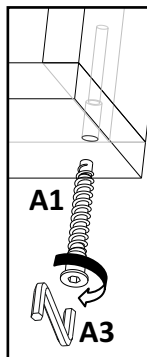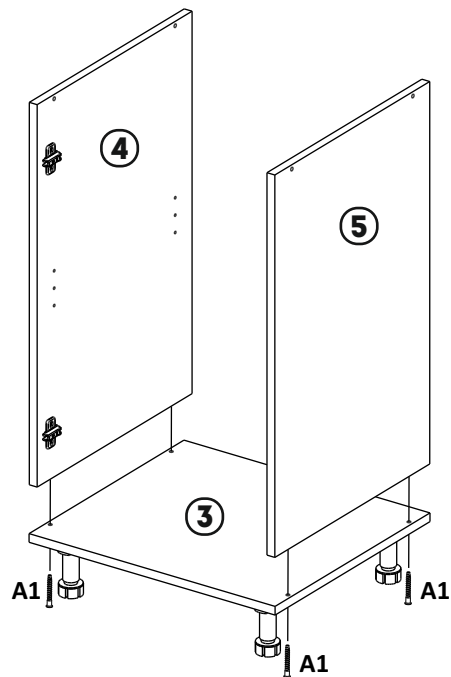

4


Nail
1x16



x30



K1

Confirmat



x4

A1

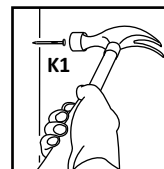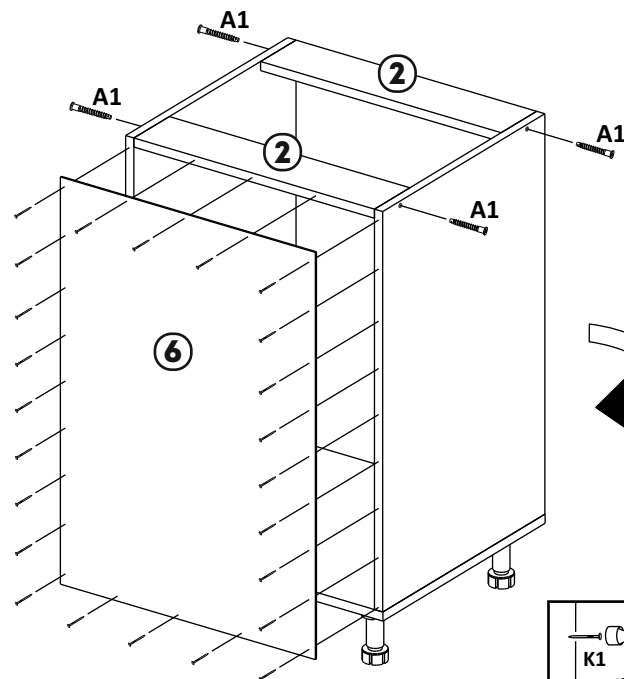


5

Railing Handle

x1



RR 1







Full Overlay Hinge


x2


P5

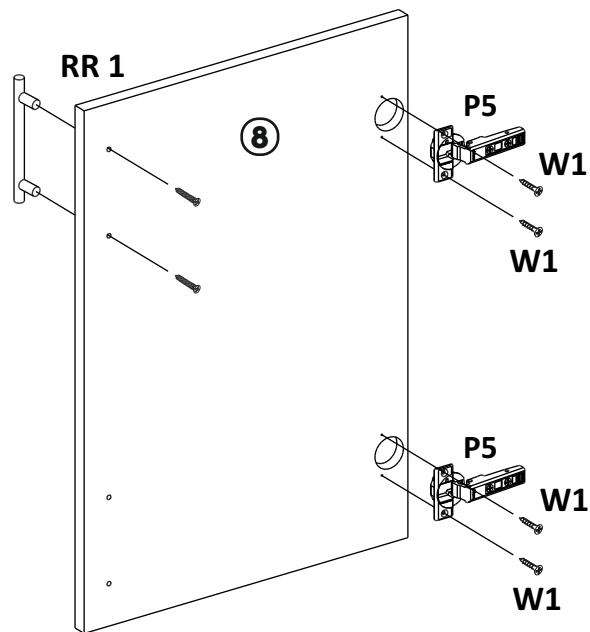

6

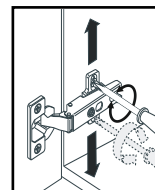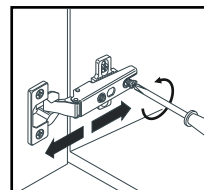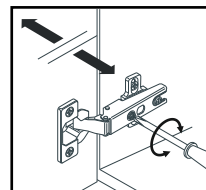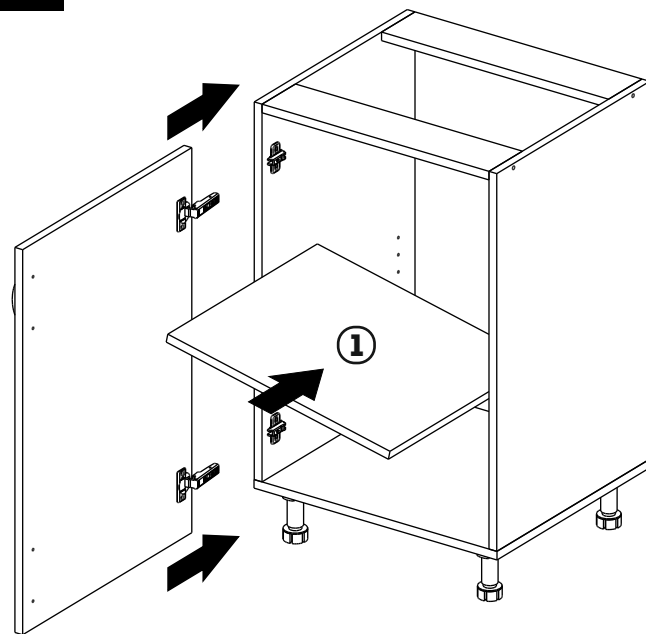

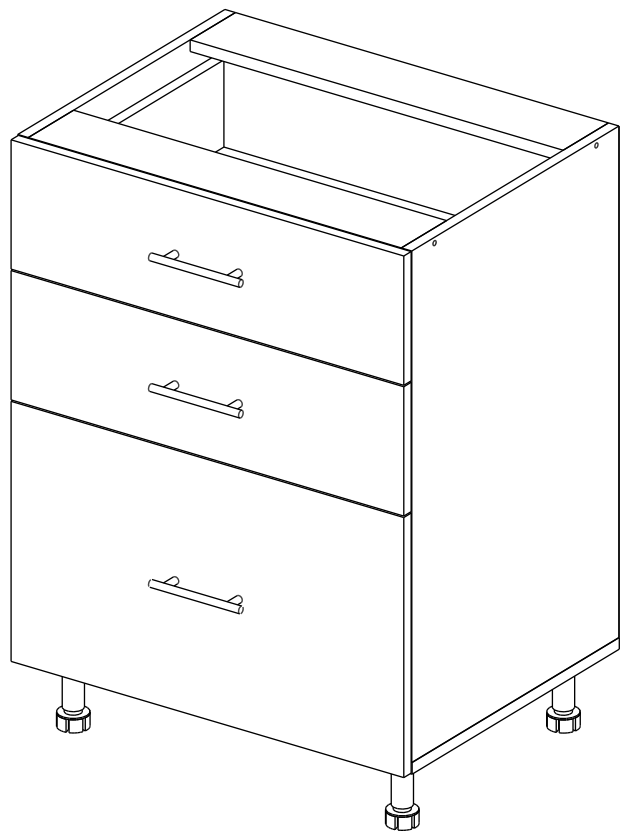


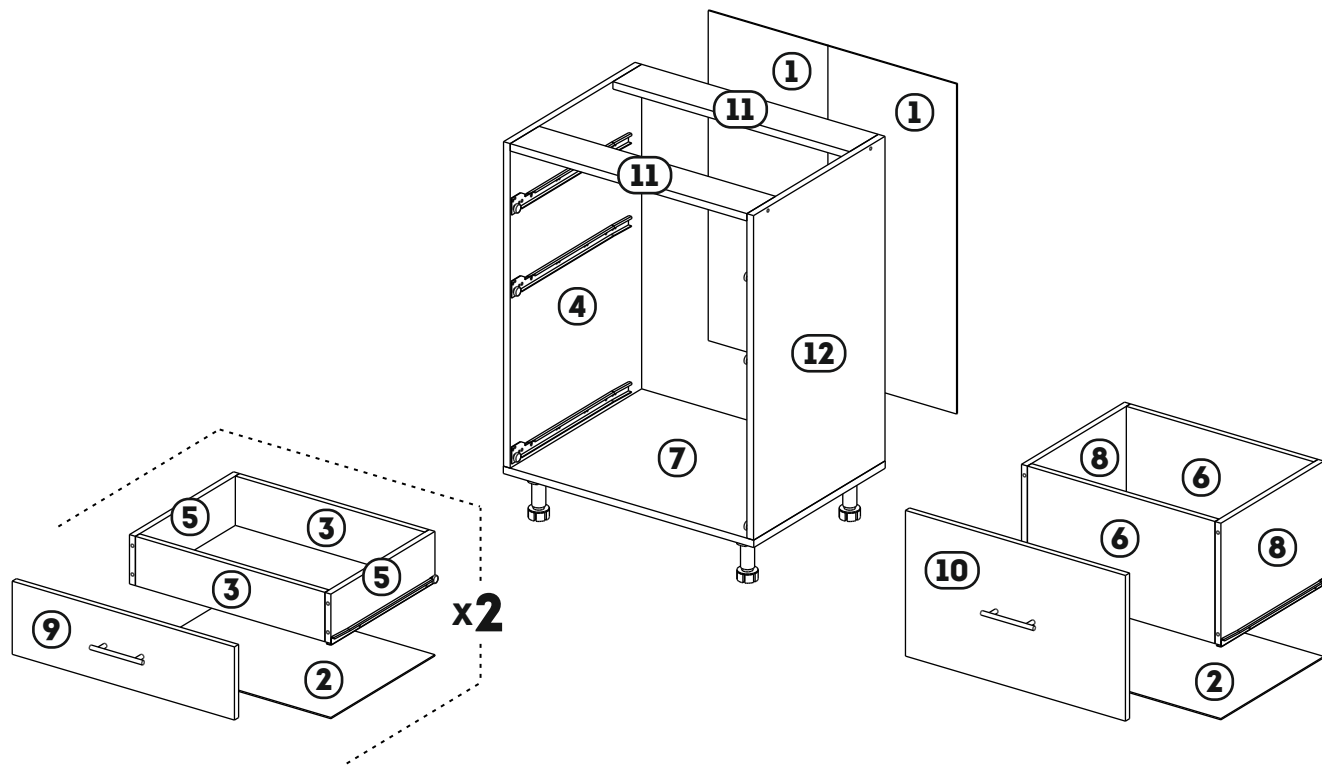

KH-19 (600)

No	a*b	X	Pack
1	716x296	2	6/7
2	542x400	3	6/7
3	124x510	4	6/7
4	704x450	1	6/7
5	124x400	4	6/7
6	304x510	2	6/7
7	601x450	1	6/7
8	304x400	2	6/7
9	176x597	2	7/7
10	356x597	1	7/7
11	98x568	2	6/7
12	704x450	1	6/7


Furniture Adjustable Leg
100 mm



x4

Q7


Railing Handle



x3

RR 1

Conformat



x32

A1

Hook for
the leg



x2

Q6

Confirmation Key


4mm



x1

A3


Screw
3,5x16



x40

W1


Dowel



x12

C1

Nail
1x16



x70

K1


Telescopic Guide
400 mm



x3

NR 1/2


Screw
3,5x30



x20

W3

Joining Strip




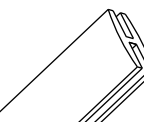


x1



ZP

1

Confirmat

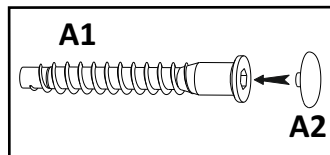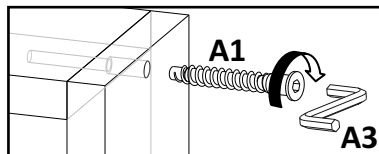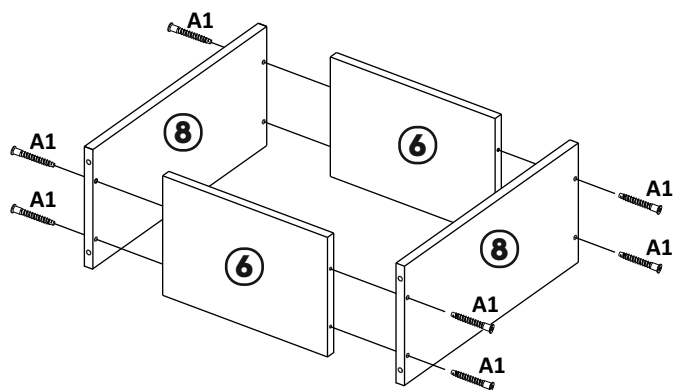
**x8****A1****2**

Railing Handle

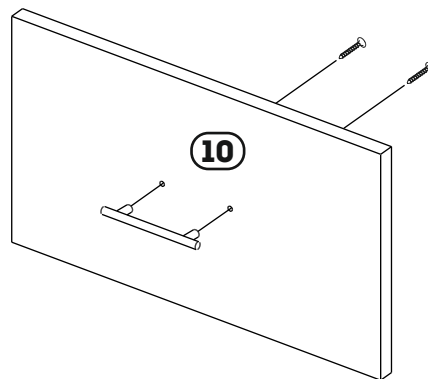**x1****RR 1**

3


Dowel



x4



C1

Nail
1x16



x12

K1

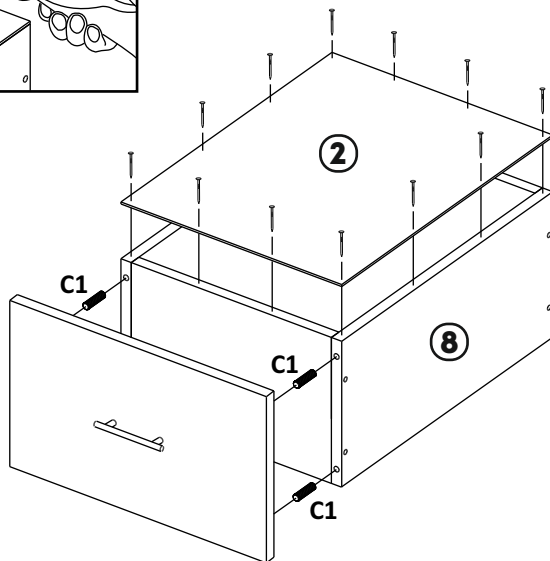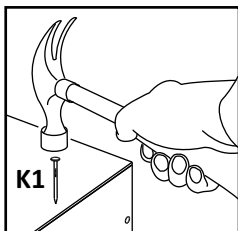

4


Telescopic Guide
400 mm



x1



NR 2

Screw
3,5x16




x6

W1

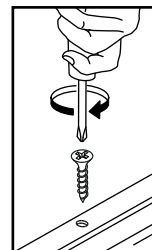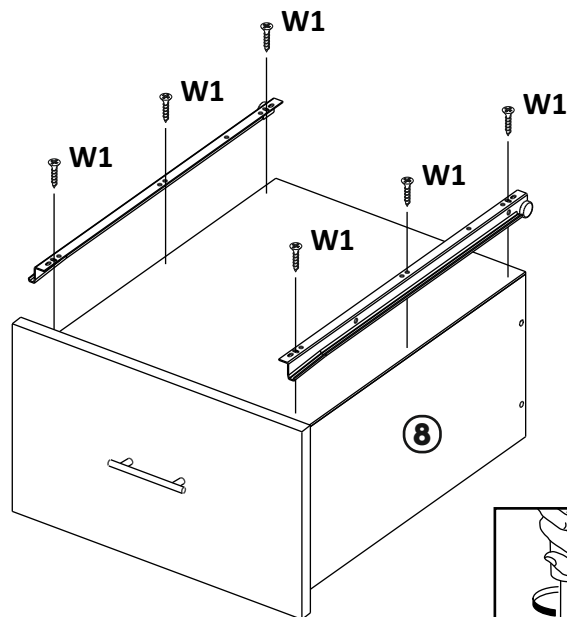


5

Screw
3,5x30




x4

W3

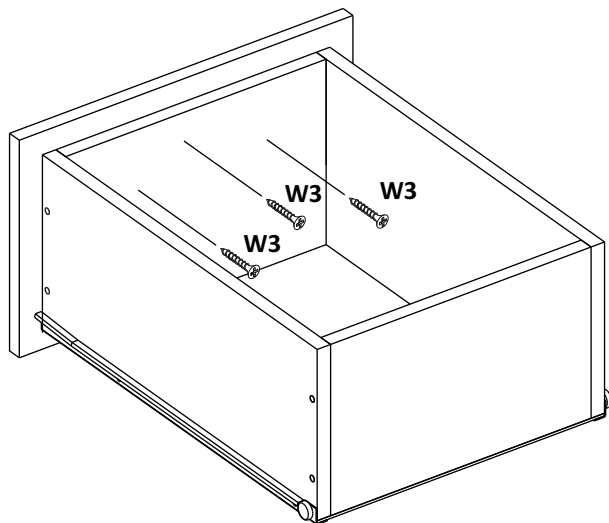

6


Telescopic Guide
400 mm

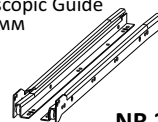

x3


NR 2

Screw
3,5x16




x12

W1

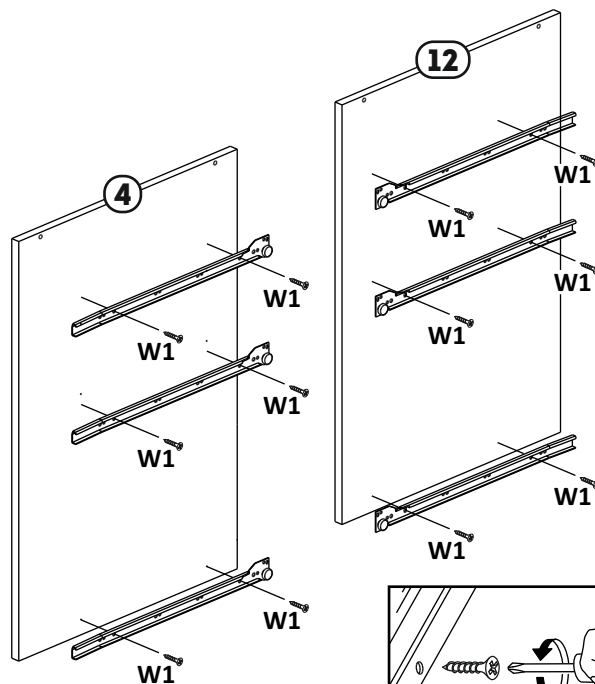

7


Screw
3,5x16



x16


W1

Furniture Adjustable Leg
100 mm




x4

Q7

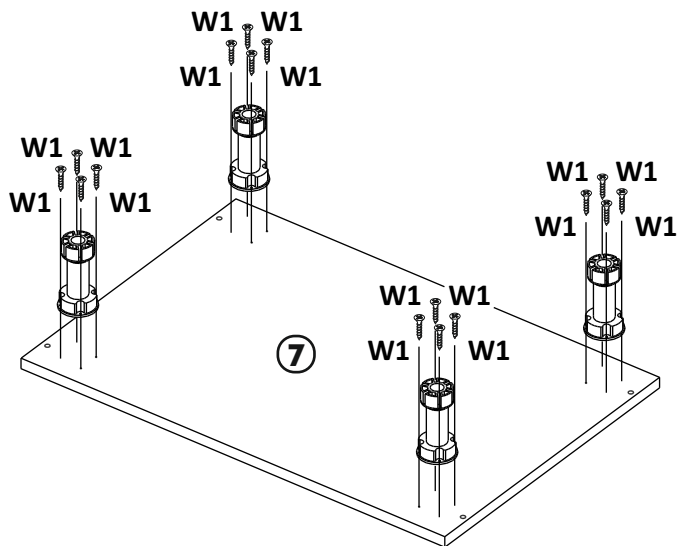


8

Confirmat




x4

A1

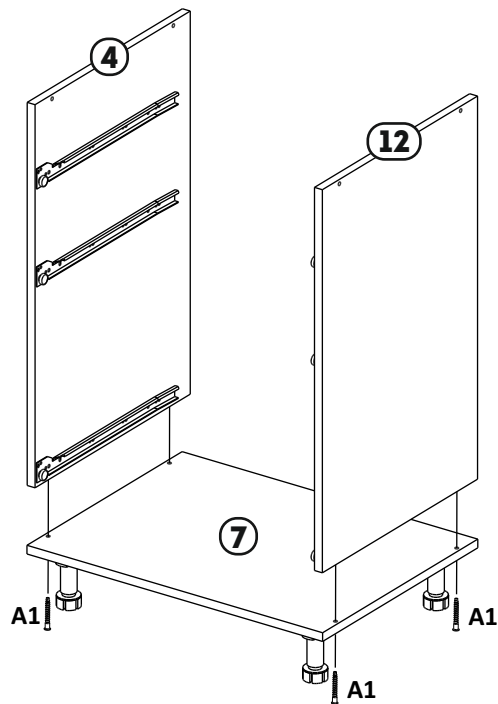



9

Nail
1x16



x26

K1

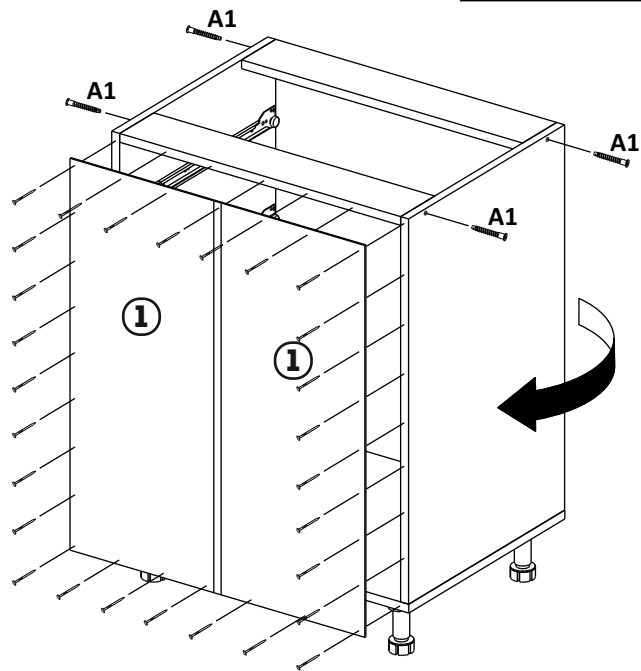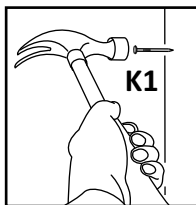**10**