


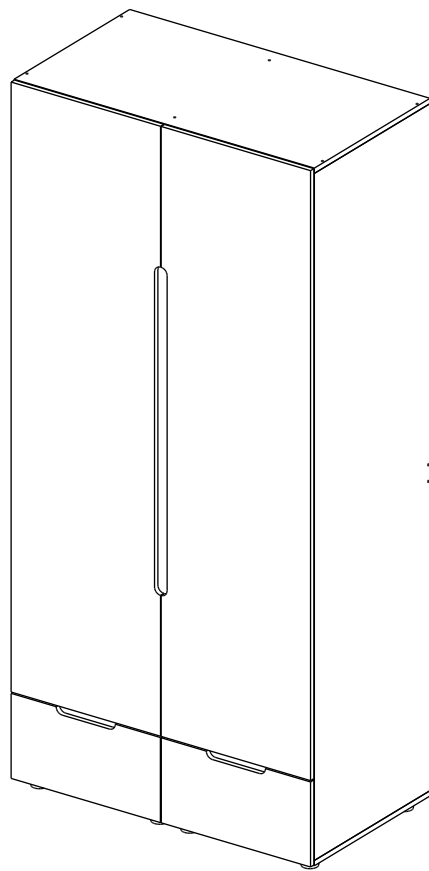
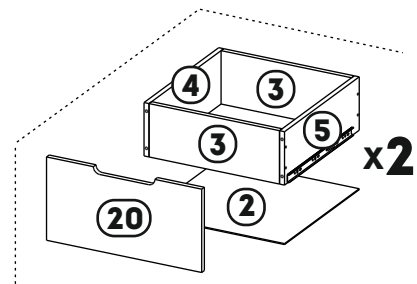
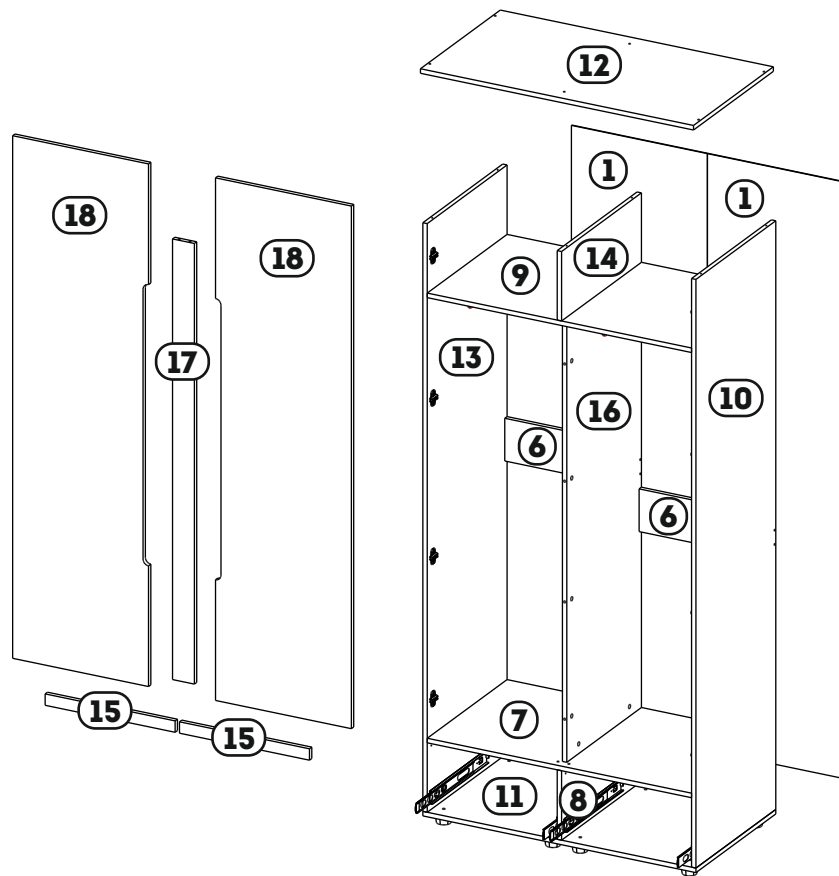
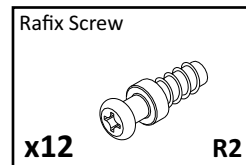
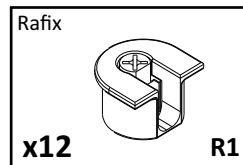
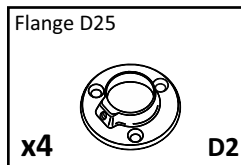
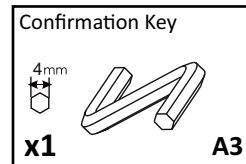
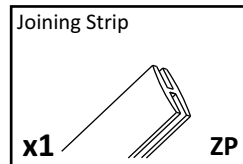
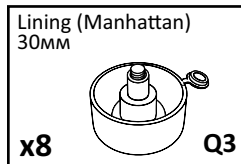
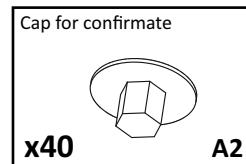
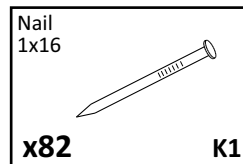
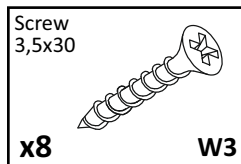
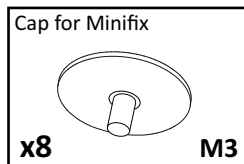
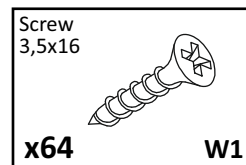
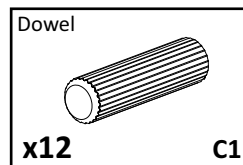
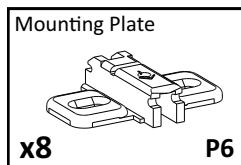
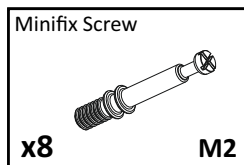
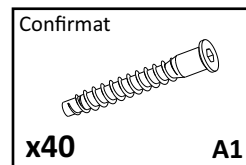


361-000017

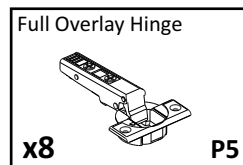

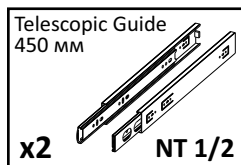

No	a*b	X	Pack
1	2096x2096	2	1/4
2	450x450	2	1/4
3	418x164	4	2/4
4	450x164	2	2/4
5	450x164	2	2/4
6	150x476	2	3/4
7	968x550	1	2/4
8	244x550	1	3/4
9	968x550	1	2/4
10	2068x550	1	1/4
11	1000x550	1	2/4
12	1000x550	1	2/4
13	2068x550	1	1/4
14	244x550	1	3/4
15	476x40	2	3/4
16	1548x514	1	3/4
17	1548x80	1	3/4
18	1836x498	2	4/4
19	256x497	1	4/4
20	256x497	1	4/4

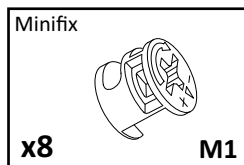

1


Minifix



x8




M1

Minifix Screw




x4

M2

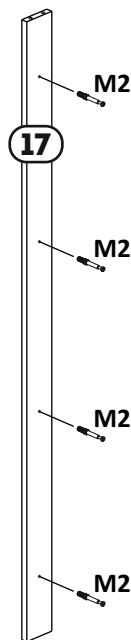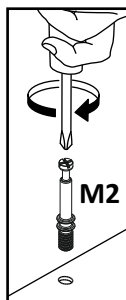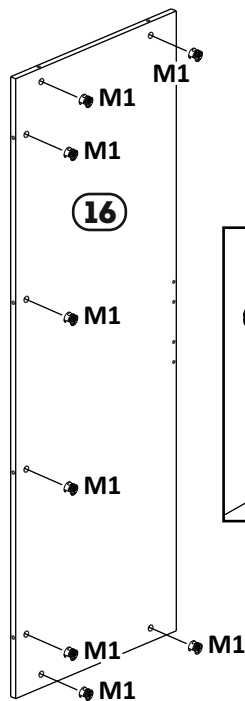

2


Dowel



x2

C1


Rafix



x12

R1


Rafix Screw



x2

R2

Screw
3,5x16



x4



W1

Telescopic Guide
450 mm



x2

NT 1

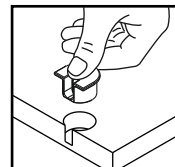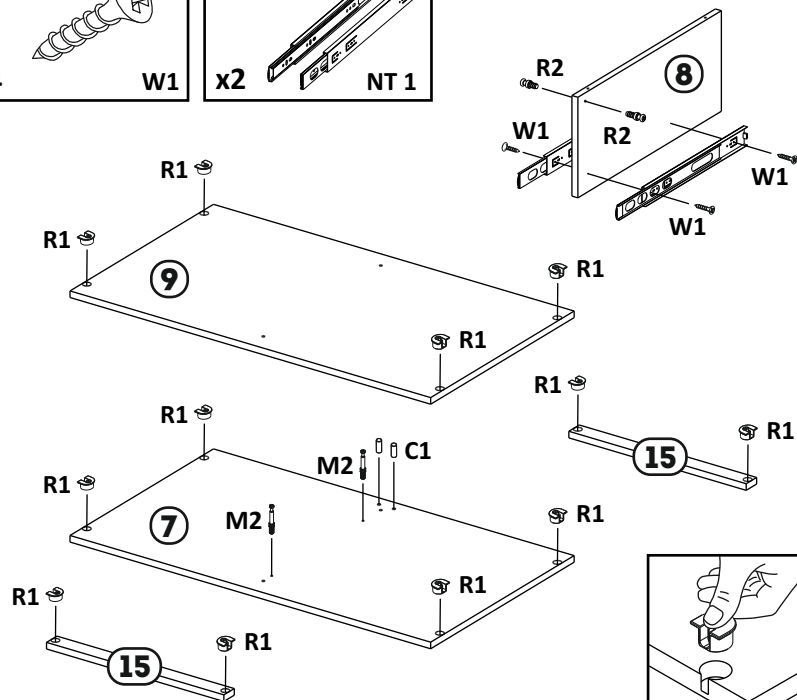


3

Confirmat

x4


A1



Minifix Screw

x2



M2




Dowel

x2

C1

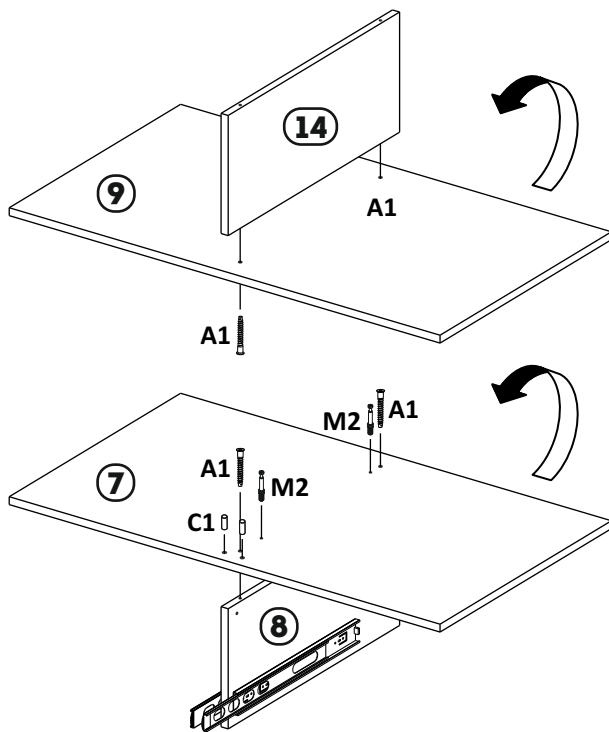


4

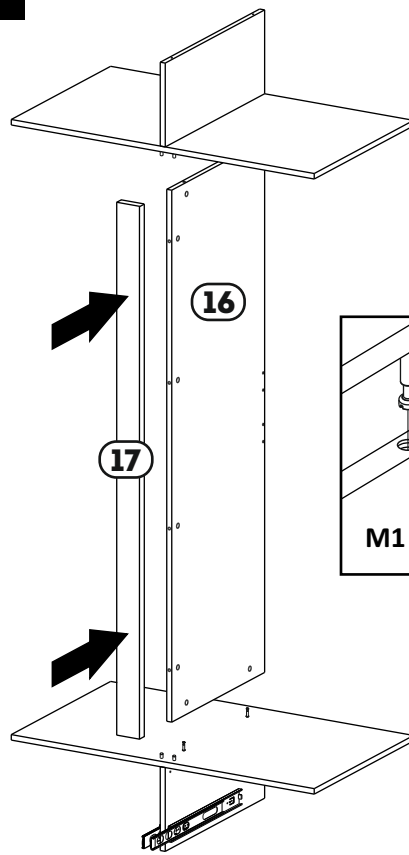

5


Rafix Screw



x10

R2


Screw
3,5x16



x16



W1

Mounting Plate




x8


P6

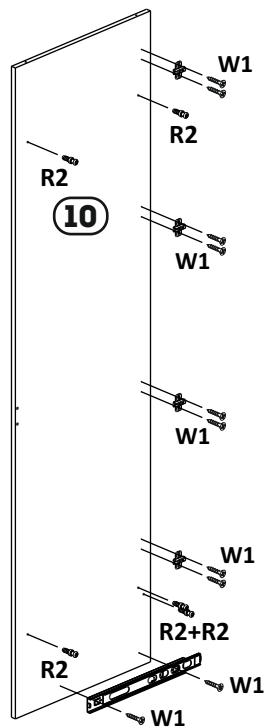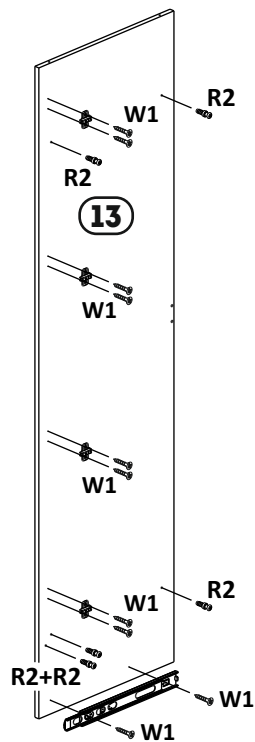

6

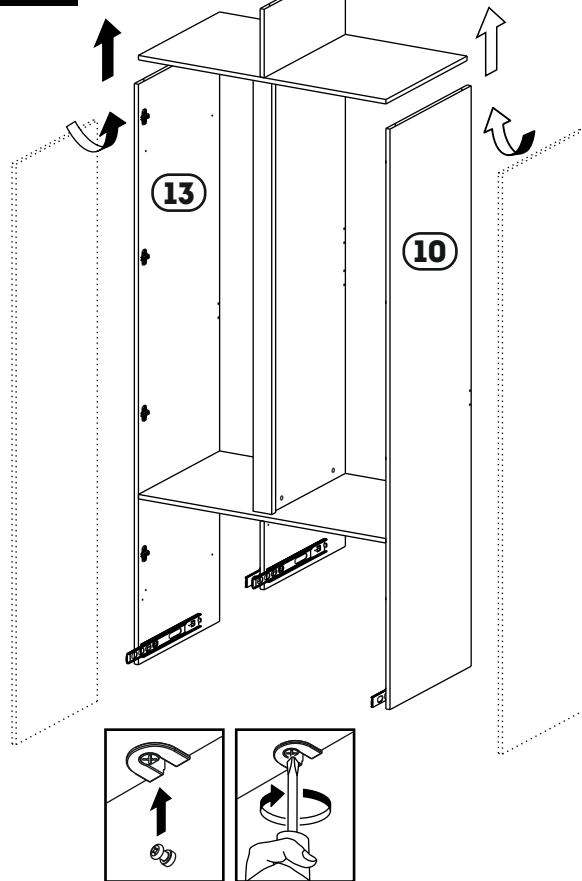

7

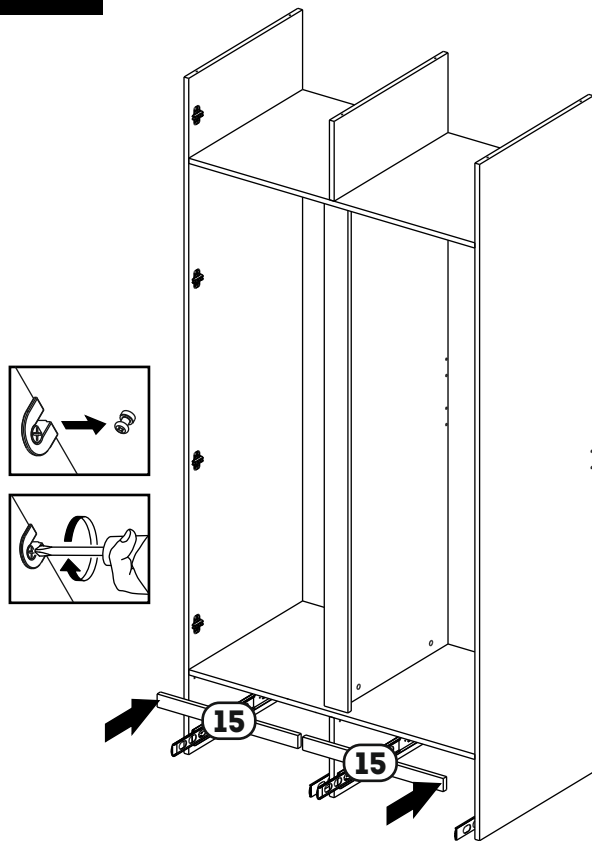


8

Confirmat

x4


A1



Flange D25

x4




D2



Screw
3,5x16


x12

W1

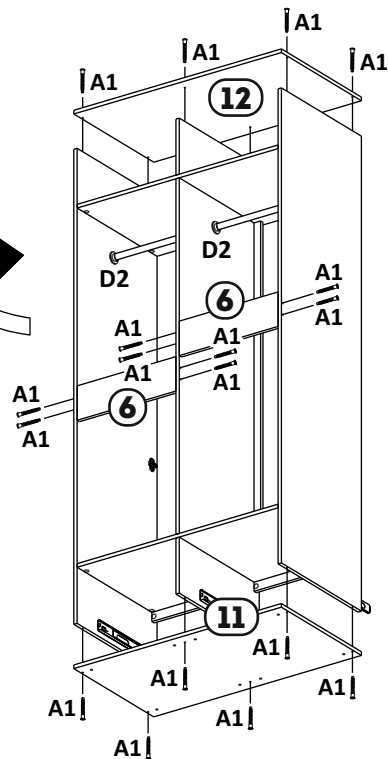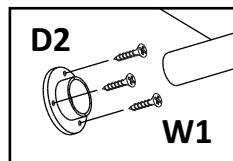

9

Nail
1x16



x54

K1

Joining Strip


x1






ZP

Lining (Manhattan)
30mm

x6




Q3

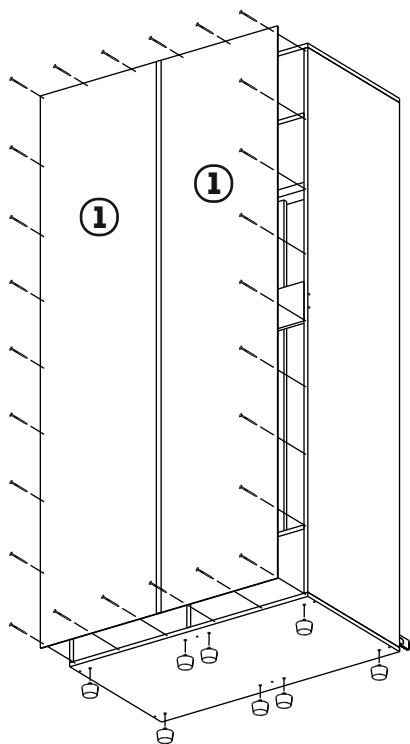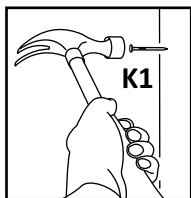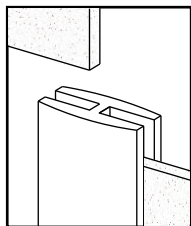

10

Confirmat


x8






A1

Cap for confirmat

x8




A2

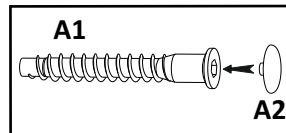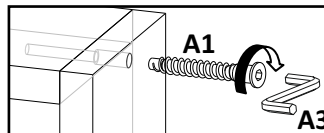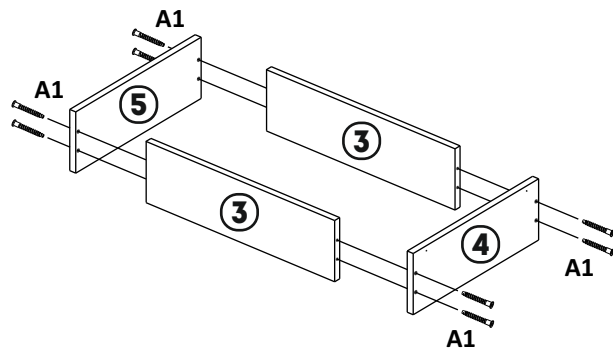

11


Screw
3,5x16



x4



W1

Telescopic Guide
450 mm

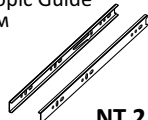


x1

NT 2

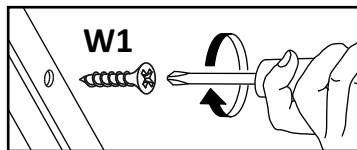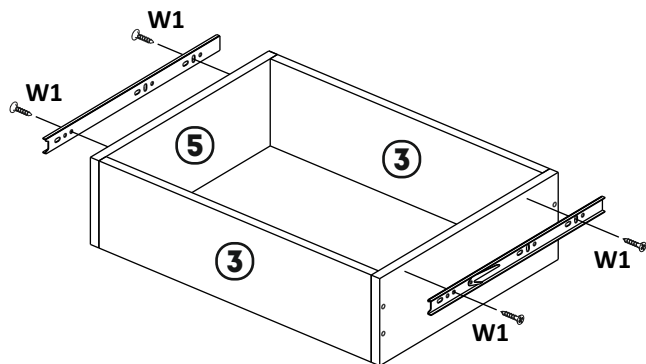

12


Dowel



x4



C1

Nail
1x16




x14

K1

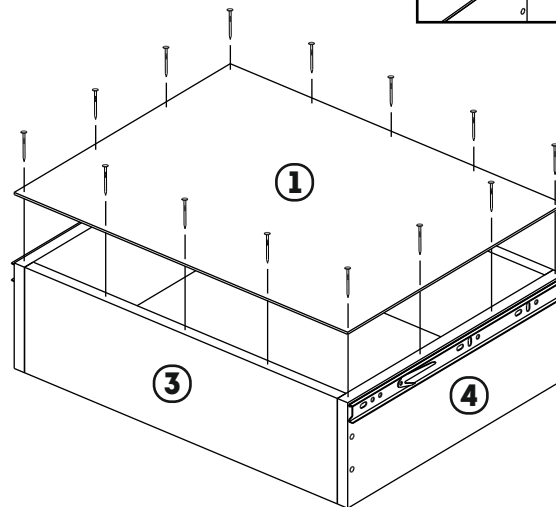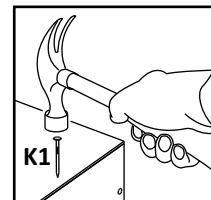

13


Screw
3,5x30



x4


W3

Dowel




x4

C1

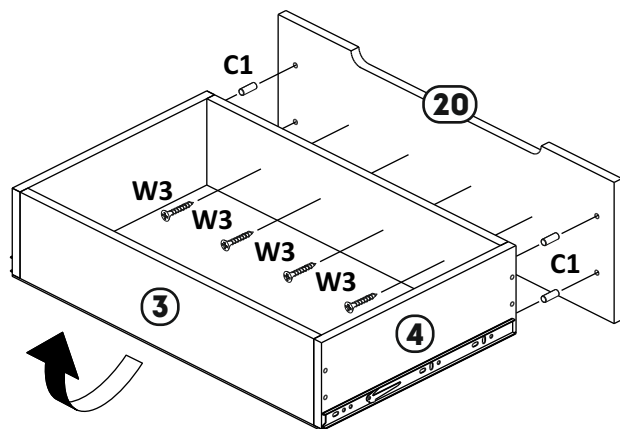

14


Full Overlay Hinge



x8



P5

Screw
3,5x16







x16


W1




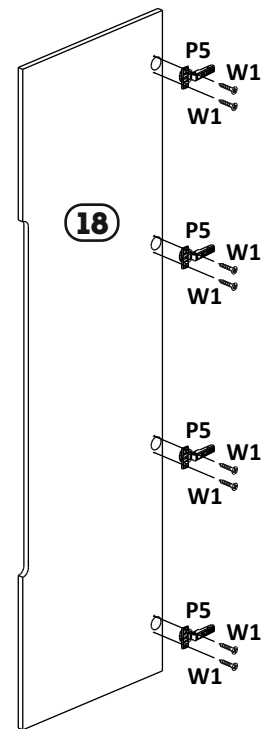
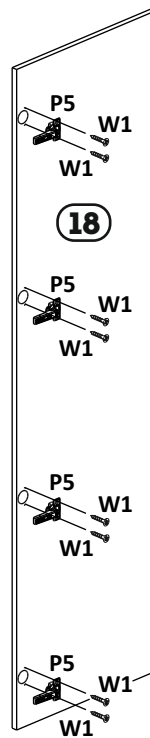


15

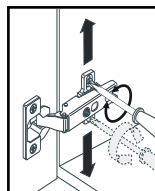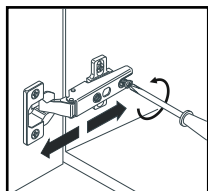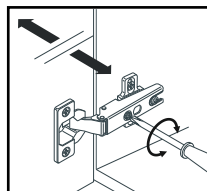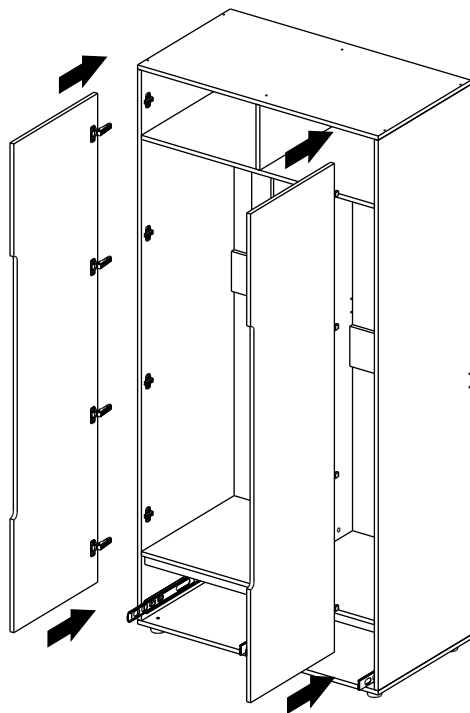

16

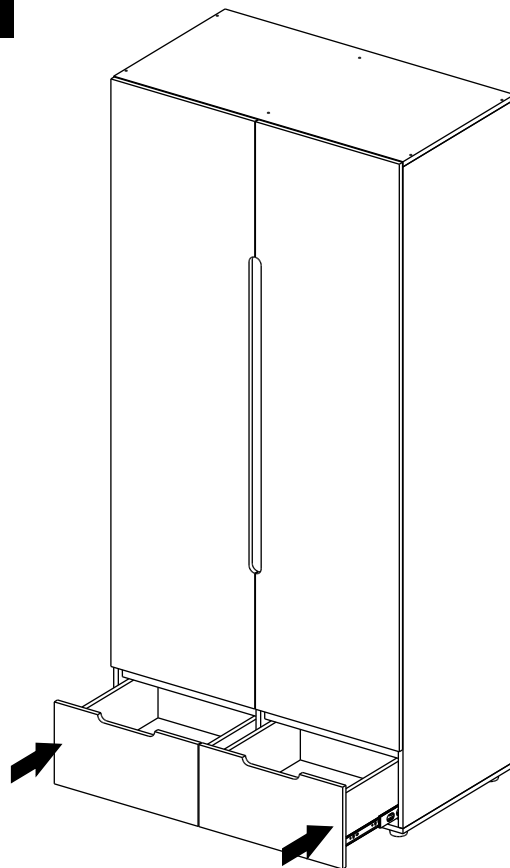

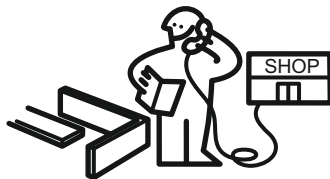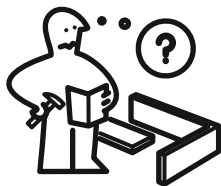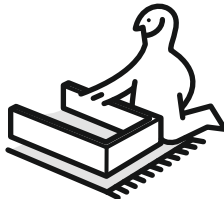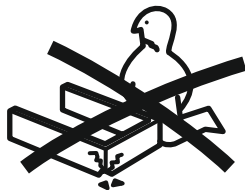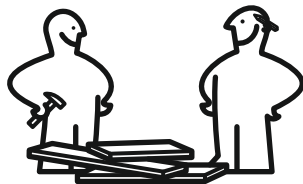

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.