


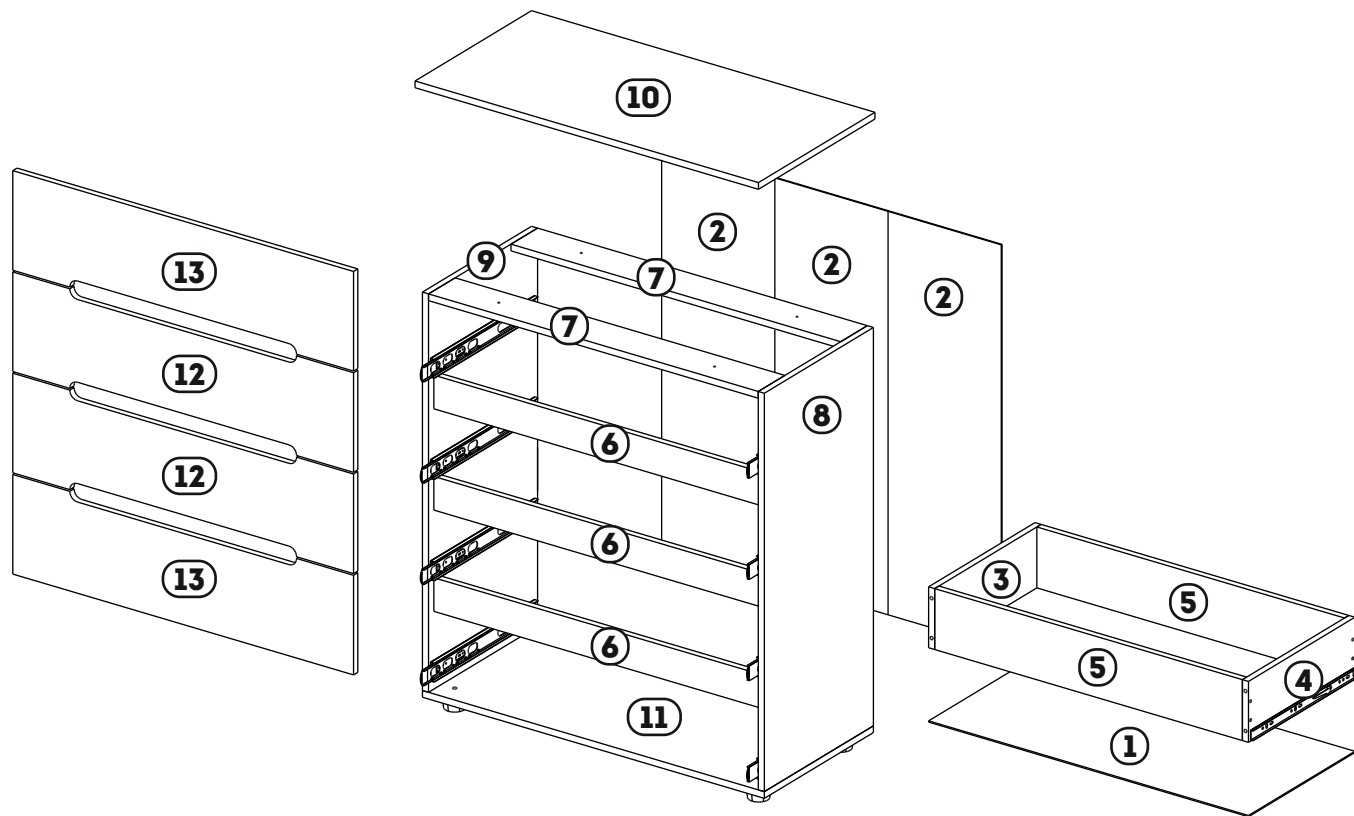
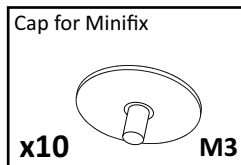
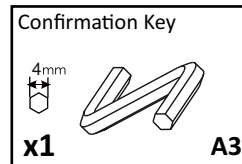
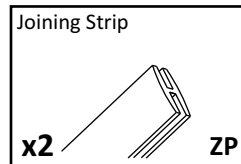
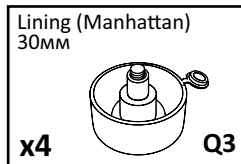
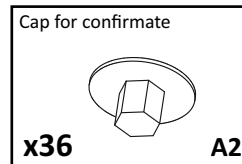
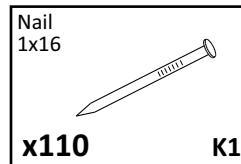
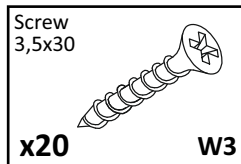
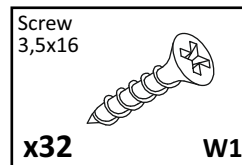
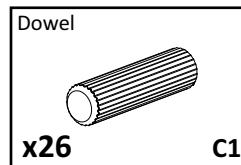
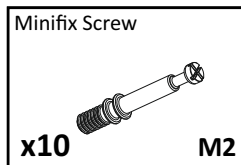




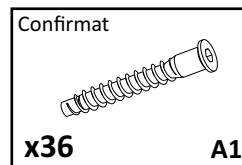


361-000018

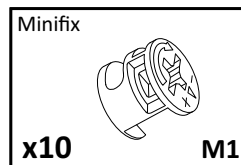

No	a*b	X	Pack
1	842x400	4	1/3
2	960x298	3	1/3
3	400x145	4	1/3
4	400x145	4	1/3
5	810x145	8	2/3
6	868x80	3	1/3
7	100x868	2	1/3
8	948x410	1	2/3
9	948x410	1	2/3
10	904x438	1	1/3
11	900x410	1	1/3
12	237x897	2	3/3
13	237x897	2	3/3

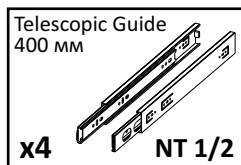

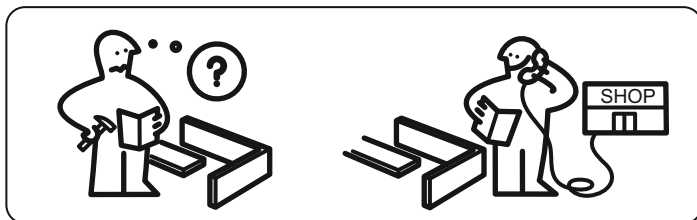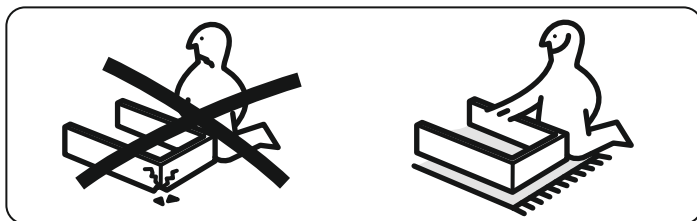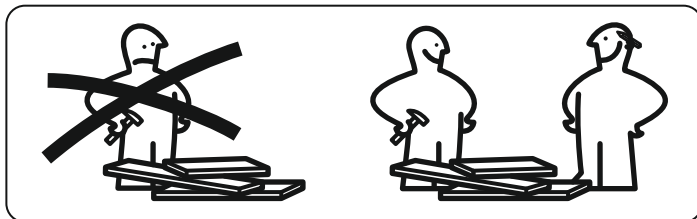

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Screw
3,5x16



x16


W1

Telescopic Guide
400 mm

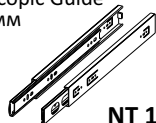


x4

NT 1

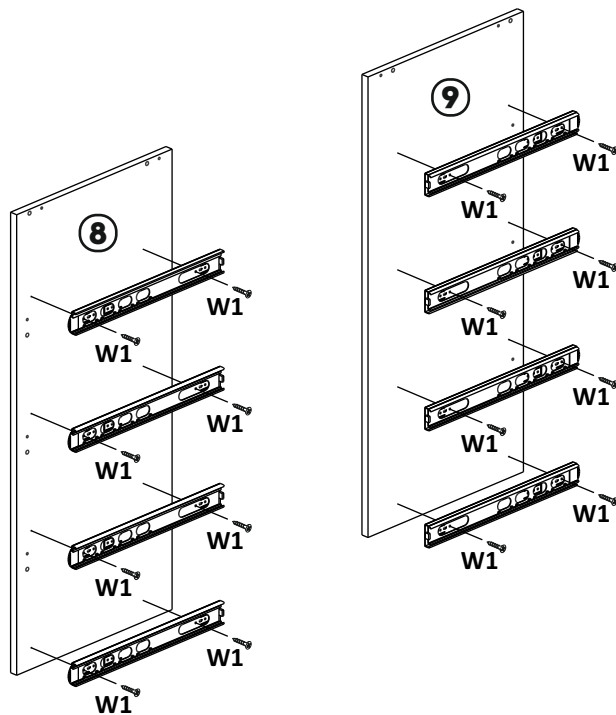**2**


Minifix Screw



x10



M2

Dowel



x10

C1

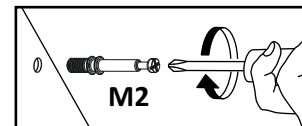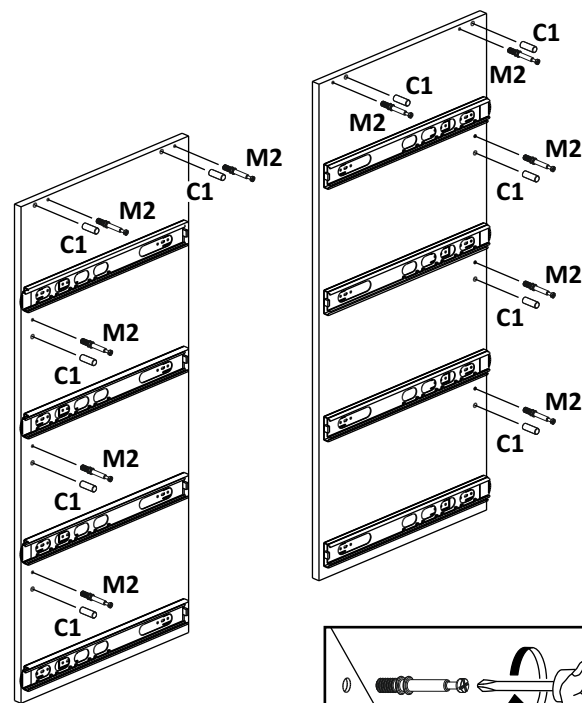



3

Minifix





x10

M1

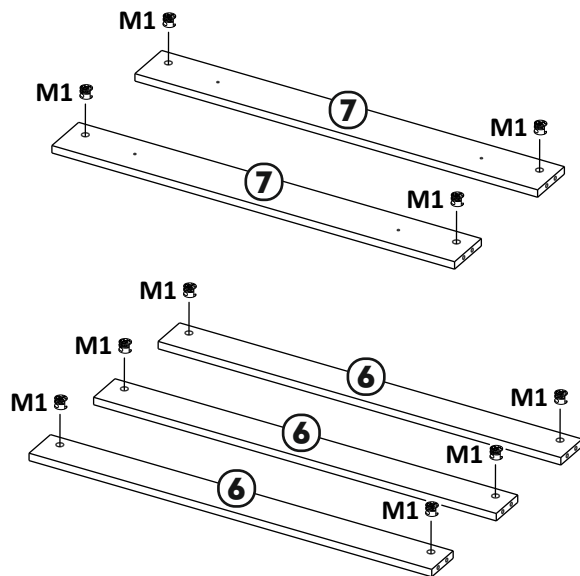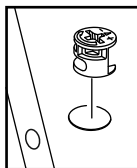


4

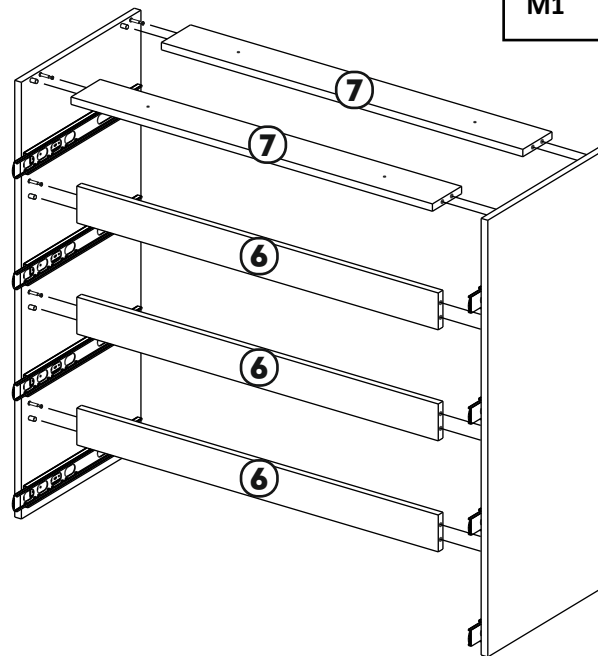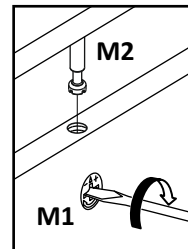

5


Conformat



x4


A1

Screw
3,5x30




x4

W3

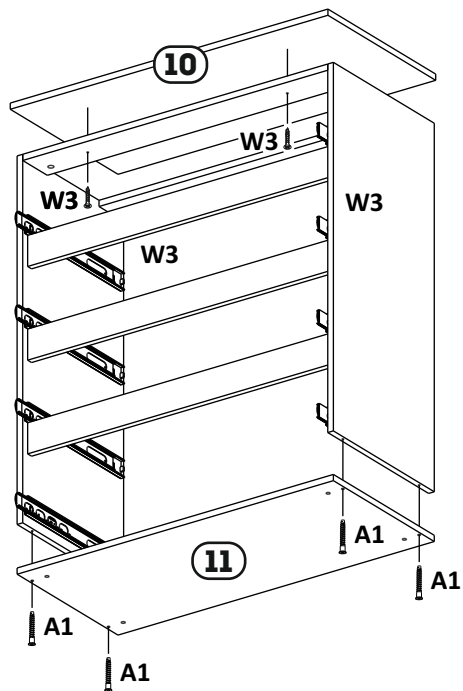

6

Nail
1x16



x32

K1


Joining Strip



x2




ZP

Lining (Manhattan)
30MM




x4

Q3

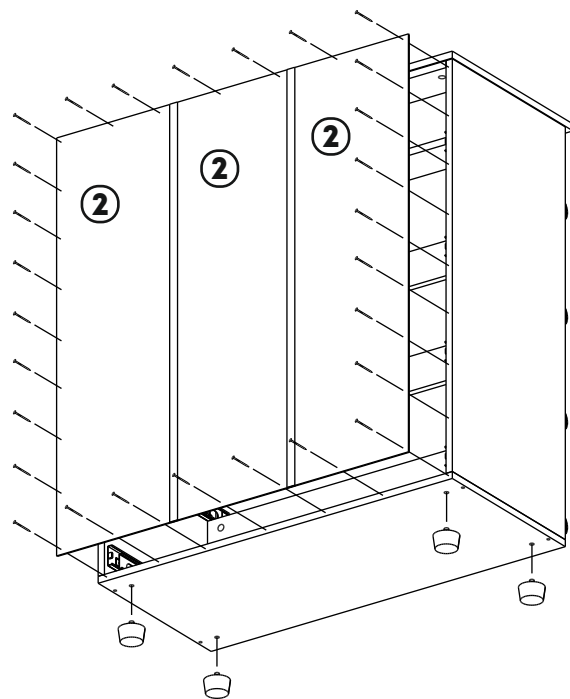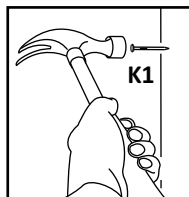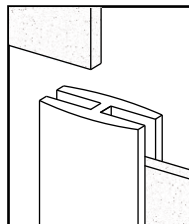

7

Confirmat



x8




A1

Cap for confirmate




x8

A2

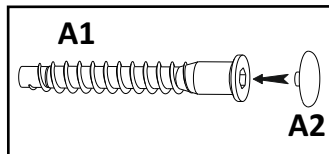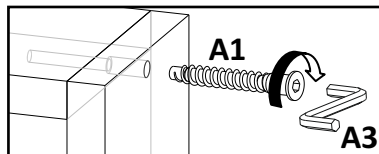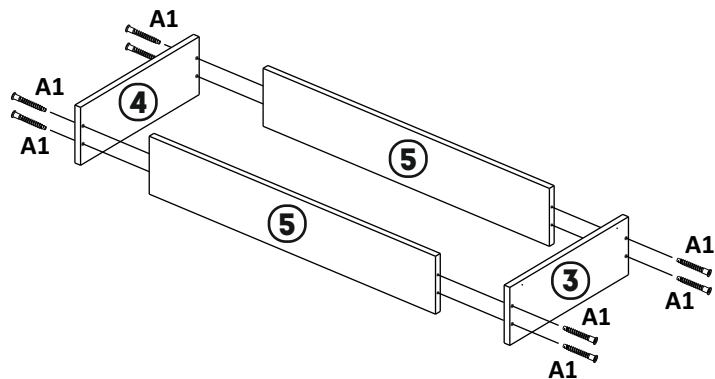

8


Screw
3,5x16



x4



W1

Telescopic Guide
400 mm

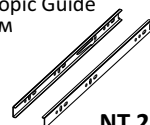


x1

NT 2

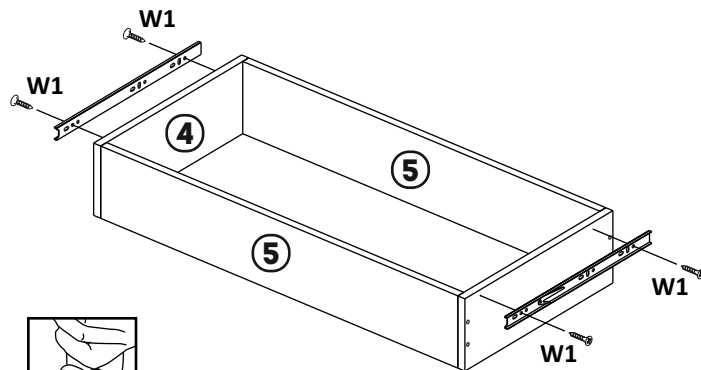

9


Dowel



x4



C1

Nail
1x16




x22

K1

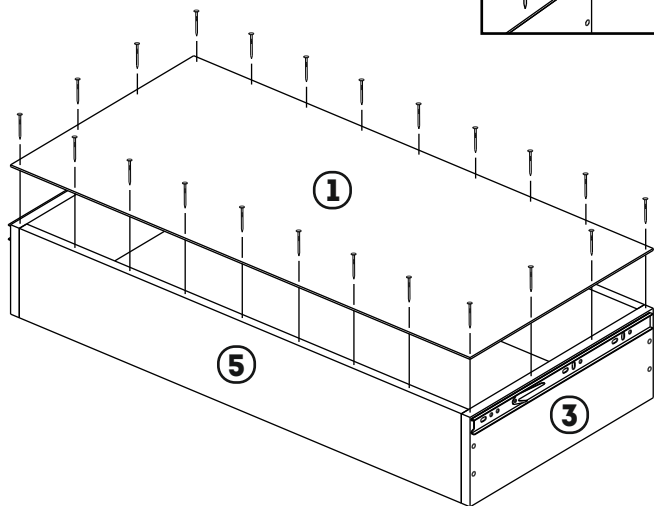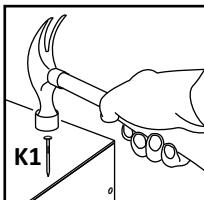

10


Screw
3,5x30



x4

W3

Dowel



x4

C1

