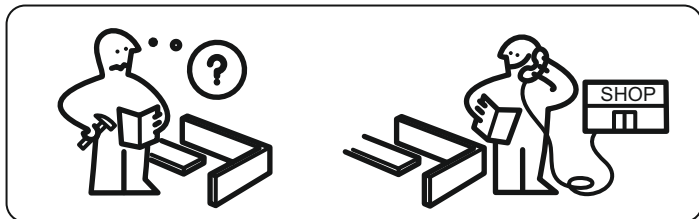
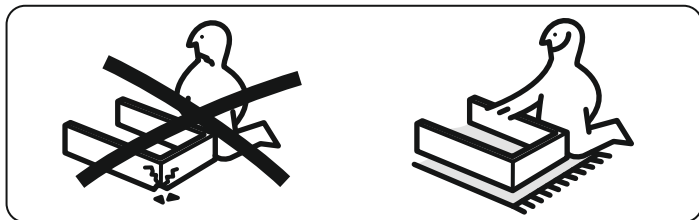
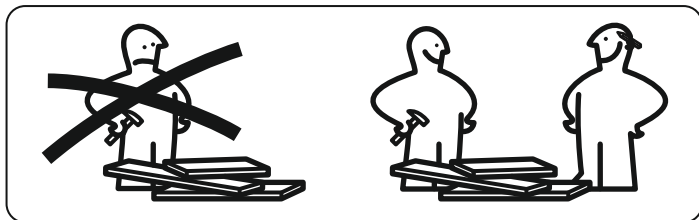


361-000021

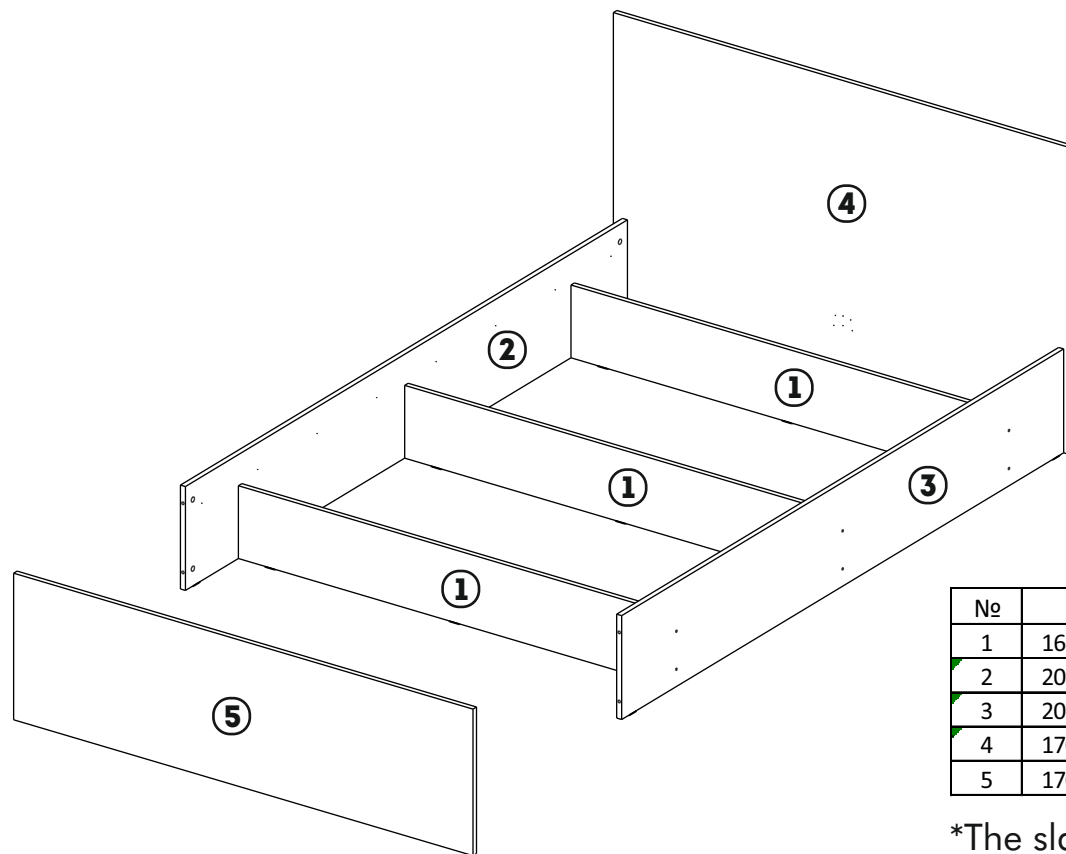


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.


CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.



No	a*b	X	Pack
1	1610x211	3	2/4
2	2020x301	1	2/4
3	2020x301	1	2/4
4	1700x950	1	1/4
5	1700x450	1	1/4


*The slatted bed base comes in packs 3/4 and 4/4.

1


Minifix

x8**M1**


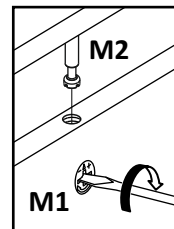
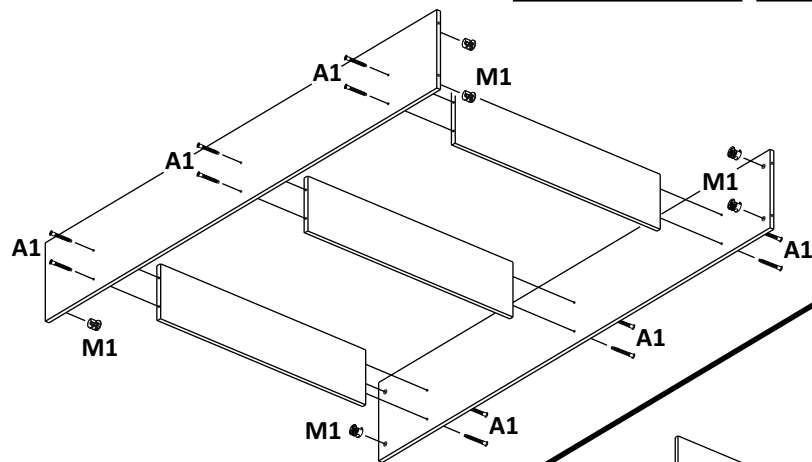
Cap for Minifix

x8**M3**


Confirmat

x12**A1**


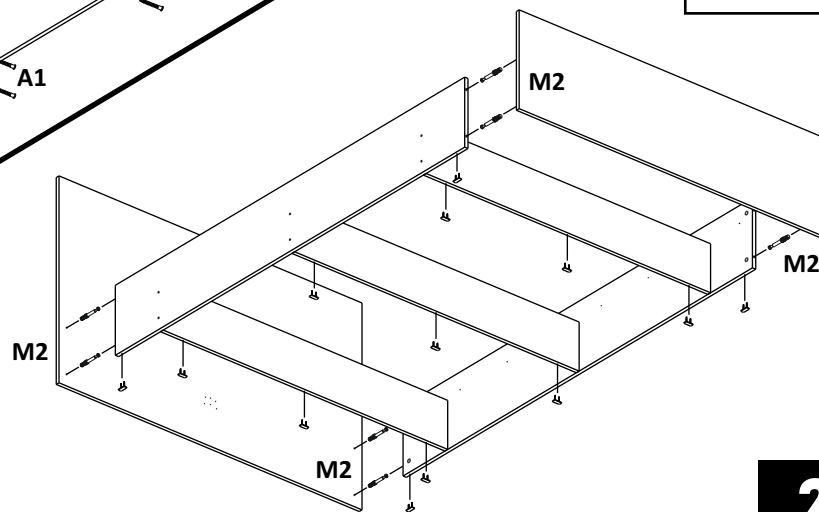
Cap for confirmat

x12**A2**

Support-lining

x13**Q3**

Minifix Screw

x8**M2****2**

