


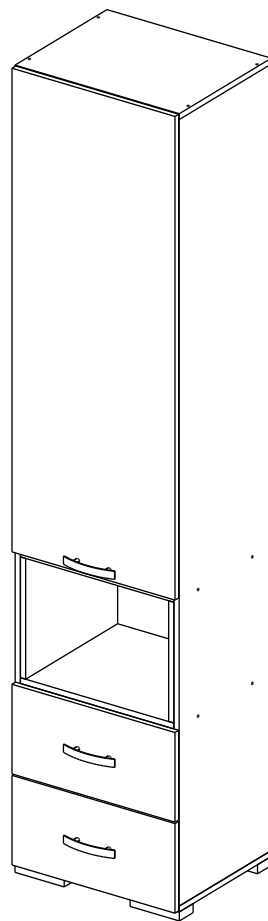
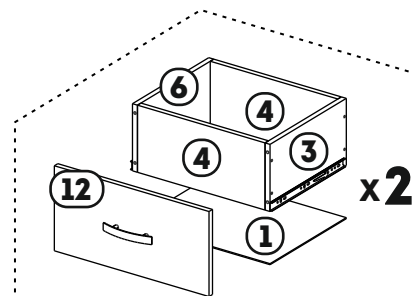
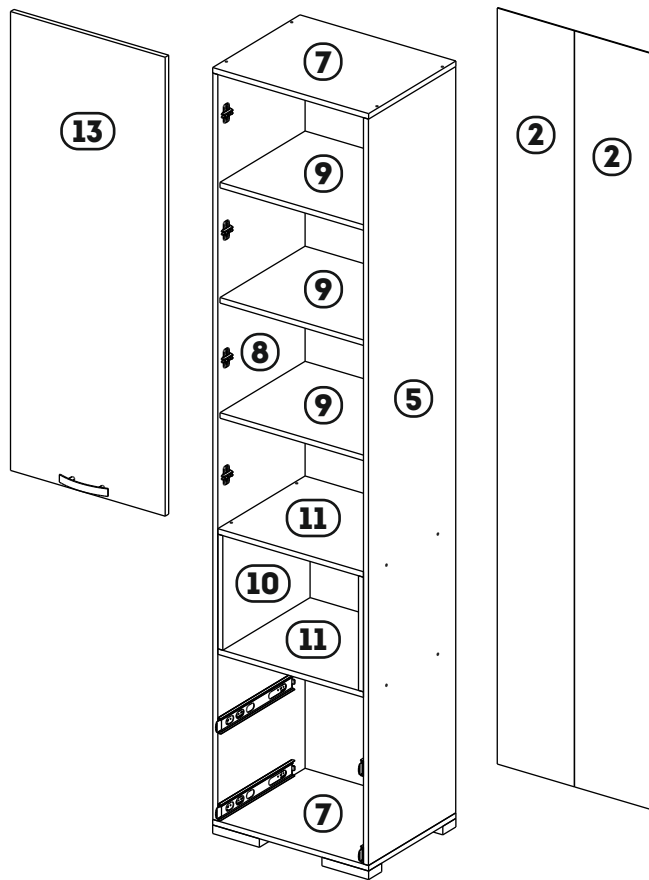
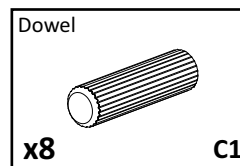
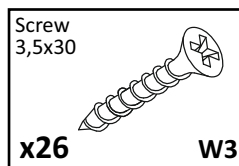
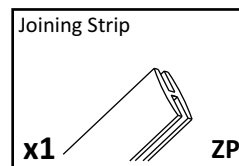
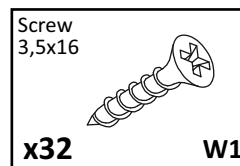
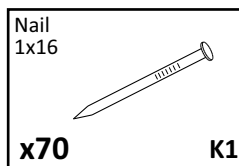
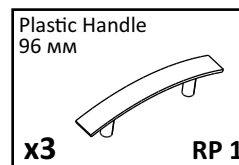
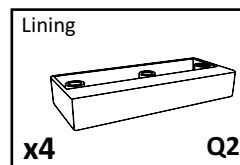
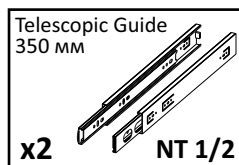
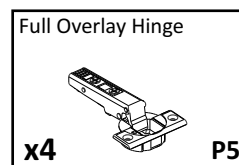
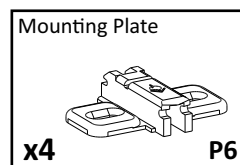
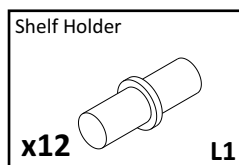







361-000022

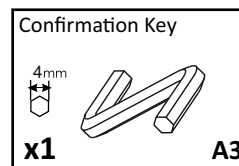

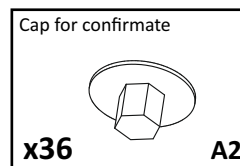

No	a*b	X	Pack
1	442x350	2	1/3
2	2196x248	2	1/3
3	350x195	2	2/3
4	410x195	4	2/3
5	2168x401	1	1/3
6	350x195	2	2/3
7	501x401	2	2/3
8	2168x401	1	1/3
9	468x391	3	2/3
10	333x401	2	1/3
11	468x401	2	1/3
12	247x497	2	3/3
13	1333x497	1	3/3

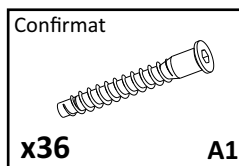

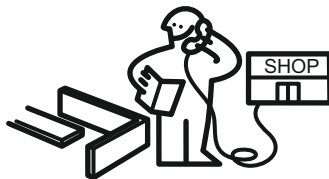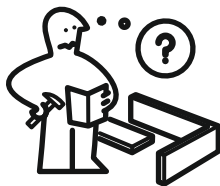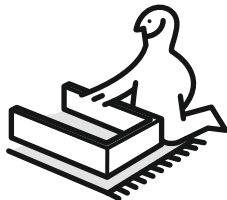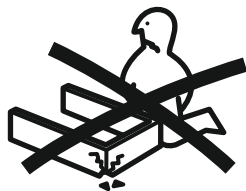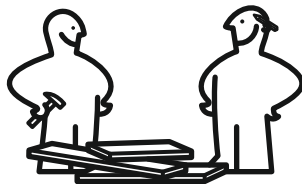


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE







- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1Screw
3,5x16**x16****W1**


Mounting Plate

**x4****P6**


Shelf Holder

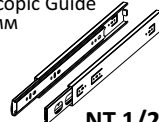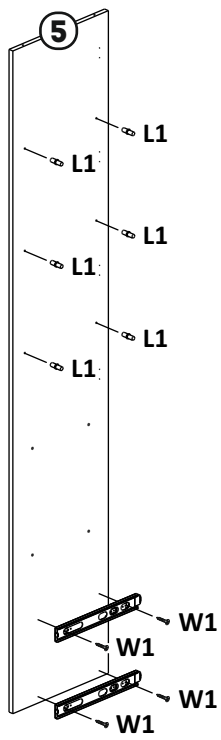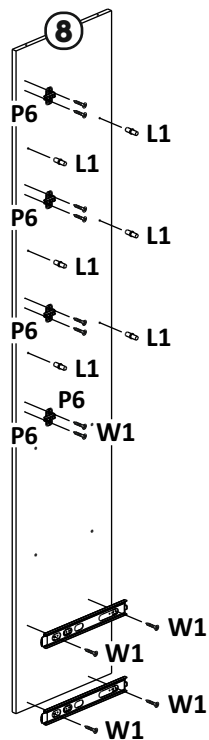**x12****L1**Telescopic Guide
350 MM**x2****NT 1/2****L1****A1****2**

Confirmat


**x8****A1**

Cap for confirmate

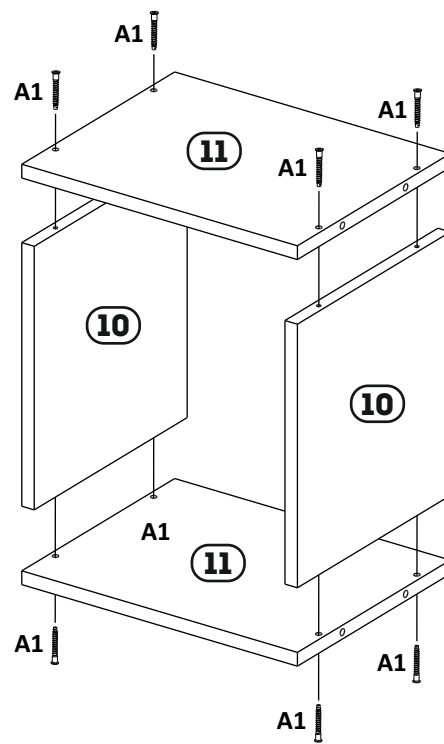**x8****A2**


3

Conformat




x16

A1

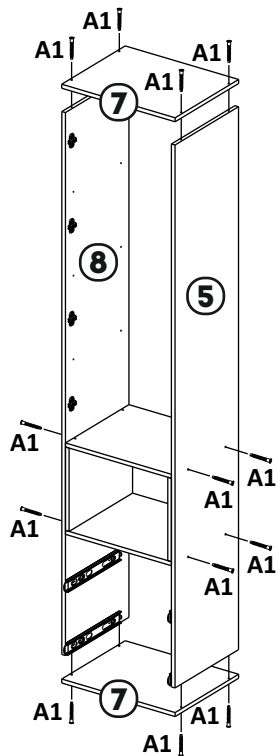


4

Screw
3,5x30




x12

W3

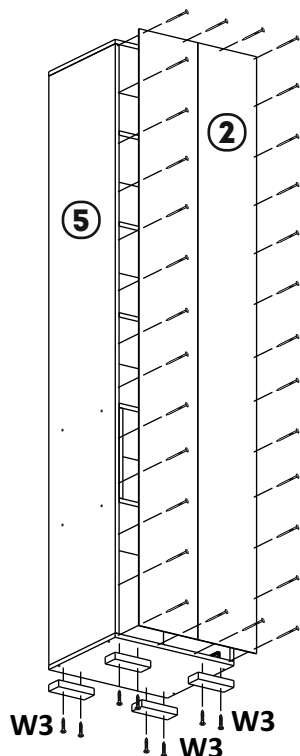


Lining



x6




Q2

Nail
1x16



x38

K1

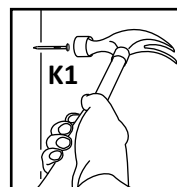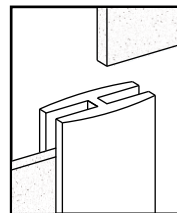


5

Plastic Handle
96 mm




x3

RP 1



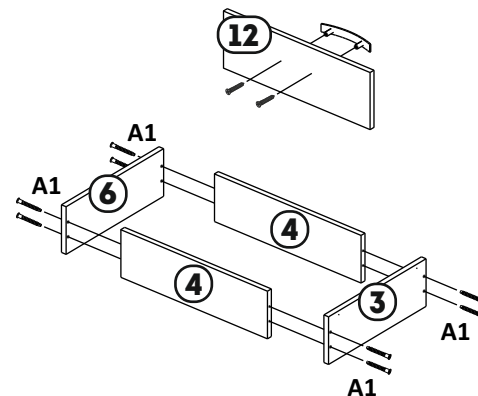


6




Screw
3,5x16

**x4****W1**

Telescopic Guide
350 MM

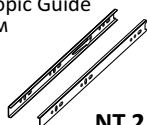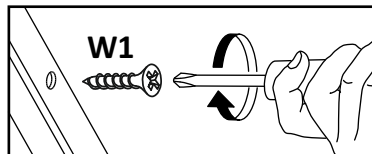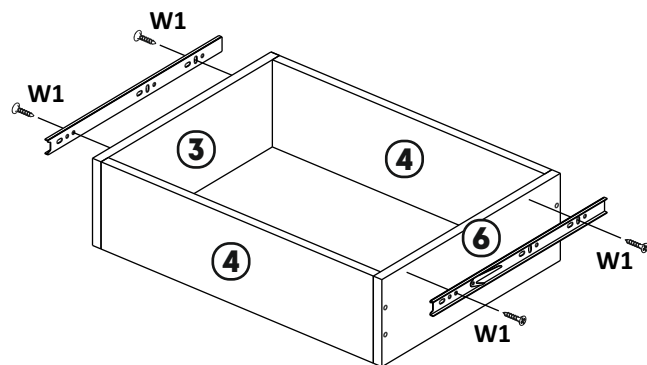
**x1****NT 2****7**

Nail
1x16

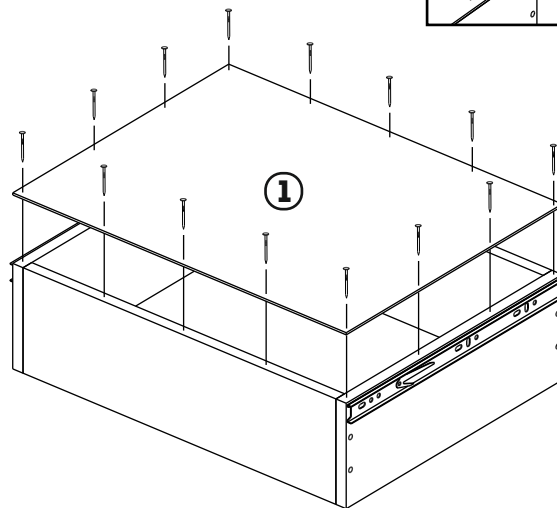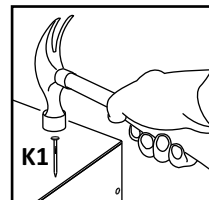**x12****K1**

8


Screw
3,5x30



x4


W3

Dowel



x4

C1

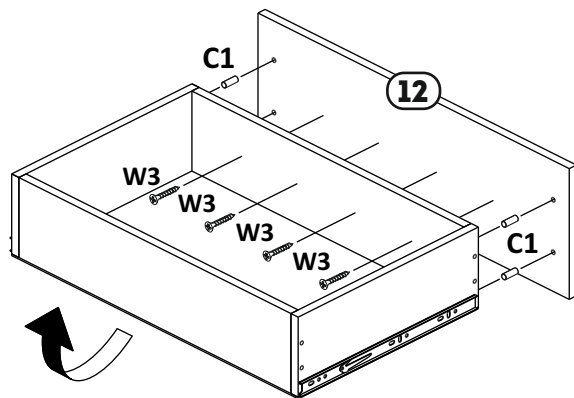

9

