


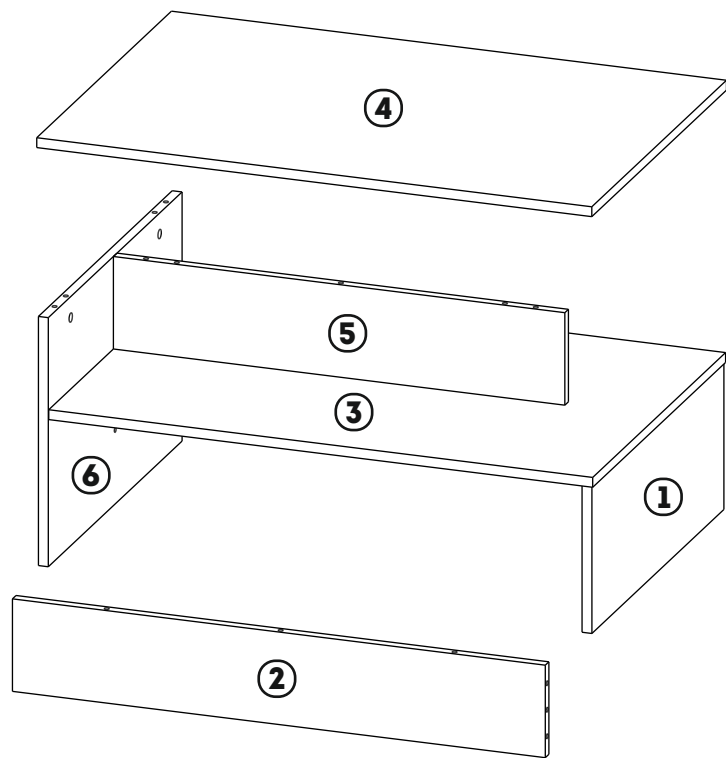
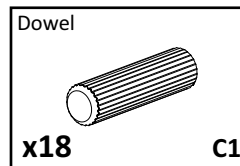
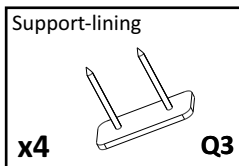
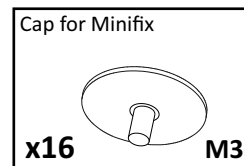
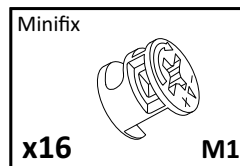
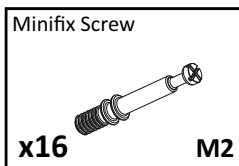


361-000030

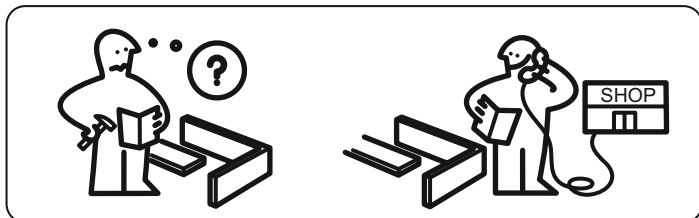

No	a*b	X	Pack
1	238x588	1	1/1
2	150x864	1	1/1
3	882x592	1	1/1
4	900x600	1	1/1
5	150x732	1	1/1
6	404x596	1	1/1

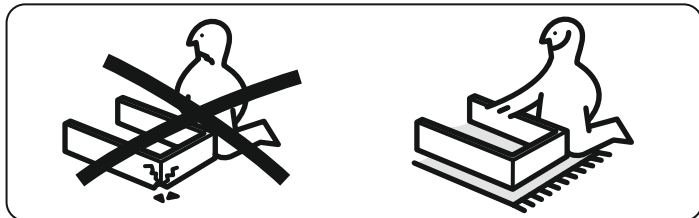

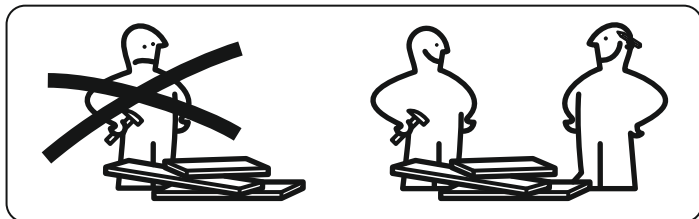

### **GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY**

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

### **CARE AND MAINTENANCE OF FURNITURE**

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

# 1


Minifix



x14

M1


Minifix Screw



x4




M2

Dowel





x4

C1

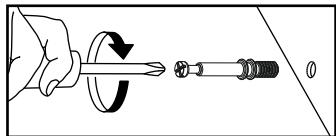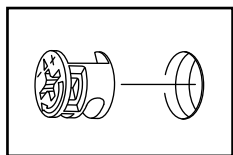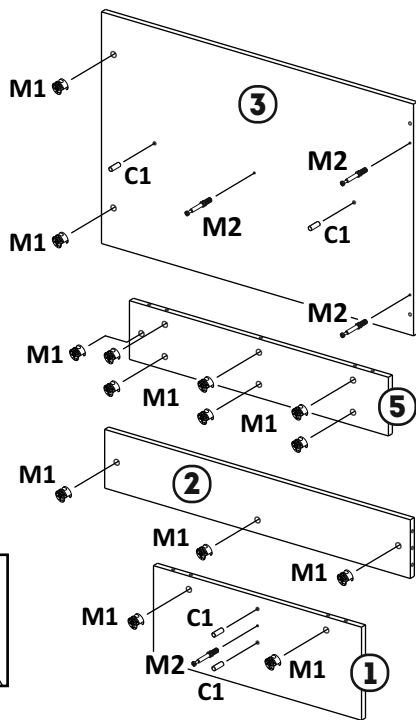


# 2

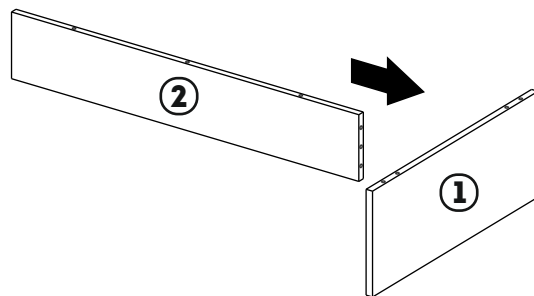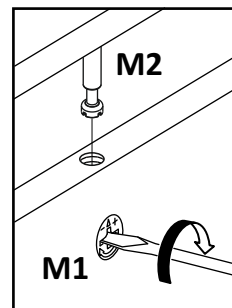

# 3


Minifix Screw



x3


M2

Dowel




x2

C1

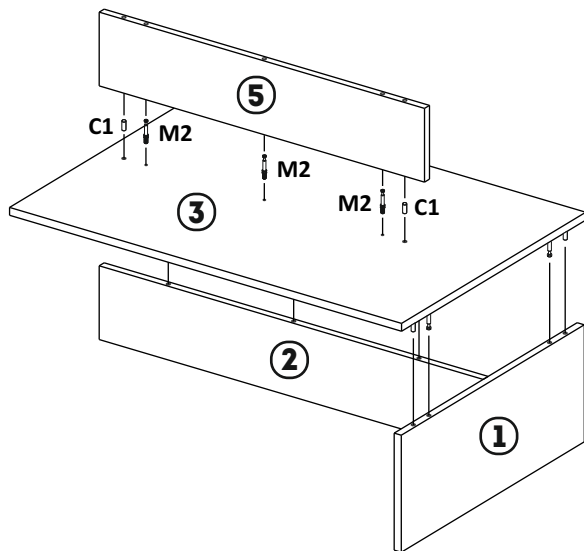

# 4


Minifix Screw



x9

M2


Dowel



x10


C1

Minifix




x2

M1

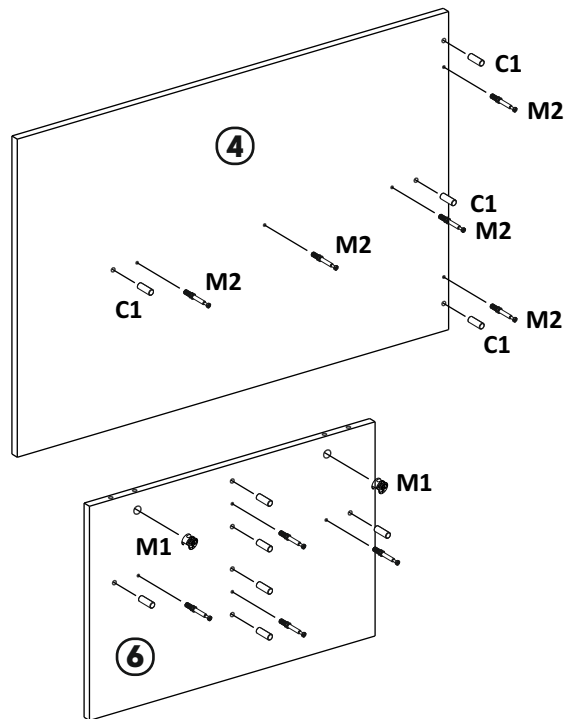

5

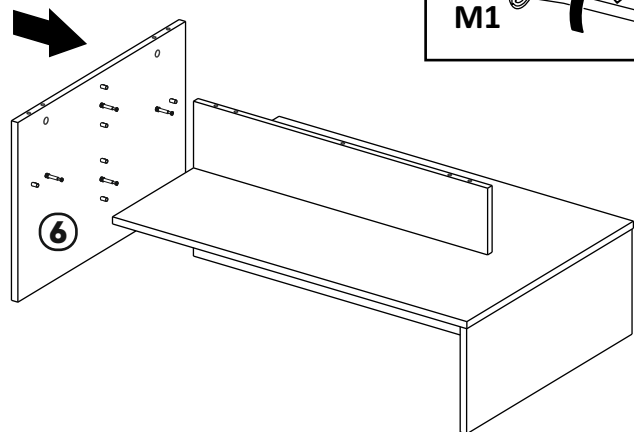

6

