


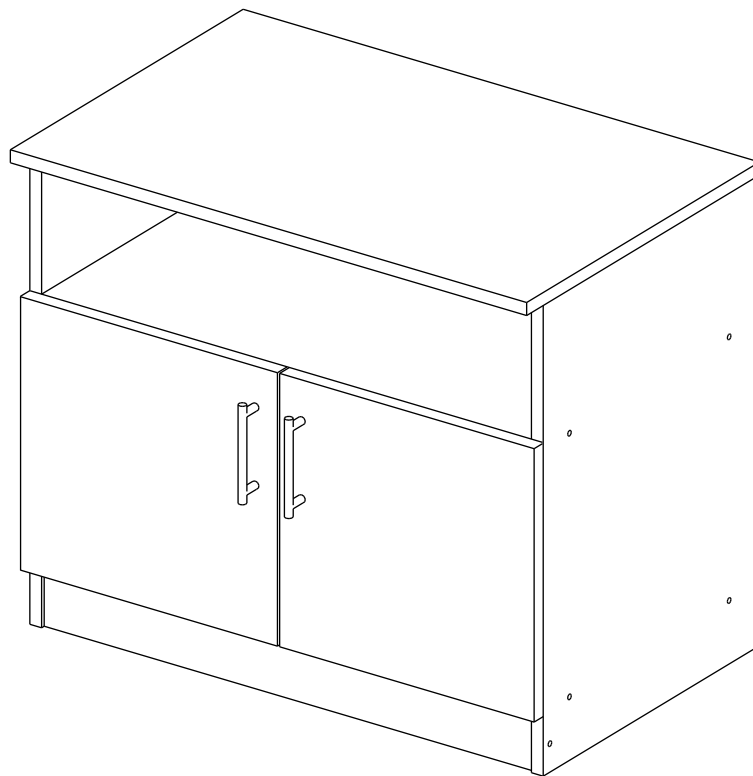
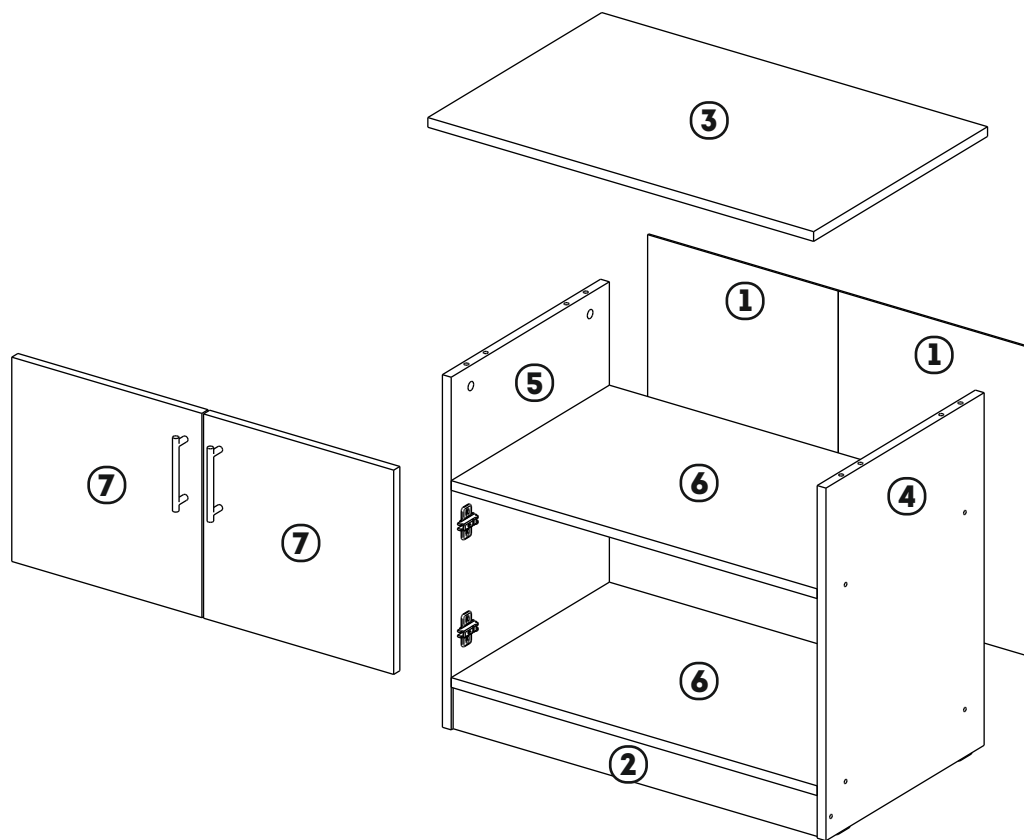
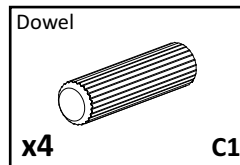
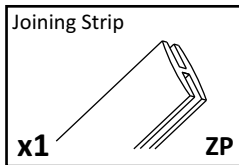
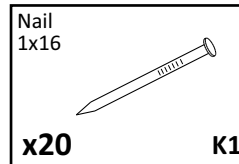
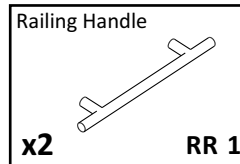
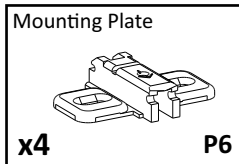
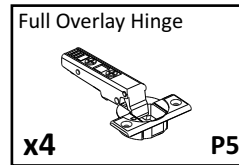
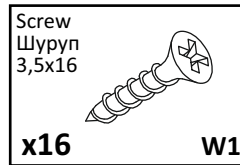
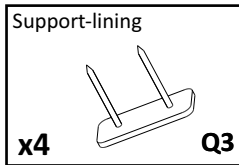
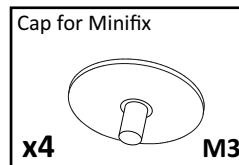
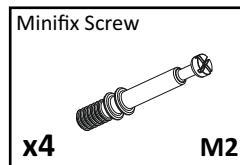
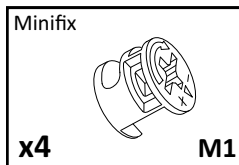






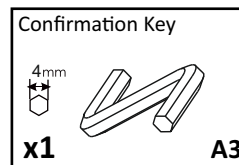


361-000038

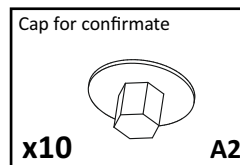

800x600x450			
No	a*b	X	Pack
1	508x398	2	1/1
2	768x70	1	1/1
3	804x452	1	1/1
4	580x411	1	1/1
5	580x411	1	1/1
6	768x411	2	1/1
7	336x397	2	1/1

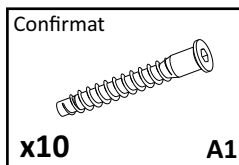

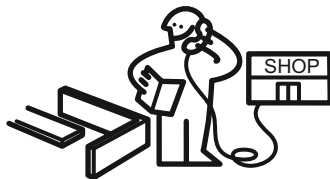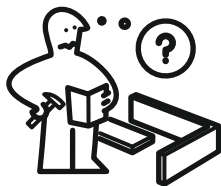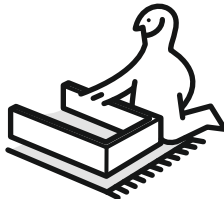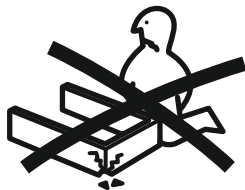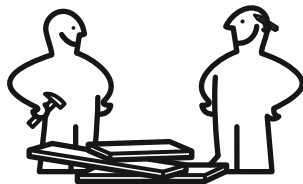

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE




- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Minifix

**x4****M1**




Mounting Plate

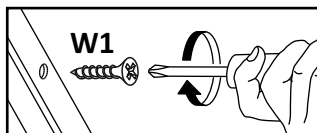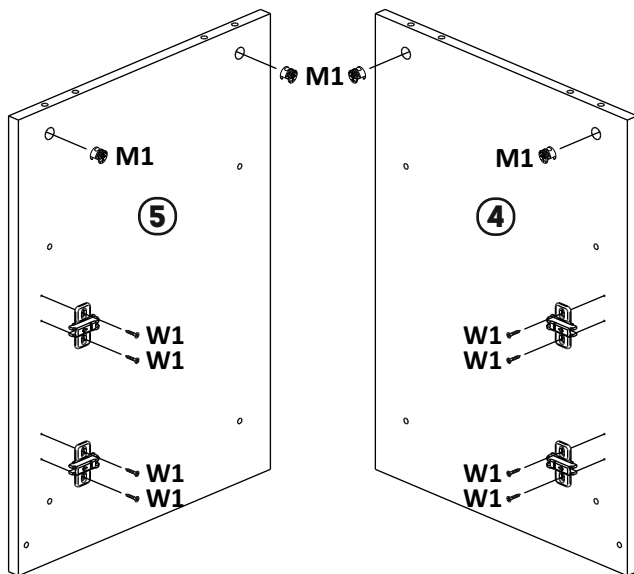**x4****P6****2**

Confirmat


**x10****A1**

Cap for confirmate

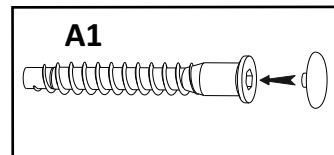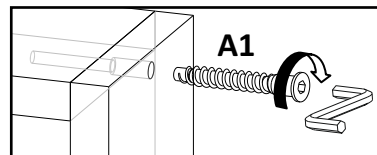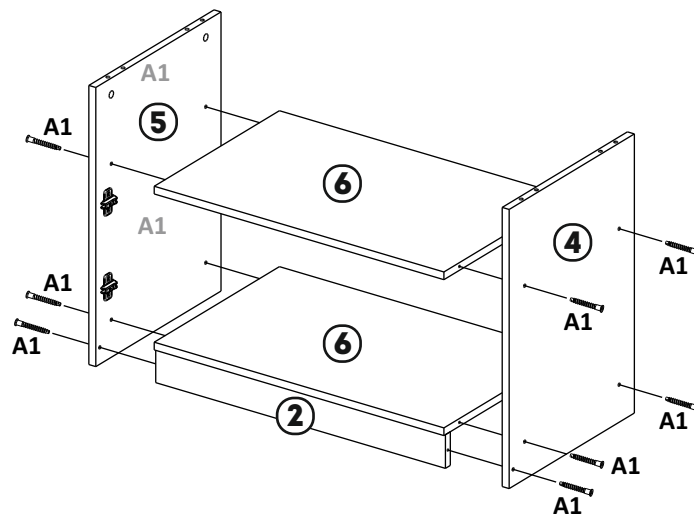**x10****A2**

3


Minifix Screw



x4

M2


Support-lining



x4


Q3

Dowel




x4

C1

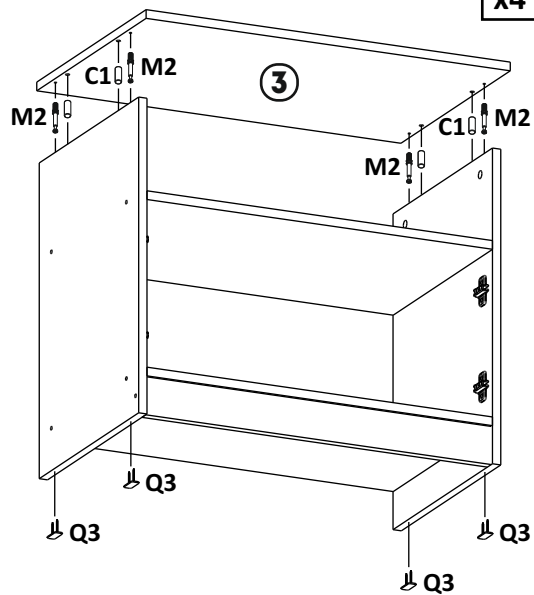




4

Nail
1x16



x20

K1

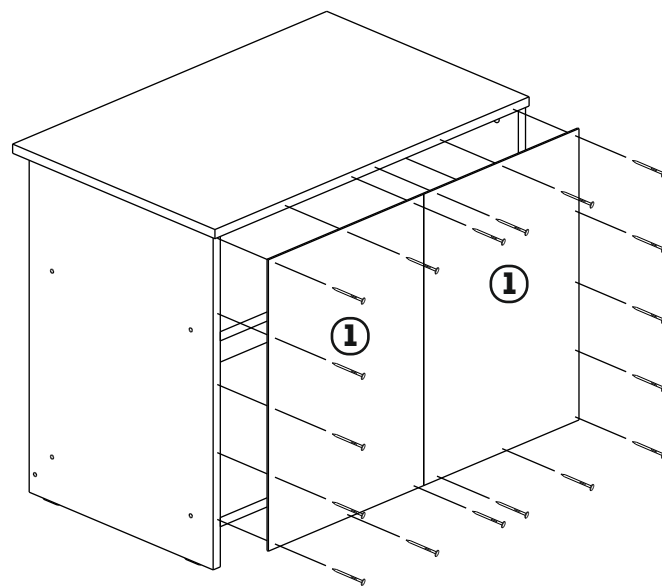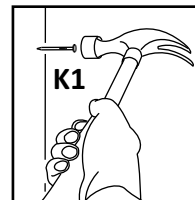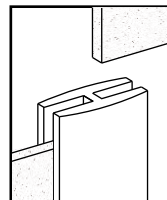


5

Railing Handle

x1



RR 1



Full Overlay Hinge

x2

P5

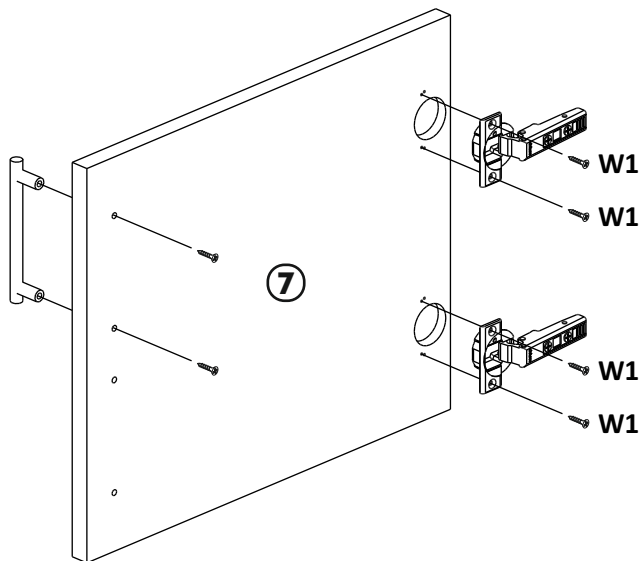

6

