


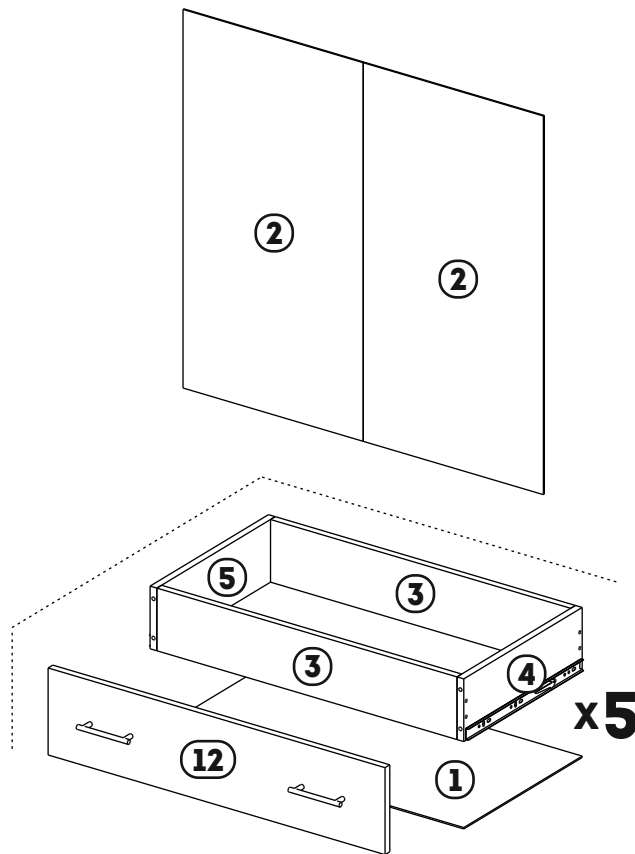
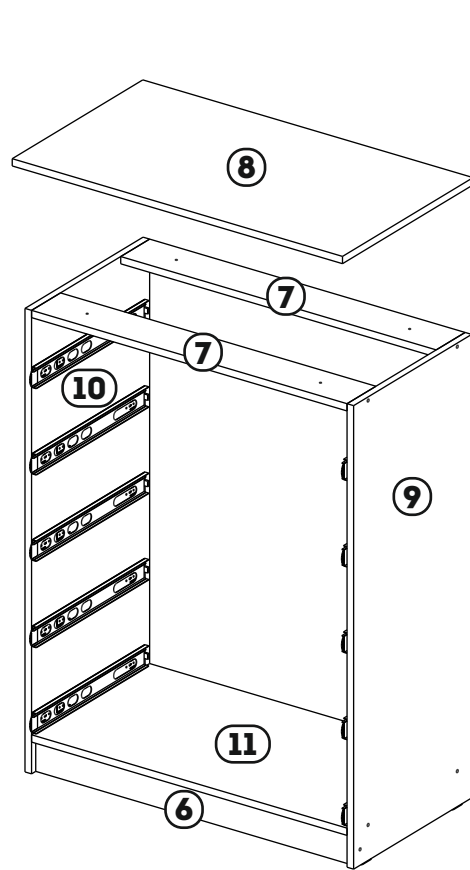
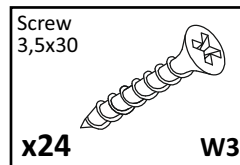
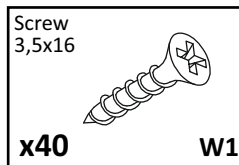
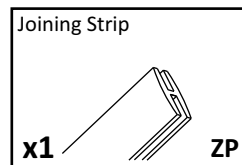
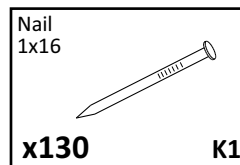
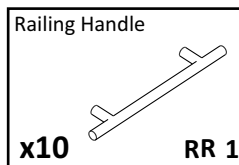
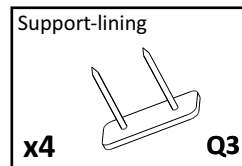
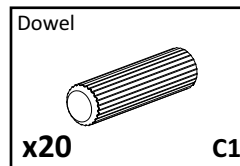
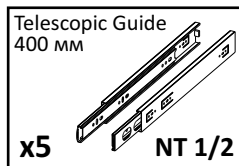






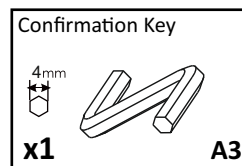


361-000045

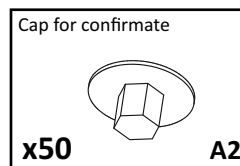

No	a*b	X	Pack
1	742x400	5	2/2
2	946x398	2	2/2
3	710x134	10	1/2
4	400x134	5	2/2
5	400x134	5	2/2
6	768x70	1	1/2
7	768x101	2	2/2
8	804x454	1	1/2
9	1020x411	1	2/2
10	1020x411	1	2/2
11	768x411	1	1/2
12	186x797	5	1/2

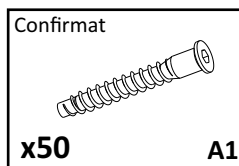

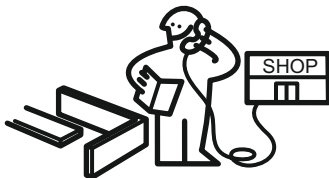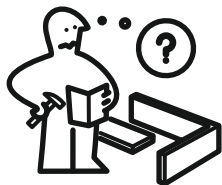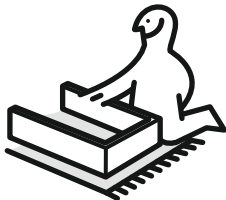
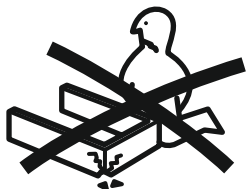
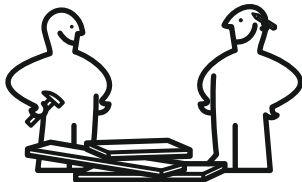


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE




- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

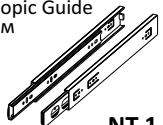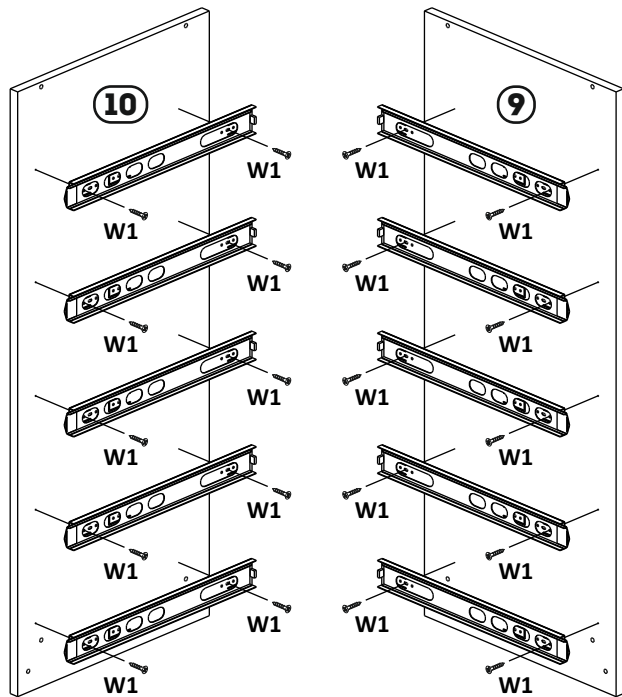1Screw
3,5x16**x20****W1**Telescopic Guide
400 mm**x5****NT 1****2**

Confirmat

**x10****A1**

Cap for confirmate

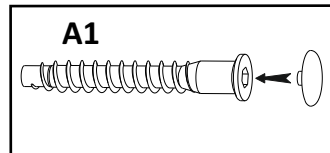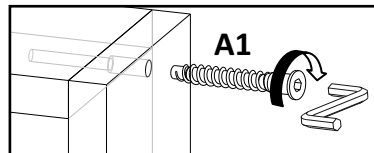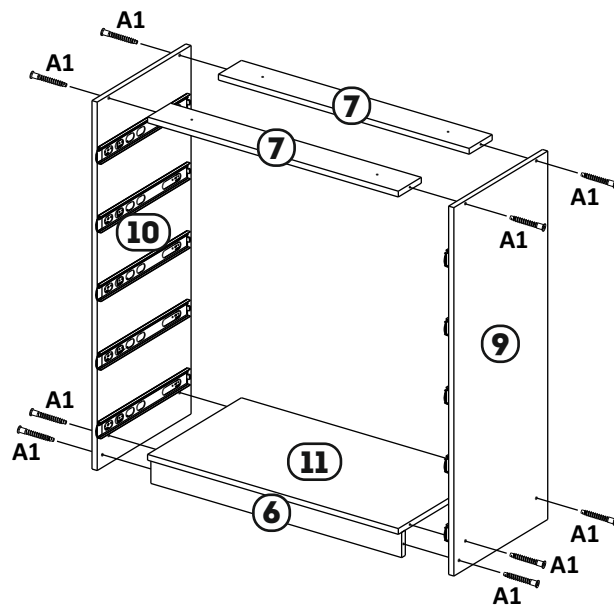
**x10****A2**

3

Nail
1x16

x20




K1



Support-lining

x4

Q3

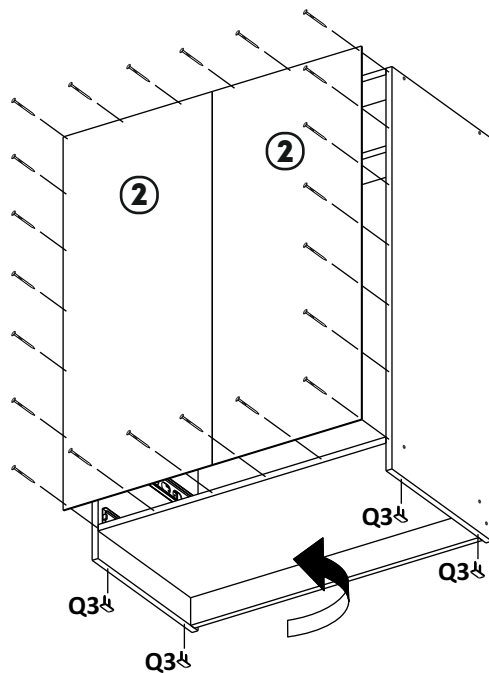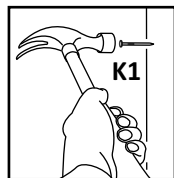
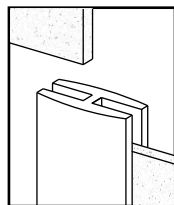


4

Screw
3,5x30


x4

W3

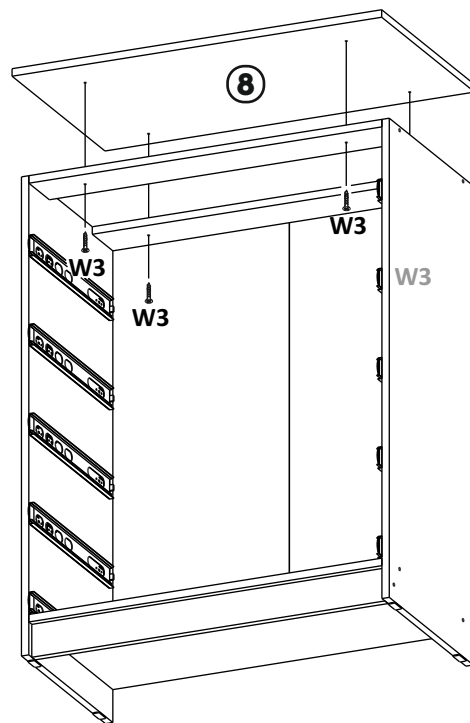


5

Railing Handle




x2

RR 1

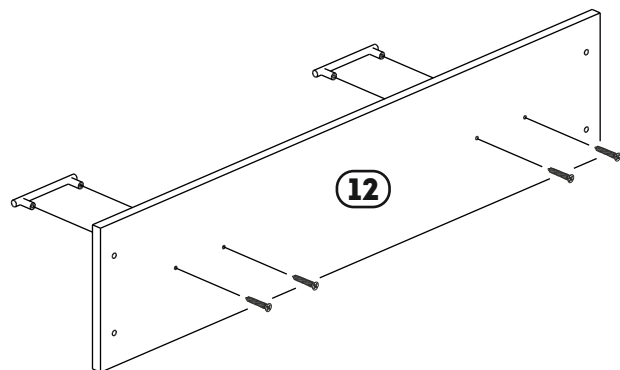

6


Confirmat



x8




A1

Cap for confirmat




x8

A2

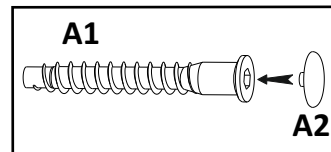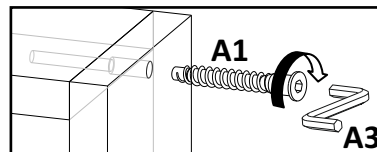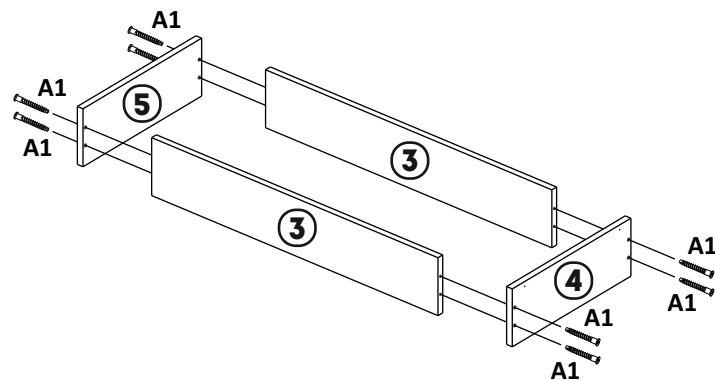

7


Screw
3,5x16



x4



W1

Telescopic Guide
400 mm

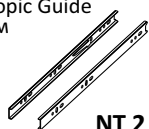


x1

NT 2

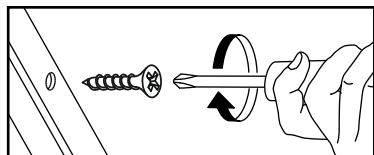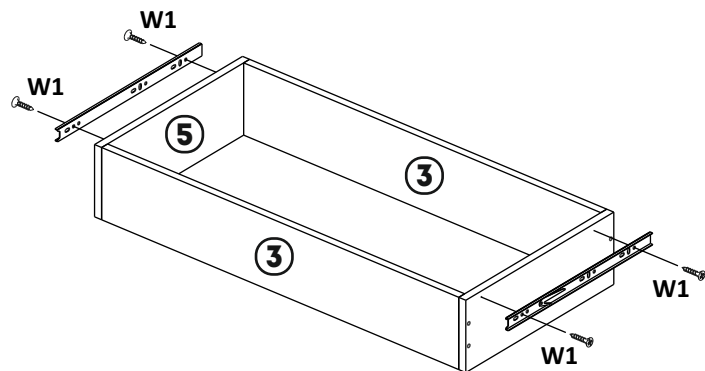

8


Dowel



x4



C1

Nail
1x16




x22

K1

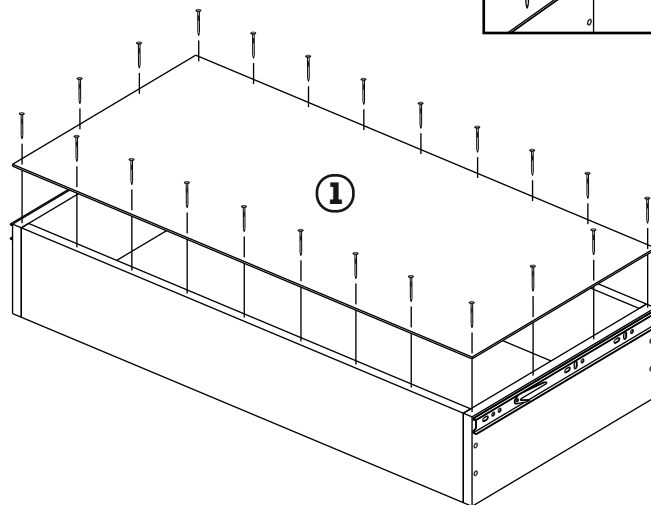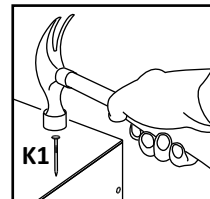

9


Screw
3,5x30



x4


W3

Dowel



x4

C1

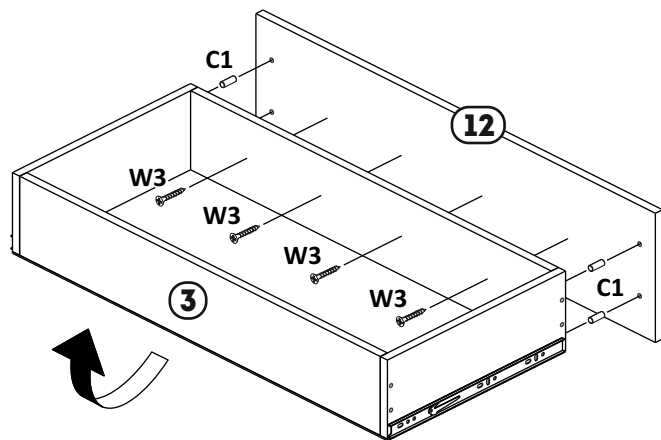

10

