


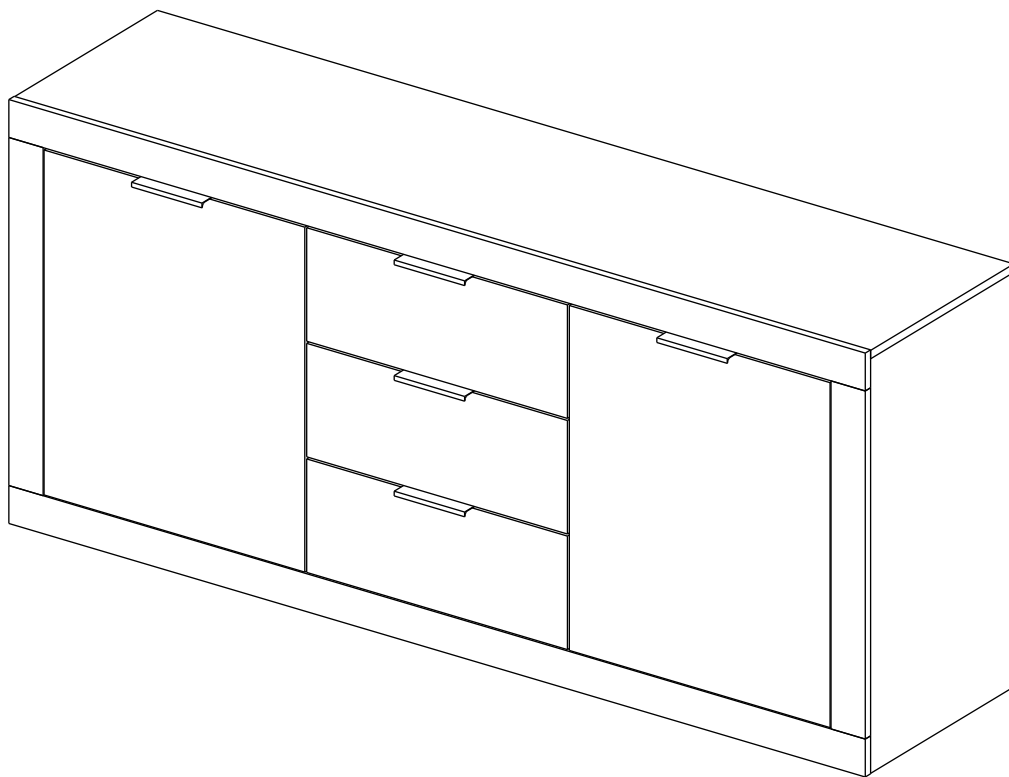
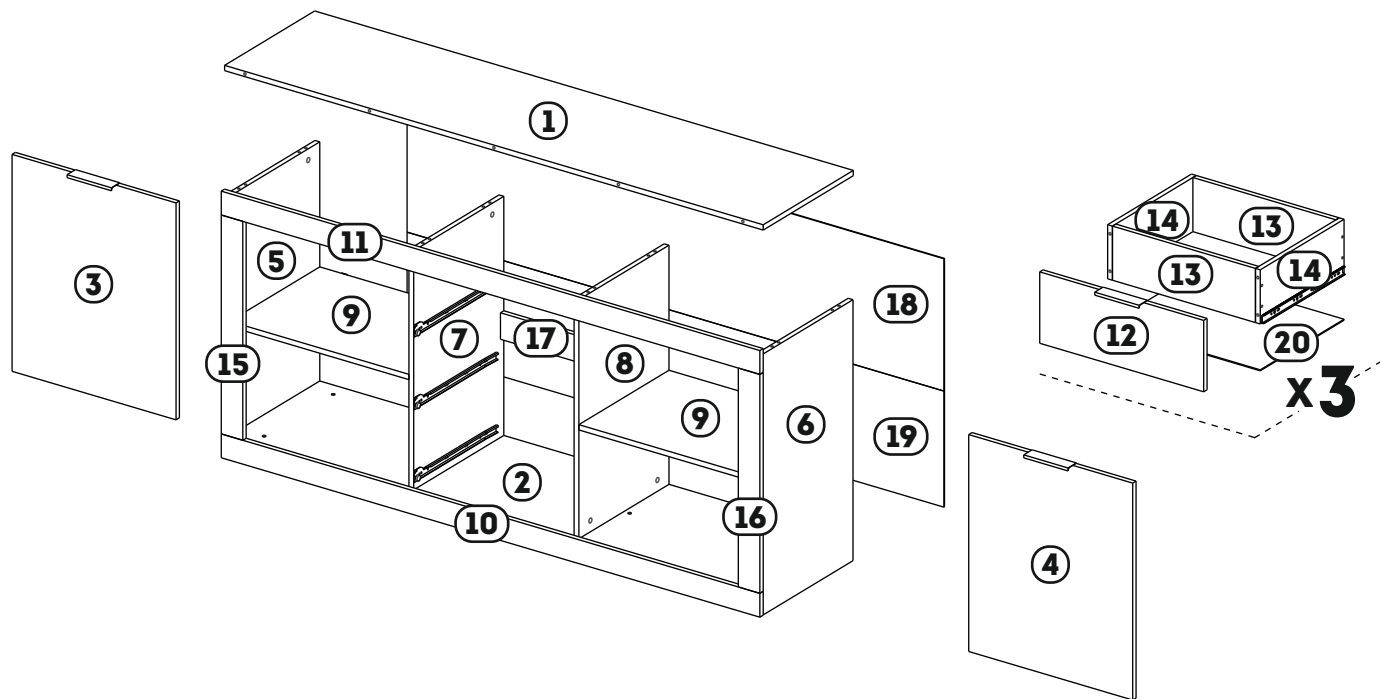
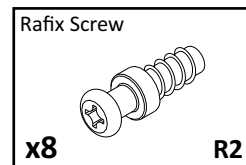
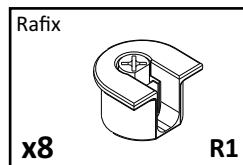
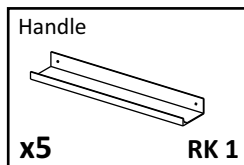
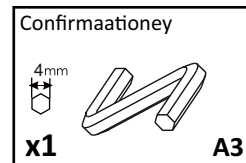
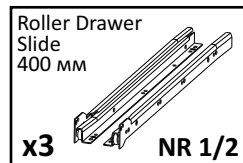
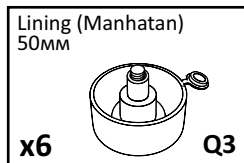
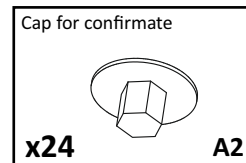
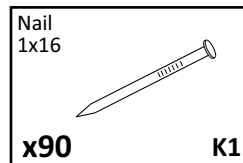
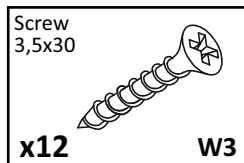
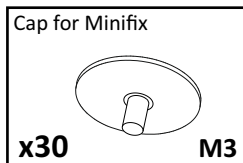
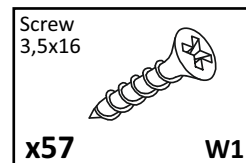
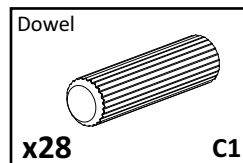
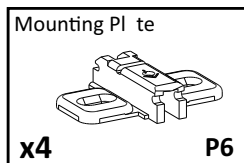
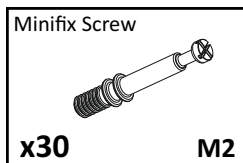
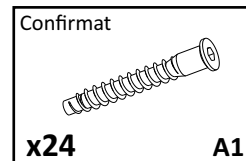


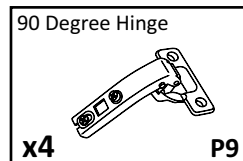


361-000073

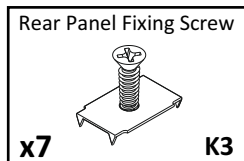



No	a*b	X	Pack
1	1800x430	1	1/3
2	1766x430	1	1/3
3	655x548	1	3/3
4	655x548	1	3/3
5	788x430	1	2/3
6	788x430	1	2/3
7	722x430	1	2/3
8	722x430	1	2/3
9	599x430	2	2/3
10	72x1800	1	1/3
11	72x1800	1	1/3
12	216x548	3	3/3
13	478x164	6	1/3
14	400x164	6	1/3
15	661x72	1	1/3
16	661x72	1	1/3
17	80x536	1	1/3
18	399x1794	1	1/3
19	351x1794	1	1/3
20	510x400	3	2/3

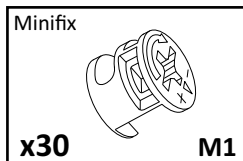

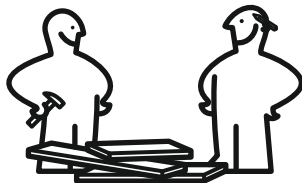


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

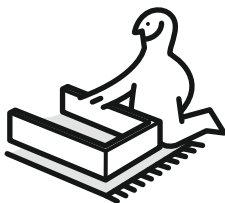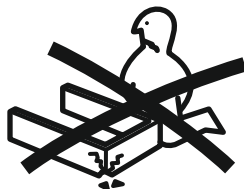

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

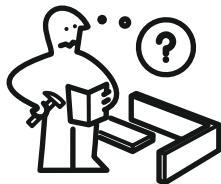

1


Minifix



x12

M1


Roller Drawer
Slide
400 MM



x3

NR 1


Screw
3,5x16



x12

W1


Rafix Screw



x4





R2

Minifix Screw




x4

M2

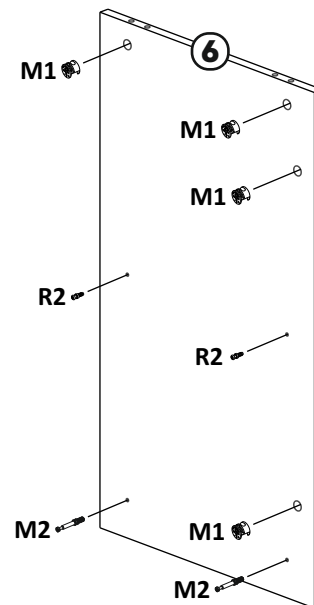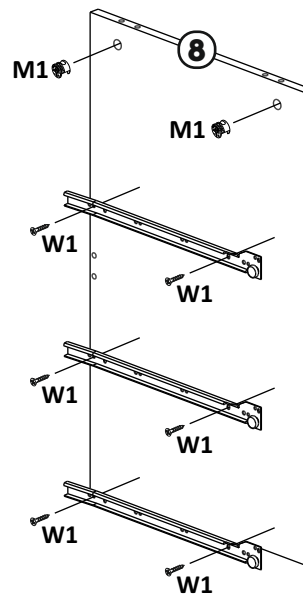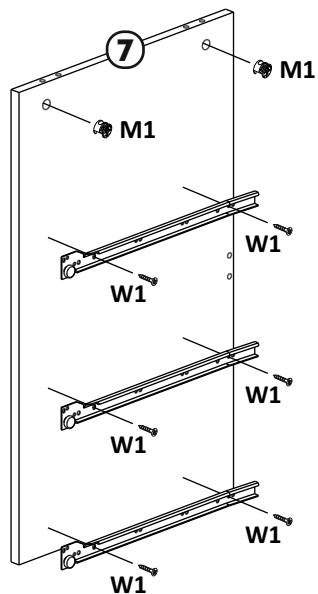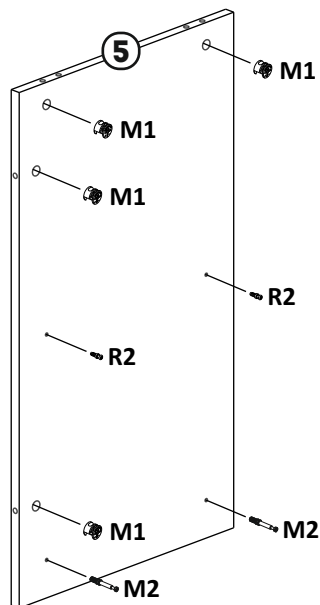

2


Minifix



x14

M1


Dowel



x8

C1


Minifix Screw



x8



M2

Lining (Manhatan)
50mm




x6

Q3

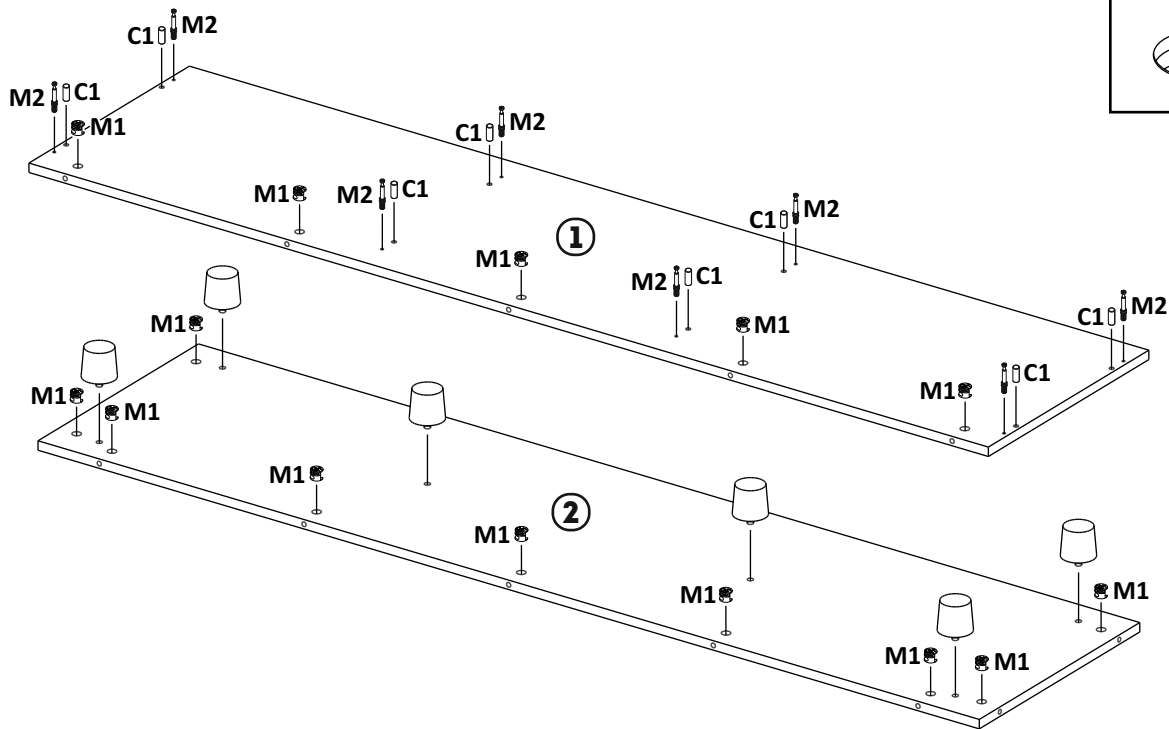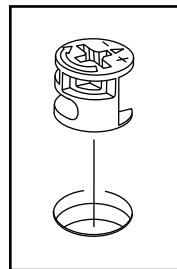



3

Dowel





x4

C1




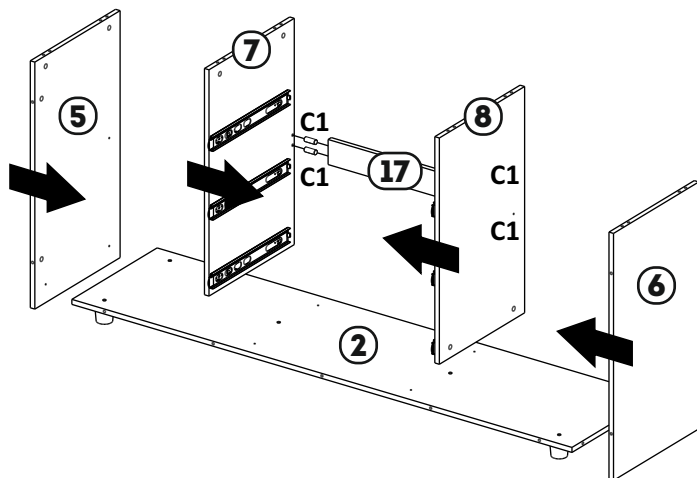
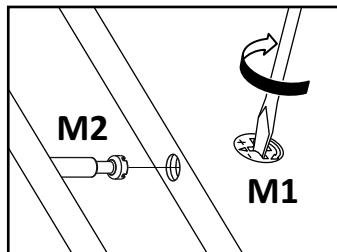


4

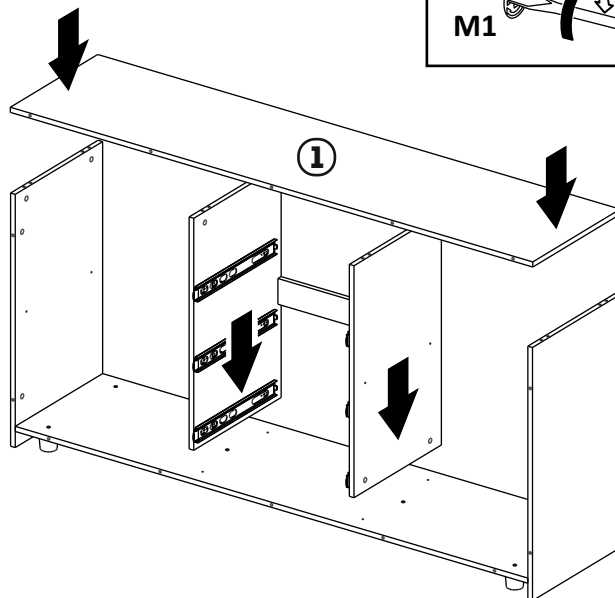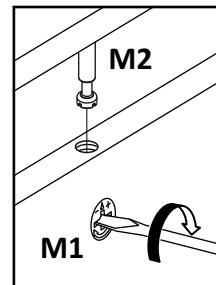


Rear Panel Fixing Screw

K3

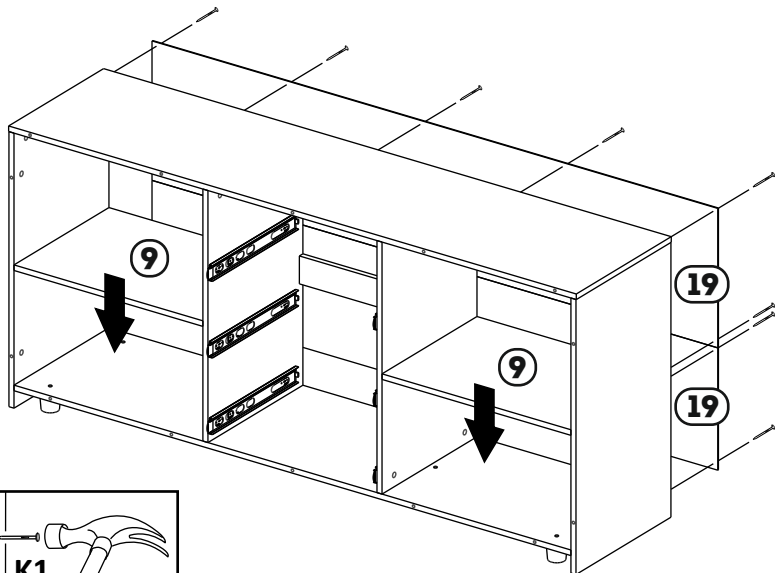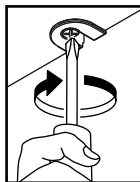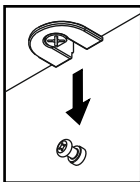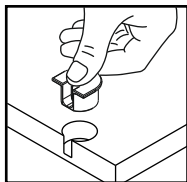


K1

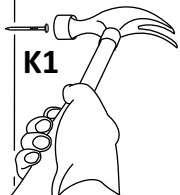

6



Minifix Screw

M2



Mounting Plate


P6

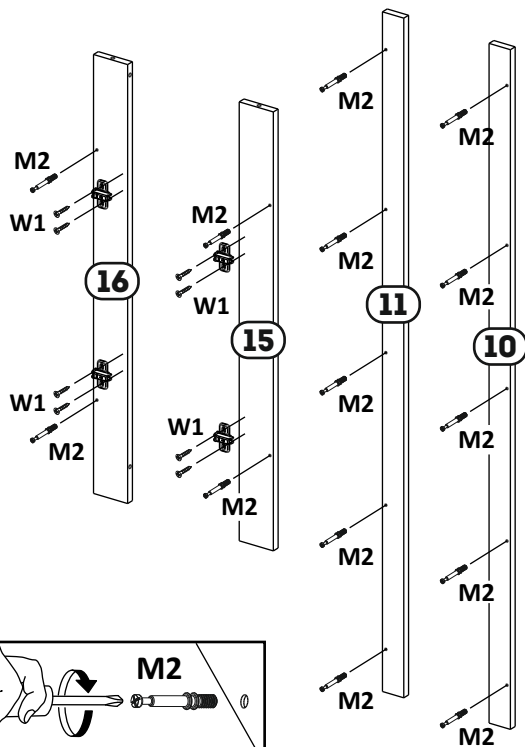

M2


7

Dowel





x4

C1

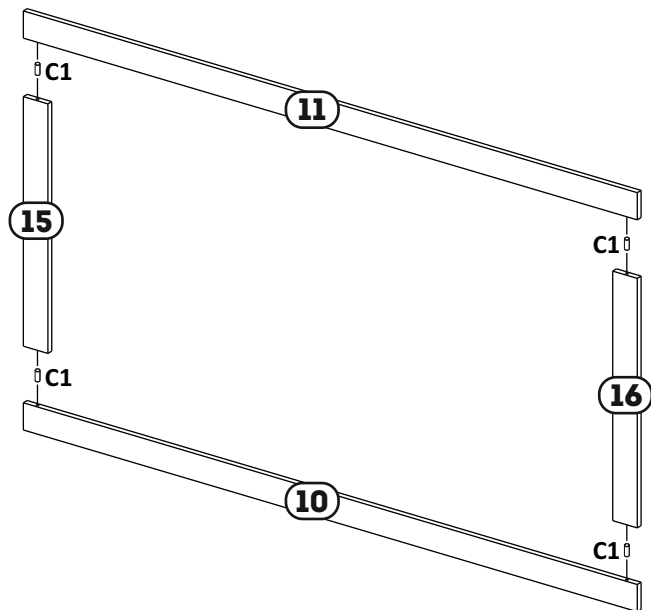


8

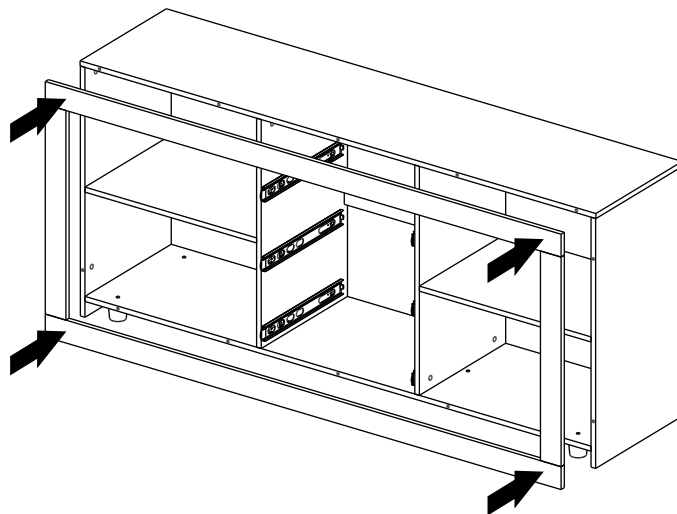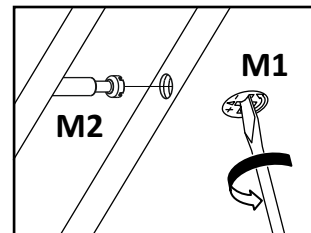

9

Confirmat



x8




A1

Cap for confirmate




x8

A2

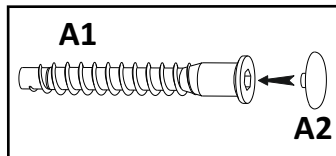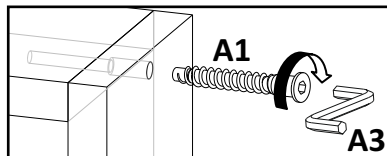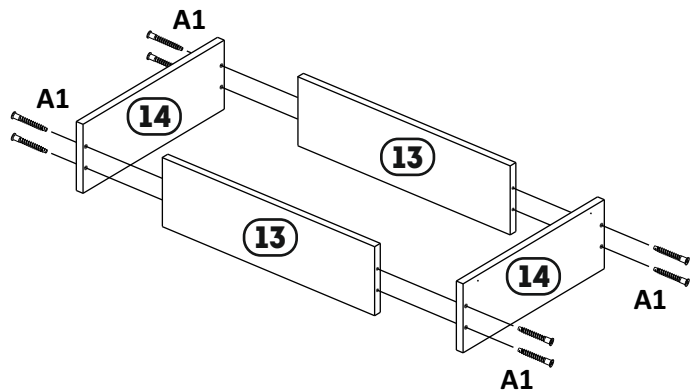



10


Nail
1x16




x12

K1




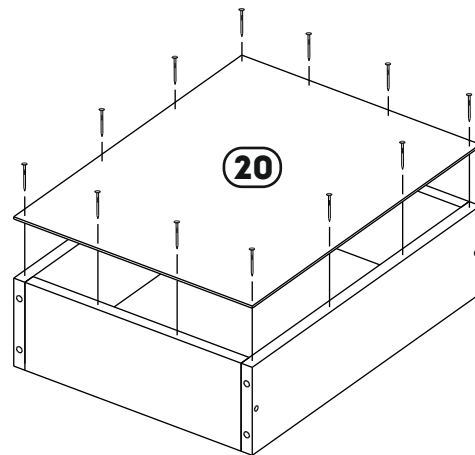
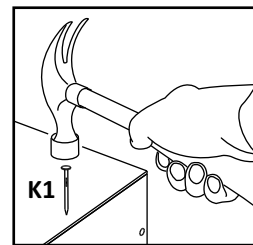


11Screw
3,5x30**x4****W3**

Dowel

**x4****C1**

Handle

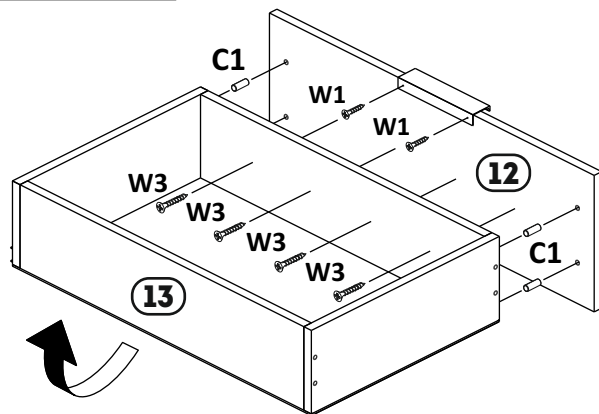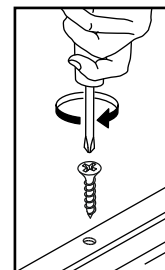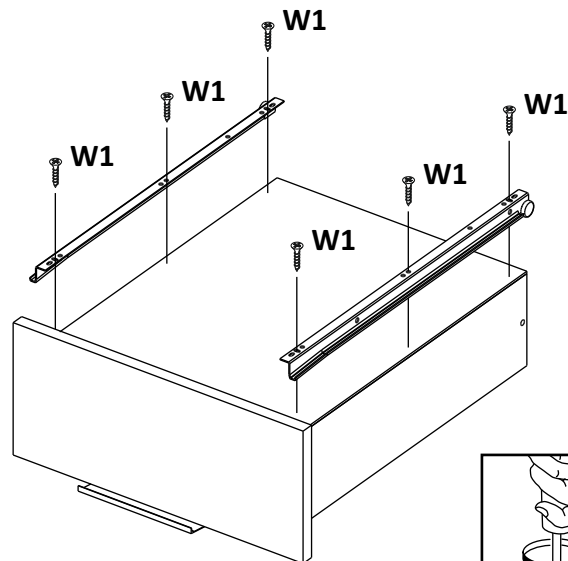
**x1****RK 1****12**Roller Drawer
Slide
400 mm**x3****NR 2**Screw
3,5x16**x6****W1**

13

90 Degree Hinge

x4


P9



Screw
3,5x16

x12


W1



Handle

x2

RK 1

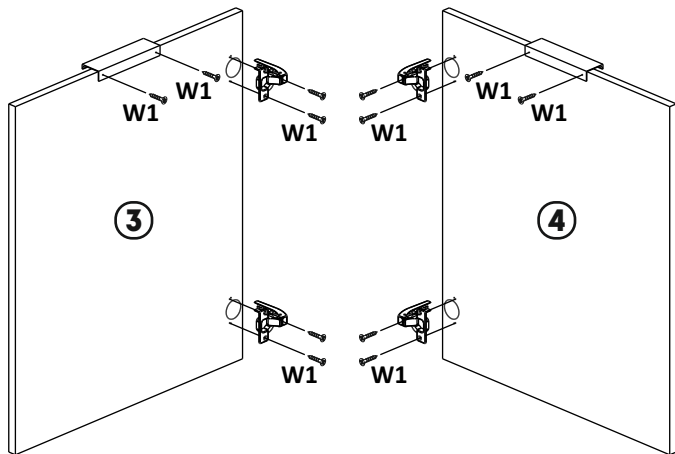

14

