


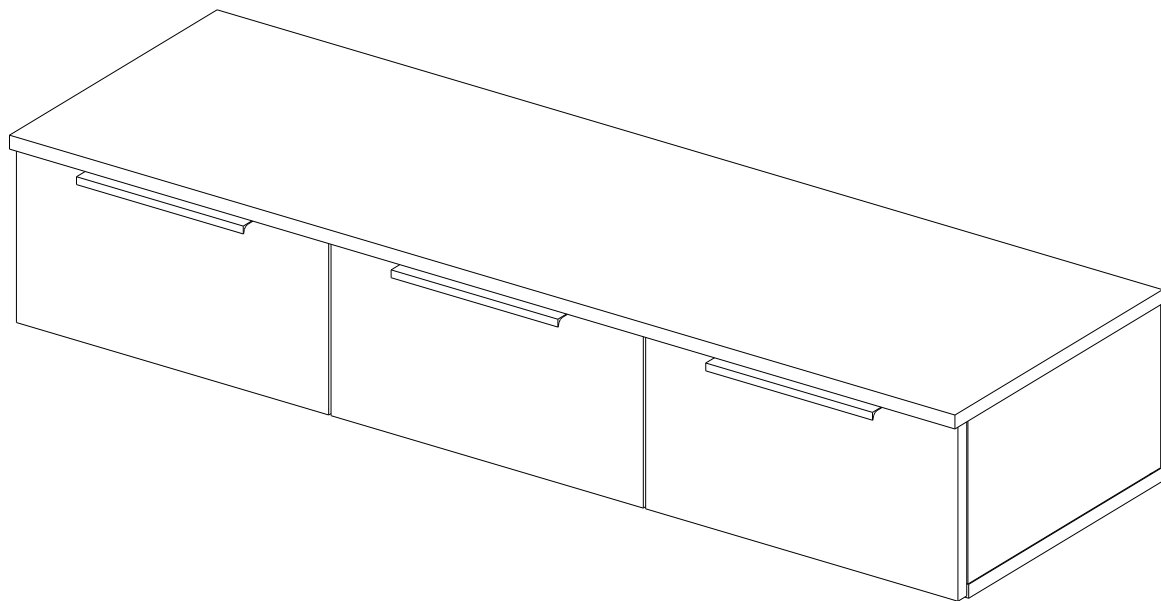
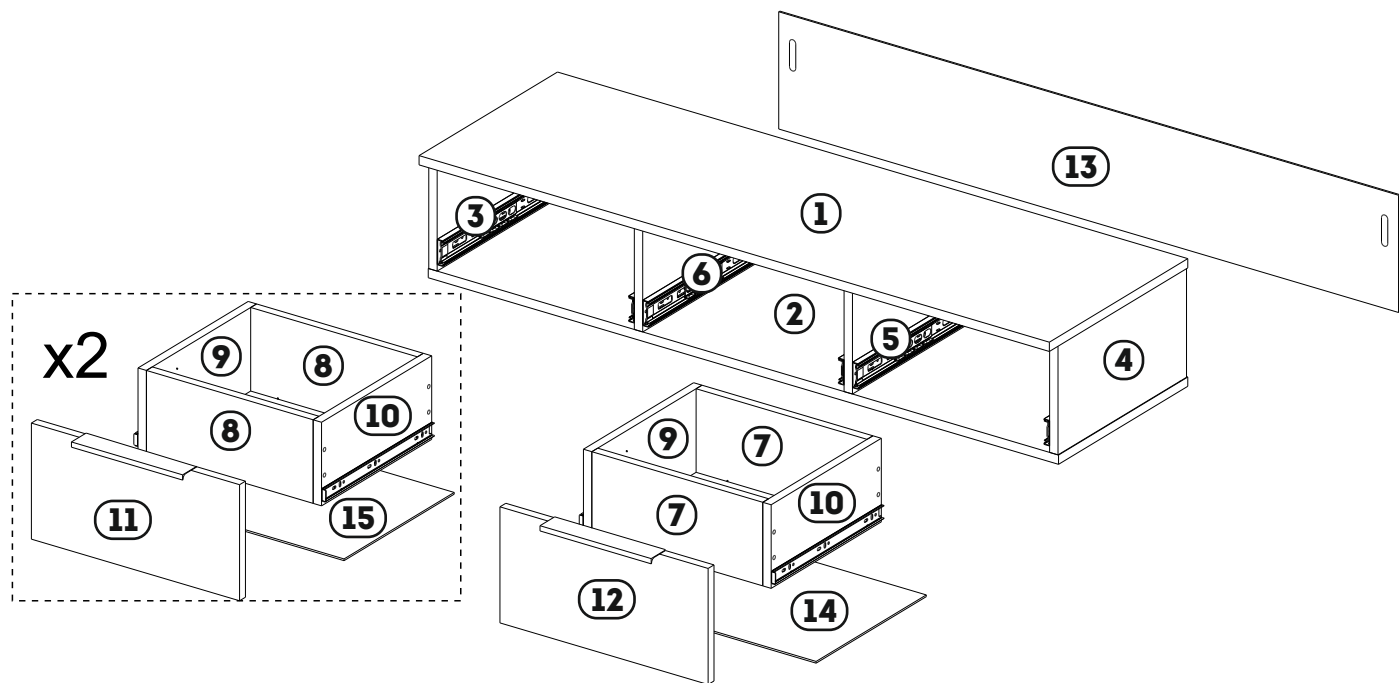
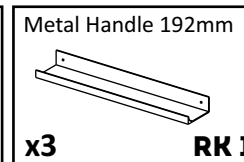
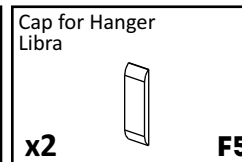
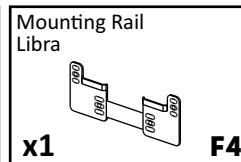
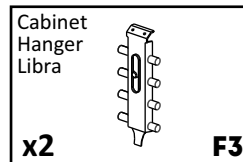
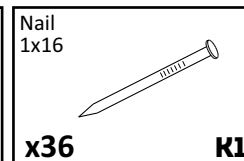
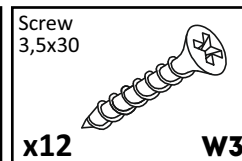
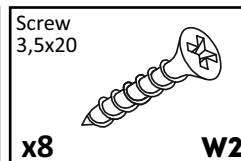
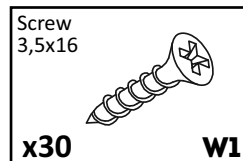
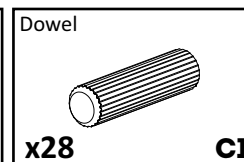
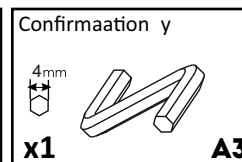
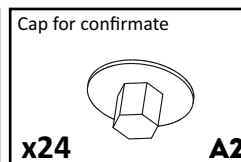
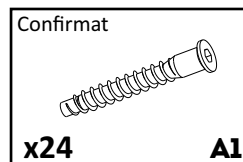
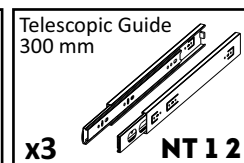


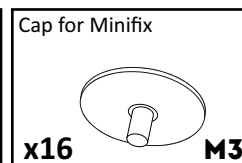


361-000075

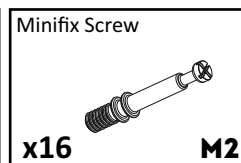



Nº	a*b	X	Pack
1	1202x377	1	1/1
2	1202x352	1	1/1
3	188x350	1	1/1
4	188x350	1	1/1
5	188x330	1	1/1
6	188x330	1	1/1
7	326x144	2	1/1
8	318x144	4	1/1
9	300x144	3	1/1
10	300x144	3	1/1
11	397x200	2	1/1
12	397x200	1	1/1
13	202x1182	1	1/1
14	358x300	1	1/1
15	350x300	2	1/1

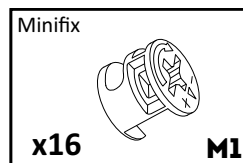

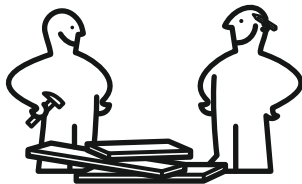



GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

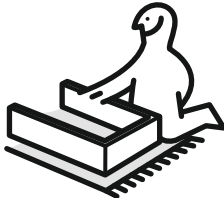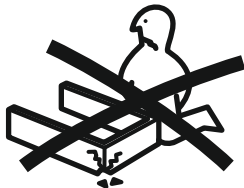


CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

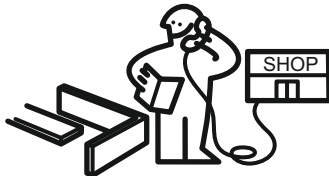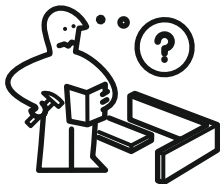

1

Minifix Screw



x8

M2


Minifix






x16

M1

Dowel




x8

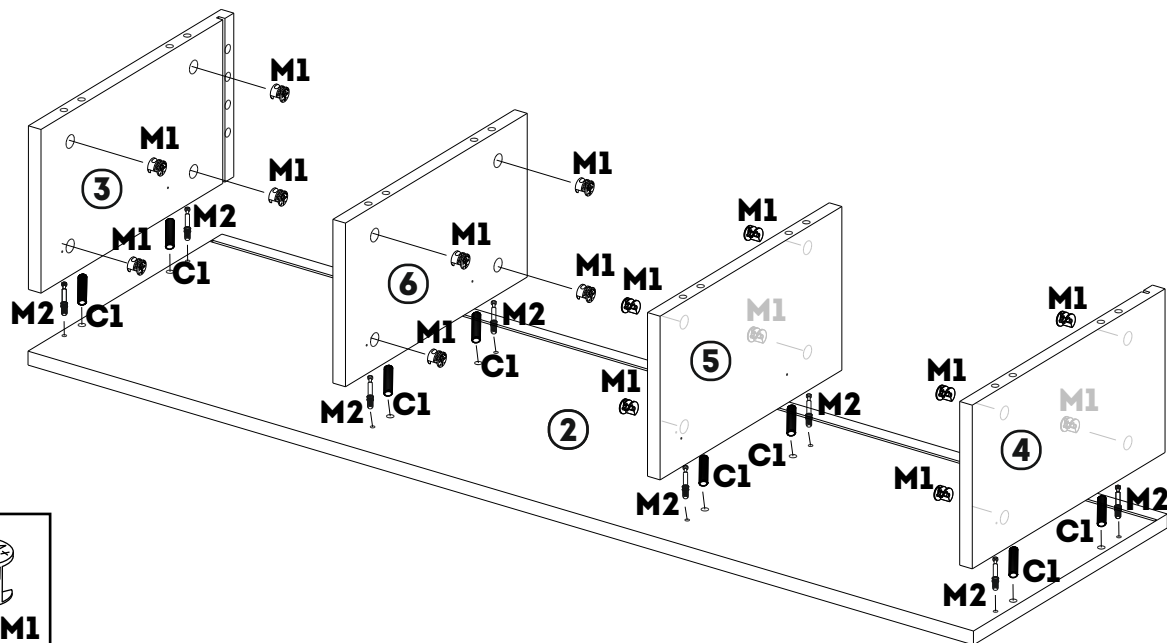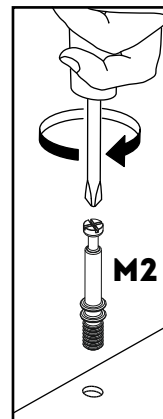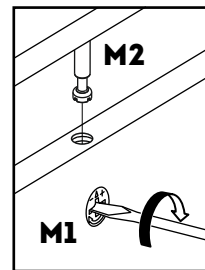C1**M1****M2****M1**

2

Screw
3,5x16



x12



W1

Telescopic Guide
300mm




x3

NT 1/2

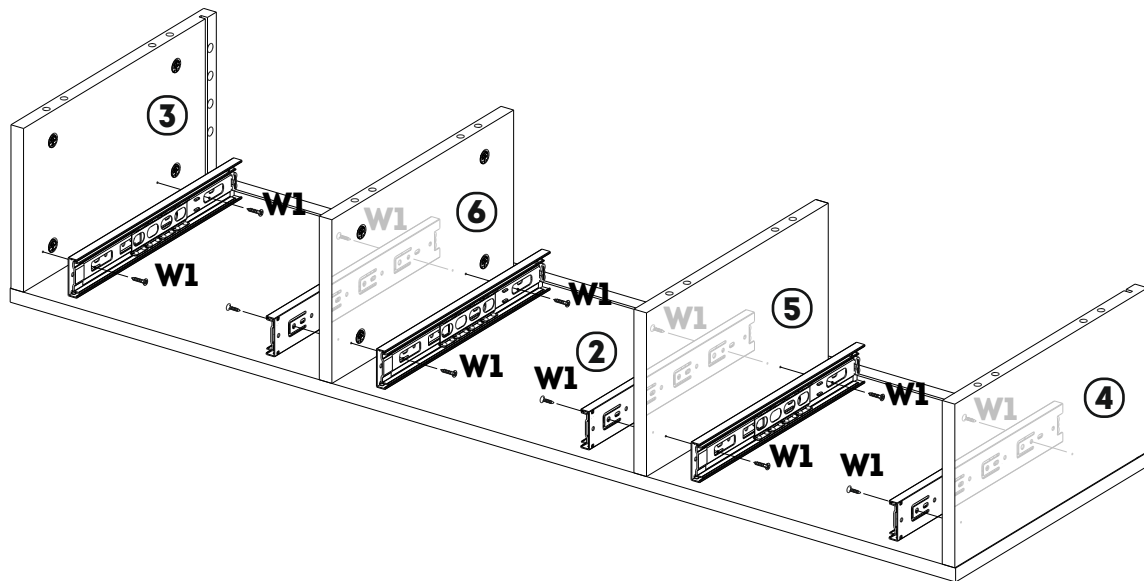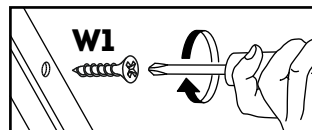

3

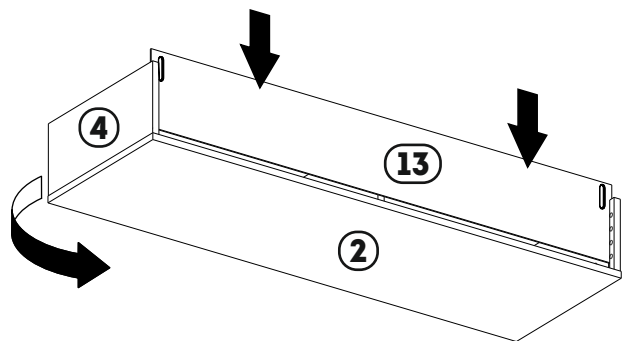


4

Minifix Screw

x8





M2



Dowel

x8

C1

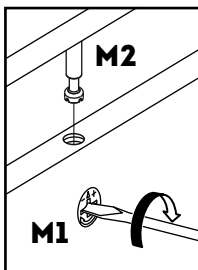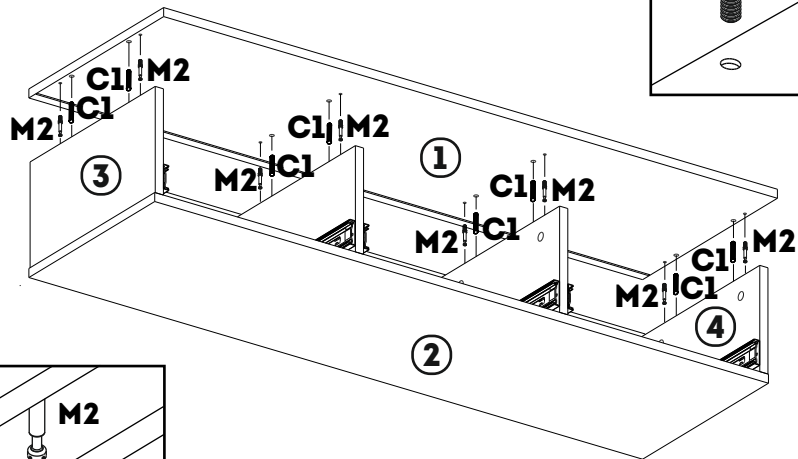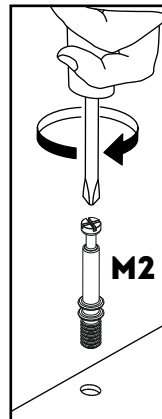


5

Confirmat

x24

A1






Cap for confirmate

x24

A2



x2

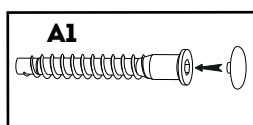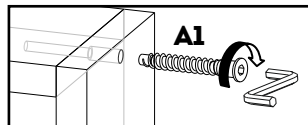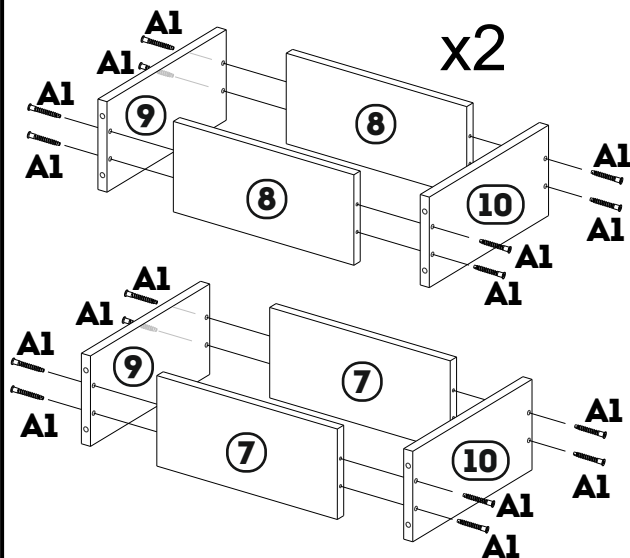


6

Dowel

x12

C1




Nail



1x16

x36

K1




x2

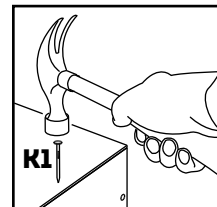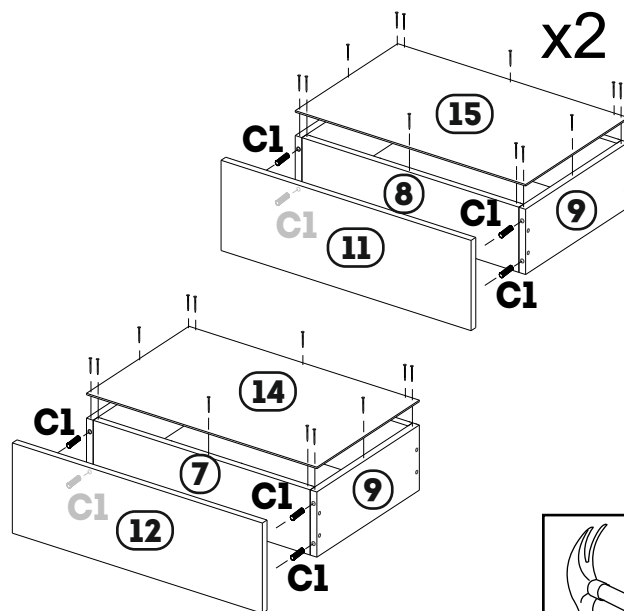

7

Screw
3,5x30



x12

W3


Telescopic Guide
300 mm



x3



NT 2/2

Screw
3,5x16



x12

W1

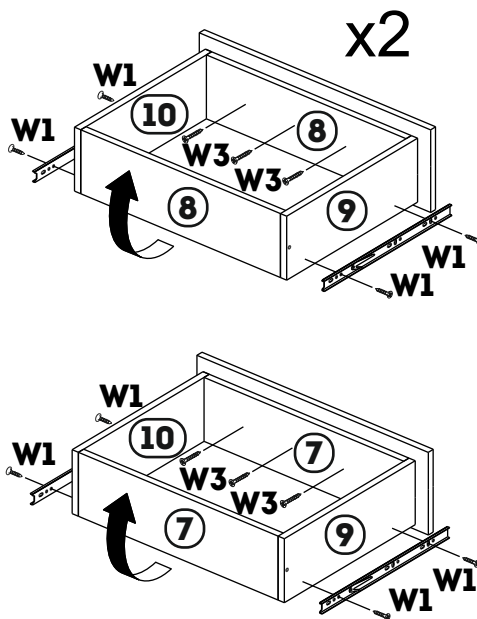

8


Metal Handle 192mm



x3


RK 1

Screw
3,5x16




x6

W1

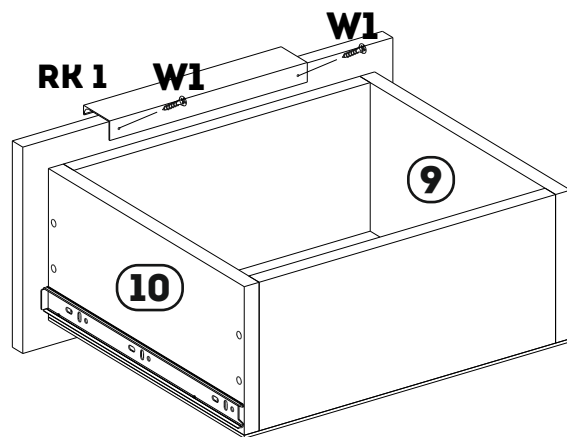

9


Screw
3,5x20



x8

W2


Cabinet
Hanger
Libra



x2

F3

Mounting Rail
Libra



x1





F4

Cap for Hanger
Libra



x2

F5

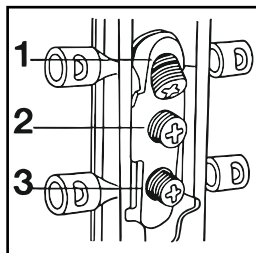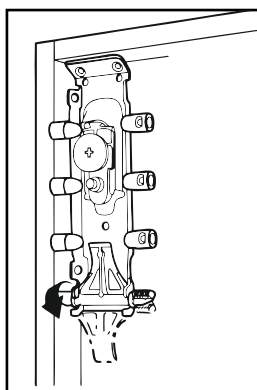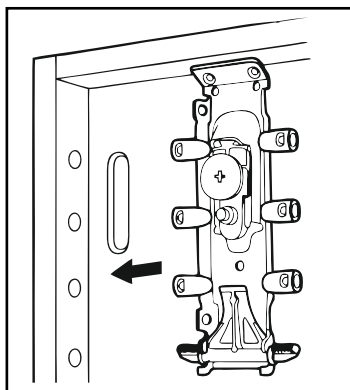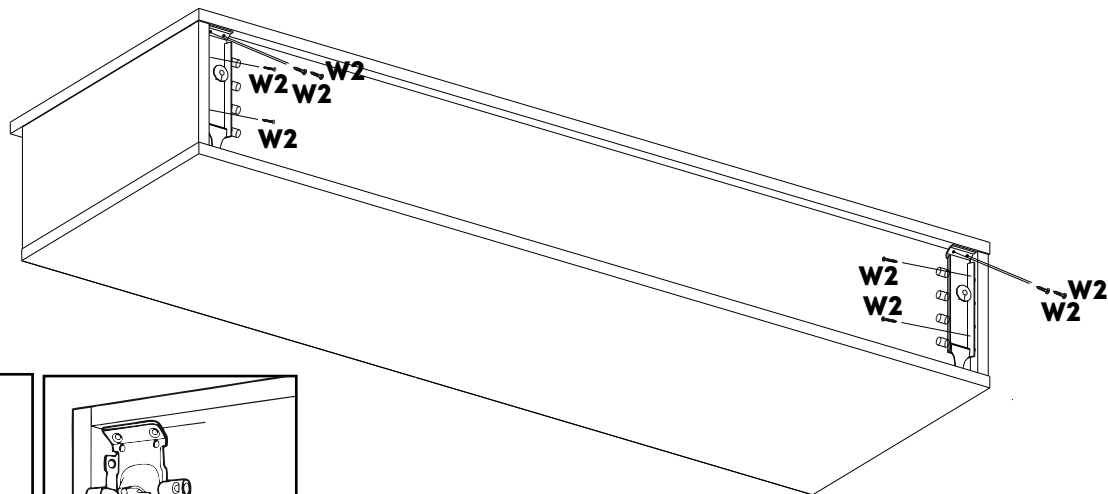

10

