




361-000091

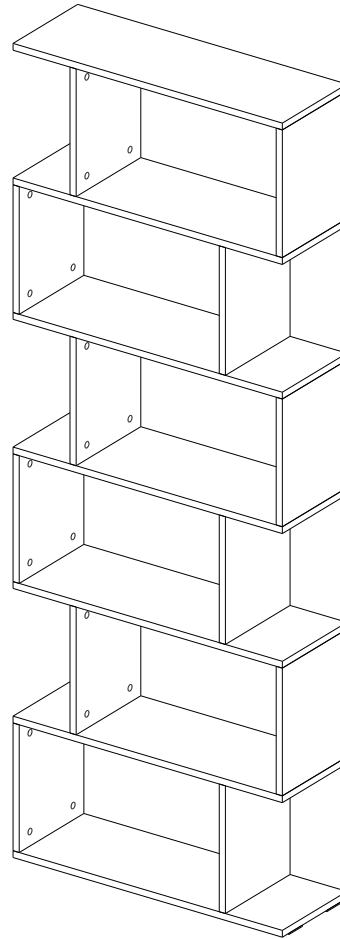

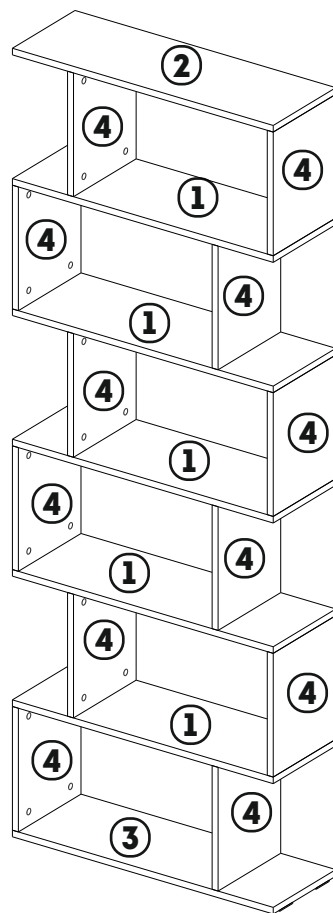

Nº	a*b	X	Pack
1	702x242	5	1/1
2	702x242	1	1/1
3	702x242	1	1/1
4	300x240	12	1/1


Minifix



x48

M1

Minifix Screw



x48

M2


Cap for Minifix



x48

M3


Screw
3,5x16



x12

W1

Dowel



x24


C1

Support-lining





x6

Q4

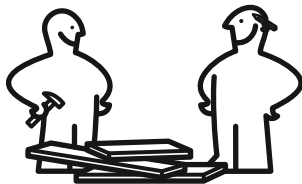



GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

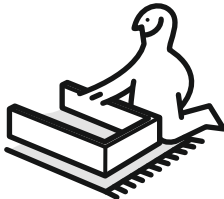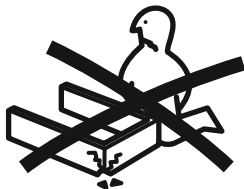




CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

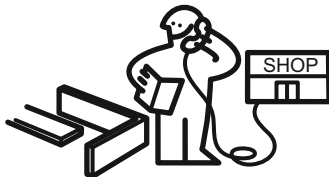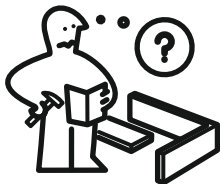


1

Minifix

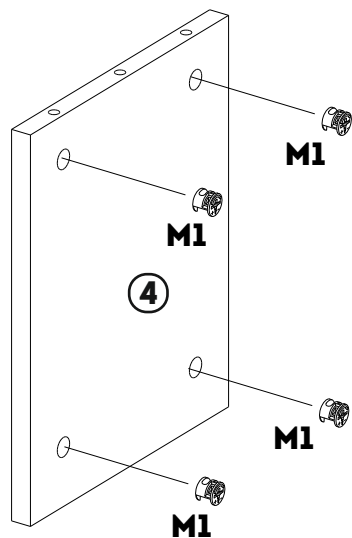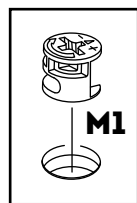**x48****M1****x12****M1****2**Screw
3,5x16**x12****W1**

Support-lining

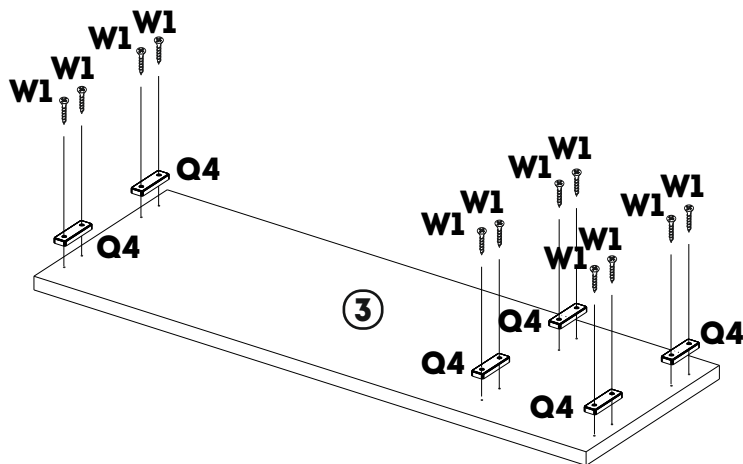
**x6****Q4**

3

Minifix Screw

x48

M2



Dowel

x24

C1

