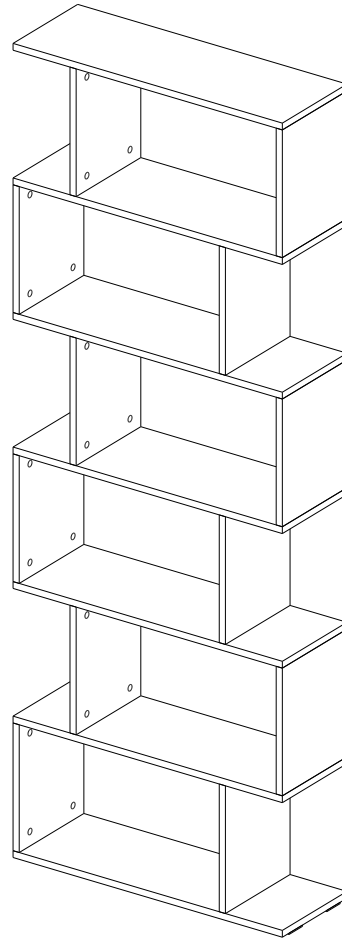
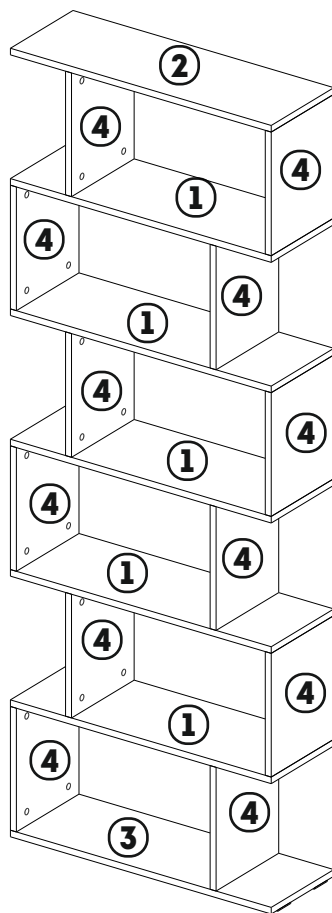


361-000092







Nº	a*b	X	Pack
1	702x242	5	1/1
2	702x242	1	1/1
3	702x242	1	1/1
4	300x240	12	1/1

Minifix



x48
M1

Minifix Screw



x48
M2

Cap for Minifix


x48
M3

Screw
3,5x16


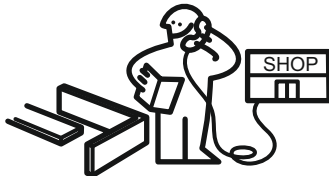
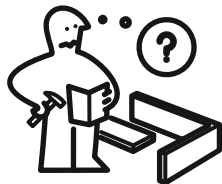
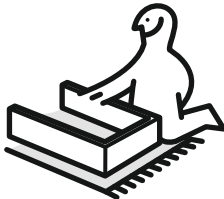
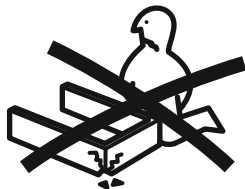
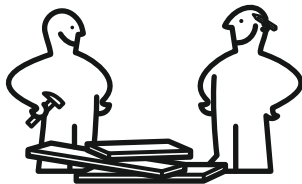
x12
W1

Dowel


x24
C1

Support-lining


x6
Q4



GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

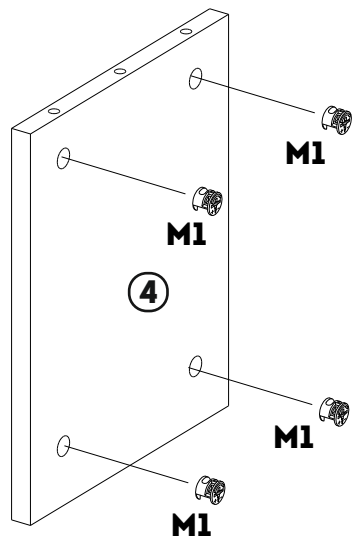
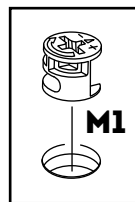

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

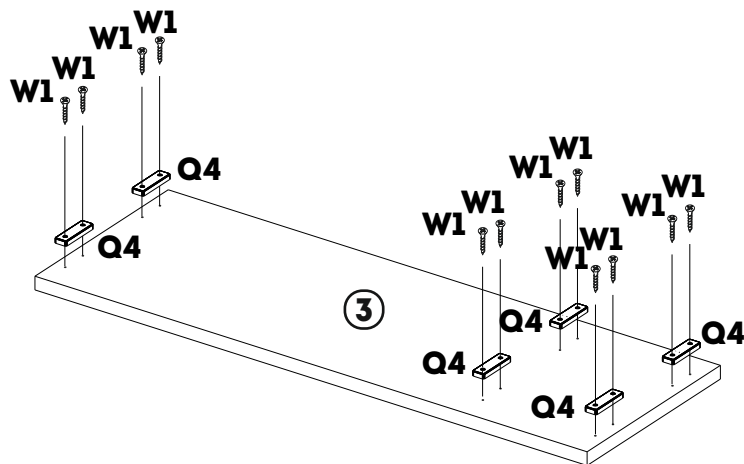
- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

Minifix

**x48****M1****x12****M1****2**Screw
3,5x16**x12****W1**

Support-lining


**x6****Q4**

3

Minifix Screw

x48

M2



Dowel

x24

C1

