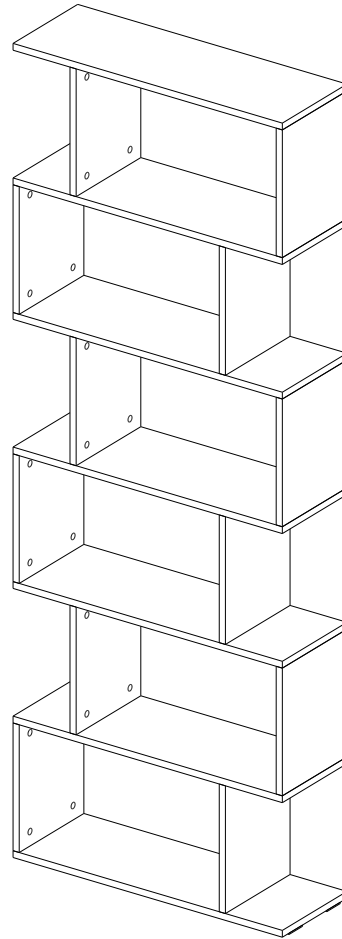
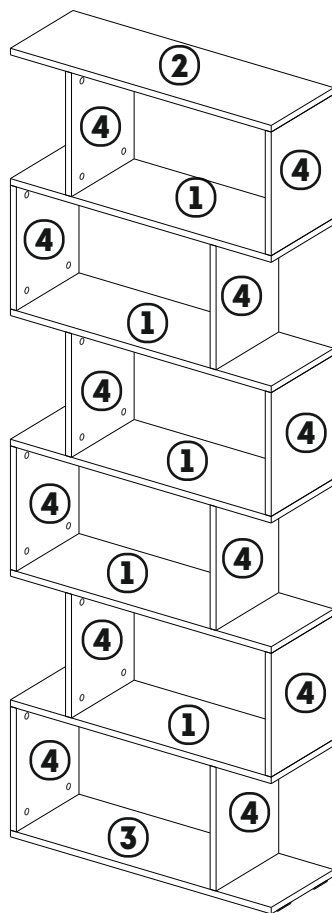



361-000094







Nº	a*b	X	Pack
1	702x242	5	1/1
2	702x242	1	1/1
3	702x242	1	1/1
4	300x240	12	1/1

Minifix



**x48**
**M1**

Minifix Screw



**x48**
**M2**

Cap for Minifix



**x48**
**M3**

Screw  
3,5x16


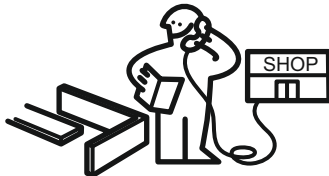
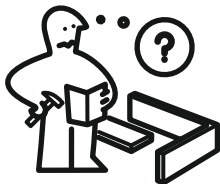
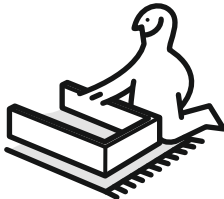
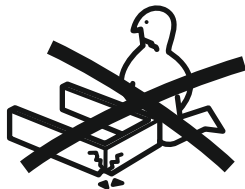
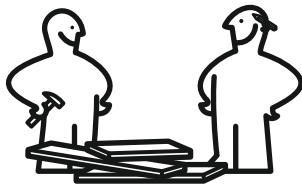
**x12**
**W1**

Dowel


**x24**
**C1**

Support-lining


**x6**
**Q4**



## **GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY**

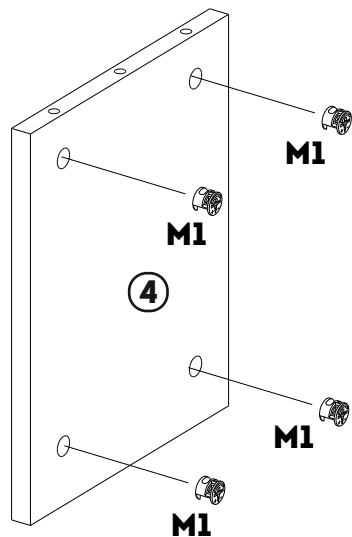
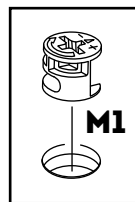

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

## **CARE AND MAINTENANCE OF FURNITURE**

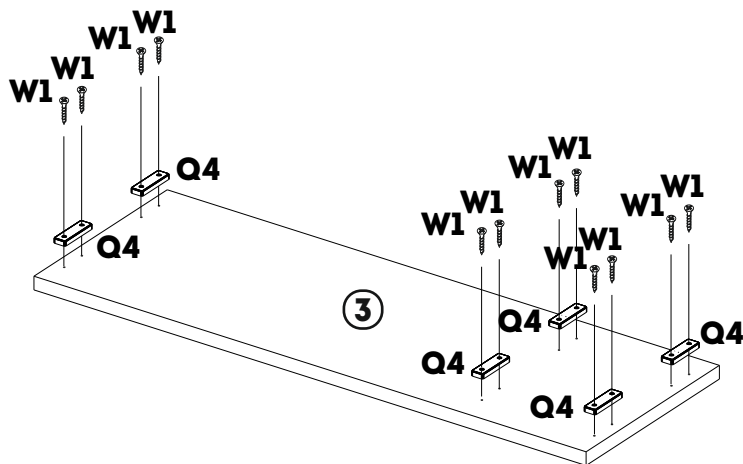
- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

**1**

Minifix

**x48****M1****x12****2**Screw  
3,5x16**x12****W1**

Support-lining


**x6****Q4**

# 3

Minifix Screw

x48

M2



Dowel

x24

C1

