


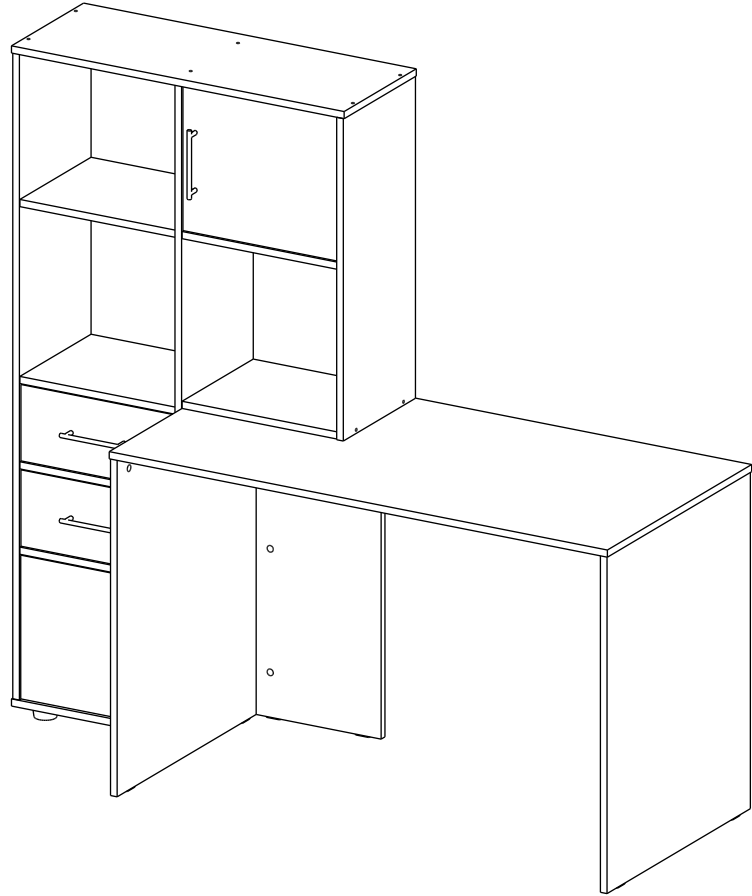
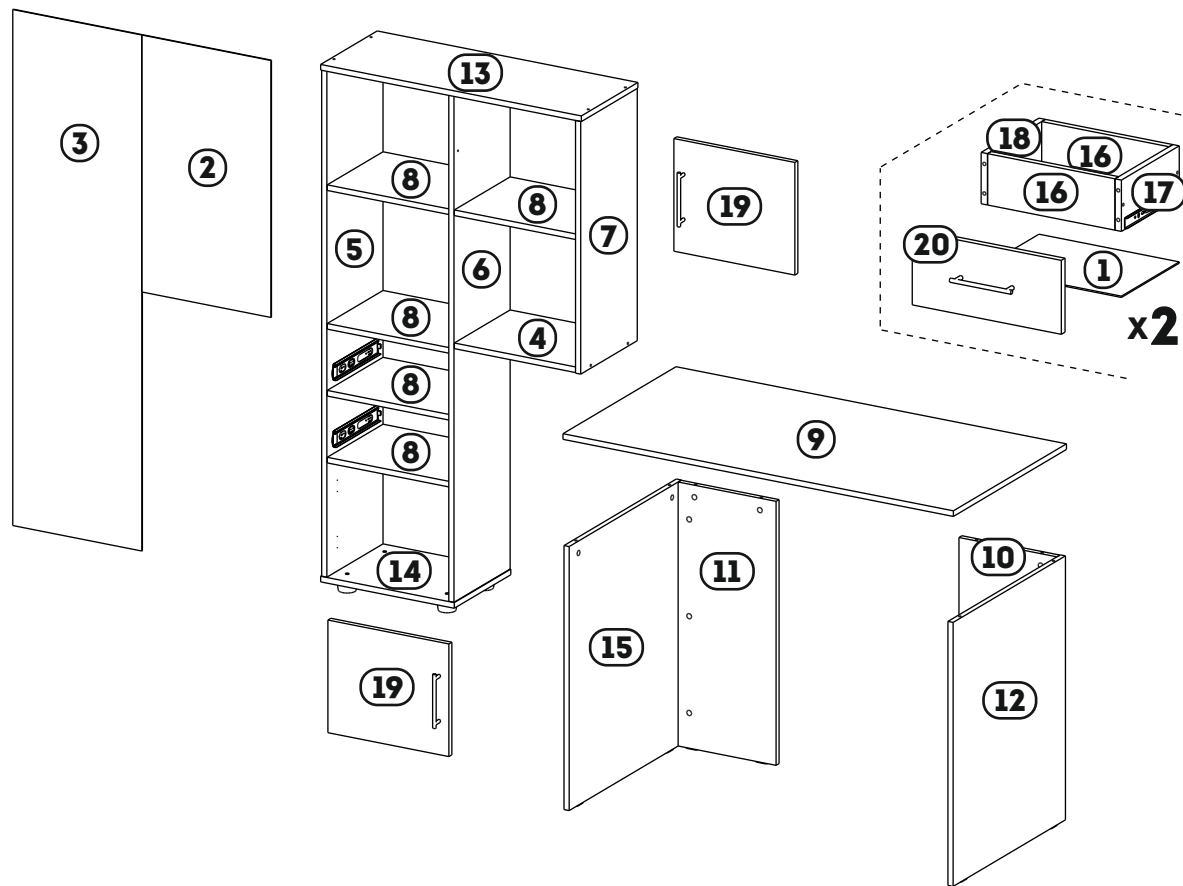







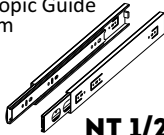








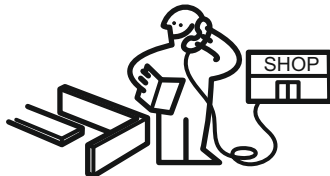
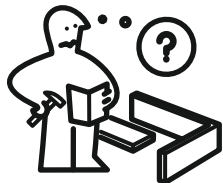


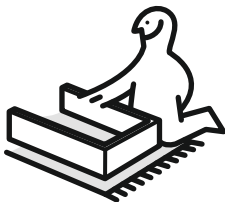

361-000098

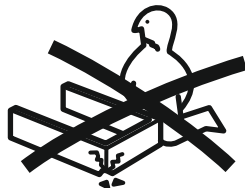

Nº	a*b	X	Pack	Confirmat	Cap for confirmate	Confirmatoney	Dowel
1	350x250	2	1/2	 x22 A1	 x22 A2	 x1 A3	 x8 C1
2	730x398	1	1/2				
3	1466x398	1	1/2				
4	376x298	1	2/2				
5	1438x300	1	2/2				
6	1438x300	1	2/2				
7	718x302	1	2/2				
8	376x298	5	2/2				
9	1204x604	1	1/2				
10	750x302	1	1/2				
11	750x302	1	1/2				
12	750x600	1	1/2				
13	804x302	1	2/2				
14	412x302	1	1/2				
15	750x600	1	1/2				
16	318x118	4	2/2				
17	250x118	2	2/2				
18	250x118	2	2/2				
19	320x373	2	1/2				
20	170x372	2	1/2				
				Minifix	Minifix Screw	Cap for Minifix	Mounting Plate
				 x14 M1	 x14 M2	 x14 M3	 x4 P6
				Inset Hinge	Shelf Holder	Telescopic Guide 250mm	Lining (Manhatan) 30mm
				 x4 P8	 x2 L1	 x2 NT 1/2	 x4 Q1
				Rafix	Rafix Screw	Support-lining	Railing Handle
				 x20 R1	 x20 R2	 x8 Q3	 x4 RR 1
					Nail 1x16	Screw 3,5x16	Screw 3,5x30
					 x50 K1	 x32 W1	 x8 W3

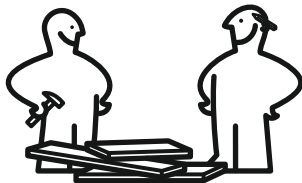

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE


- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

Minifix Screw

x6



M2




Minifix

x4

M1

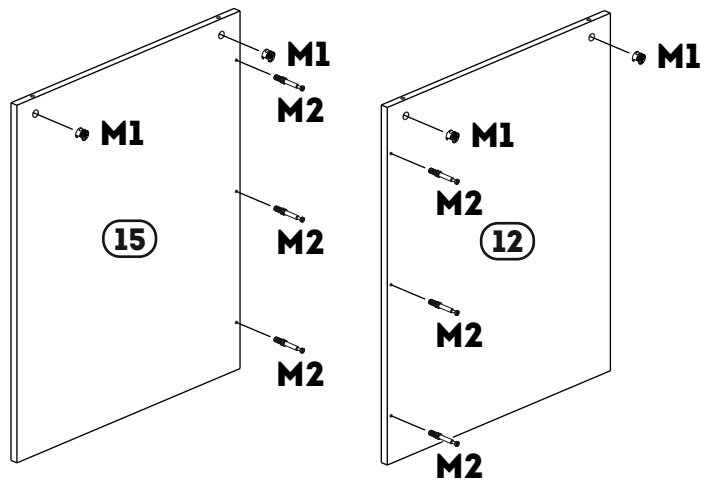

M1

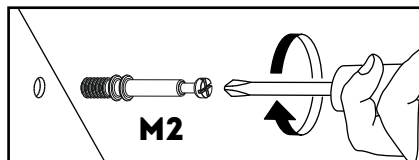


M2

2



Minifix

x10



M1

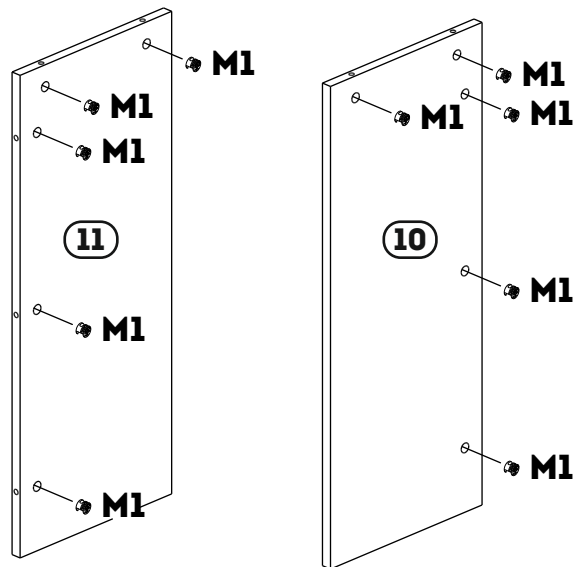

3

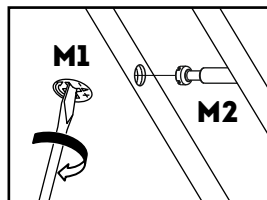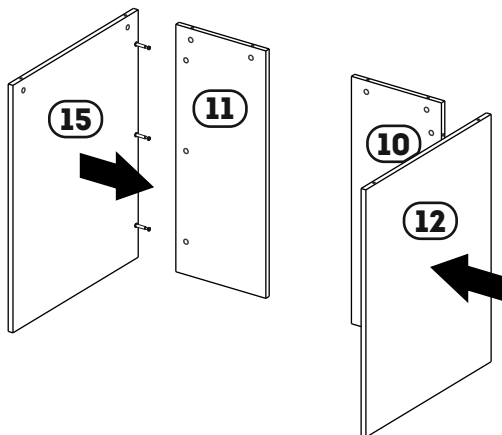


4

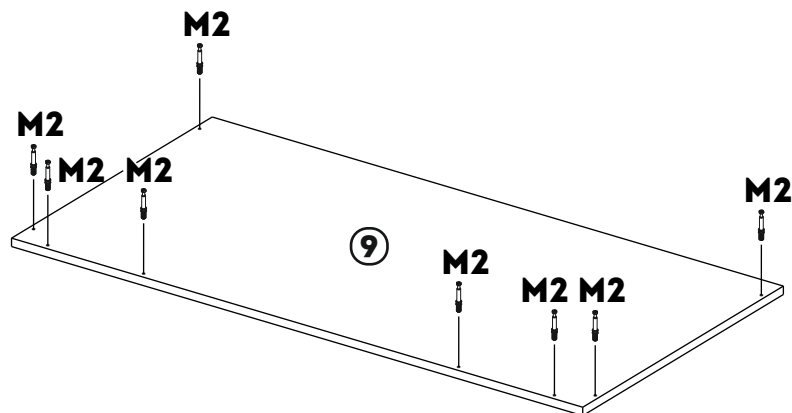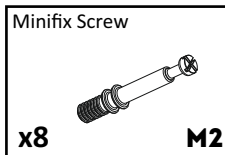


5

Support-lining

x8




Q3

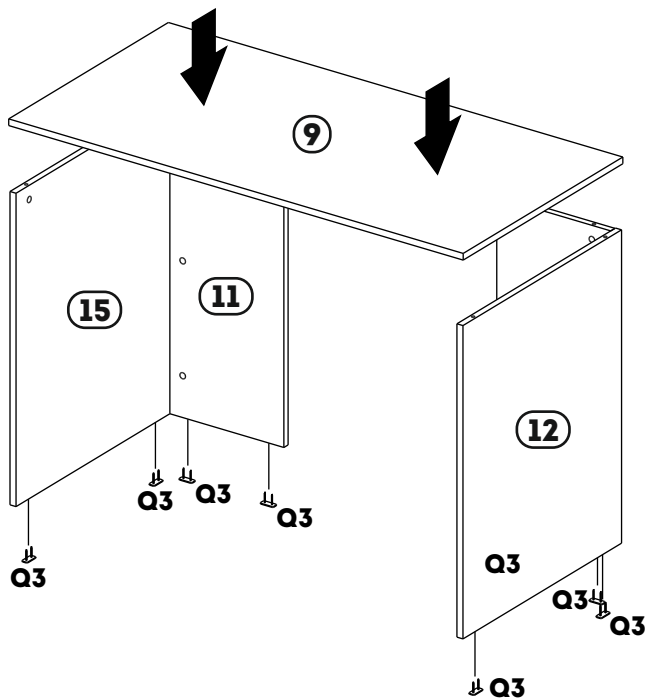

6

Screw
3,5x16

x16



W1

Telescopic Guide
250mm


x2




NT 1

Mounting Plate

x4




P6

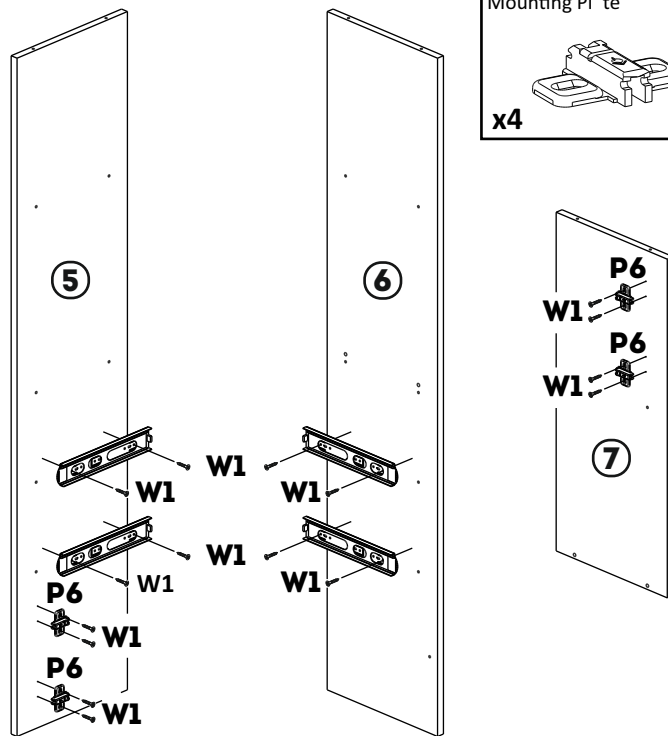

7


Rafix



x20


R1

Lining (Manhatan)
30mm



x4

Q1

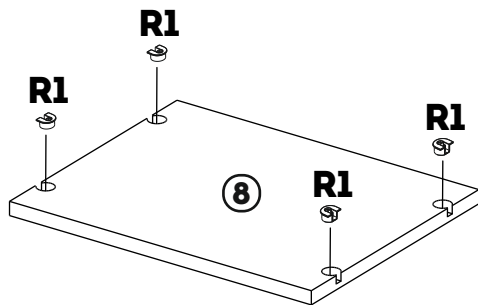


x5

Q1

Q1


Q1

14

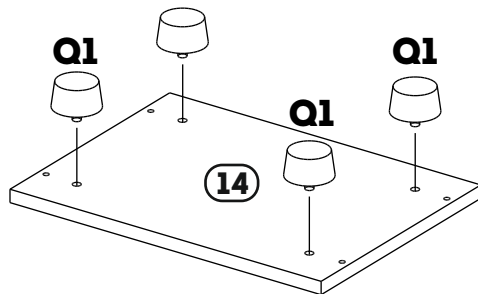



8

Confirmat



x8

A1

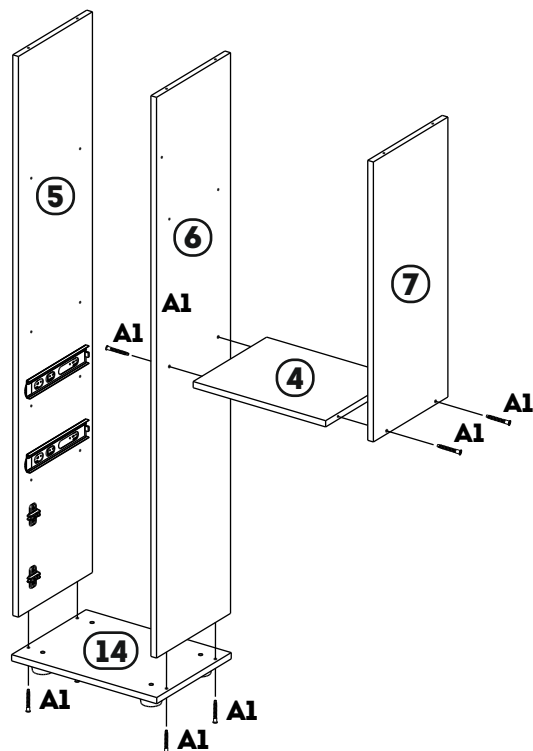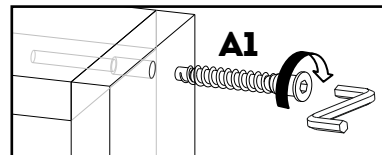

Confirmat






A1

Shelf Holder



L1

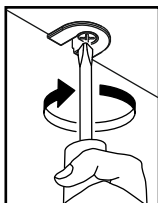
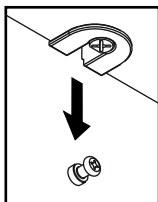
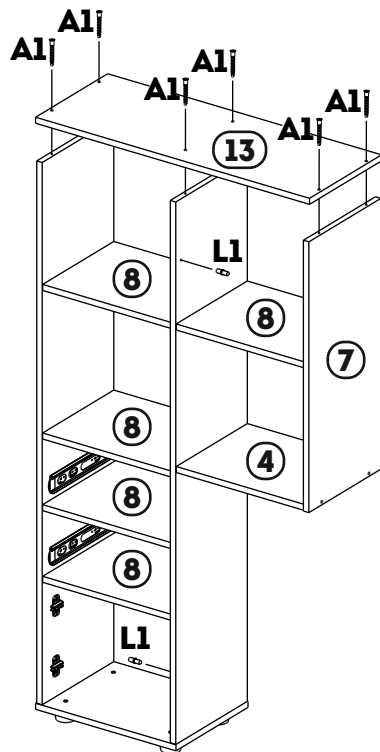


10

Nail
1x16




K1

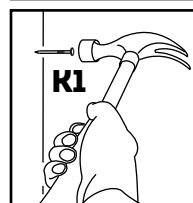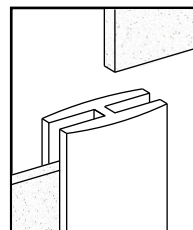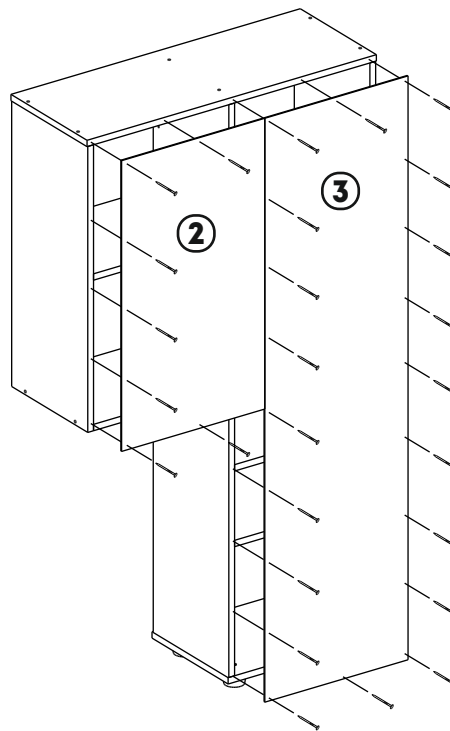

11


Confirmat



x4




A1

Railing Handle




x1

RR 1

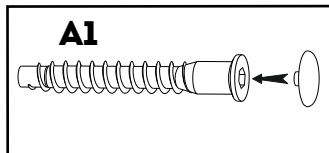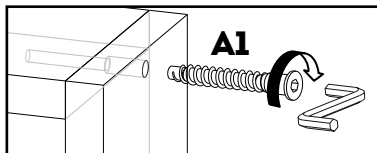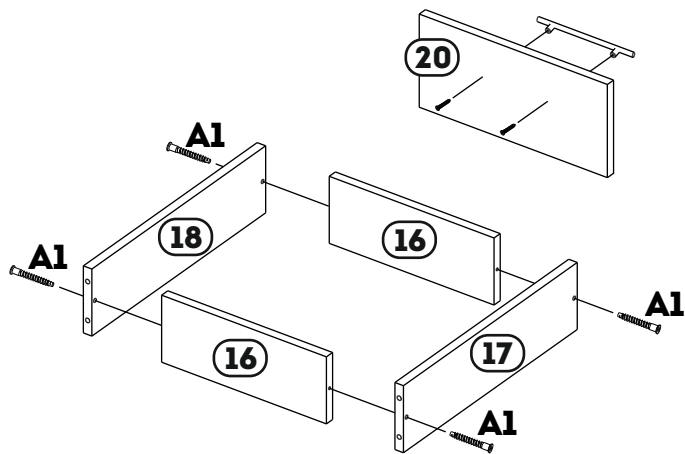

12


Dowel



x4



C1

Nail
1x16




x12

K1

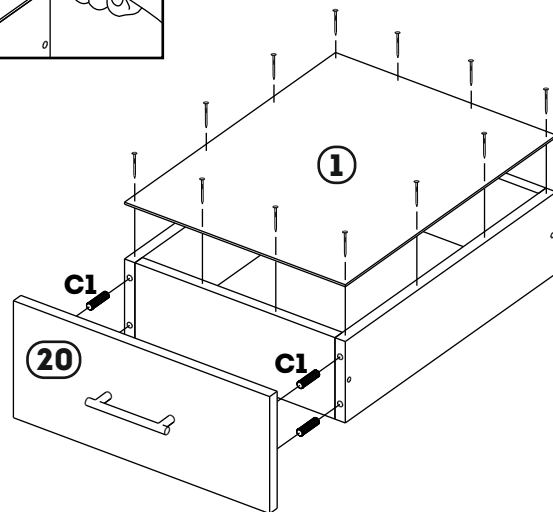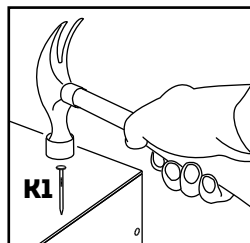

13

Screw
3,5x16



x4

W1


Telescopic Guide
250mm



x1



NT 2

Screw
3,5x30




x4

W3

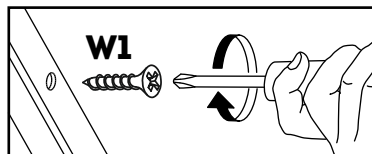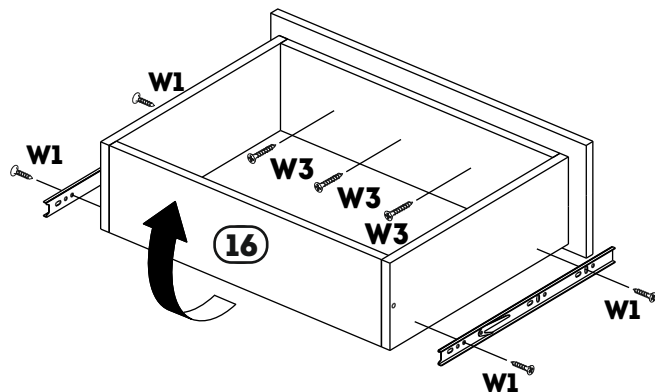

14


Railing Handle



x2


RR 1

Inset Hinge







x4

P8

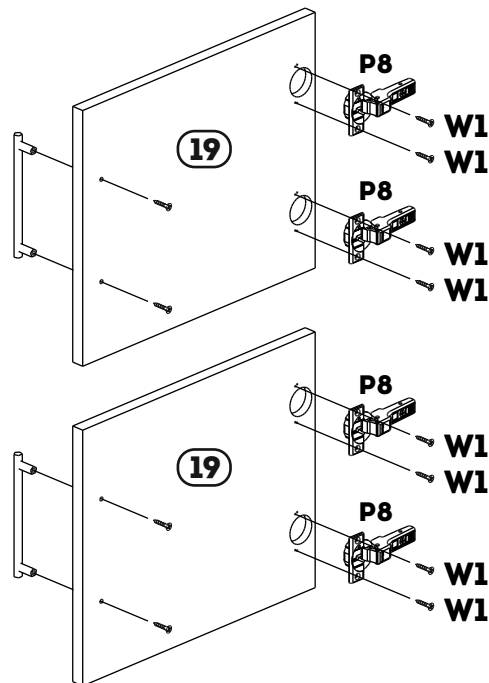

15

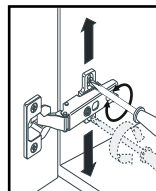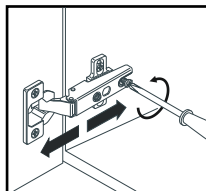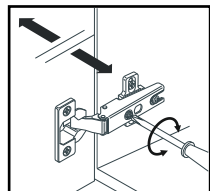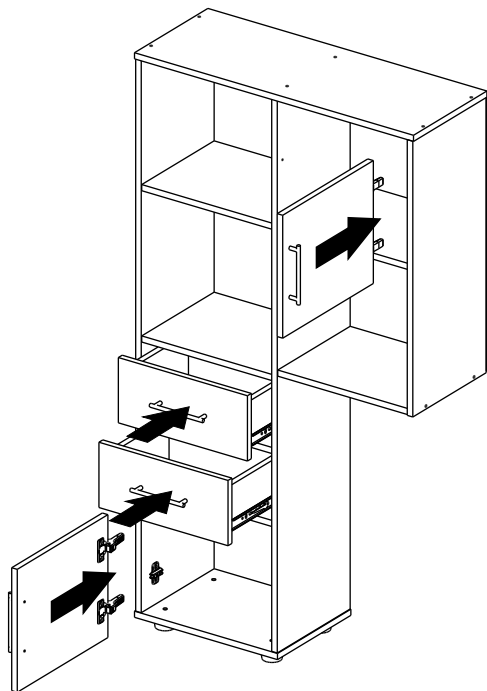

16

