


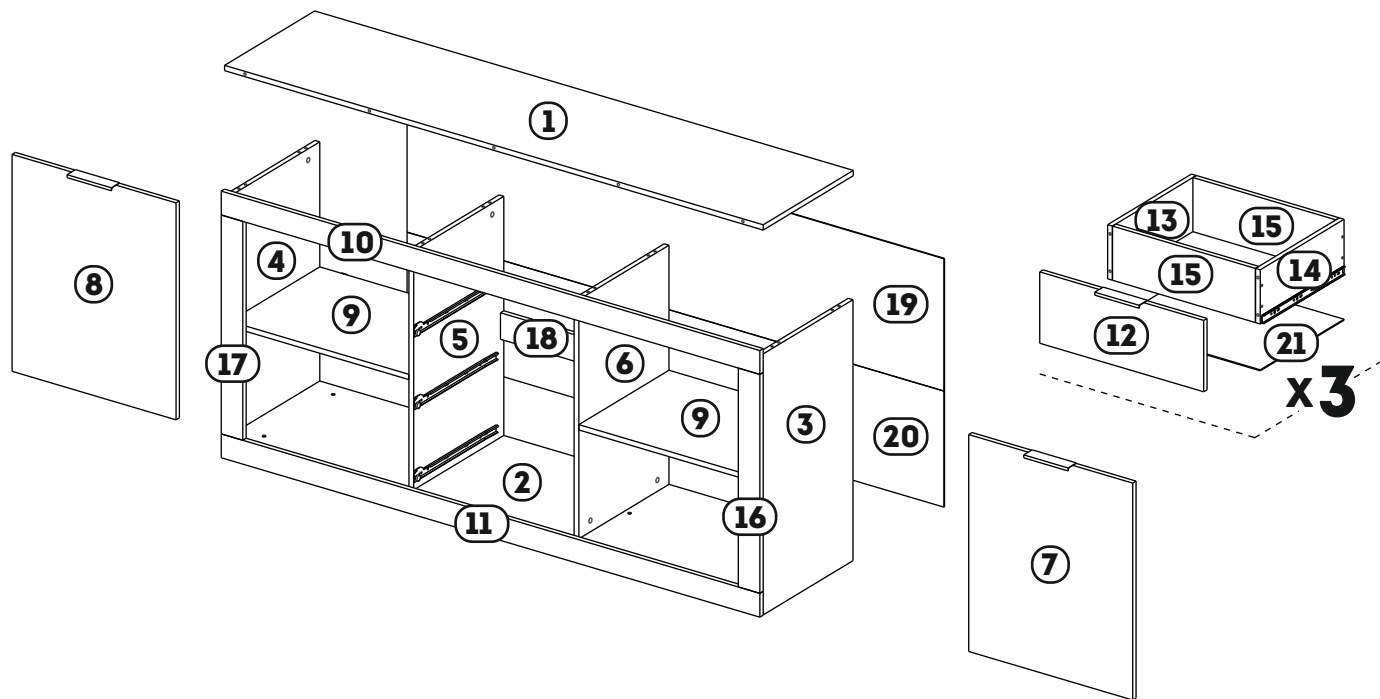
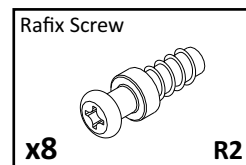
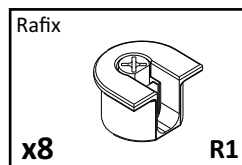
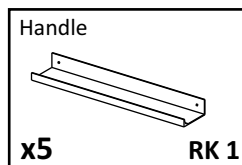
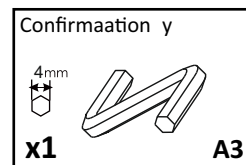
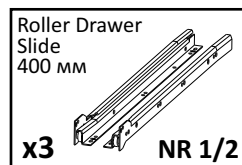
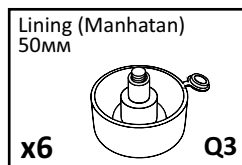
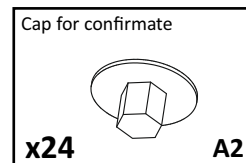
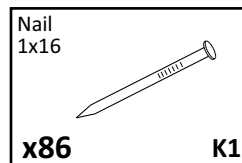
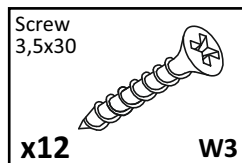
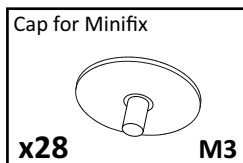
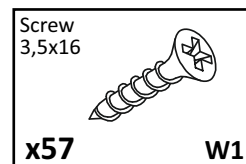
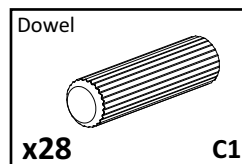
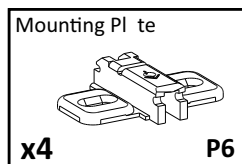
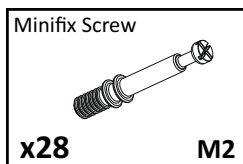
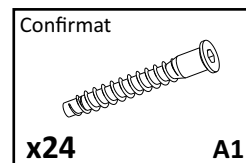


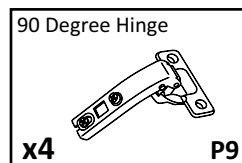


361-000102

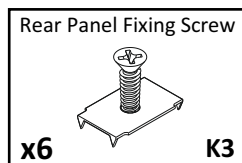


| No | a*b      | X | Pack |
|----|----------|---|------|
| 1  | 1500x430 | 1 |      |
| 2  | 1466x430 | 1 |      |
| 3  | 788x430  | 1 |      |
| 4  | 788x430  | 1 |      |
| 5  | 722x430  | 1 |      |
| 6  | 722x430  | 1 |      |
| 7  | 655x448  | 1 |      |
| 8  | 655x448  | 1 |      |
| 9  | 499x430  | 2 |      |
| 10 | 72x1500  | 1 |      |
| 11 | 72x1500  | 1 |      |
| 12 | 216x448  | 3 |      |
| 13 | 400x164  | 3 |      |
| 14 | 400x164  | 3 |      |
| 15 | 378x164  | 6 |      |
| 16 | 661x72   | 1 |      |
| 17 | 661x72   | 1 |      |
| 18 | 80x436   | 1 |      |
| 19 | 399x1494 | 1 |      |
| 20 | 351x1494 | 1 |      |
| 21 | 410x400  | 3 |      |

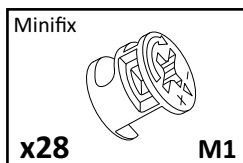

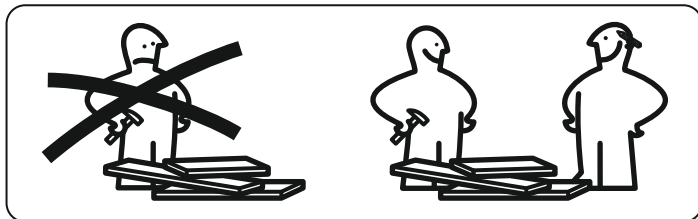


## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

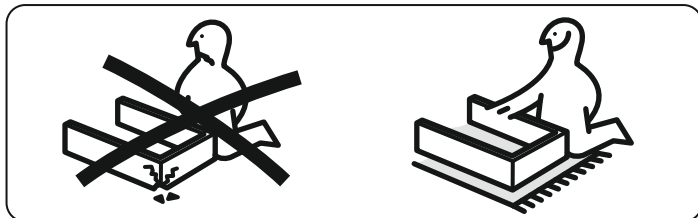

## CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

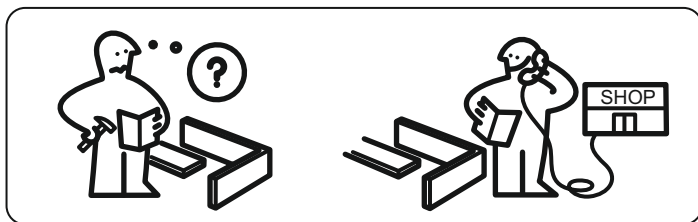

# 1


Minifix



x12

M1


Roller Drawer  
Slide  
400 MM



x3

NR 1


Screw  
3,5x16



x12

W1


Rafix Screw



x4





R2

Minifix Screw



x4

M2

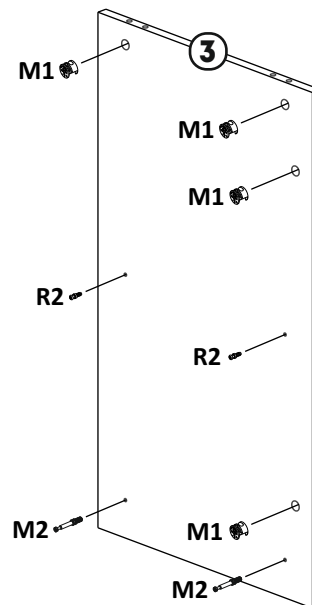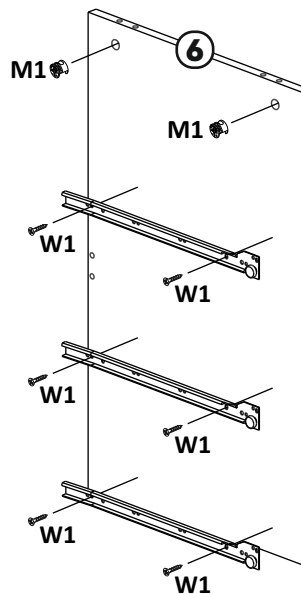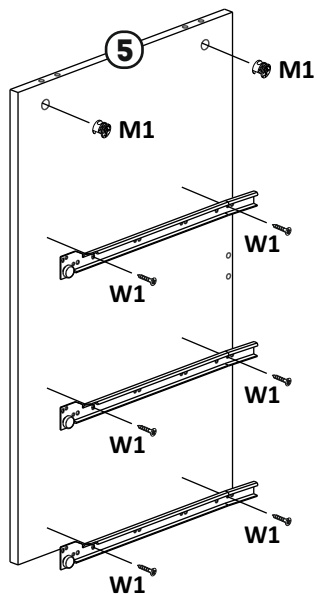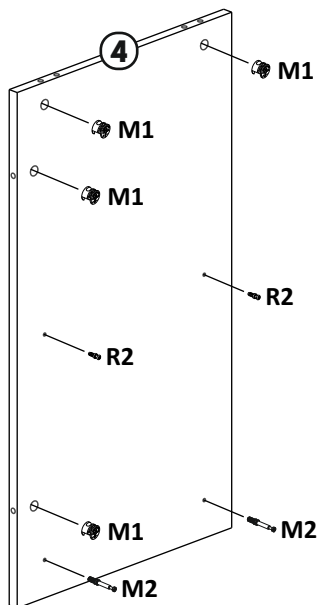

# 2


Minifix



x12

M1


Dowel



x8

C1


Minifix Screw



x8



M2

Lining (Manhatan)  
50MM




x6

Q3

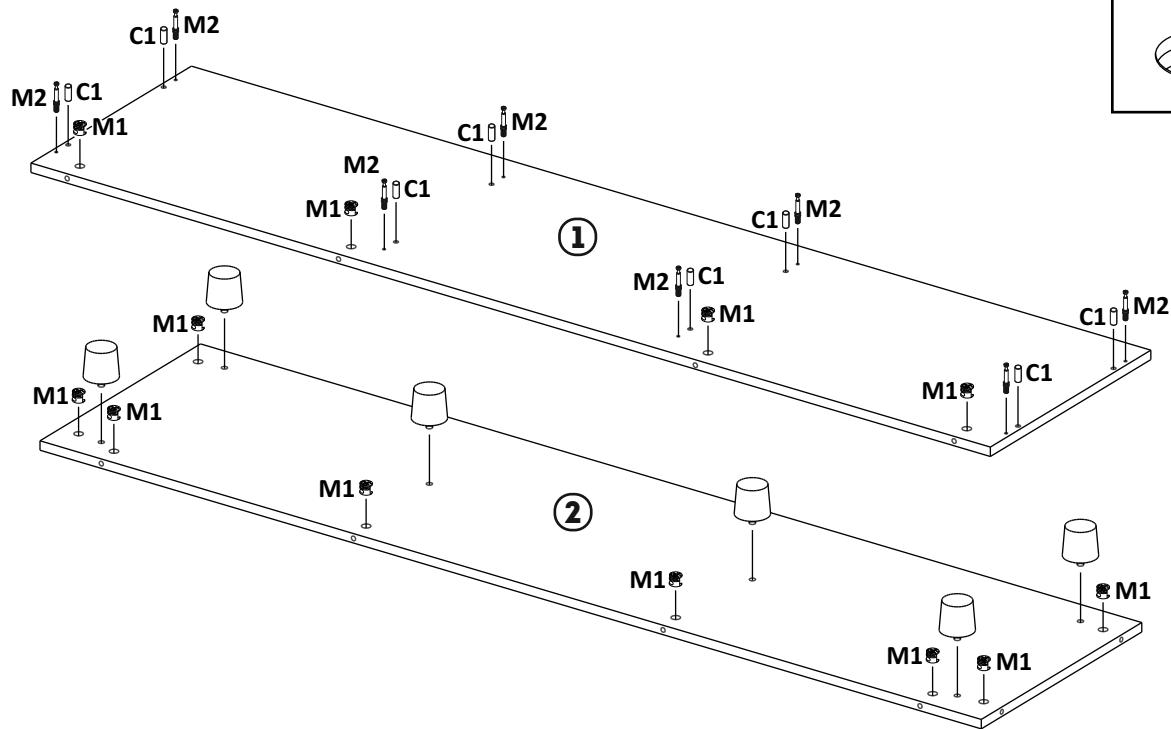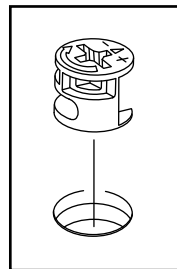



# 3

Dowel





x4

C1

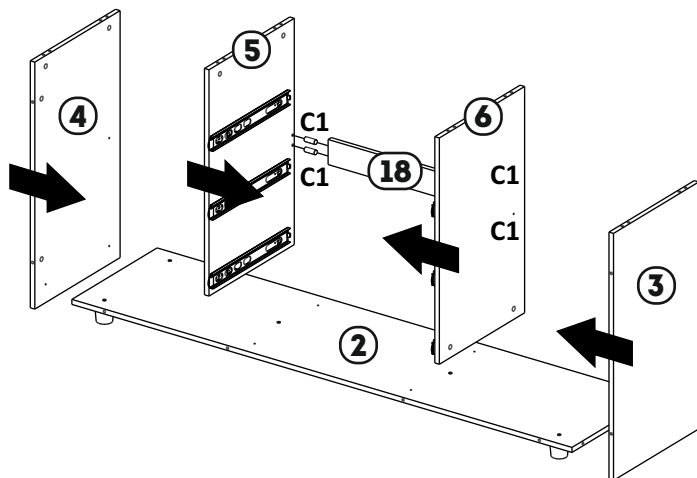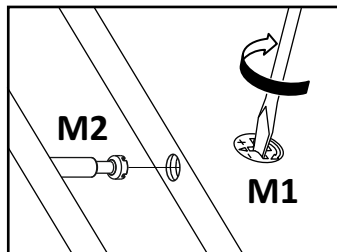


# 4

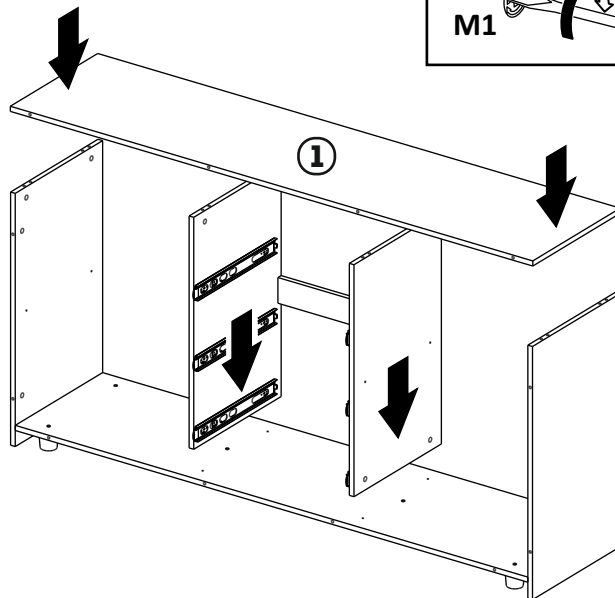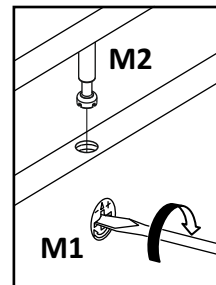






# 5

Rear Panel Fixing Screw




x6

K3

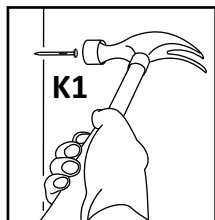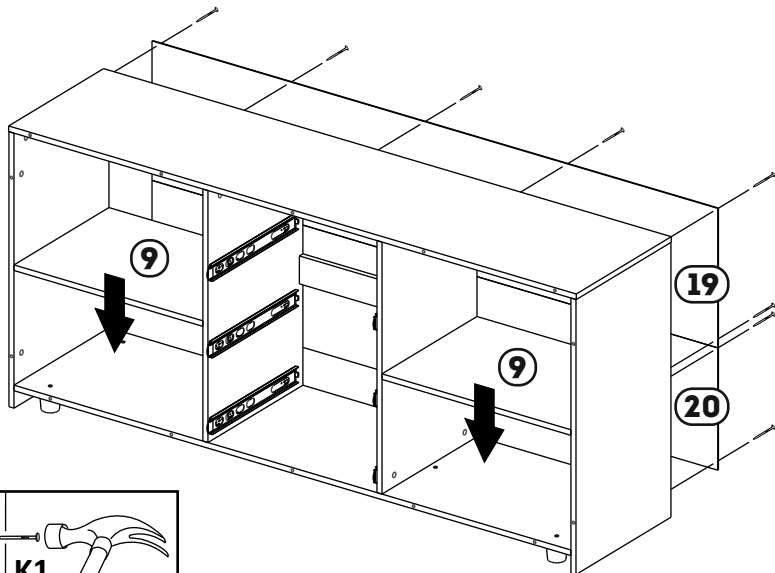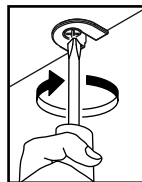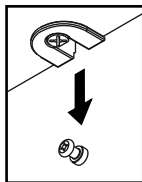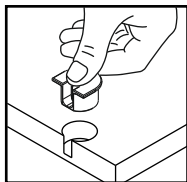

# 6


Minifix Screw



x12



M2

Mounting Plate




x4

P6

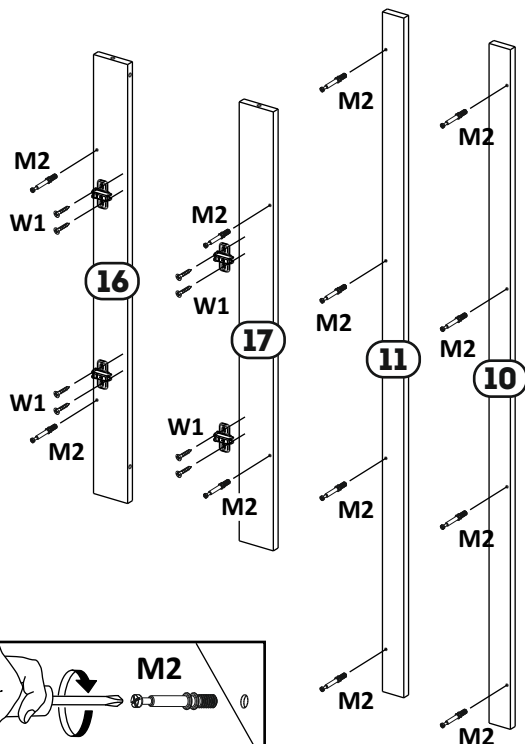


7

Dowel





x4

C1

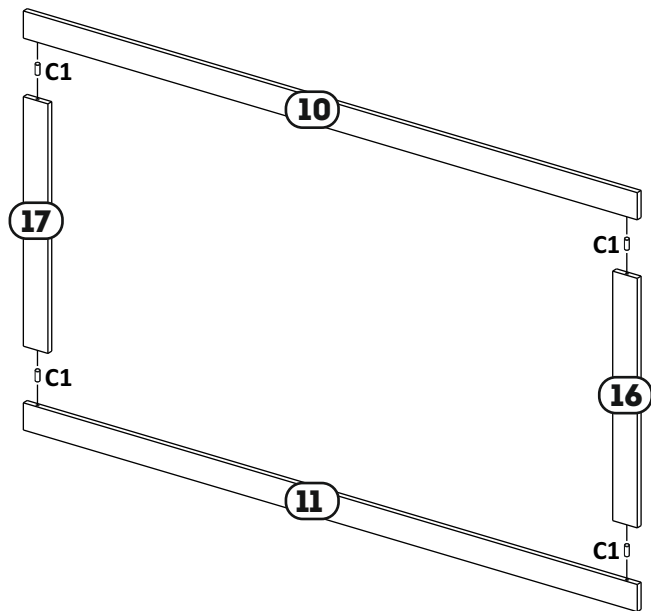


8

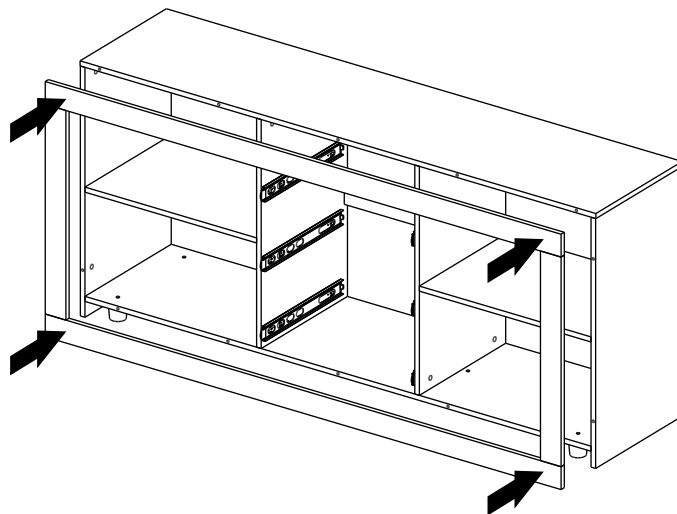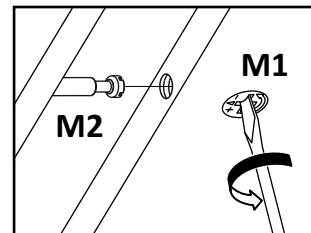

9

Confirmat



x8




A1

Cap for confirmate




x8

A2

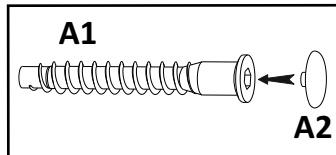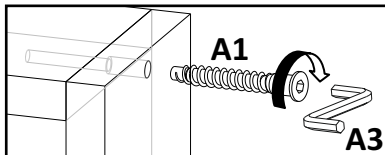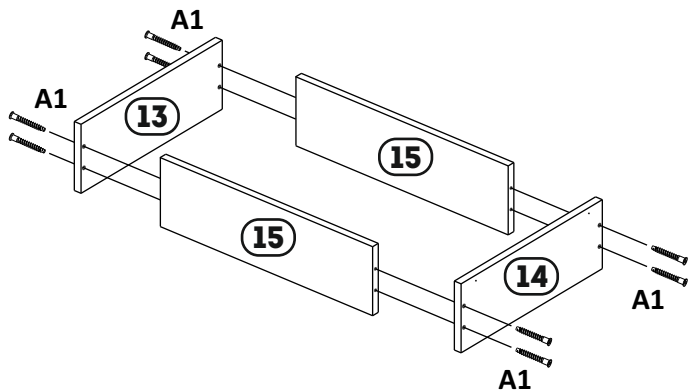



10


Nail  
1x16




x14

K1




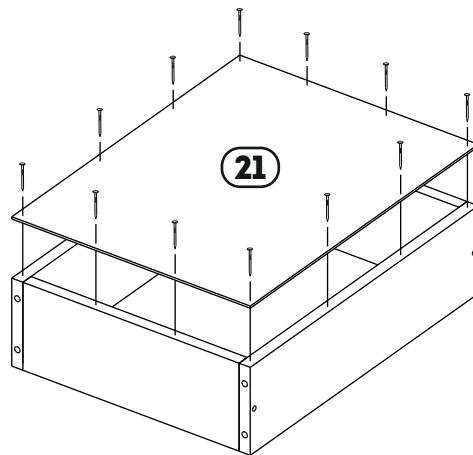
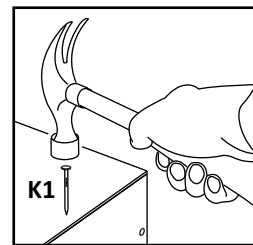


**11**Screw  
3,5x30**x4****W3**

Dowel

**x4****C1**

Handle

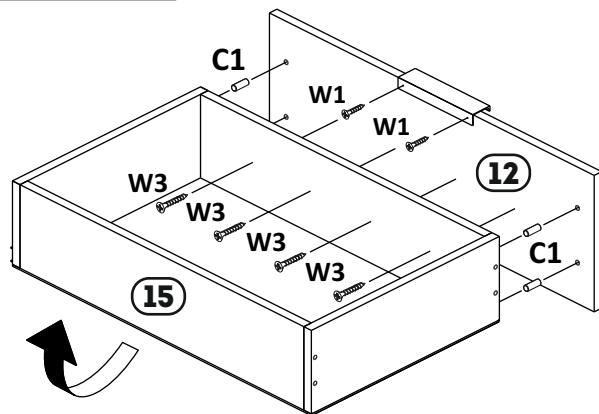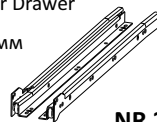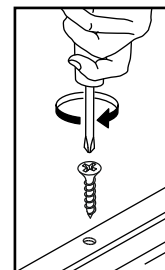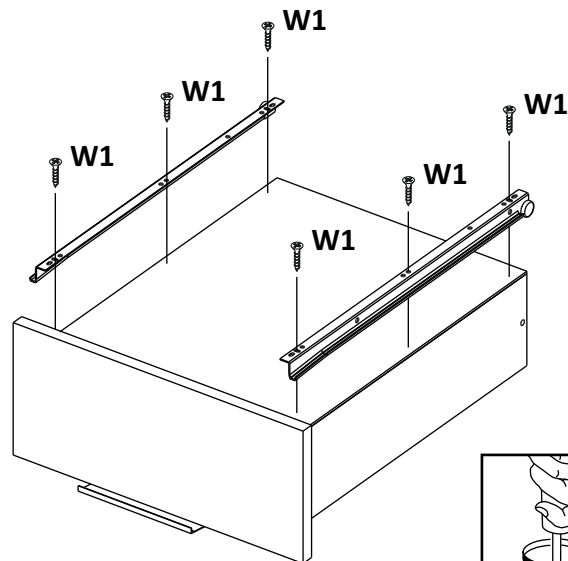
**x1****RK 1****12**Roller Drawer  
Slide  
400 mm**x3****NR 2**Screw  
3,5x16**x6****W1**

# 13

90 Degree Hinge

x4


P9



Screw  
3,5x16

x12



W1



Handle

x2

RK 1

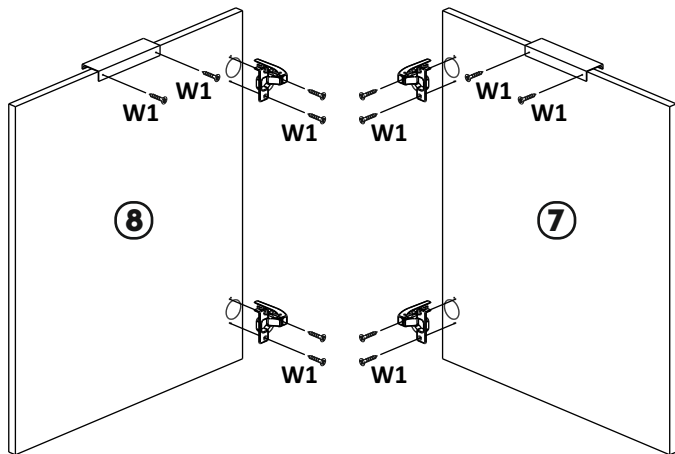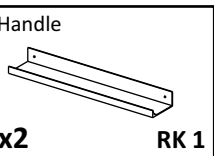

# 14

