


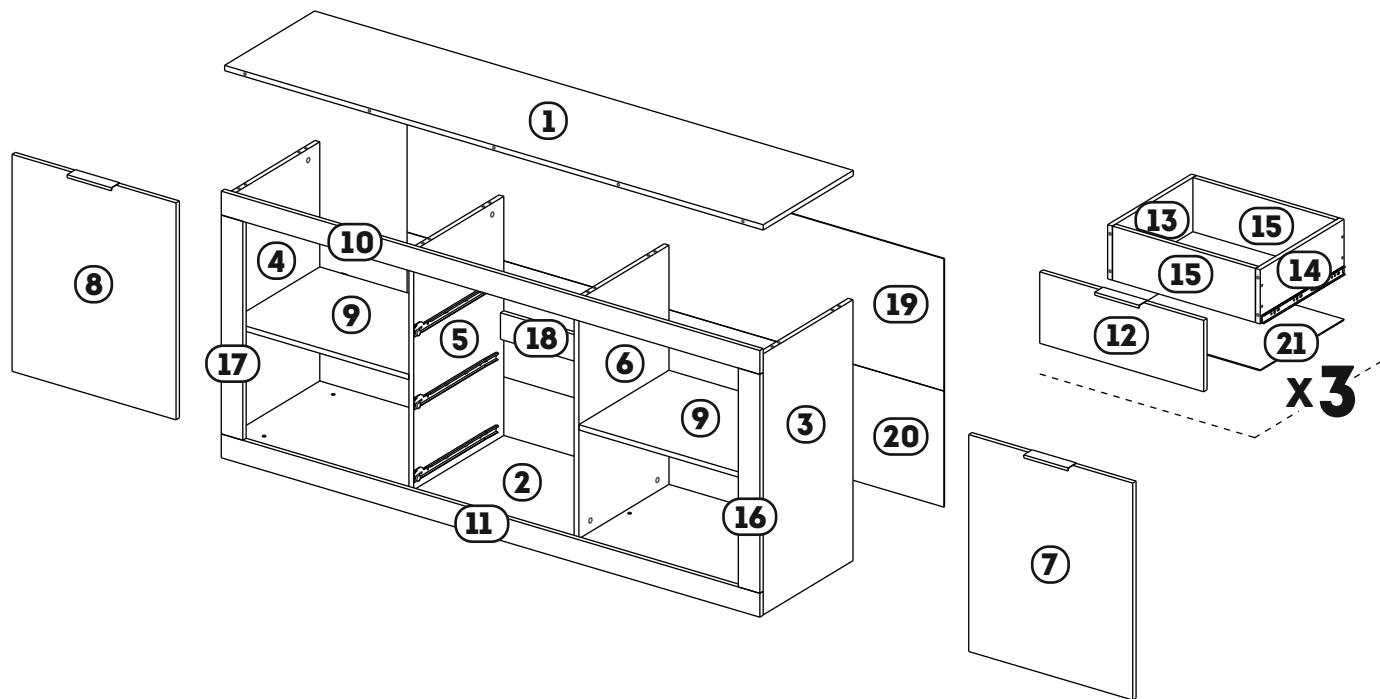
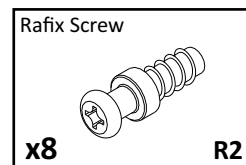
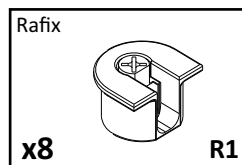
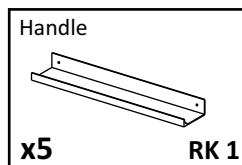
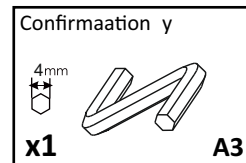
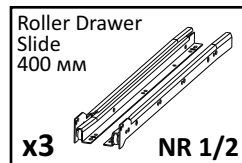
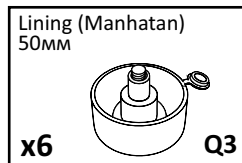
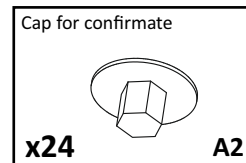
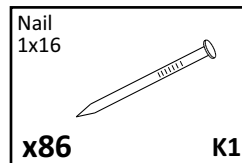
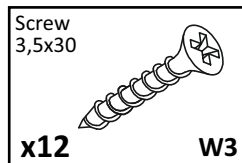
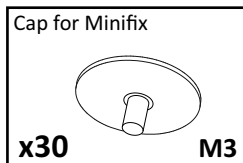
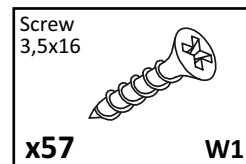
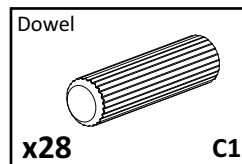
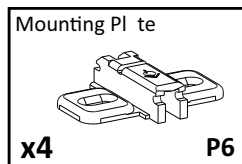
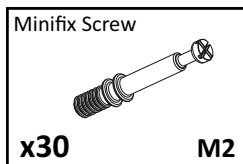
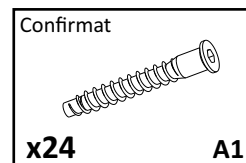


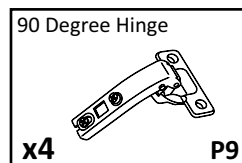


361-000104

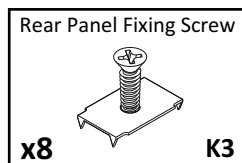


No	a*b	X	Pack
1	2100x430	1	
2	2066x430	1	
3	788x430	1	
4	788x430	1	
5	722x430	1	
6	722x430	1	
7	655x598	1	
8	655x598	1	
9	649x430	2	
10	72x2100	1	
11	72x2100	1	
12	216x748	3	
13	400x164	3	
14	400x164	3	
15	678x164	6	
16	661x72	1	
17	661x72	1	
18	80x736	1	
19	399x2094	1	
20	351x2094	1	
21	710x400	3	

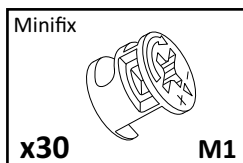

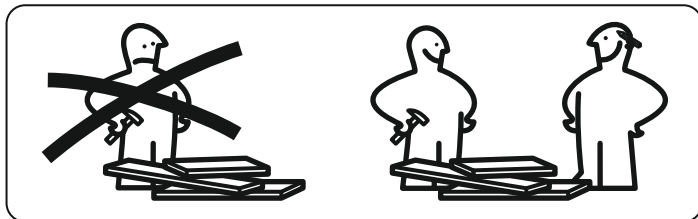


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

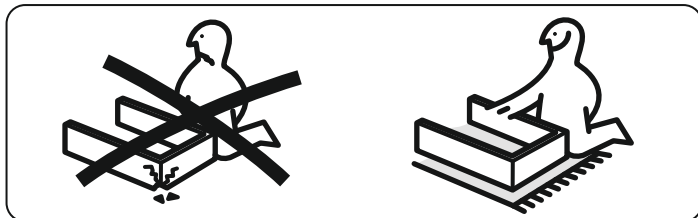

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

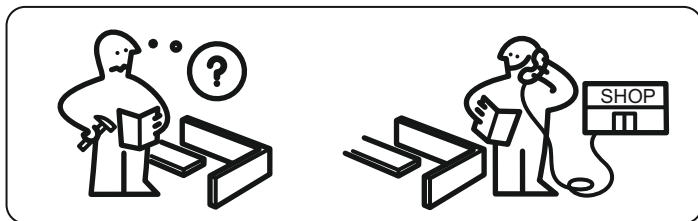

1


Minifix



x12

M1


Roller Drawer
Slide
400 MM



x3

NR 1


Screw
3,5x16



x12

W1


Rafix Screw



x4





R2

Minifix Screw



x4

M2

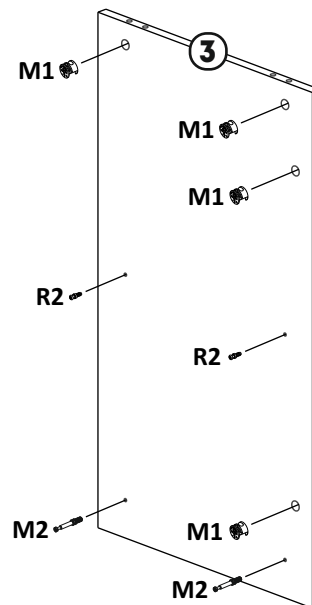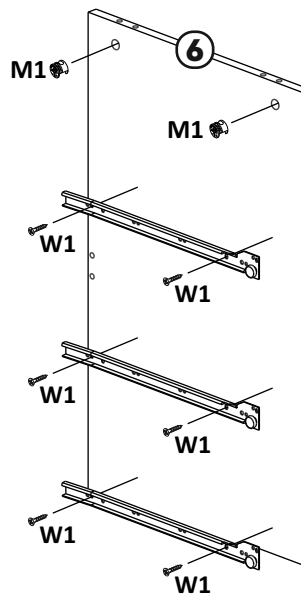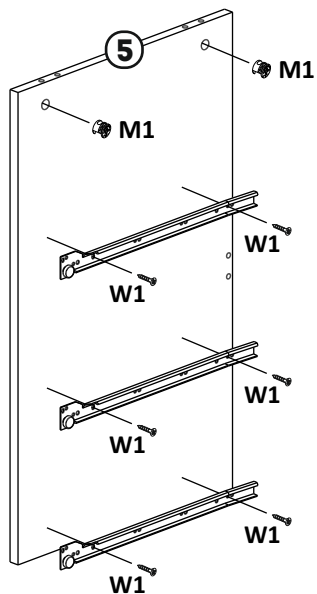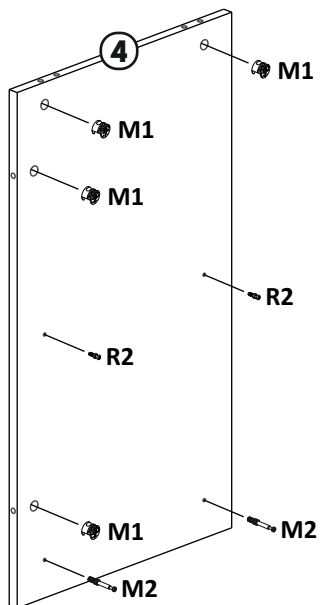

2


Minifix



x14

M1


Dowel



x8

C1


Minifix Screw



x8



M2

Lining (Manhatan)
50MM




x6

Q3

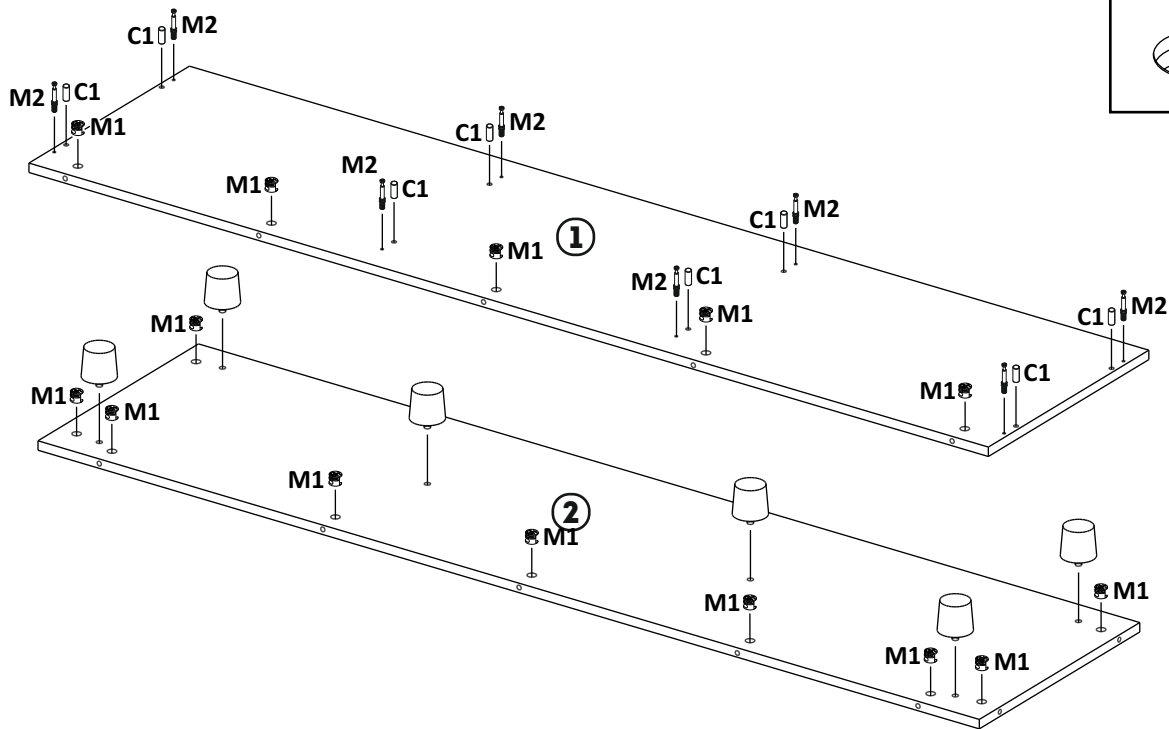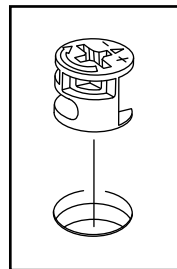



3

Dowel





x4

C1

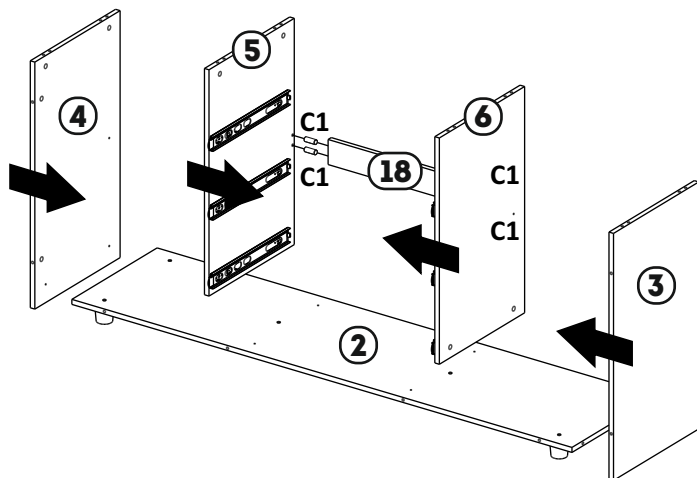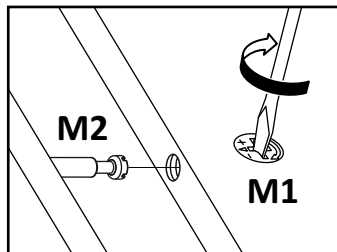


4

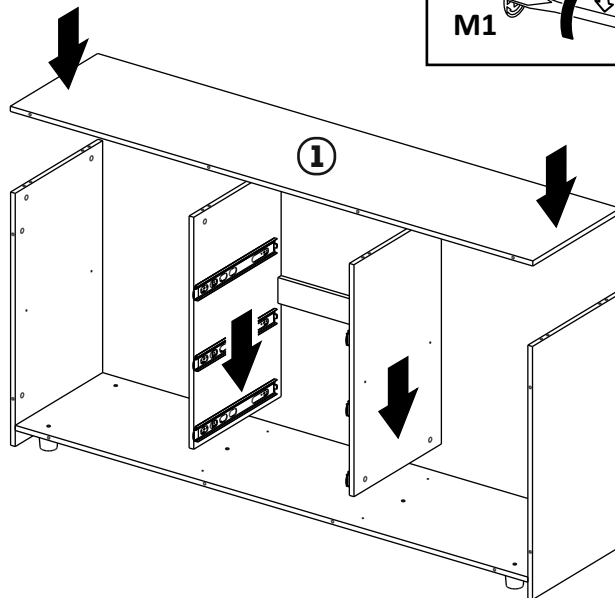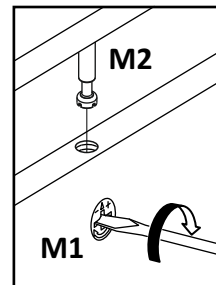






5

Rear Panel Fixing Screw




x6

K3

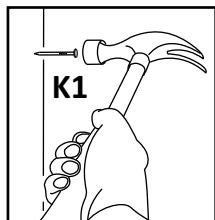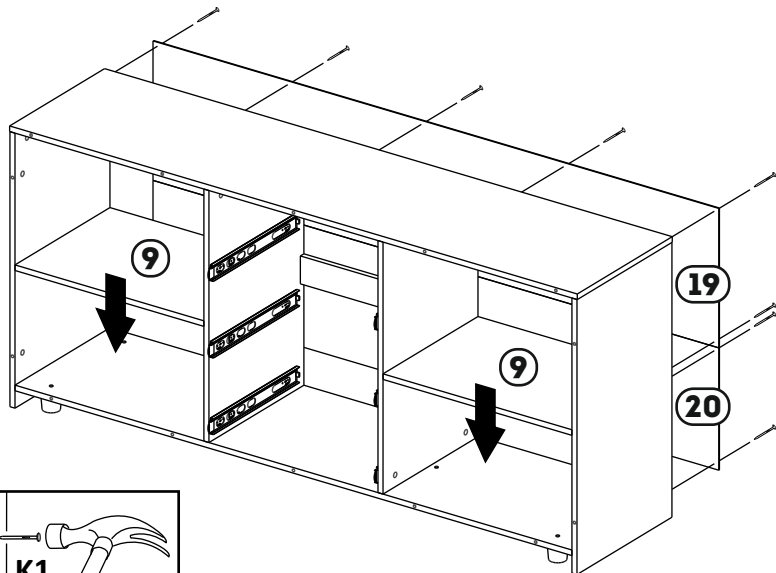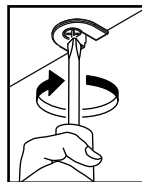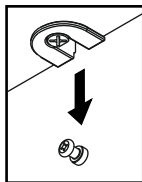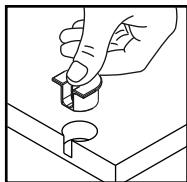

6


Minifix Screw



x12



M2

Mounting Plate




x4

P6

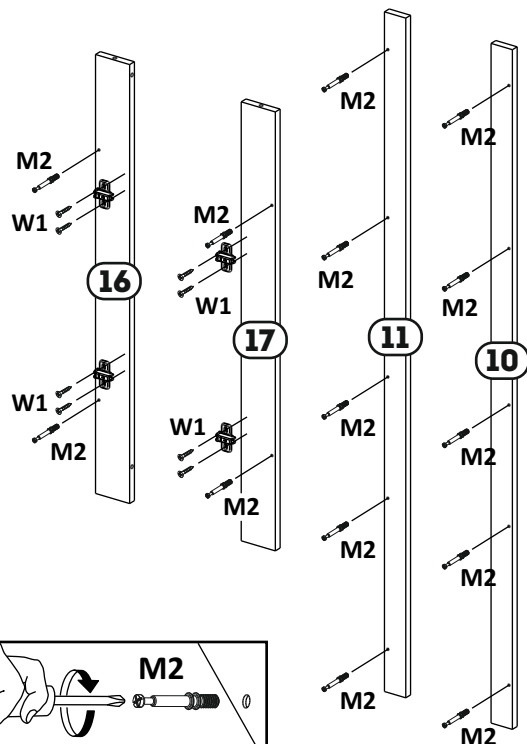


7

Dowel





x4

C1

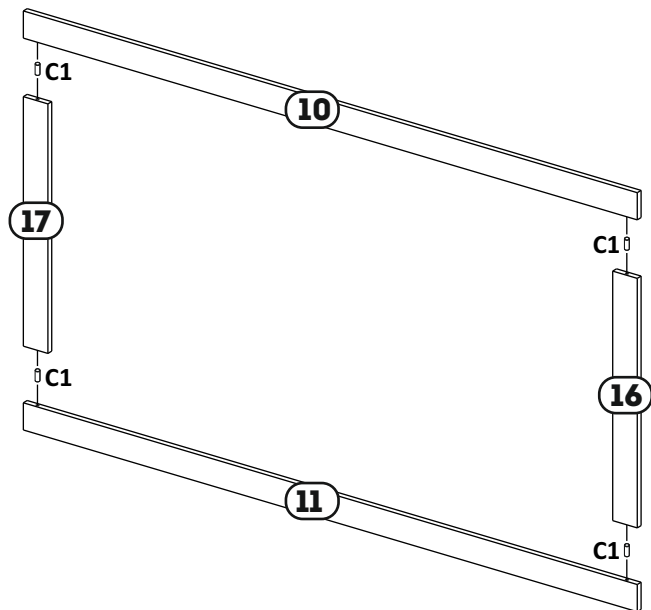


8

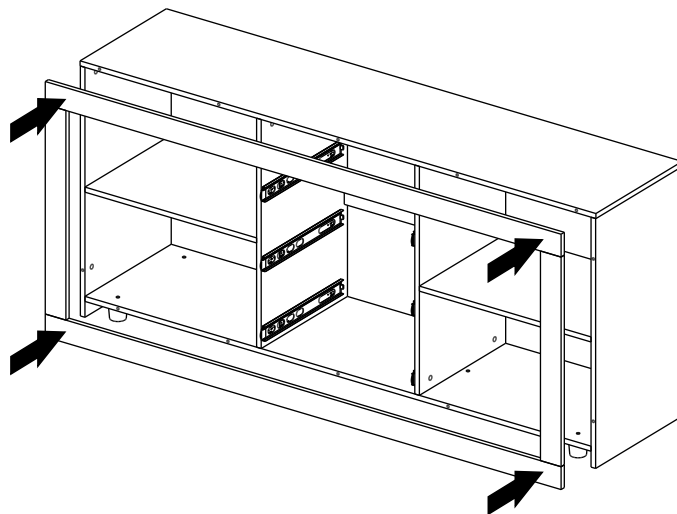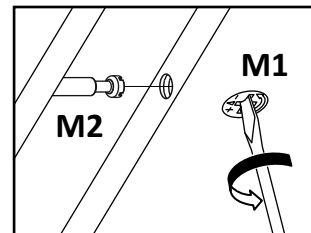

9

Confirmat



x8




A1

Cap for confirmate




x8

A2

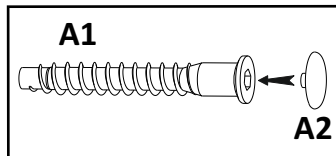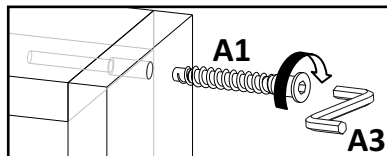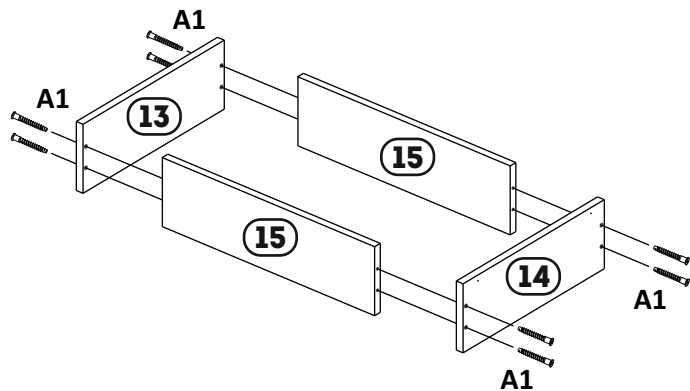



10

Nail
1x16




x14

K1

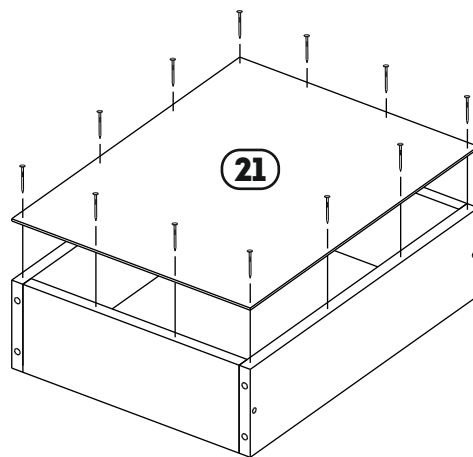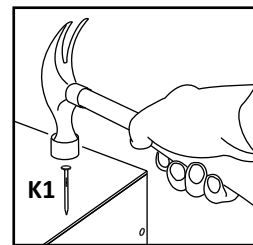

11


Screw
3,5x30



x4

W3

Dowel



x4


C1

Handle




x1

RK 1

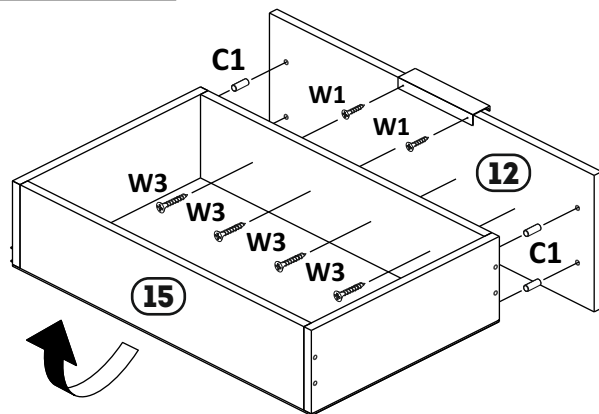

12


Roller Drawer
Slide
400 MM



x3



NR 2

Screw
3,5x16



x6

W1

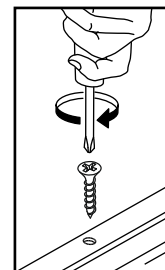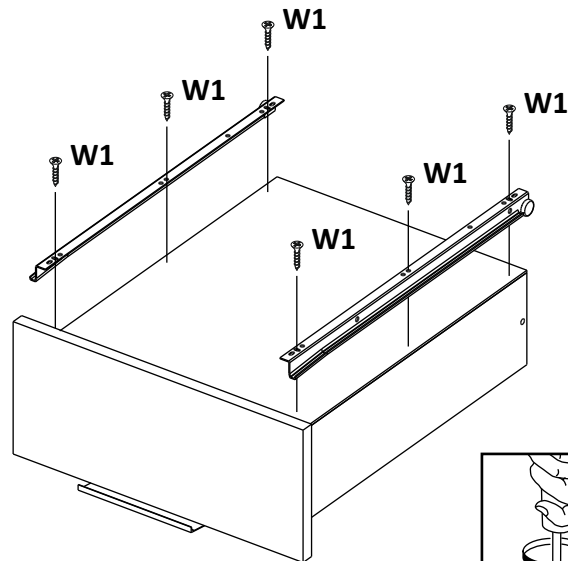


13

90 Degree Hinge

x4


P9



Screw
3,5x16

x12



W1



Handle

x2

RK 1

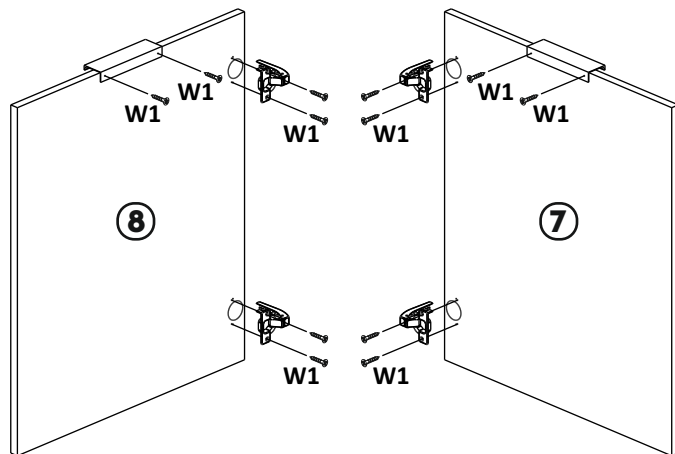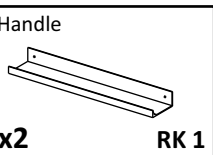

14

