



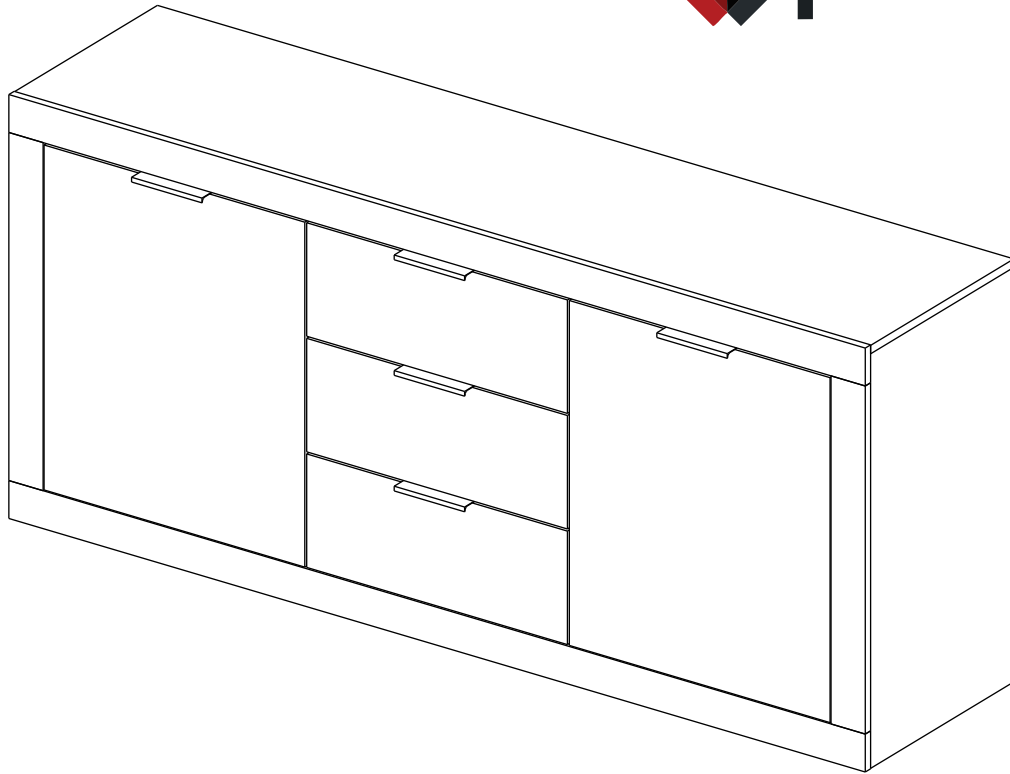

361-000105

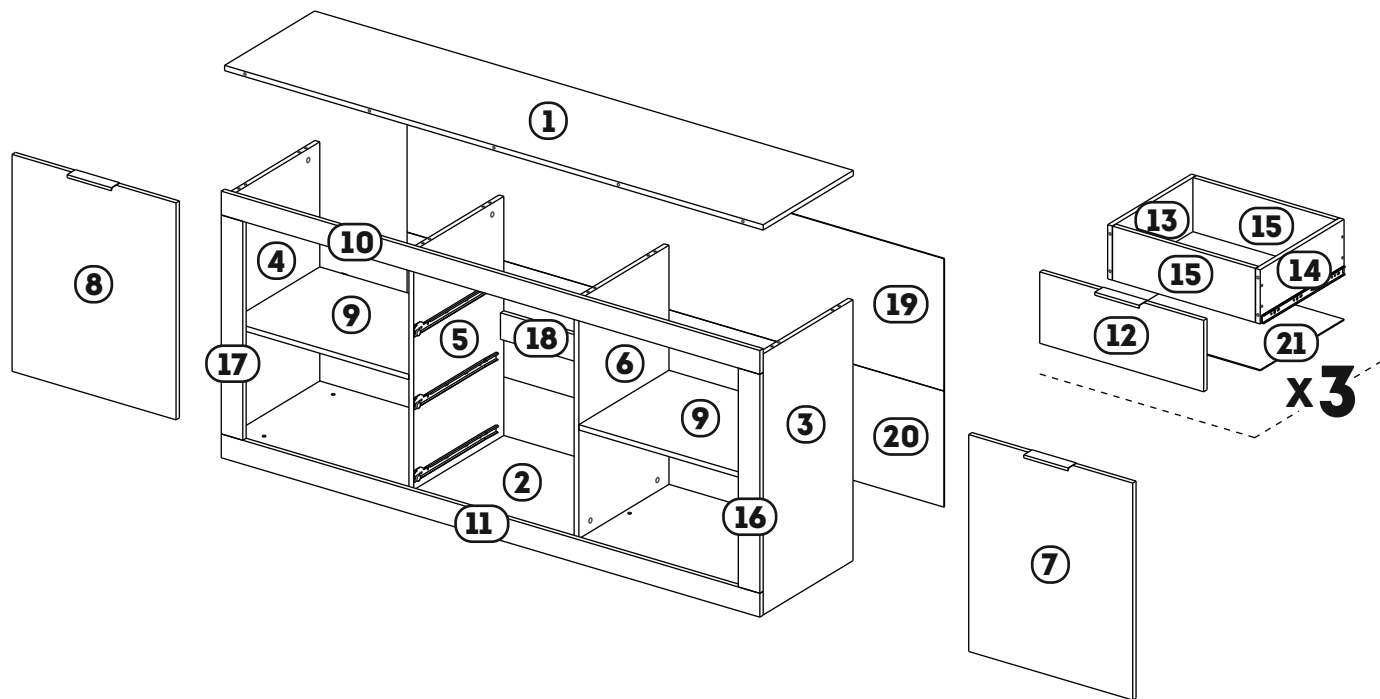

No	a*b	X	Pack
1	2100x430	1	
2	2066x430	1	
3	788x430	1	
4	788x430	1	
5	722x430	1	
6	722x430	1	
7	655x598	1	
8	655x598	1	
9	649x430	2	
10	72x2100	1	
11	72x2100	1	
12	216x748	3	
13	400x164	3	
14	400x164	3	
15	678x164	6	
16	661x72	1	
17	661x72	1	
18	80x736	1	
19	399x2094	1	
20	351x2094	1	
21	710x400	3	


Minifix



x30

M1


Rear Panel Fixing Screw



x8

K3


90 Degree Hinge



x4

P9


Confirmat



x24

A1


Minifix Screw



x30

M2


Mounting Plate



x4

P6


Dowel



x28

C1

Screw 3,5x16



x57

W1


Cap for Minifix



x30

M3


Screw 3,5x30



x12

W3

Nail 1x16



x86

K1


Cap for confirmat



x24

A2


Lining (Manhatan) 50MM



x6

Q3

Roller Drawer Slide 400 MM

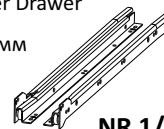

x3

NR 1/2

Confirmation y



x1

A3


Handle



x5

RK 1


Rafix



x8


R1

Rafix Screw




x8

R2

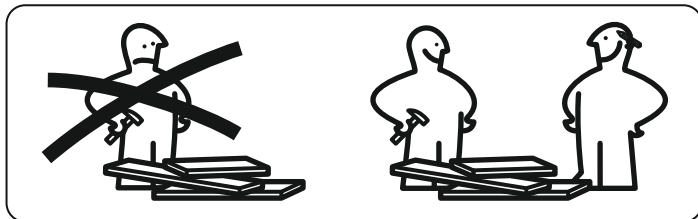


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

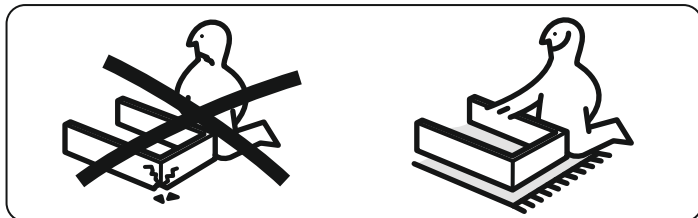

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

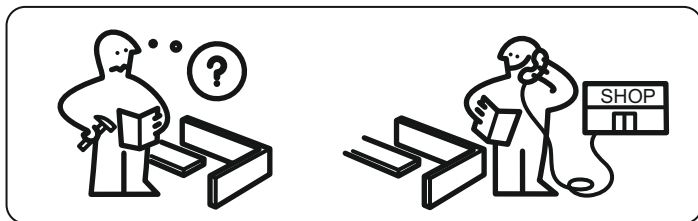

1


Minifix



x12

M1


Roller Drawer
Slide
400 MM



x3

NR 1


Screw
3,5x16



x12

W1


Rafix Screw



x4





R2

Minifix Screw




x4

M2

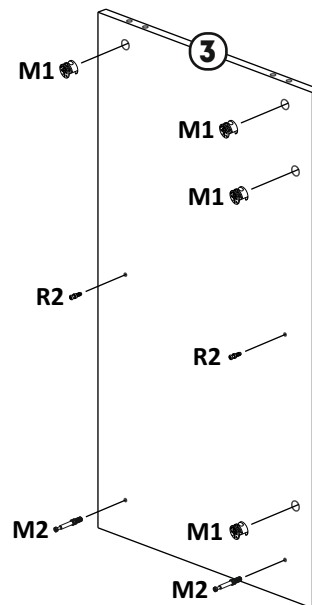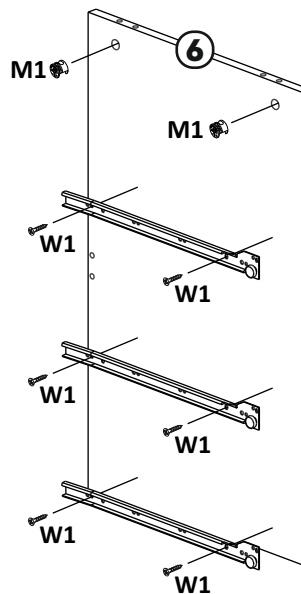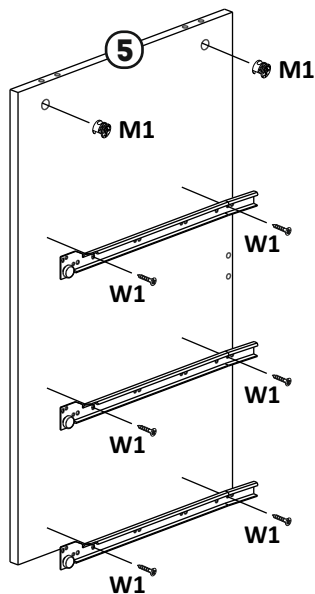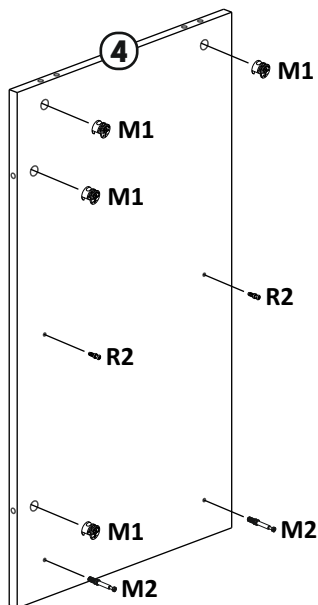

2


Minifix



x14

M1


Dowel



x8

C1


Minifix Screw



x8



M2

Lining (Manhatan)
50MM




x6

Q3

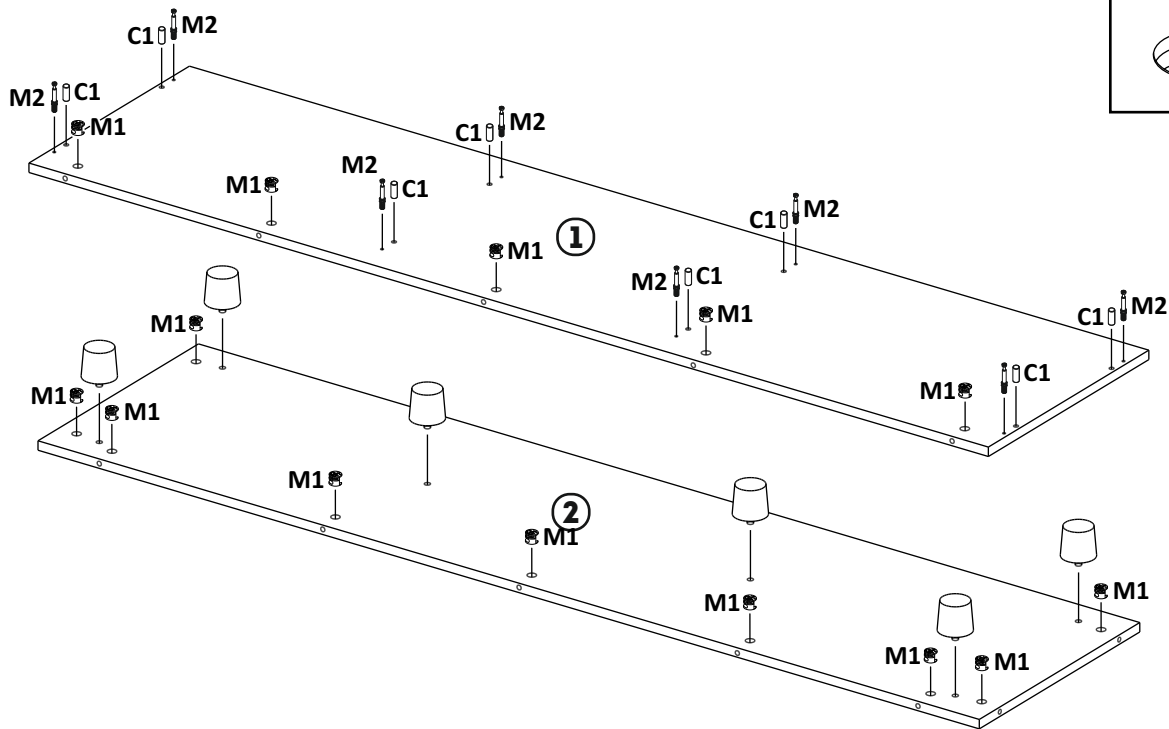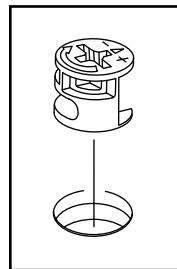



3

Dowel





x4

C1

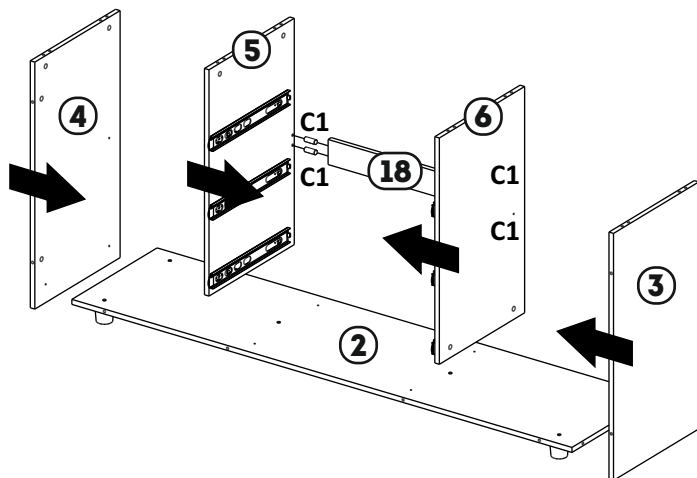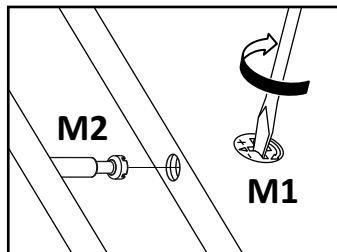


4

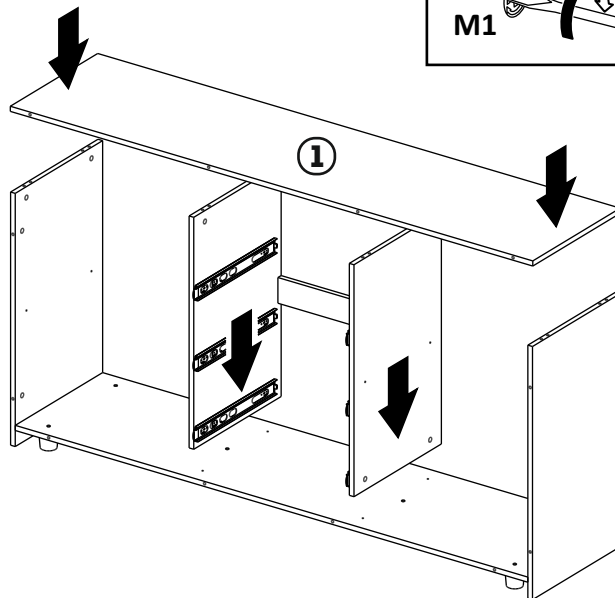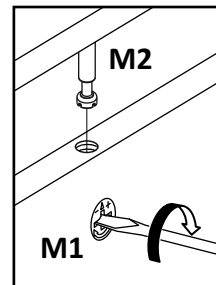






5

Rear Panel Fixing Screw




x6

K3

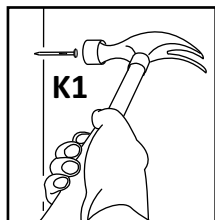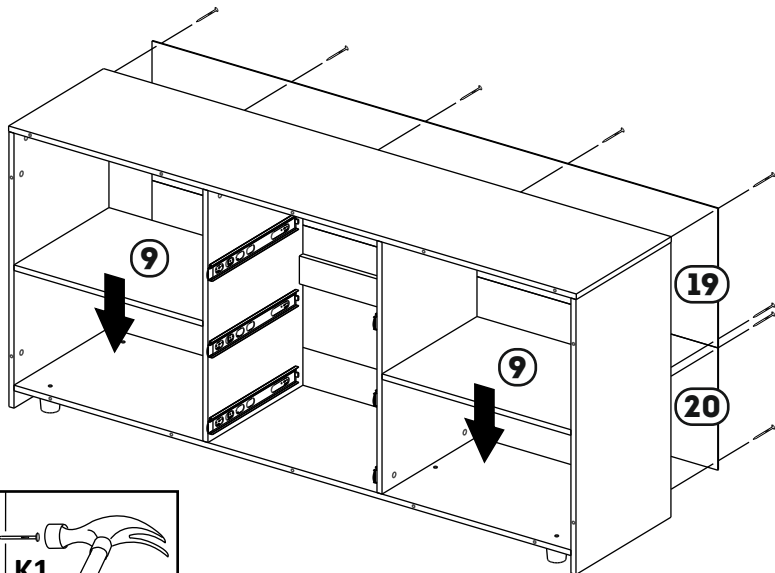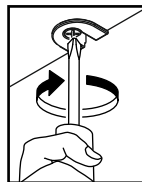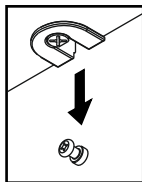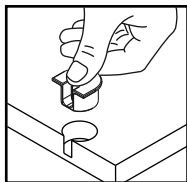

6


Minifix Screw



x12



M2

Mounting Plate




x4

P6

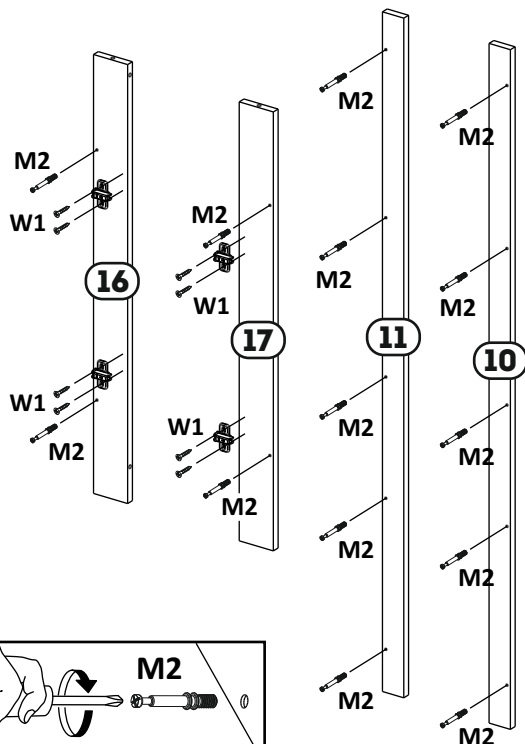


7

Dowel





x4

C1

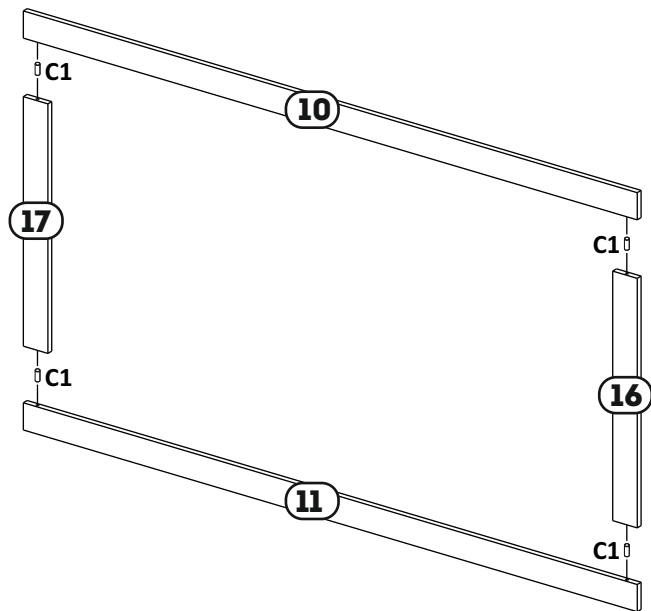


8

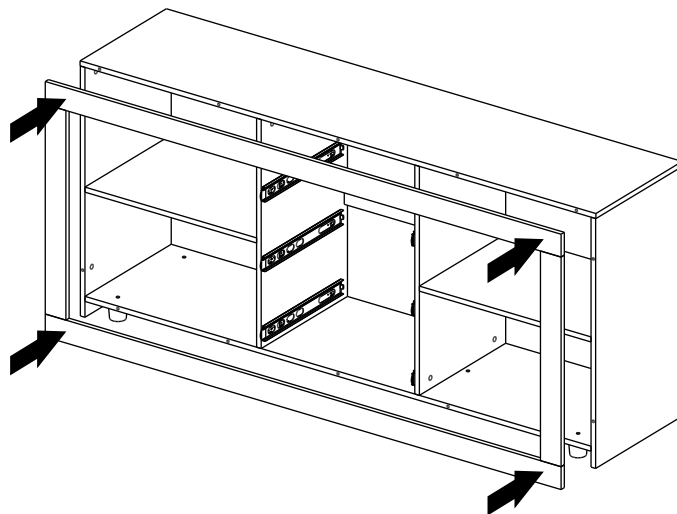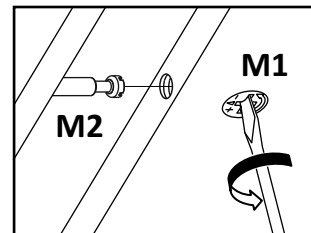

9

Confirmat



x8




A1

Cap for confirmate




x8

A2

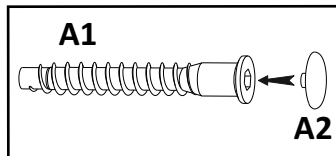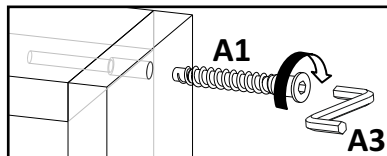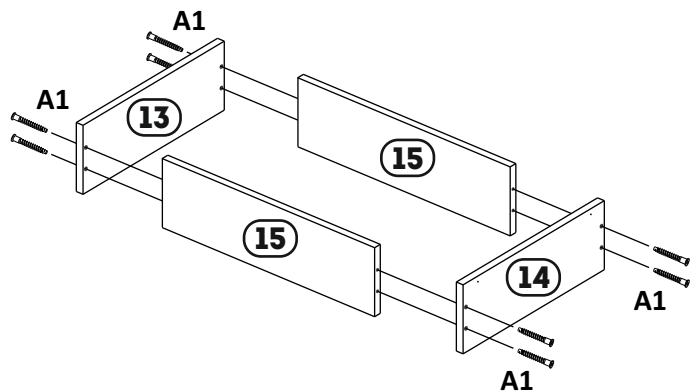



10


Nail
1x16




x14

K1




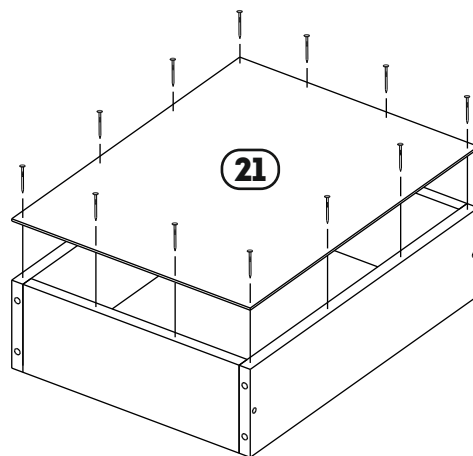
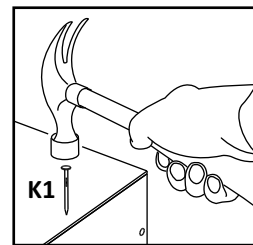


11Screw
3,5x30**x4****W3**

Dowel

**x4****C1**

Handle

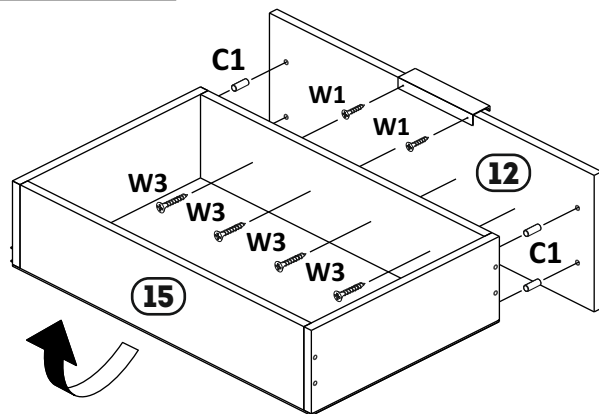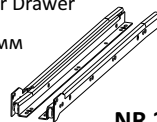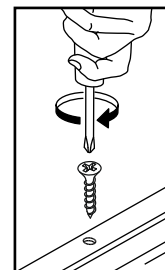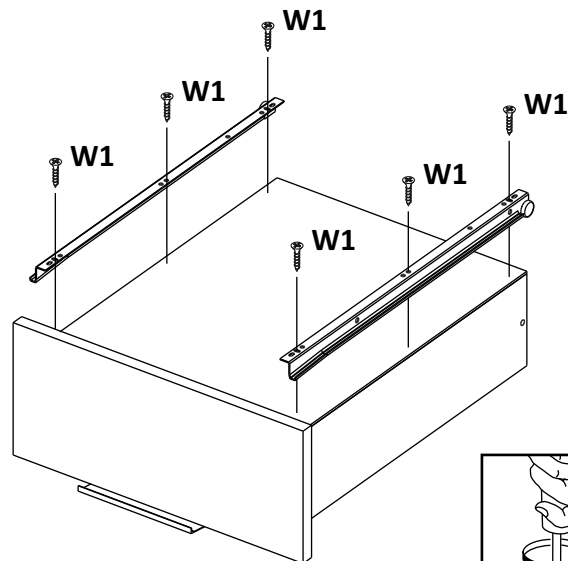
**x1****RK 1****12**Roller Drawer
Slide
400 mm**x3****NR 2**Screw
3,5x16**x6****W1**

13

90 Degree Hinge

x4


P9



Screw
3,5x16

x12


W1



Handle

x2

RK 1

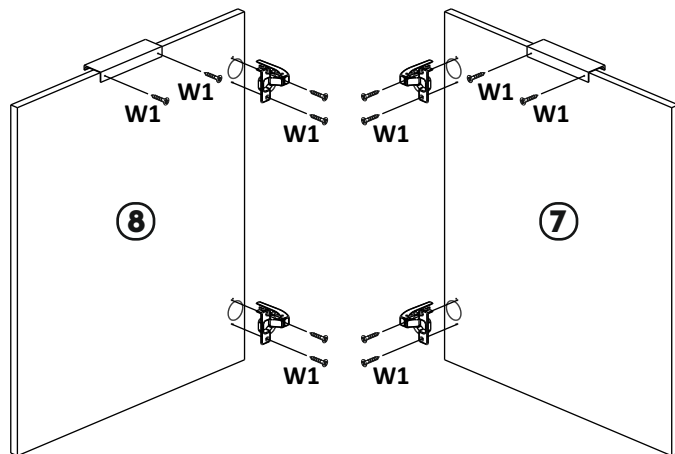

14

