




361-000108

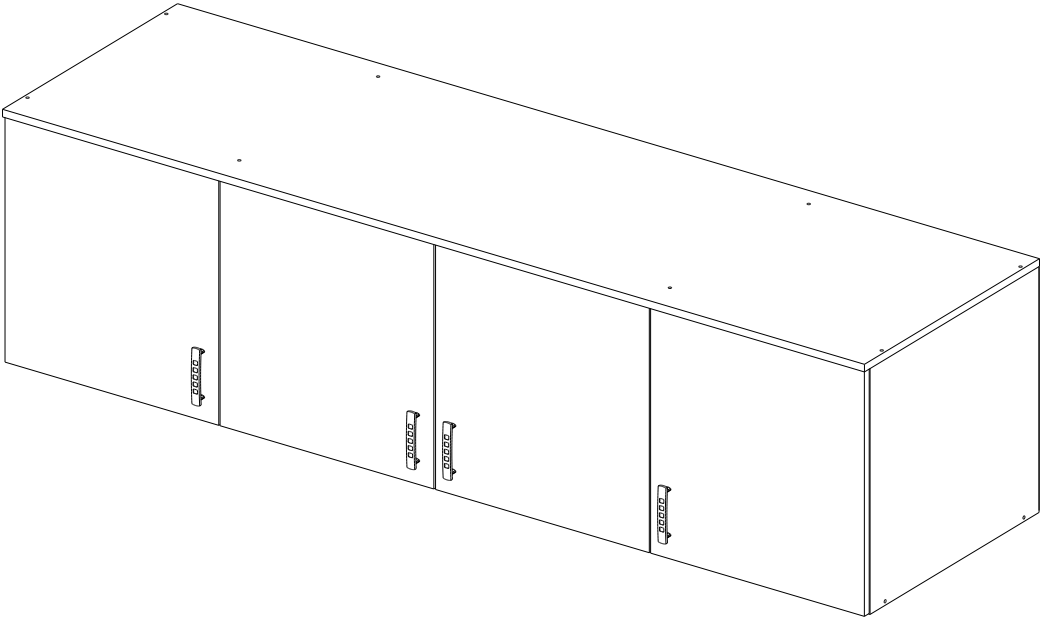

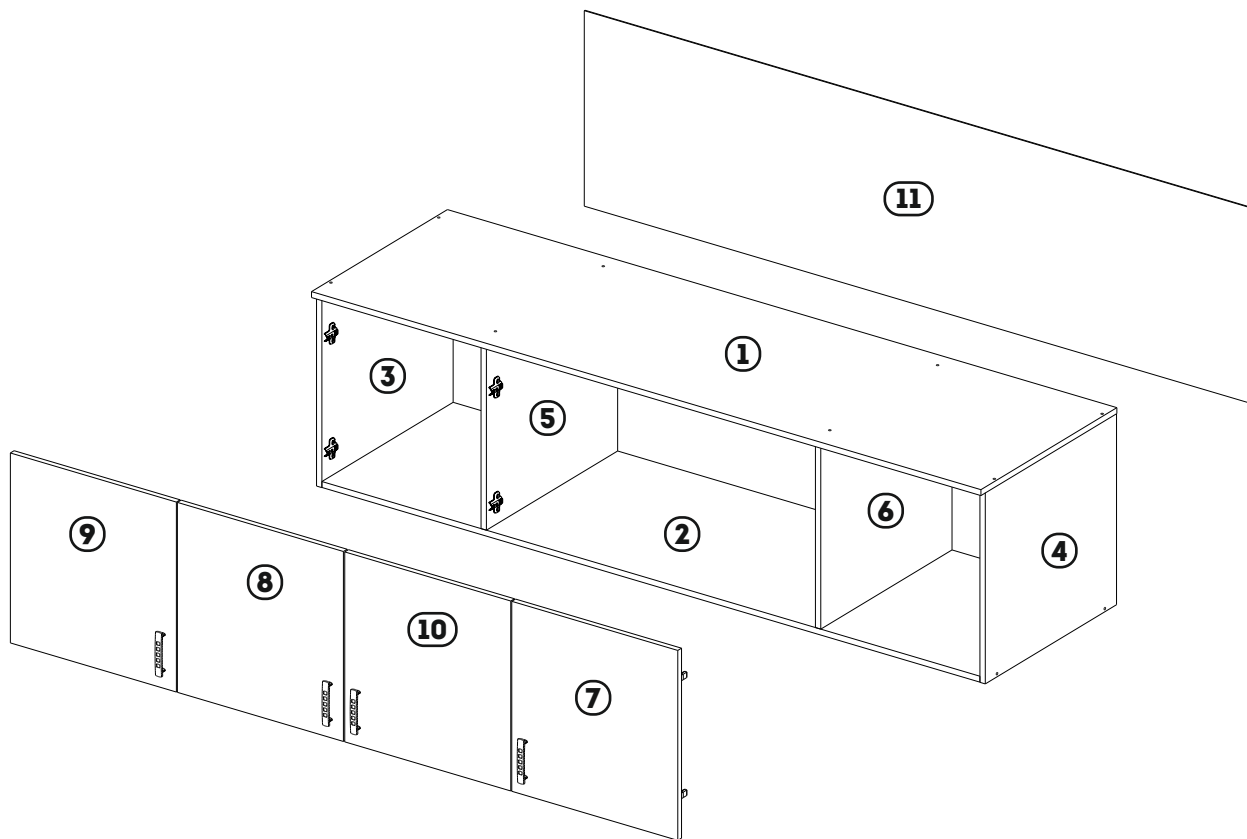

| Nº | a*b      | X | Pack |
|----|----------|---|------|
| 1  | 2000x580 | 1 | 1    |
| 2  | 1966x560 | 1 | 1    |
| 3  | 517x560  | 1 | 1    |
| 4  | 517x560  | 1 | 1    |
| 5  | 500x560  | 1 | 1    |
| 6  | 500x560  | 1 | 1    |
| 7  | 513x496  | 1 | 2    |
| 8  | 513x496  | 1 | 2    |
| 9  | 513x496  | 1 | 2    |
| 10 | 513x496  | 1 | 2    |
| 11 | 528x1994 | 1 | 1    |

Mounting Plate



**x8**

**P6**


Full Overlay Hinge



**x4**

**P5**


Half Overlay Hinge



**x4**

**P7**

Confirmat



**x16**

**A1**

Cap for confirmate



**x16**

**A2**


Confirmation Key



**x1**

**A3**


Nail  
1x16



**x40**

**K1**


Screw  
3,5x16



**x32**

**W1**


Screw  
3,5x30



**x14**


**W3**




Plastic Handle  
96 mm



**x4**

**RP 1**

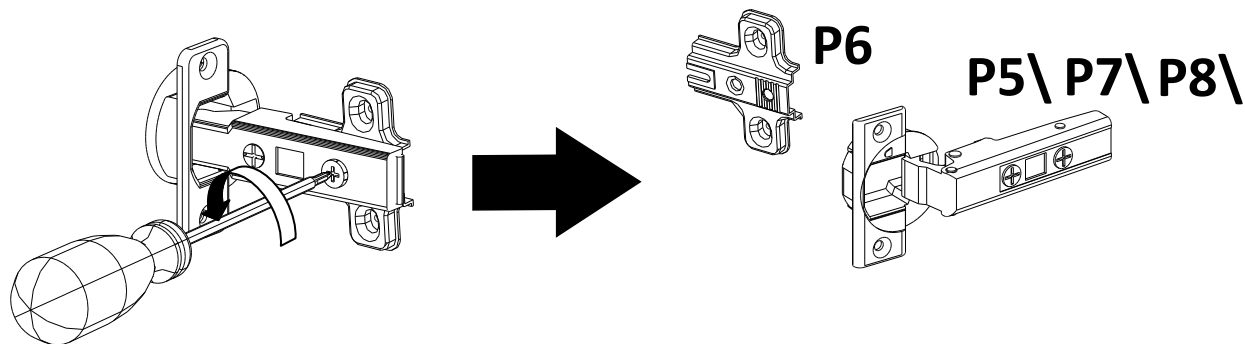

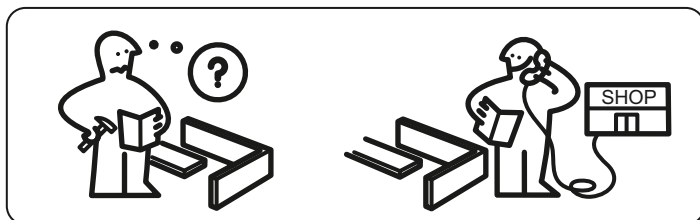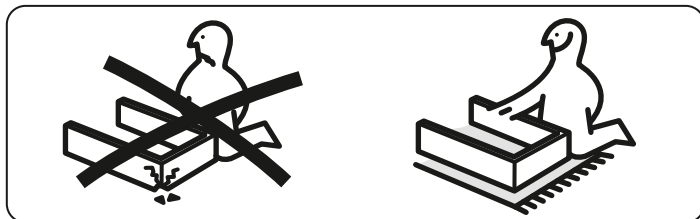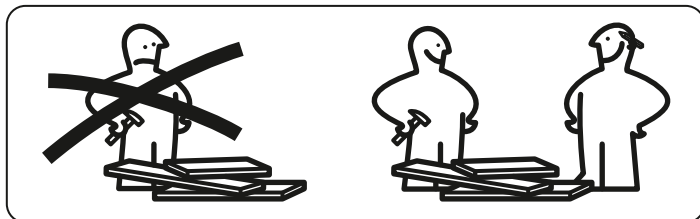

## GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.


## CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

# 1

Mounting Plate


x8








P6

Screw  
3,5x16

x16




W1

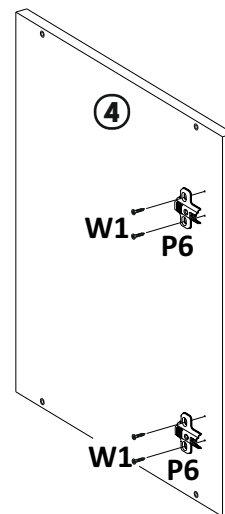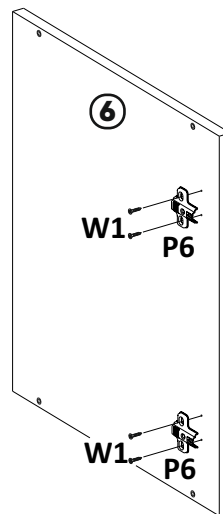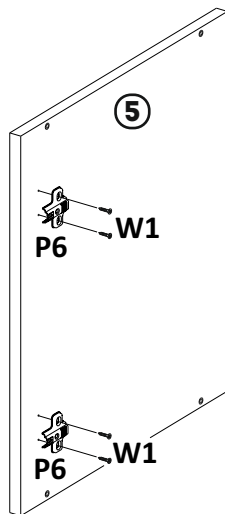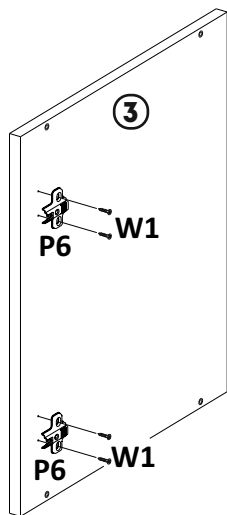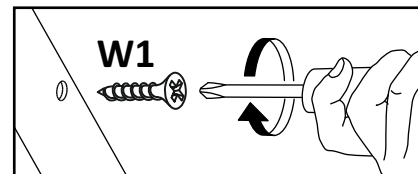



**2**

Confirmat




x4

A1

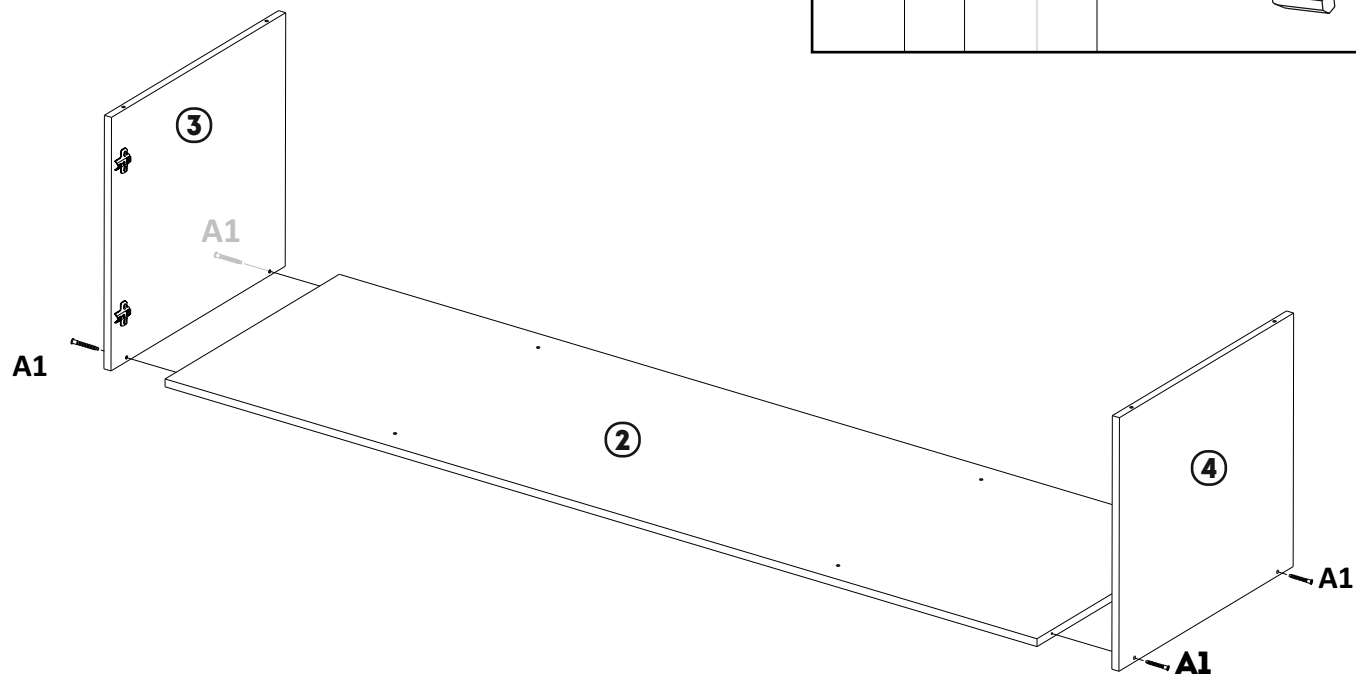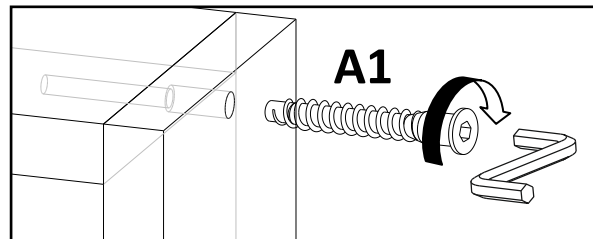



# 3

Confirmat




x12

A1

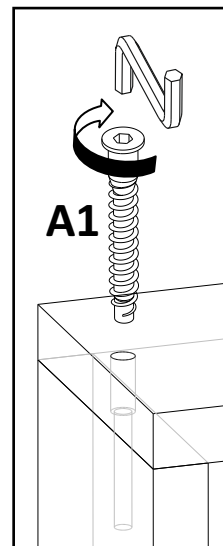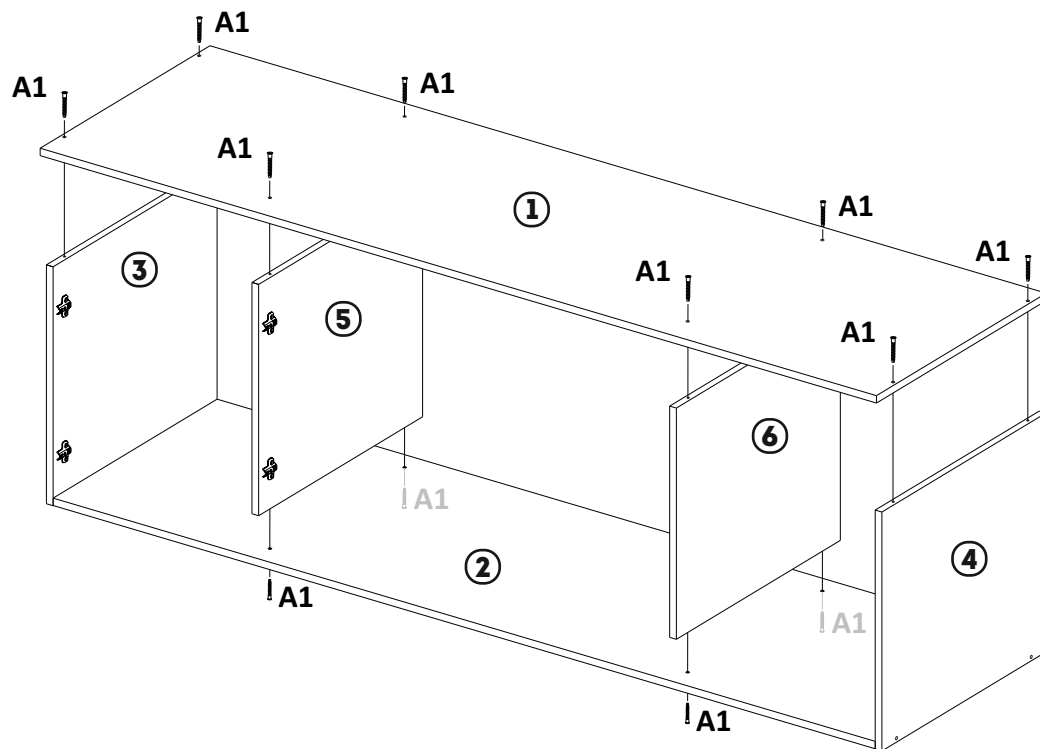


**4**

Nail  
1x16




**x40**

**K1**

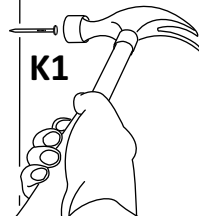


**K1**

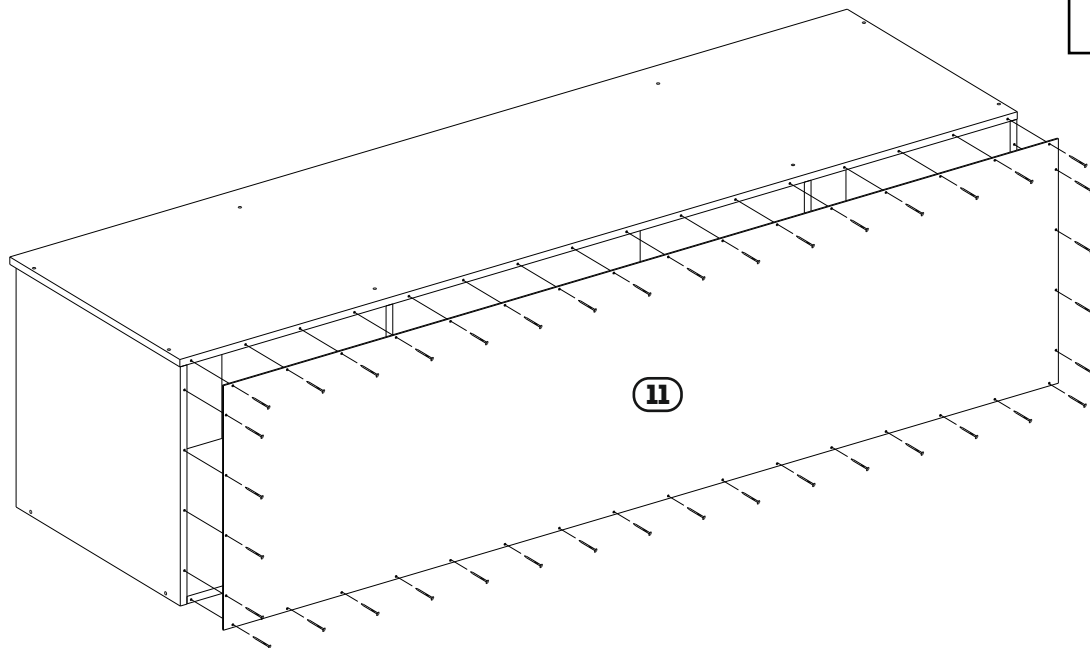

# 5


Full Overlay Hinge



x4

P5


Half Overlay Hinge



x4

P7


Screw  
3,5x16



x16

W1


Screw  
3,5x30



x8




W3

Plastic Handle  
96 mm







x4

RP 1

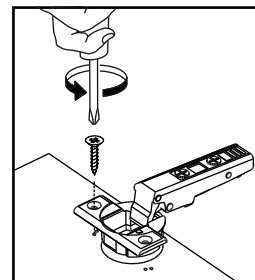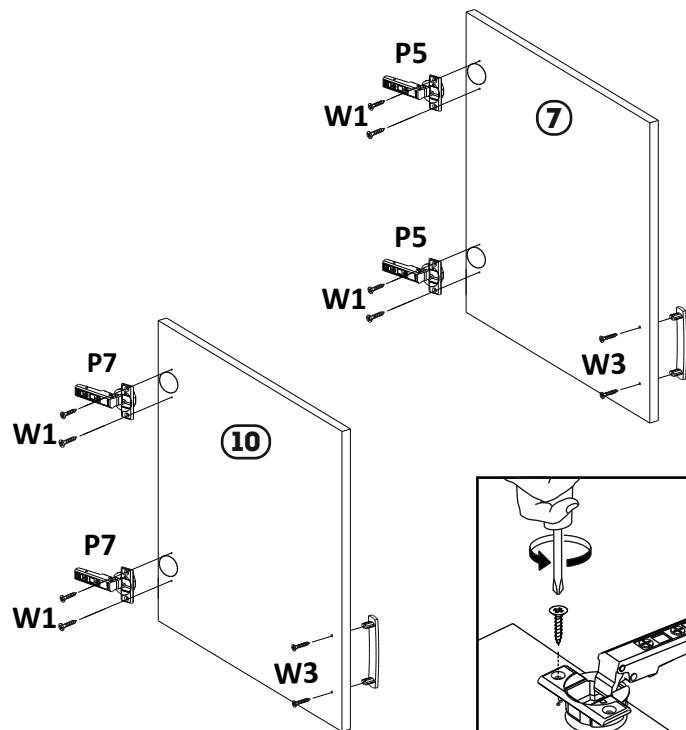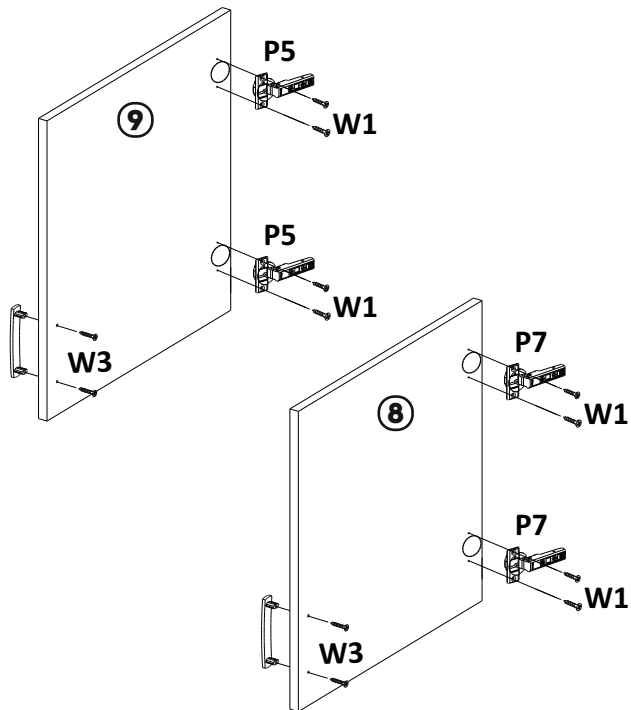


6

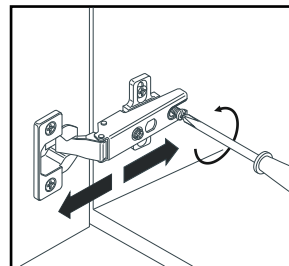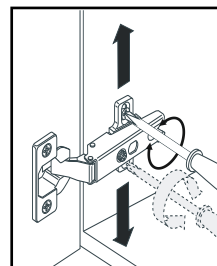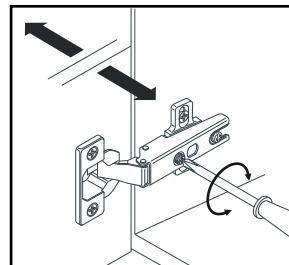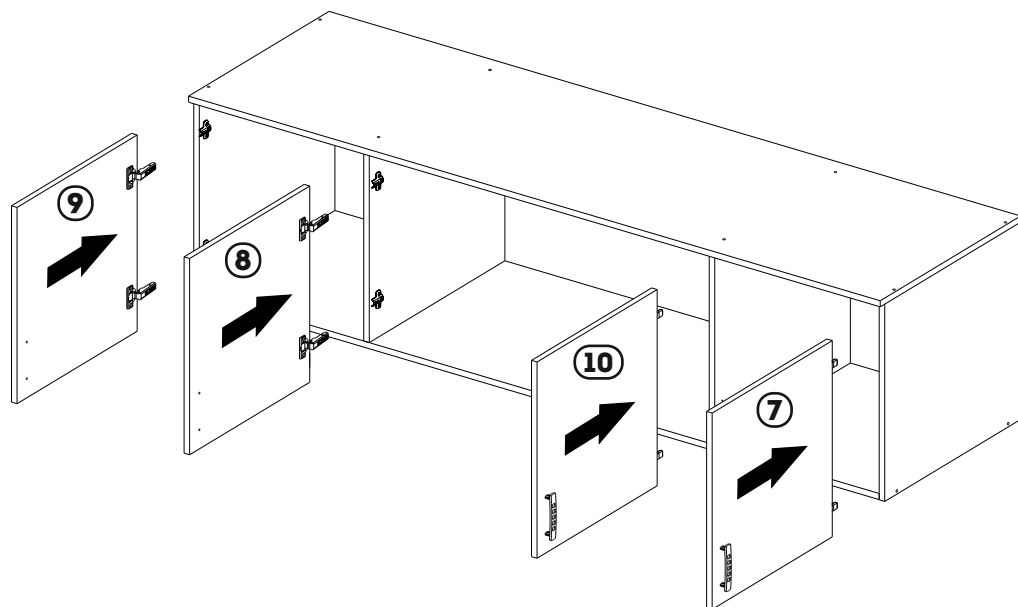



Screw  
3,5x30



x6

W3

