


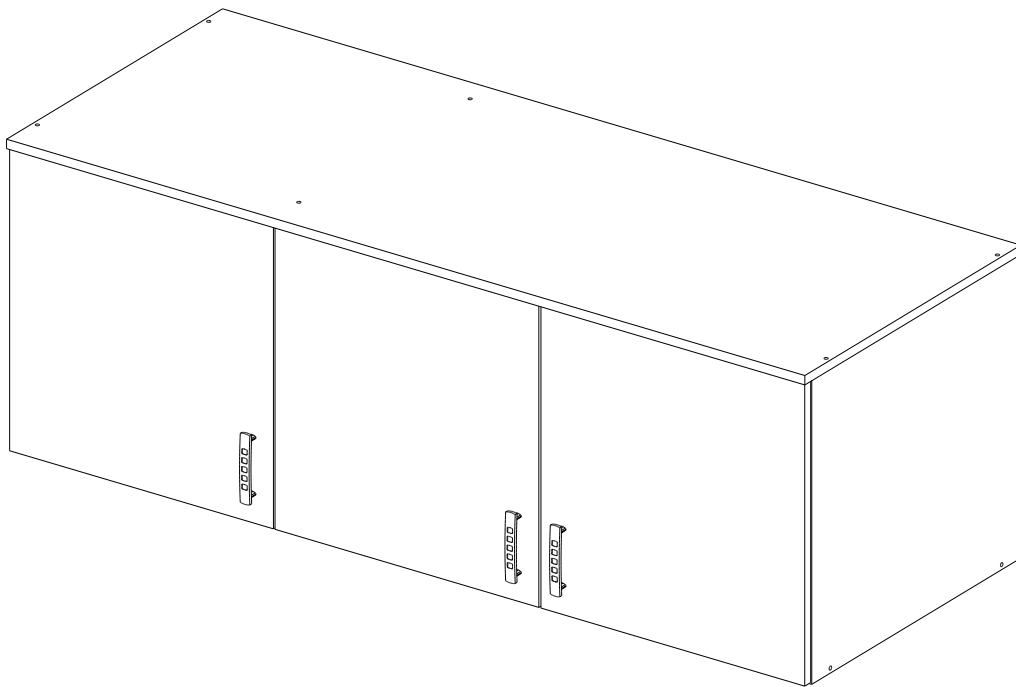
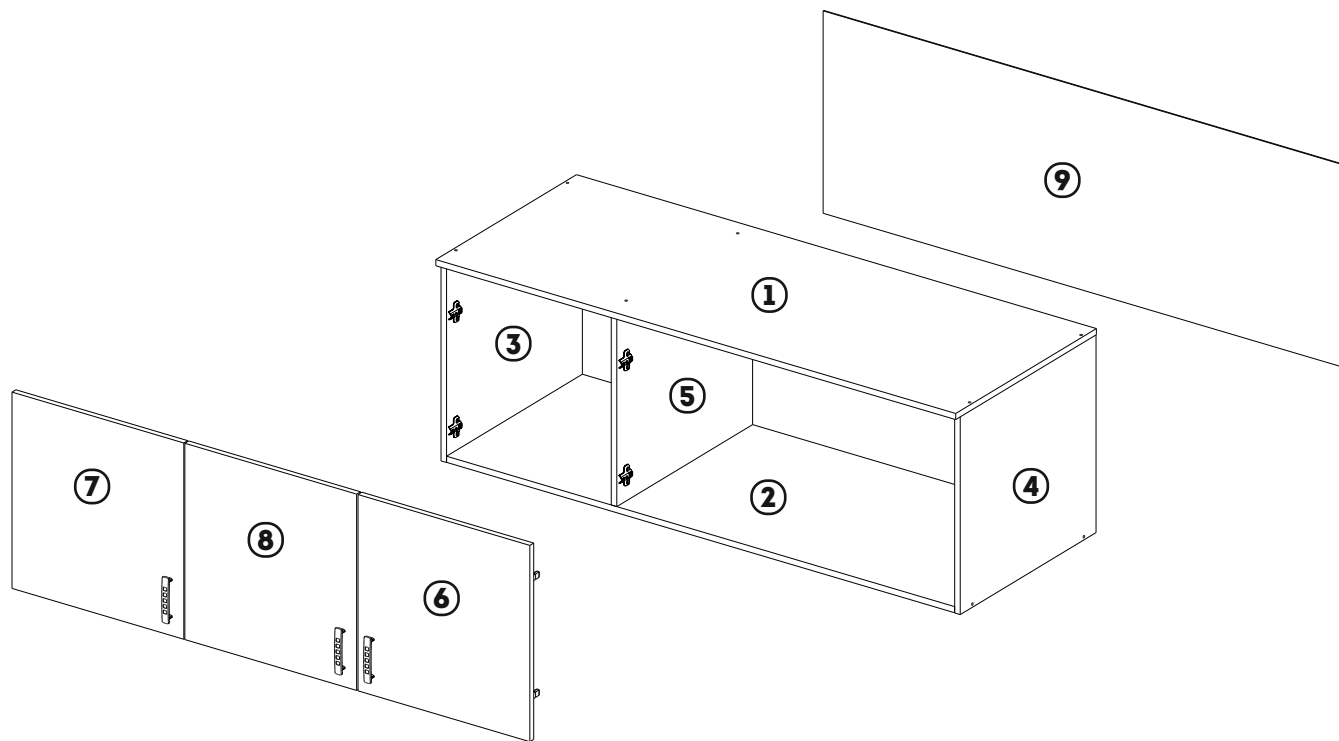
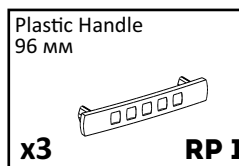
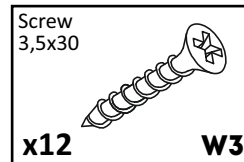
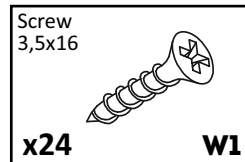
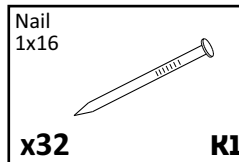
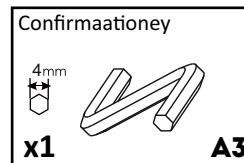
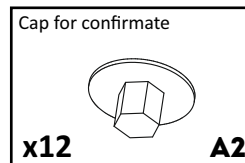
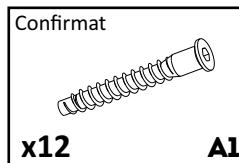



361-000115



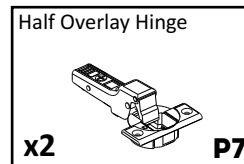


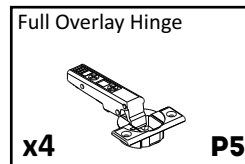

№	a*b	X	Pack
1	1501x580	1	1
2	1467x560	1	1
3	517x560	1	1
4	517x560	1	1
5	500x560	1	1
6	512x496	1	2
7	512x496	1	2
8	512x496	1	2
9	528x1495	1	1

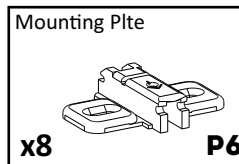

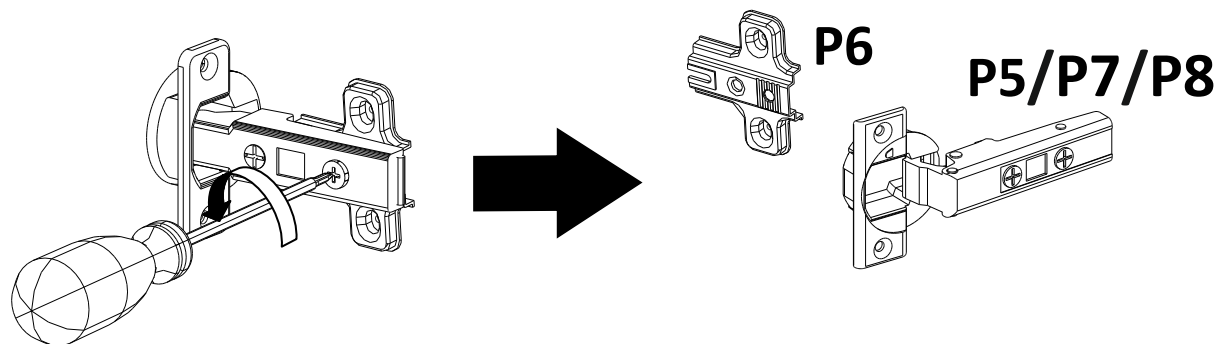

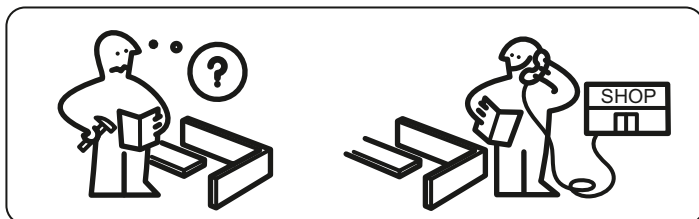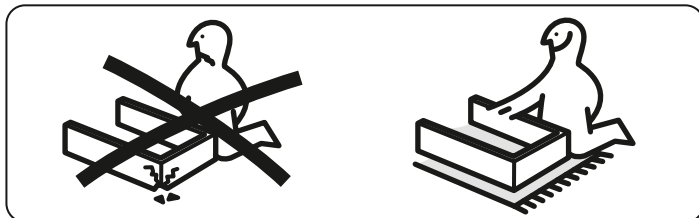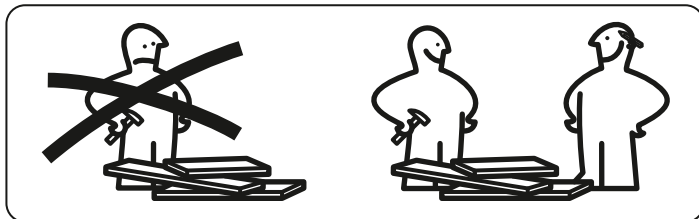

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.


CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

Mounting Plte


x6







P6

Screw
3,5x16

x12




W1

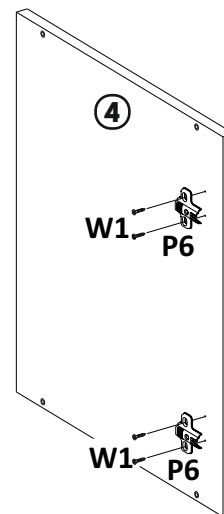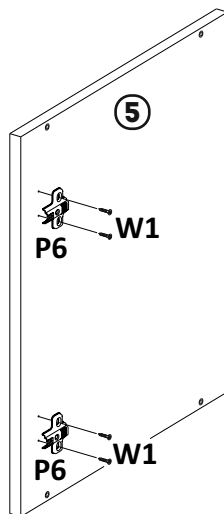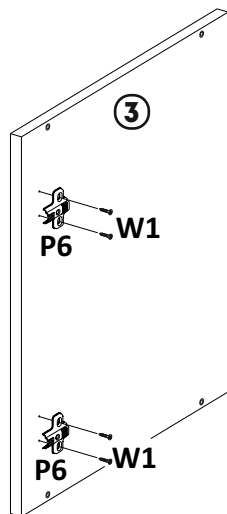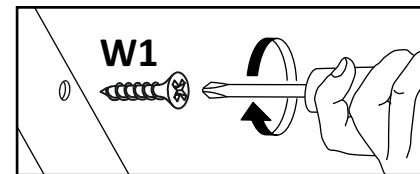



2

Confirmat




x4

A1

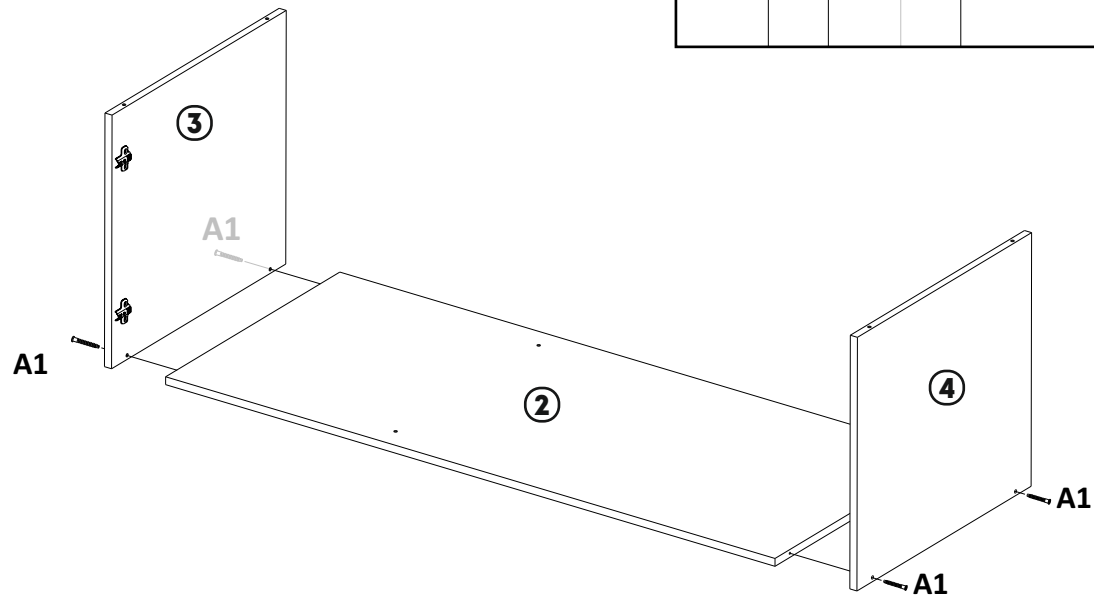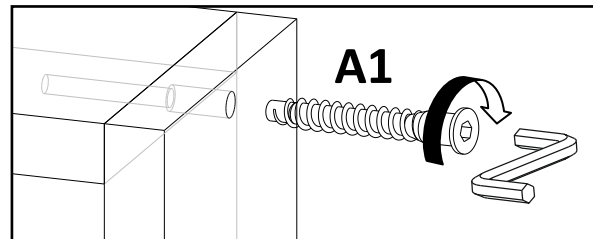



3

Confirmat




x8

A1

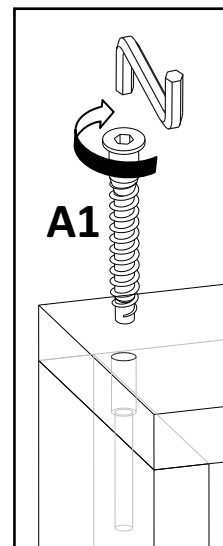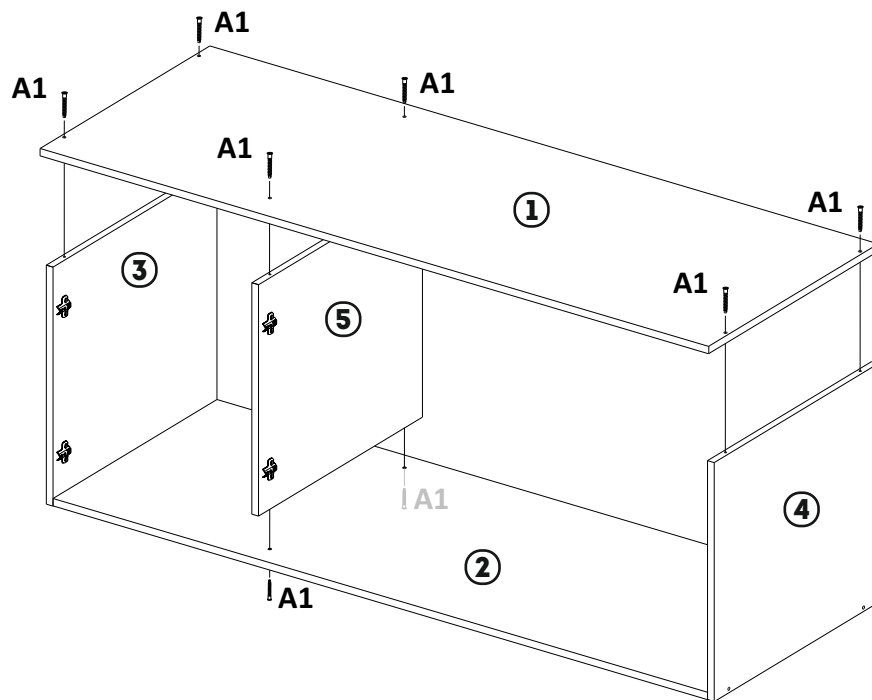


4

Nail
1x16




x32

K1

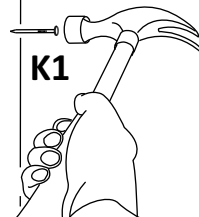


K1

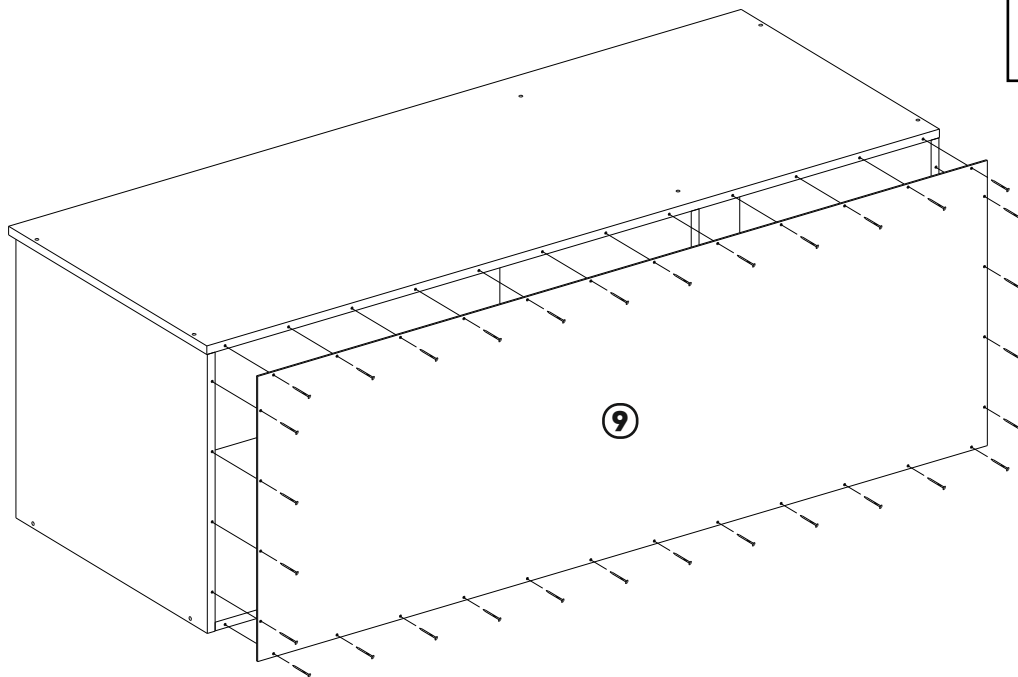


5


Full Overlay Hinge




Half Overlay Hinge






Screw
3,5x16







Screw
3,5x30



Plastic Handle
96 mm

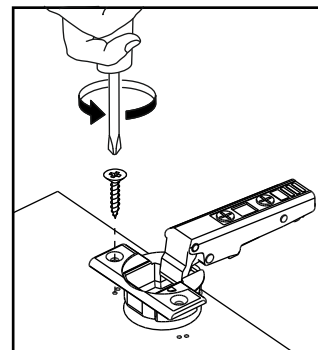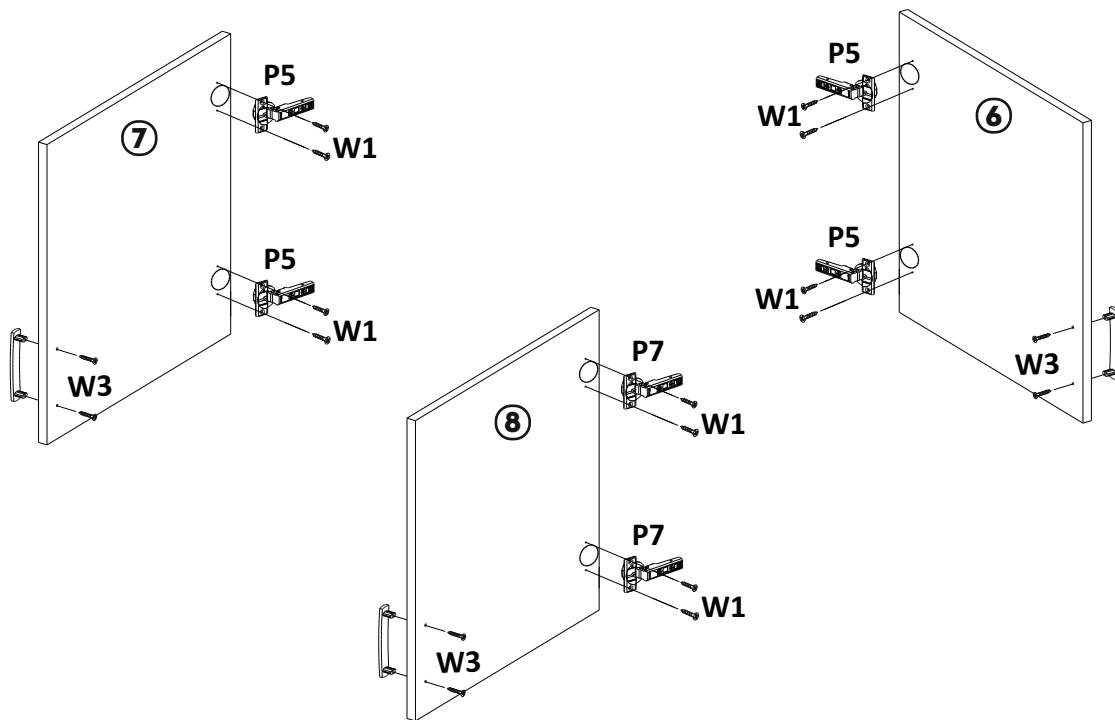


6

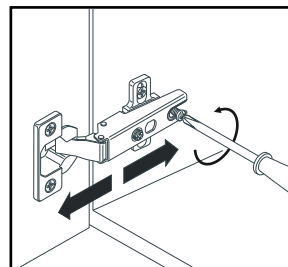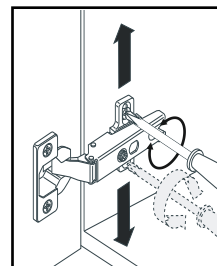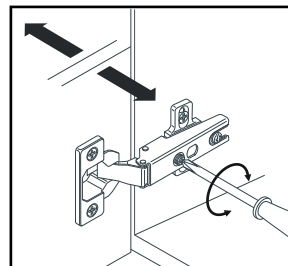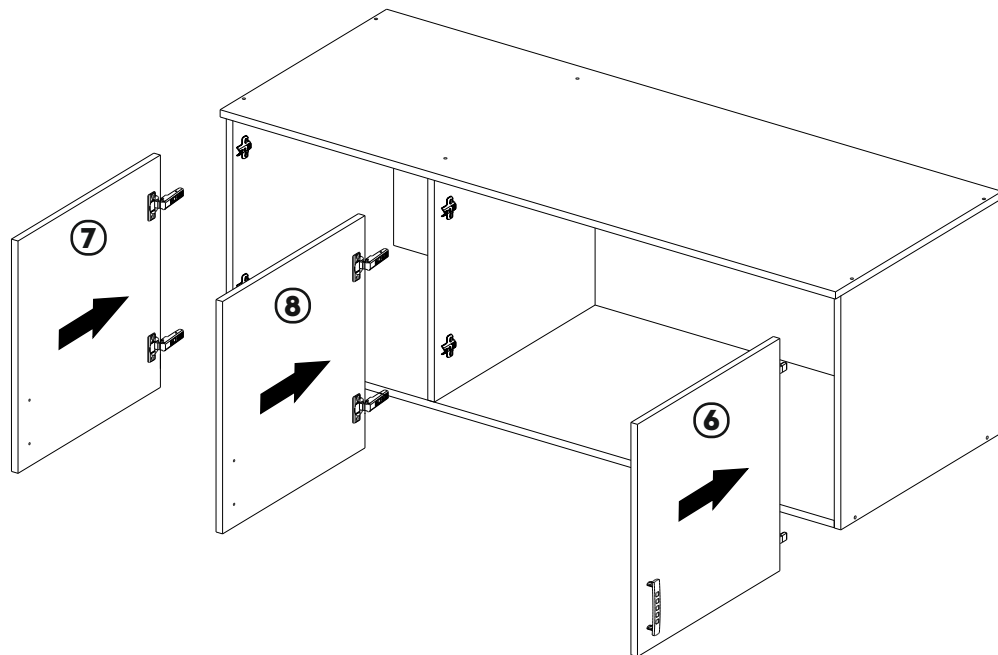



Screw
3,5x30



x6

W3

