


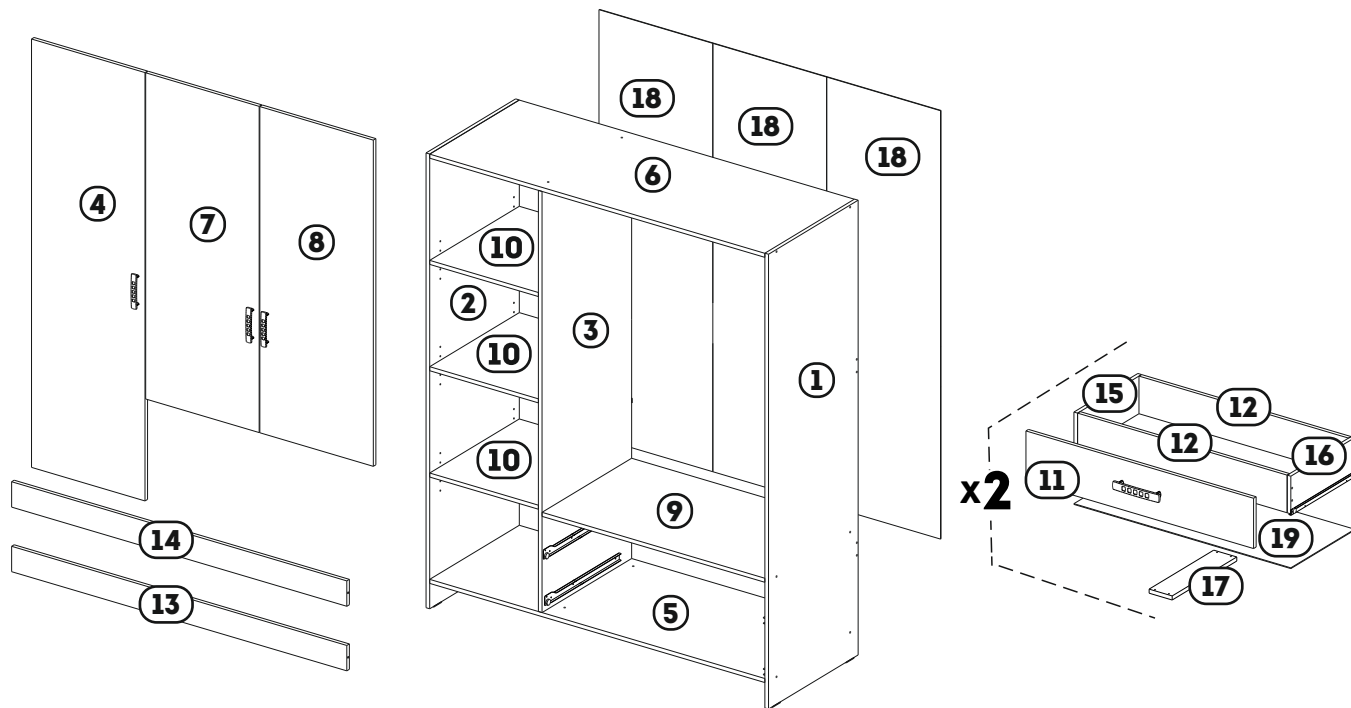
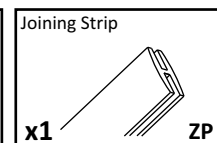
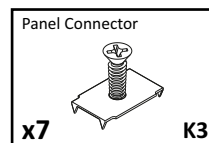
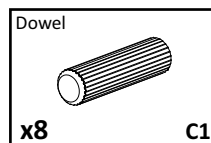
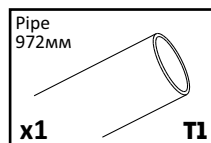
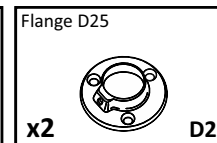
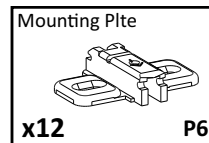
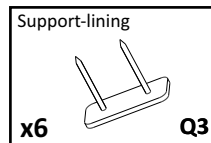
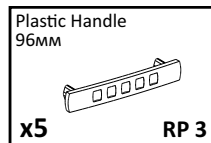
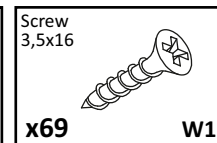
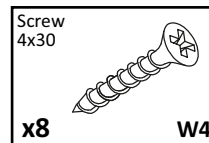
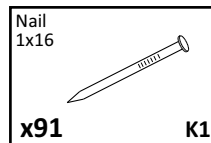
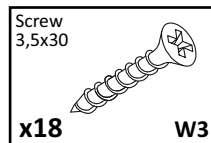
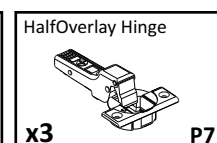
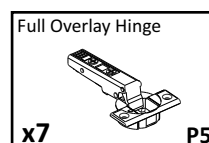
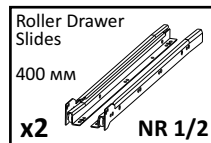
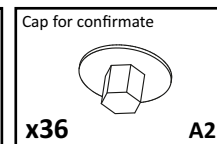
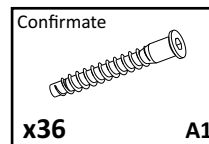
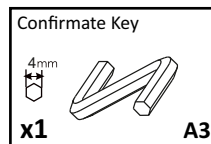





361-000116

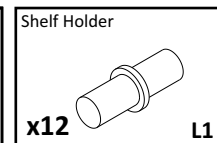

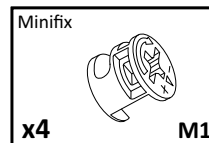


Nº	a*b	X	Pack
1	1769x560	1	1
2	1769x560	1	1
3	1656x560	1	3
4	1684x496	1	3
5	1467x560	1	2
6	1467x560	1	2
7	1238x496	1	4
8	1238x496	1	4
9	976x560	1	2
10	476x544	3	4
11	220x996	2	4
12	918x150	4	2
13	80x1467	1	2
14	1467x80	1	2
15	400x150	2	2
16	400x150	2	2
17	100x400	2	2
18	1684x498	3	1
19	950x400	2	1

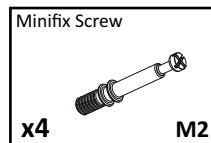

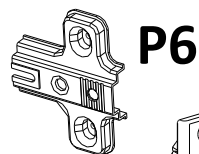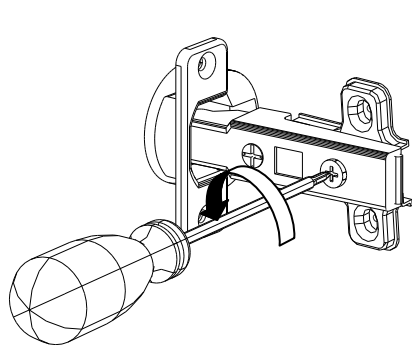


P6

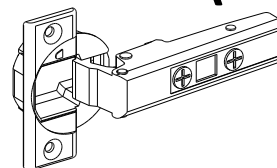


P5\ P7\ P8




M1




M2

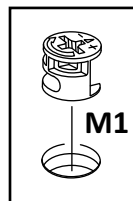

M1



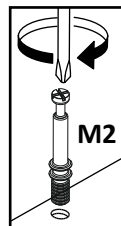


M2

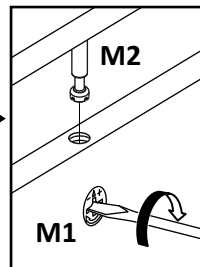

M2

M1

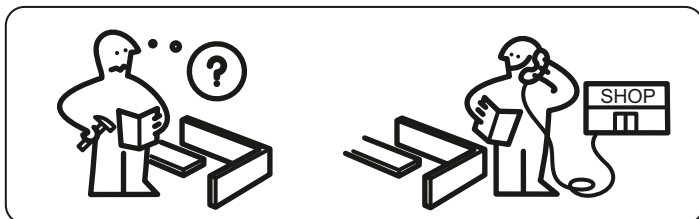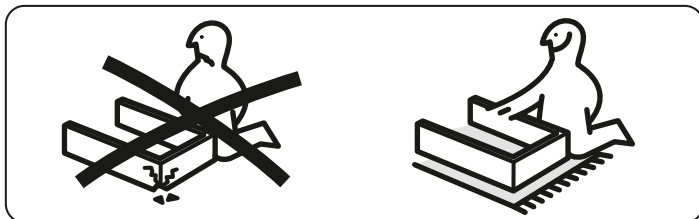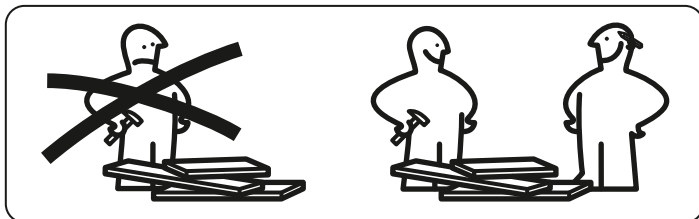

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Mounting Pte



x12

P6

Roller Drawer
Slides
400 MM




x2

NR 1/2

Screw


3,5x16



x32

W1


Support-lining



x4

Q3


Minifix



x4






M1

Shelf Holder




x12

L1

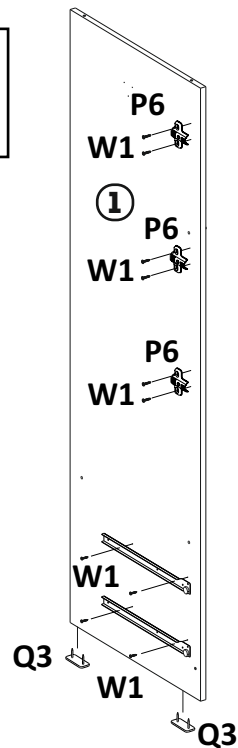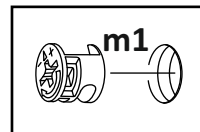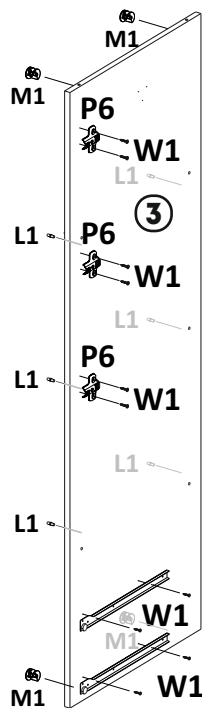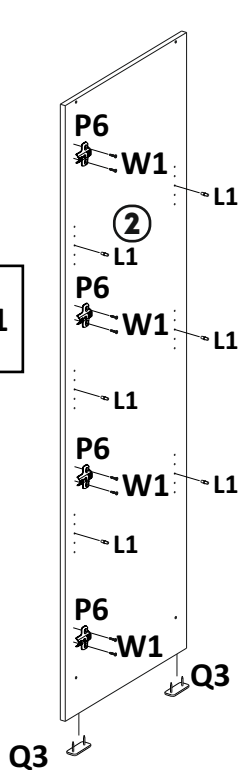




3

Minifix Screw




x4

M2

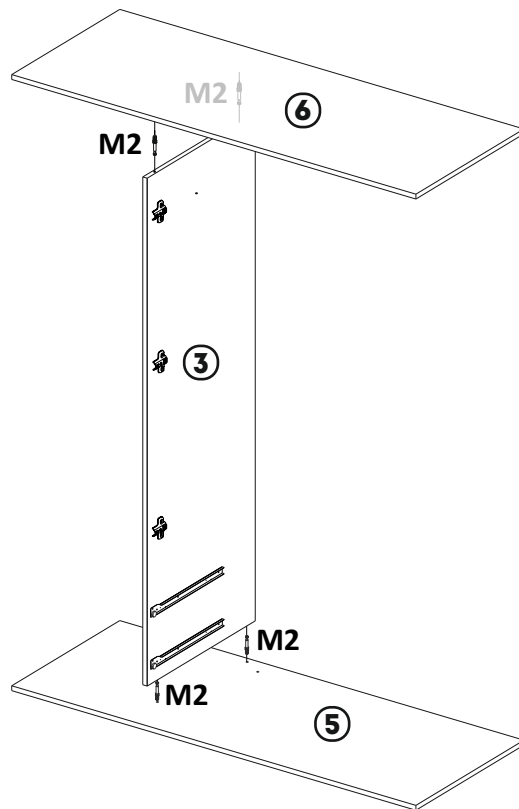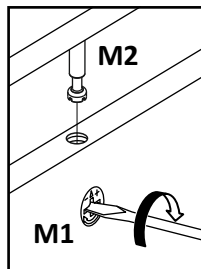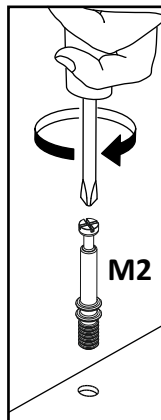




4

Confirmat




x20

A1

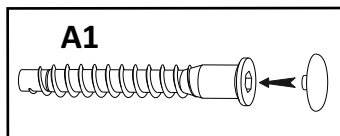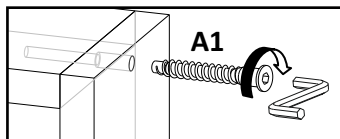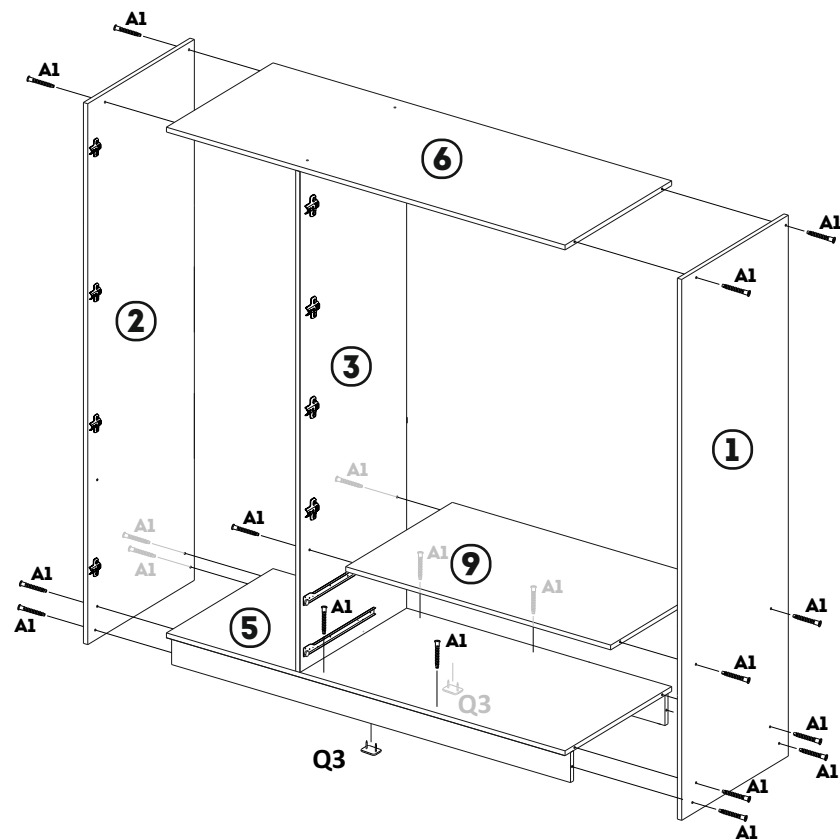

5

Nail
1x16



x51

K1


Joining Strip



x1

ZP


Screw
3,5x16



x7



W1

Rear Panel Fixing Screw




x7

K3

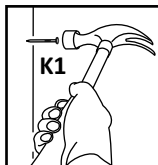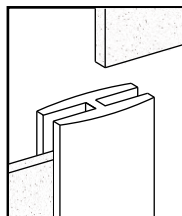

K1

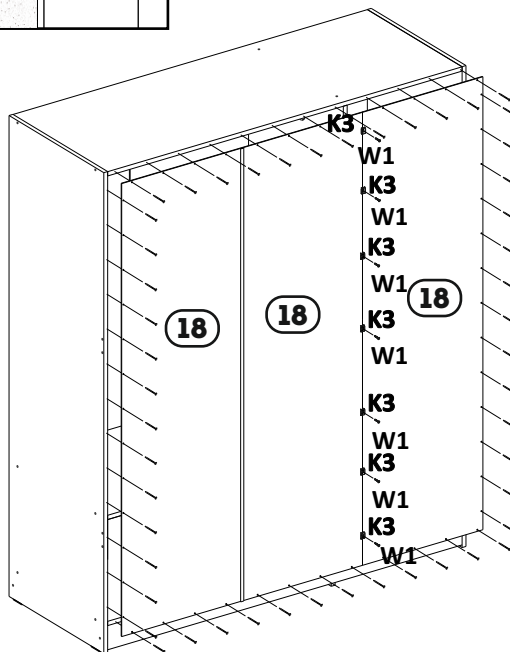

6

Pipe
972mm


x1

T1

Screw
3,5x16

x6






W1



Flange D25


x2

D2

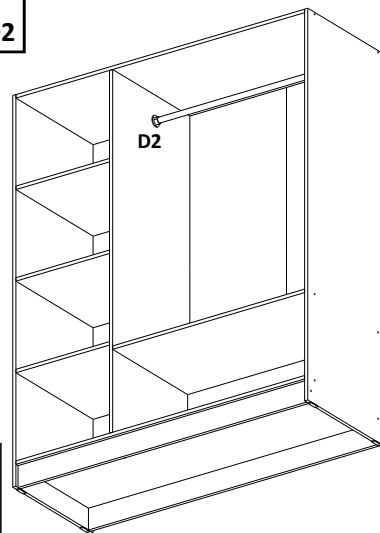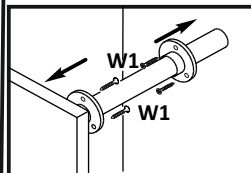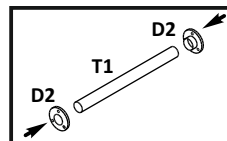

7

Confirmat



x8



A1

Cap for confirmate




x8

A2

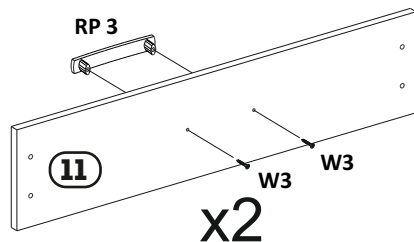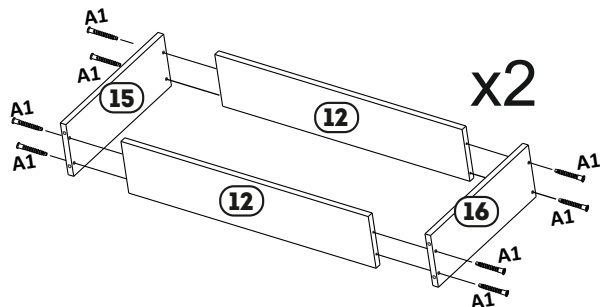


Plastic Handle
96mm



x5



RP 3

Screw
3,5x30




x4

W3



8


Dowel



x8


C1

Nail
1x16




x40

K1

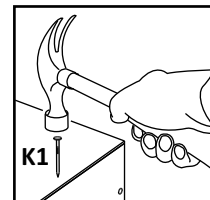


x2

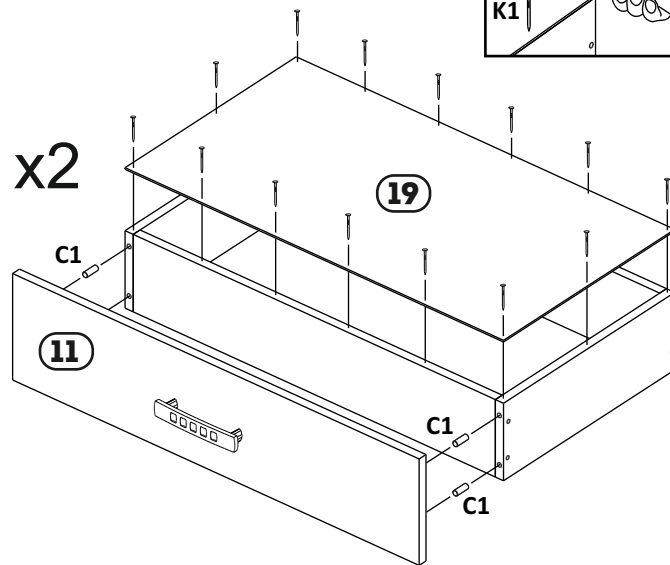

9

Telescopic Guide
400 mm


x2



NR 2

Screw
3,5x16


x8





W1

Screw
4x30

x8



W4

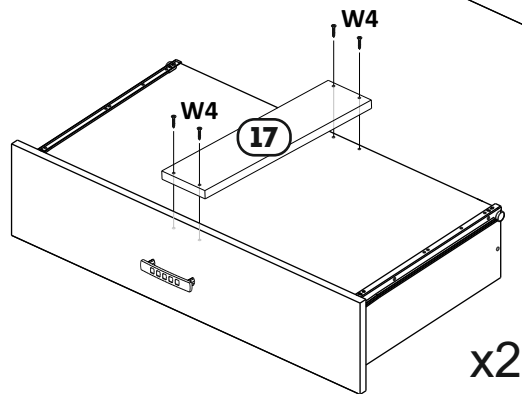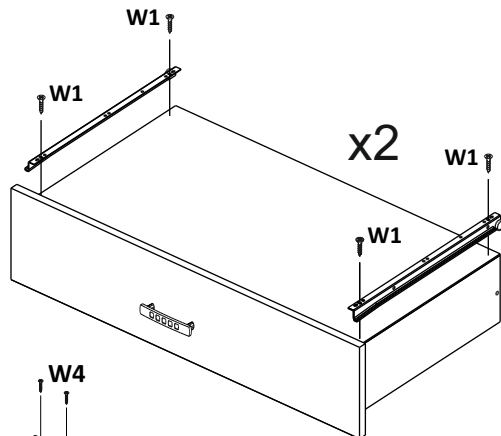


x2


10

Screw
3,5x30

x8




W3

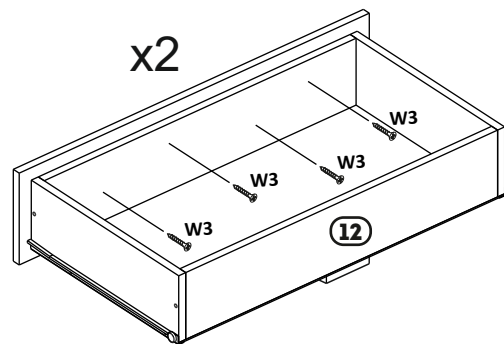

11

Full Overlay Hinge


x7



P5

Half Overlay Hinge


x3



P7

Screw
3,5x30


x6



W3

Plastic Handle
96mm


x3




RP 3

Screw
3,5x16

x20



W1

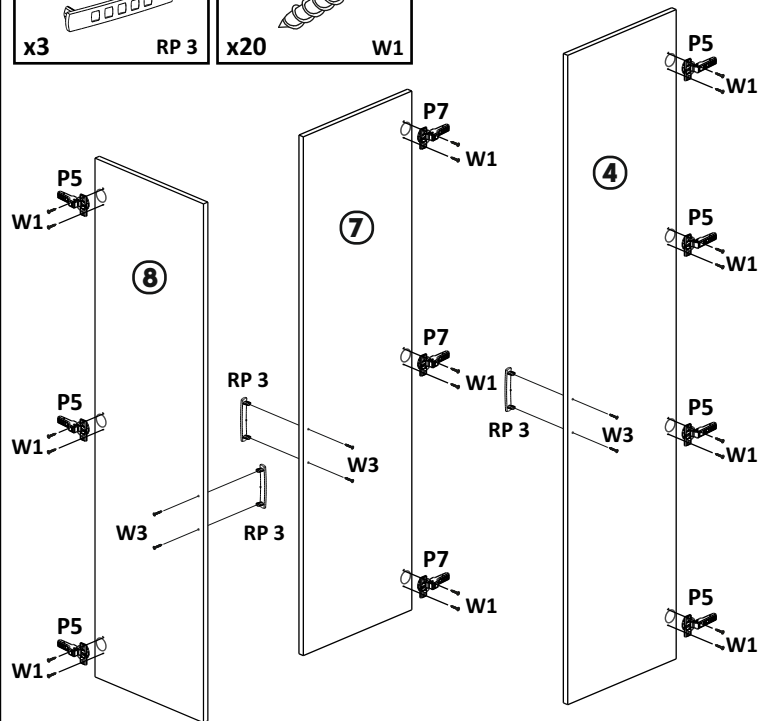

12

